


# Aiper Scuba S1 Cordless Robotic Pool Cleaner User Manual

[Home](#) » [AIPER](#) » Aiper Scuba S1 Cordless Robotic Pool Cleaner User Manual 

## Contents

- 1 Aiper Scuba S1 Cordless Robotic Pool Cleaner
- 2 Aiper Customer Service:
- 3 Important Safety Precautions
- 4 1. Structure
- 5 2. Specifications & Working Conditions
- 6 3. Charging
- 7 4. Using Your Aiper Pool Cleaner
- 8 5. Operating Your Device
- 9 6. Disassembly and Cleaning
- 10 7. Maintenance
- 11 8. Storage
  - 11.1 How should I store my Aiper device during the off-season?
- 12 9. LED Indicator
- 13 10. Packing List
- 14 11. Warranty
- 15 Documents / Resources
  - 15.1 References
- 16 Related Posts

**Aiper Scuba S1 Cordless Robotic Pool Cleaner**

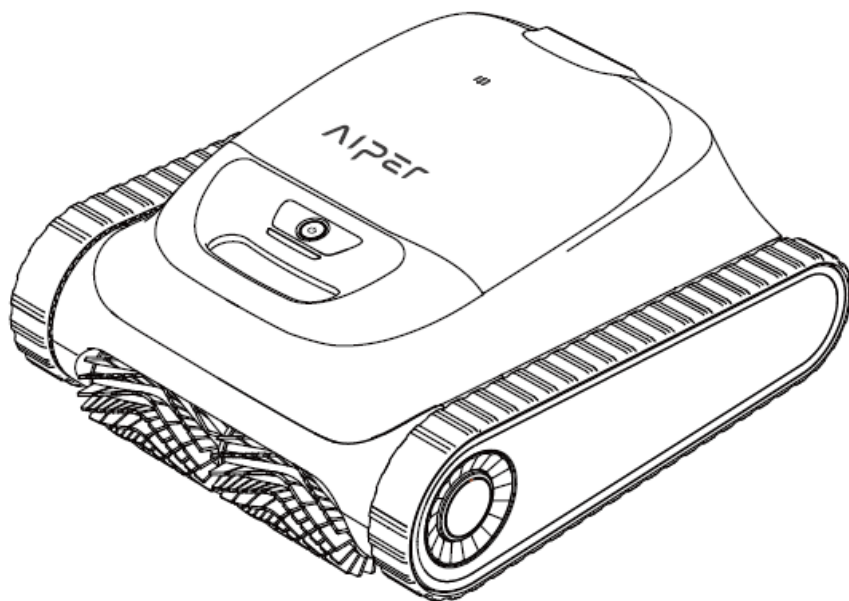

## **USER MANUAL**

– bring vacation home –  
R080T-le P001: el:EANER User Manual  
Aiper Scuba S1

Thank you for choosing Aiper.

You've now joined a family of millions who have already put their trust in Aiper to take care of their pools and are enjoying the convenience of a pristinely clean pool.

This user manual will help you maintain your Aiper pool cleaner and ensure it performs at its maximum efficiency for years to come. Please take a few minutes to read through this manual.

If you have any questions, please visit our website at [www.aiper.com](http://www.aiper.com) and contact our customer service team for assistance or more information.

### **Aiper Customer Service:**

US Toll-Free: 1-866-850-0666

AU Toll-Free: +61(180)049-7023

Email: [service@aiper.com](mailto:service@aiper.com)


Facebook: [@AiperOfficial](https://www.facebook.com/AiperOfficial)



Scan for  
Video Guide



Scan the QR  
Code to Access  
Customer Support

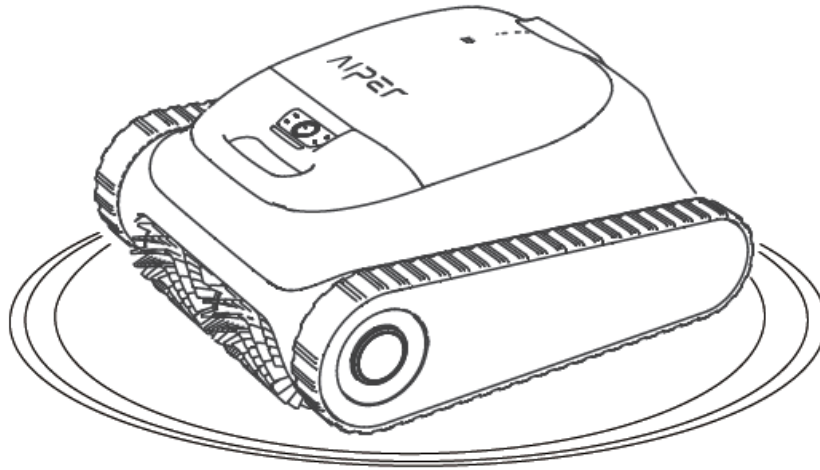

## Important Safety Precautions


Please read this manual carefully and use your Aiper pool cleaner in accordance with the manual instructions. Aiper is not liable for any losses or injuries caused by improper use of this device.

**For your safety and optimal performance of this device, please read and follow the following suggestions.**


1. Do not operate your Aiper pool cleaner while people or animals are in the pool.
2. Turn the cleaner off while not in use or while performing maintenance.
3. Do not allow children to ride the Aiper pool cleaner under any circumstances. Please supervise children when they are around an operational Aiper pool cleaner.
4. Use only authorized Aiper power adapters.
5. The adapter cord should only be replaced by a qualified electrician or Aiper Customer Care.
6. It's suggested to plug the power adapter into a power strip or surge protector and not directly into an electrical outlet.
7. Ensure your device is powered off and the charging port is dry before charging. While charging, your Aiper pool cleaner should be kept in a cool place. Do not cover your Aiper pool cleaner while charging as this may cause components to overheat.
8. Please store the machine indoors or in a cool place when not in use.
9. Do not run your Aiper pool cleaner out of the water as it may lead to overheating.
10. Only certified professionals should disassemble the sealed driving kit of your Aiper pool cleaner.
11. Do not operate your Aiper pool cleaner and pool filter simultaneously.
12. The oil sealing around the motor contains grease, which may cause a small amount of water pollution if the motor is damaged. If you believe there is a leak, stop using the unit immediately.
13. Do not pierce the shell of your Aiper pool cleaner, throw, or damage the cleaner intentionally.
14. When putting your device into the water, the front of the machine must face upwards and should never be placed upside down or directly thrown into the swimming pool.

Please read this user manual carefully before operating the device.

## 1. Structure

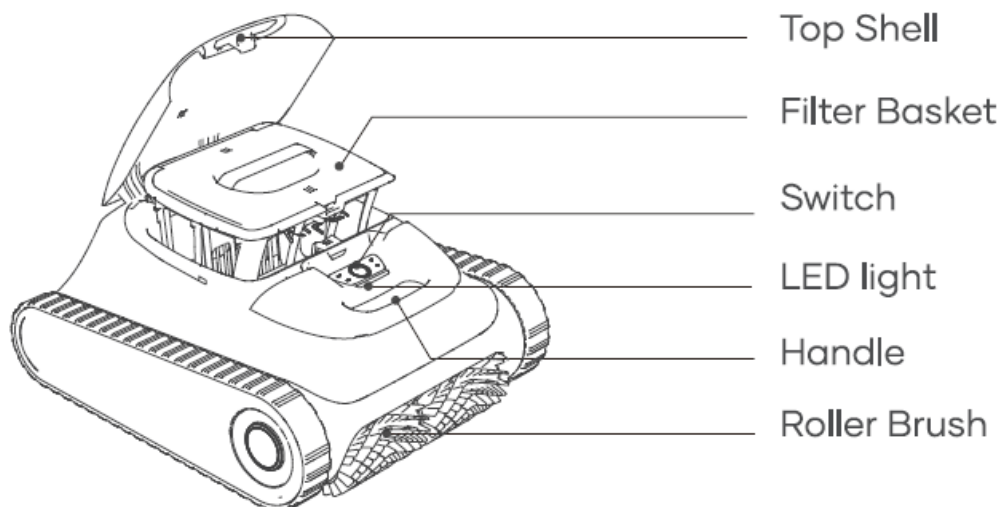

Retrieval Hook

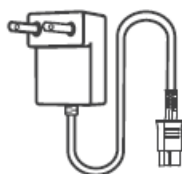

Charger

## 2. Specifications & Working Conditions

1. Pool Size: 1600 Sq.ft/150m<sup>2</sup>
2. Charger Input: 100-240V, 60/50Hz, Max 1.5A
3. Charger Output: 16.8V/2.6A
4. Charging Time: 4 Hours
5. Battery Life: Up to 150 Minutes
6. IP Grade: IPX5 Waterproof
7. Water Depth: 1.6-10ft(0.5-3 m)
8. Motor Power: 75W
9. Battery Pack: 7800mAh
10. Battery Pack Voltage: 14.4V

### CAUTION:

Do not use the device in a pool environment beyond the conditions described below, doing so may cause damage to the device that will not be covered by warranty.


- Temperature: 50-95°F (10-35°C)

- pH Value: 7.0-7.4
- Chlorine: Maximum 4 ppm
- NaCl: Maximum 5000 ppm

### 3. Charging


**CAUTION:** Do not charge the device in direct sunlight.

- Fully charge the device before using it to clean the pool.
- Before charging, remove the charging port cover to check if there is any residual water in the charging port. If so, wipe dry the charging port first.
- Insert the charging cable into the charging port of the device and then into an available electrical outlet. The LED indicator on the device will start to pulse, indicating that the device is being charged. When it is fully charged, the LED will remain on.

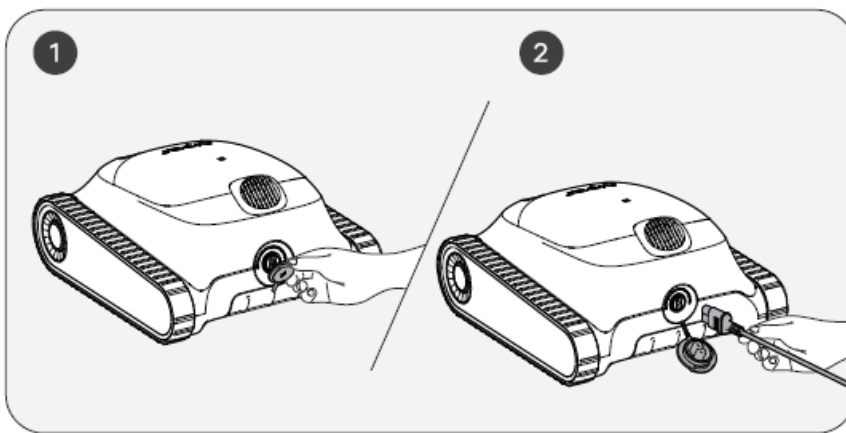


### 4. Using Your Aiper Pool Cleaner

- This machine is suitable for cleaning floors, walls and water lines in areas up to 1600sq. Ft./150m<sup>2</sup>

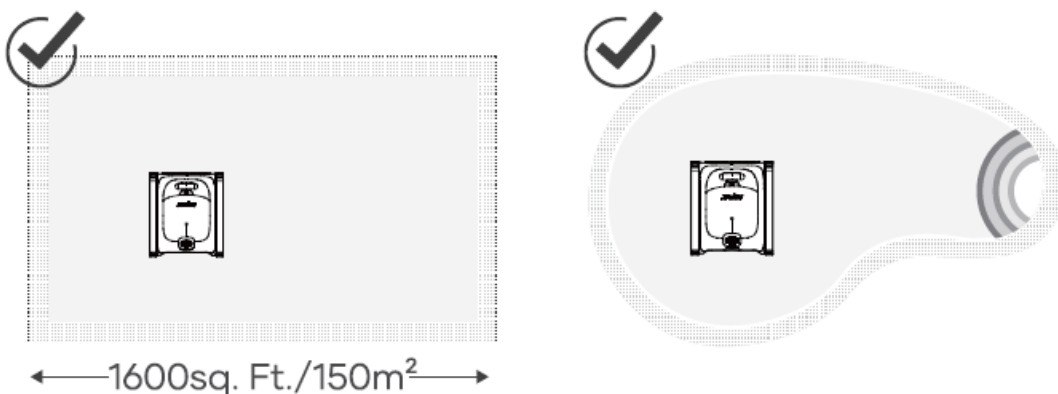



### 5. Operating Your Device

- Press and hold the Power button for 2s to turn on/off the device.

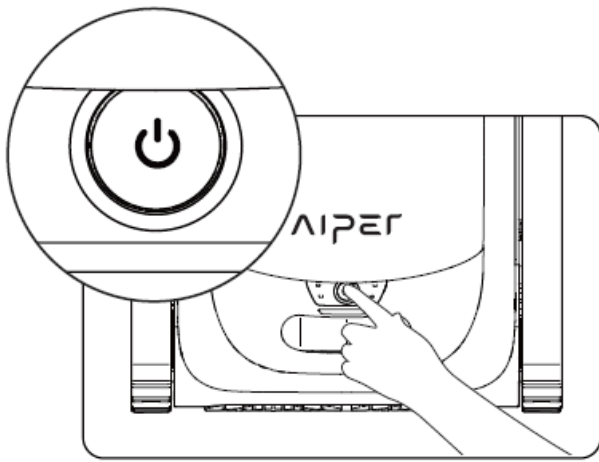


b. Auto mode is the default mode for this device once turned on. Press the button to switch between Auto, Pool Floor, Pool Wall and Eco.

1) Auto Mode: The device will clean the pool floors and walls, while intelligently planning its cleaning route based on its battery level. When the battery level is low, the device will automatically dock and stop cleaning.

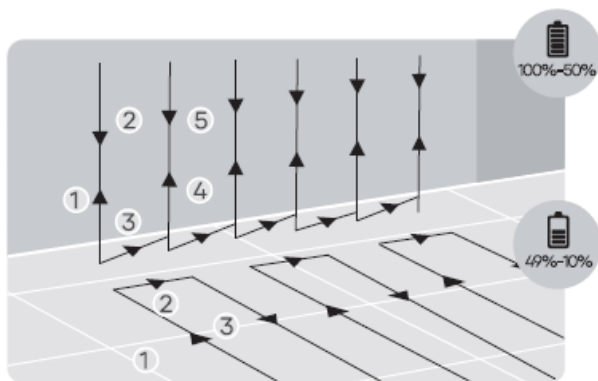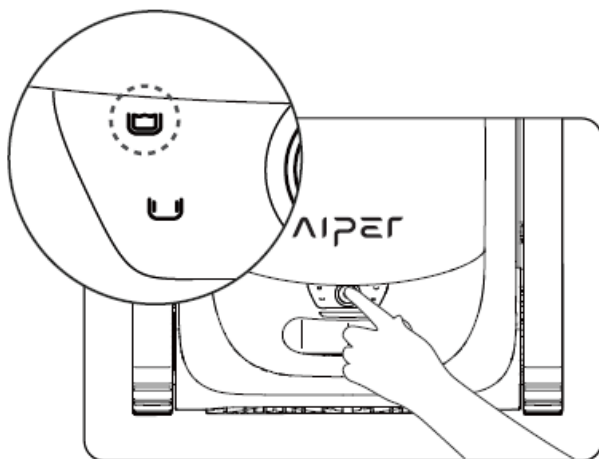


### Auto Mode: Floor and Wall Cleaning

2) Pool Floor Mode: The device will clean the pool floor in a S-shaped route, without climbing or cleaning walls. When the battery level is low, the device will automatically dock and stop cleaning.

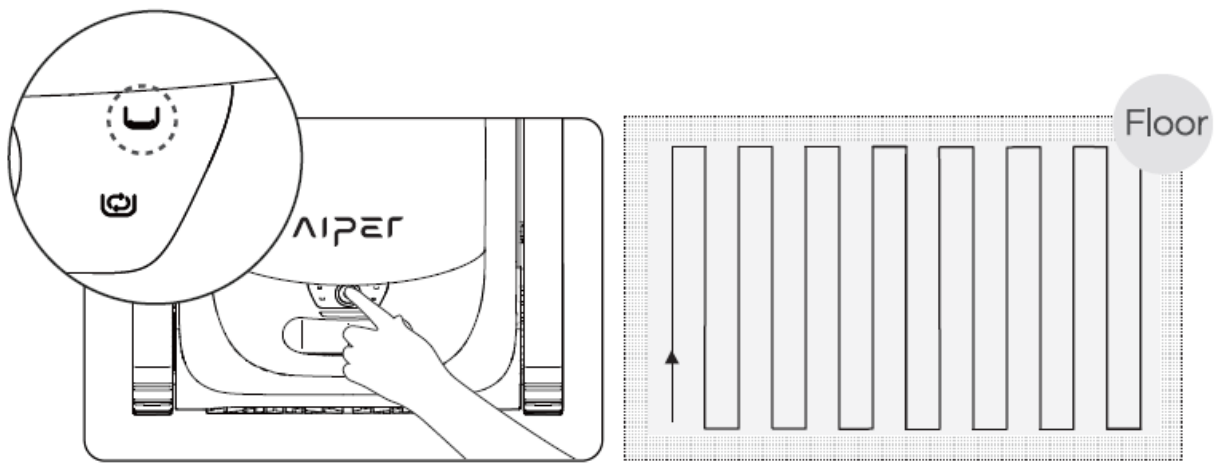


### Floor Cleaning Mode

3) Pool Wall Mode: The device will clean the pool wall in an N-shaped route, without cleaning floors. When the battery level is low, the device will automatically stop cleaning and dock.

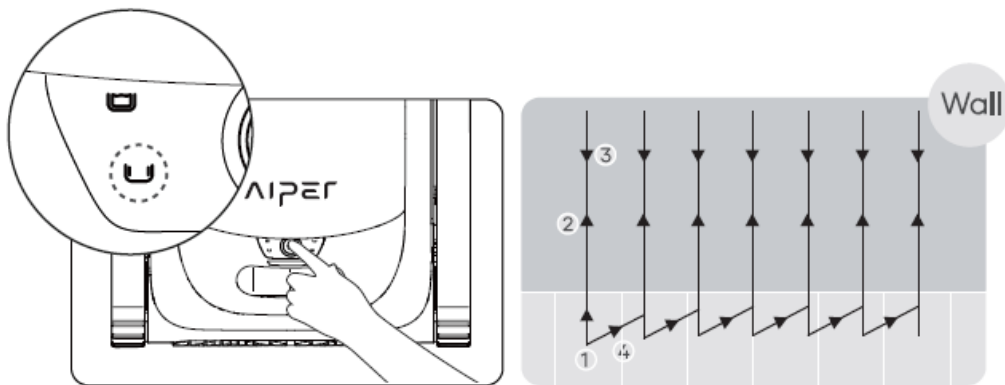

### Wall Cleaning Mode

4) Eco Mode: The device will clean the pool floor for 45 min once every 48 hours for one week when fully charged.

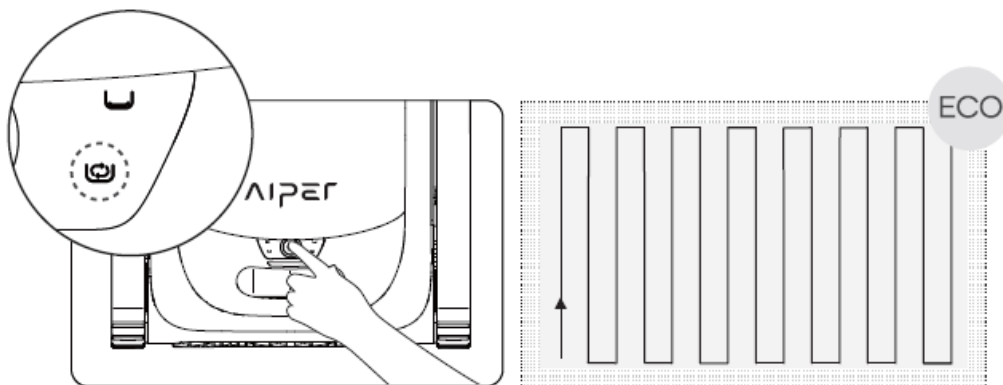


### Eco Mode


c. After the device is turned on for 30 s, it will turn the water pump briefly every 10 s to check whether it has entered the water for 3 times. If it detects that it has not entered the water 3 times, it will shut down; please put the

device into the pool within 1 min after starting the device. The device will begin cleaning within 10 s after it reaches the bottom of the pool.


d. When the battery level is low, the device will automatically dock and stop cleaning.

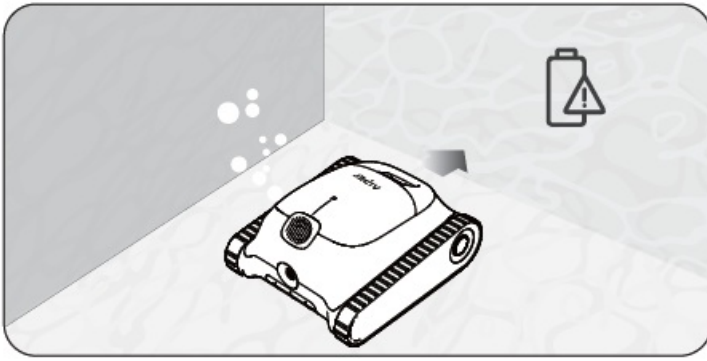

e. Lift the device from the pool floor with a hook to prevent getting wet. Users can connect the hook to any standard pool cleaning pole (not included) to extend the reach of the hook.

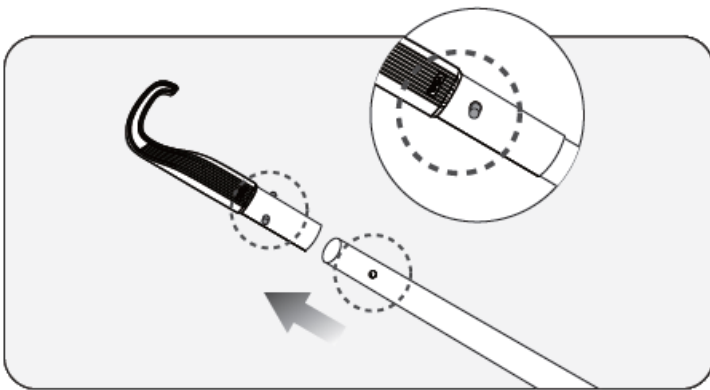


f. Hook the device's handle and lift the device out of the water.

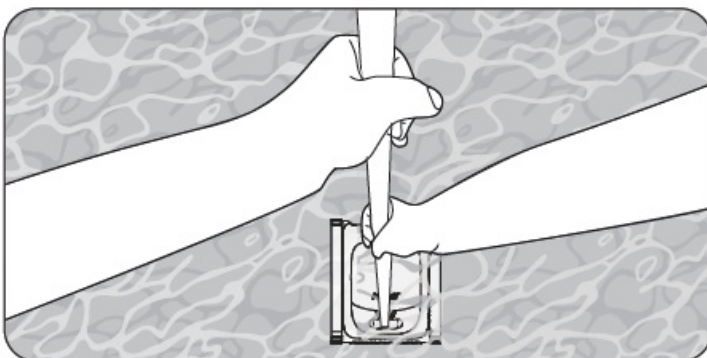


g. Hold the handle and allow the device to drain any stored water.



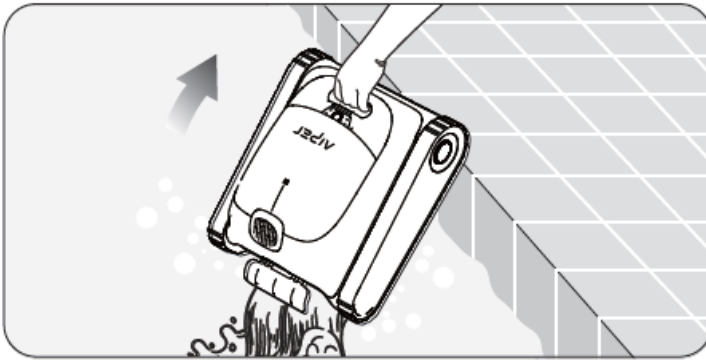


## 6. Disassembly and Cleaning


a. Set aside the device in a safe, secure location and open the top shell.

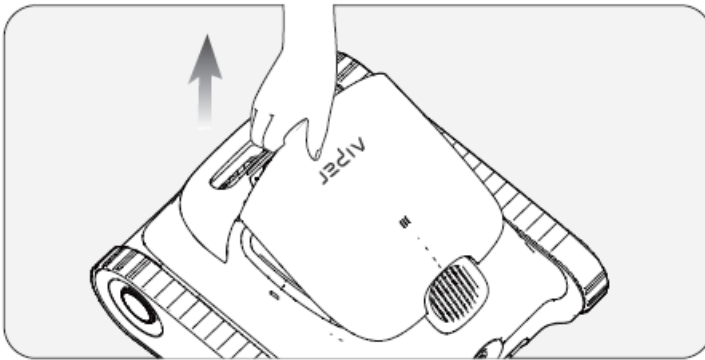


b. Remove the filter basket by lifting its handle.

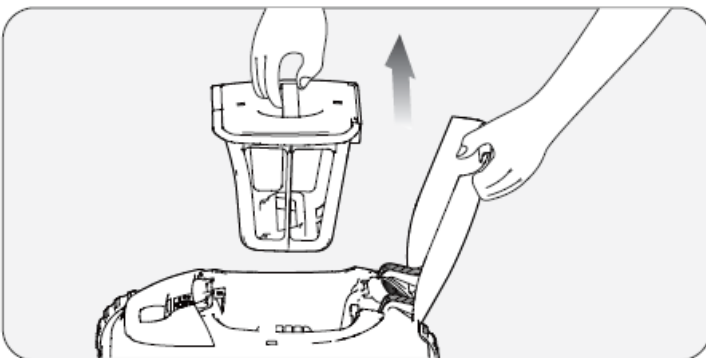

c. Press the top shells latch of the filter basket and at the same time pull up on the top cover handle to open the filter basket.

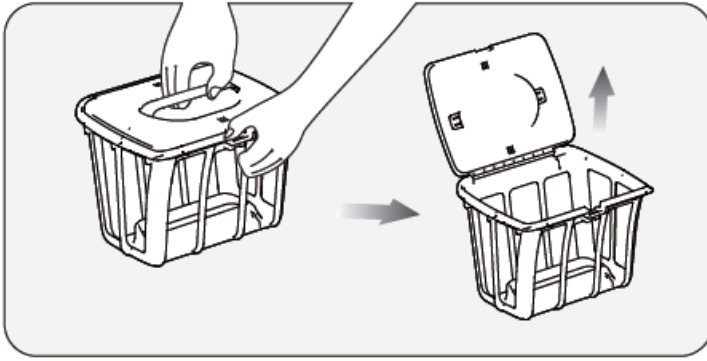


d. Empty the filter basket, rinse, and replace the filter basket back into the device.

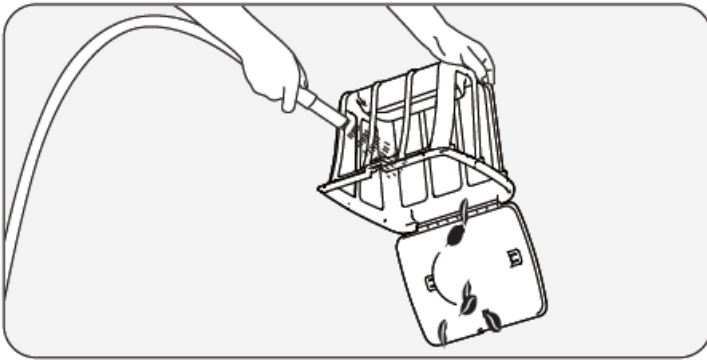


## 7. Maintenance

### 7.1 Replacing the tracks.


a. Remove the side cover plate from the device.

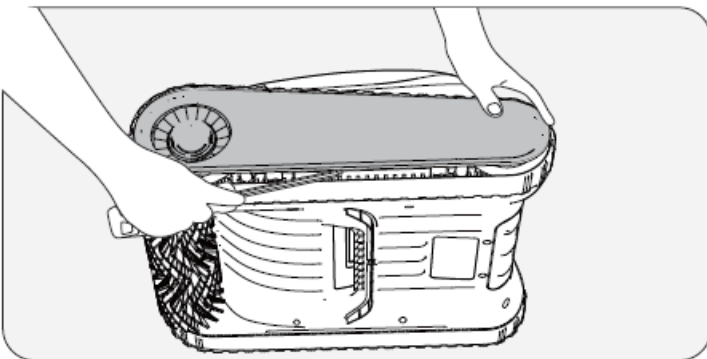


b. Remove the screws and the guide sleeves from the wheels.

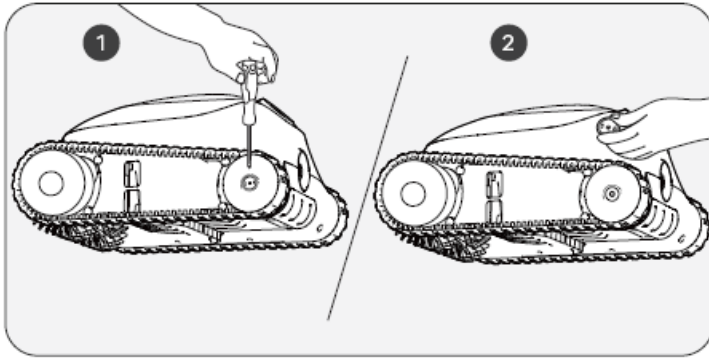


c. Pull the wheels and the track together to remove them.

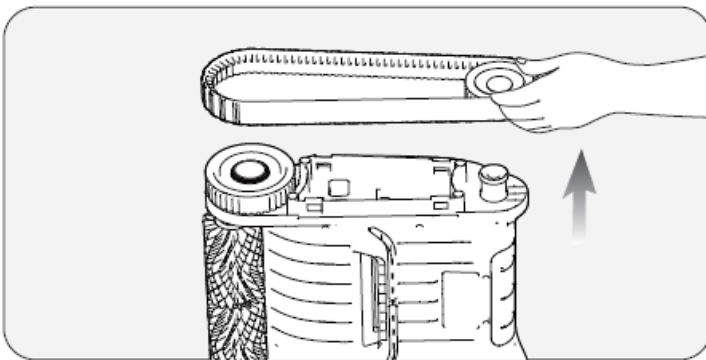


d. Align the gears on the new tracks with the gears on both wheels, then install the rear wheels and tracks together back onto the shaft sleeves.

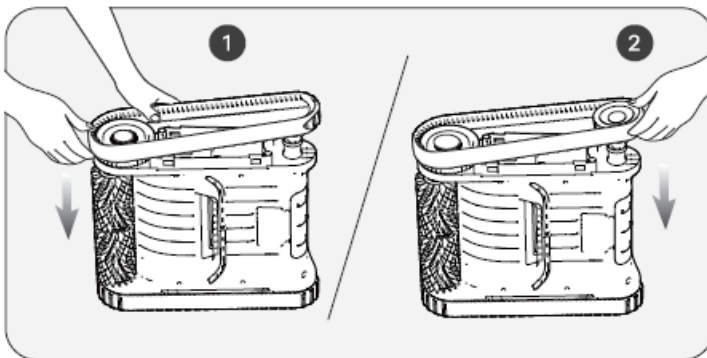

e. Re-install the white guide sleeves by aligning their D-shaped openings with that of the shaft sleeves.

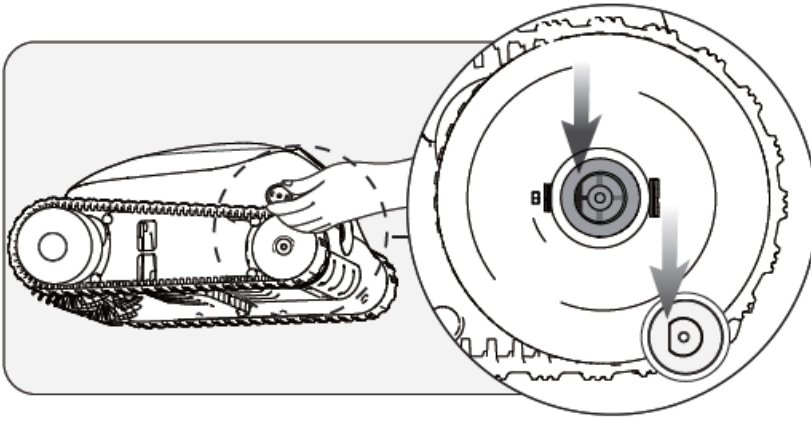


f. Tighten the screws and re-install the side cover plate .

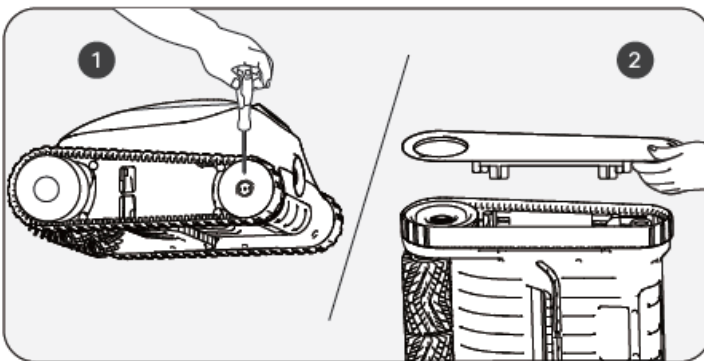


## 7.2 Replacing the roller brush belt.

a. Find the side that looks different from the other roller brush belts, and pull down the silicone buckles that are stuck in the fixed slot.

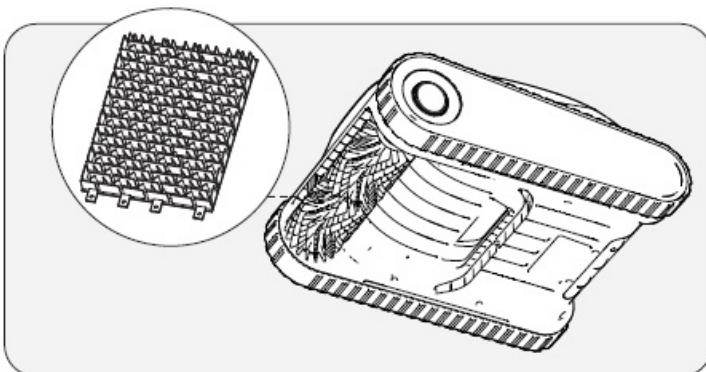


b. After all the silicone buckles are pulled out, replace the roller brush belt with a new one. Align the silicone buckles with the fixed slot and pull them outward. They can be fixed after passing through the slot.

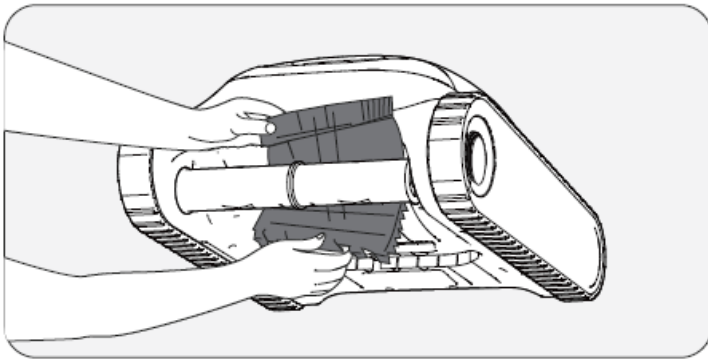


### 7.3 Cleaning the drain.


a. Lift the top shell.

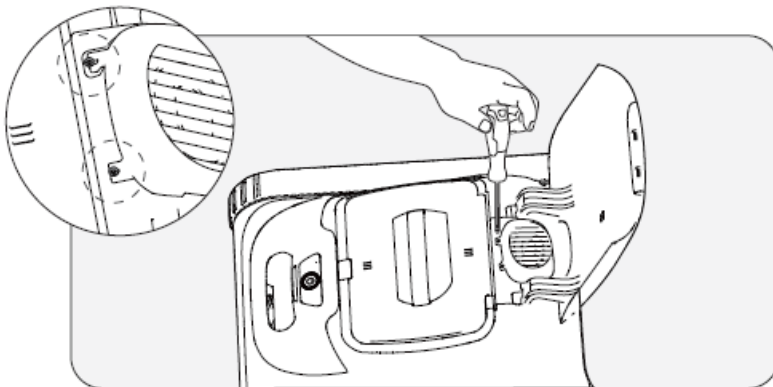

b. Remove the screws and drain the cover.

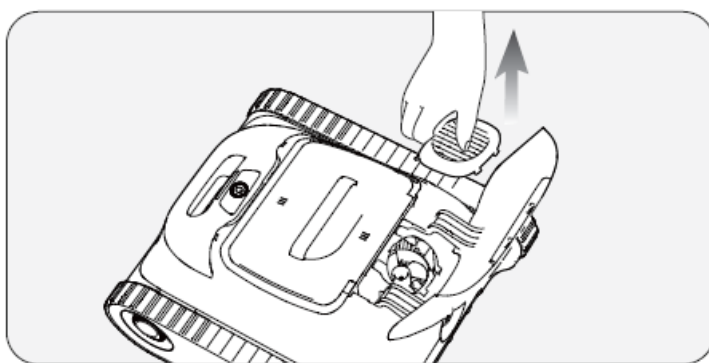

c. Remove any objects entangled in the drains fan blades, and then re-install the drain cover and screws.

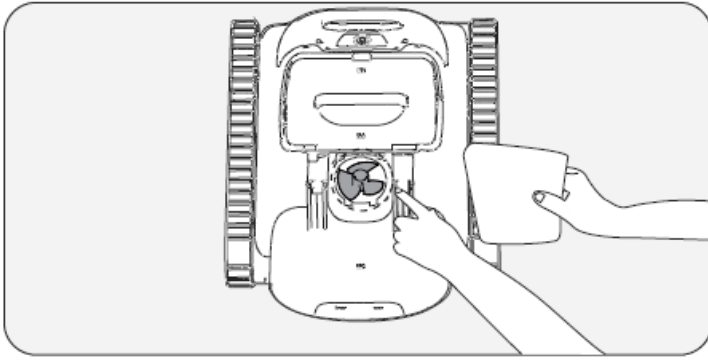

## 8. Storage

### Winter Tips: How to store and secure your Aiper devices

#### How should I store my Aiper device during the off-season?

In your pool's off-season, such as winter months or long vacations when your Aiper device won't be used, there are a few steps to take to protect your device and keep it in the best condition possible.

1. Power off your device and disconnect it from the charger.
2. Clean the device of any residual dirt, including the top & bottom shell, wheels, roller brushes, and charging port.
3. Using a paper towel or soft cloth, wipe dry your device.
4. Box and store your device in a cool, well-ventilated area.
5. Charge your device every TWO months to 40%-60% battery capacity to maintain the battery health of your device.

When you're ready to use your Aiper device in your pool, fully charge the device before using it in your pool, and never charge your device in direct sunlight.

## 9. LED Indicator

Light Status	Device Status	Description	
Light is Pulsing	Charging	The LED colors indicate the battery level of the device.	Blue light always on: 100% Blue:> 50% Yellow: 50-15% Red:< 15%
Light Steady On	Operating	The LED colors indicate the battery level of the device.	Blue:>50% Yellow: 50-15% Red:< 15%
Red Light Flashes Rapidly	Device Malfunction	Filter basket blockage, motor stalling, electrical leakage, etc.	

## 10. Packing List

NO.	Name	Model	QTY(pc}
1	Cleaner	Aiper Scuba S1	1
2	Charger	/	1
3	Retrieval Hook	/	1
4	User Manual	/	1

## 11. Warranty

This product has passed quality control and safety test conducted by our technicians.

1. This product comes with a 24-month warranty that covers your item's battery and motor from the date of purchase.
2. This warranty is voided if the product has been altered, misused, or has been repaired by unauthorized persons.
3. This warranty extends only to manufacturing defects and does not cover damage resulting from the mishandling of the product by the owner.
4. The order number or record of purchase must be presented at the request of any repair claim during the warranty period.



This symbol indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

### Merci d'avoir choisi Aiper.

Vous avez maintenant rejoint une famille de millions de personnes qui ont déjà fait confiance à Aiper pour prendre soin de leur piscine et qui profitent de la commodité d'une piscine parfaitement propre.

Le présent manuel de l'utilisateur vous aidera à entretenir votre nettoyeur de piscine Aiper et à faire en sorte qu'il fonctionne à son niveau d'efficacité maximal pendant les années à venir. Veuillez prendre quelques minutes pour lire ce manuel.

Si vous avez des questions, veuillez consulter notre site Web à l'adresse [www.aiper.com](http://www.aiper.com) et contacter notre service clientèle pour obtenir de l'aide ou de plus amples informations.

### Service client d'Aiper :

US Toll-Free: 1-866-850-0666

AU Toll-Free: +61(180)049-7023

Email: [service@aiper.com](mailto:service@aiper.com)


Facebook: @AiperOfficial




Scannez pour  
accéder au  
guide vidéo



Scannez le code  
QR pour obtenir  
du support client.

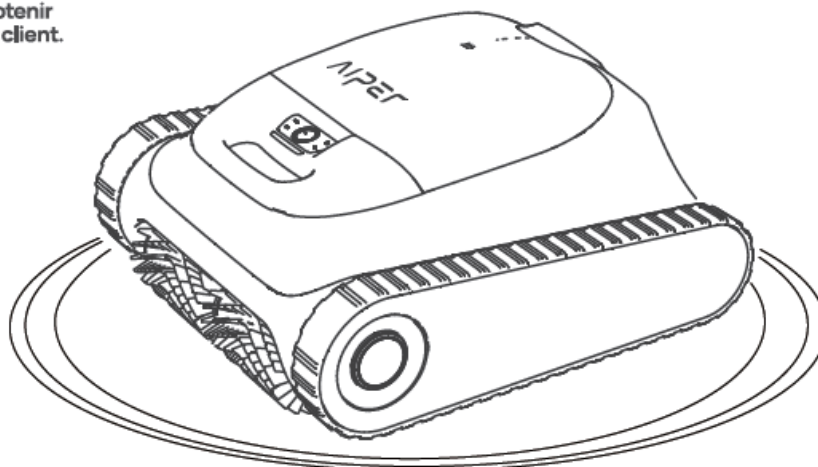

## Documents / Resources

	<p><a href="#">AIPER Aiper Scuba S1 Cordless Robotic Pool Cleaner</a> [pdf] User Manual Aiper Scuba S1 Cordless Robotic Pool Cleaner, Aiper Scuba S1, Cordless Robotic Pool Cleaner, Robotic Pool Cleaner, Pool Cleaner, Cleaner</p>
---	--

## References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.