



AIPHONE IX Series Application Reducing Chime Volume User Guide

[Home](#) » [AIPHONE](#) » AIPHONE IX Series Application Reducing Chime Volume User Guide 

Contents

- [1 AIPHONE IX Series Application Reducing Chime Volume](#)
- [2 IX Series Application Note](#)
- [3 Door Station Settings](#)
- [4 Master Station Settings](#)
- [5 Uploading Settings to Stations](#)
- [6 Introduction](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)



AIPHONE IX Series Application Reducing Chime Volume



IX Series Application Note

Reducing Chime Volume

This guide explains how to reduce the chime volume of IX Series stations. The settings for door and master stations are configured separately.

Door Station Settings

To reduce the chime volume of a door station:

1. Open IX Support Tool.
2. Navigate to Station Settings, Volume / Tone.
3. Scroll right to the Receive column.
4. Click on the cell for the appropriate door station.
5. Use the dropdown menu to select the desired volume level on a scale from 1 to 10.
6. Click Update.

Open IX Support Tool. Navigate to Station Settings, Volume / Tone. Scroll right to the Receive column. Click on the cell for the appropriate door station, and use the dropdown menu to select the desired volume level on a scale from 1 to 10. Click Update .

Transmit	Receive
10	6
10	10
10	1
10	2
10	3
10	4
10	5
10	6
10	7
10	8
10	9
10	10

Station Settings

- Speed Dials / Favorites
- Privacy
- Volume / Tone
- Communication
- Monitor
- Master Station Display
- Camera
- Door Release Assignment
- Line Supervision

- The Receive volume controls the spoken audio produced at the door station as well as the chime volume. Be careful not to set it too low.

The Receive volume controls the spoken audio produced at the door station as well as the chime volume. Be careful not to set it too low.

To completely mute the door station chime:

1. Open IX Support Tool.
2. Navigate to Call Settings, Call Origination.
3. Click the cell for the door station under Ringback Tone.
4. Set the option to None.
5. Click Update.


The None option is not available for IX-BA or IX-DA door stations.

Master Station Settings

To reduce the ringtone volume of a master station:

1. Navigate to Station Settings, Volume / Tone.
2. Scroll right to the Ringtone column.
3. Click on the cell for the desired master station.
4. Use the drop-down menu to select the volume level on a scale from 0 to 10.
5. Click Update.

Navigate to Station Settings, Volume / Tone. Scroll right to the Ringtone column. Click on the cell for the desired master station, and use the drop-down menu to select the volume level on a scale from 0 to 10. Click Update .

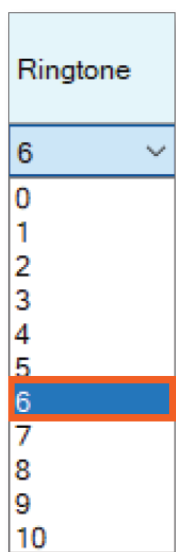

Ringtone
6
0
1
2
3
4
5
6
7
8
9
10

Uploading Settings to Stations

To upload settings to all stations:

1. Navigate to File and select Upload Settings to Stations.
2. Select all stations.
3. Click Settings to upload settings to stations.

Navigate to File and select Upload Settings to Stations. Select all stations and click settings to upload settings to stations.

Setting File Upload

Select the station(s) to upload the Setting File(s):

Station List						Text in red are required settings.
Select	Number	Name	Location	Station Type	Status	
<input checked="" type="checkbox"/>	0001	Master Station1		IX-MV7-*	-	
<input type="checkbox"/>	0002	Master Station2		IX-MV7-*	-	
<input type="checkbox"/>	0003	Master Station3		IX-MV7-*	-	
<input type="checkbox"/>	0004	Master Station4		IX-MV7-*	-	
<input type="checkbox"/>	0005	Master Station5		IX-MV7-*	-	
<input type="checkbox"/>	0006	Master Station6		IX-MV	-	
<input type="checkbox"/>	0007	Video Station1		IX-DV, IX-DVF(-*)	-	
<input type="checkbox"/>	0008	Video Station2		IX-DV, IX-DVF(-*)	-	
<input type="checkbox"/>	0009	Video Station3		IX-DA	-	
<input type="checkbox"/>	0010	Audio Station1		IX-AS, 2G	-	

Select Station by Type: All Select Unselect

Select file type to be uploaded

Settings
Sounds
Image
Schedule

For more details about the features and information above, please contact Technical Support. Aiphone Corporation | www.aiphone.com | (800) 692-0200

Introduction

This guide explains how to reduce the chime volume of IX Series stations. The settings for door and master stations are configured separately.

Completely Muting the Door Station Chime

Sometimes it may be preferable to not have a chime at all when the door station calls out. Open IX Support Tool. Navigate to Call Settings, Call Origination. Click the cell for the door station under Ringback Tone. Set the option to None and click


☰ Call Settings

- ... Station Information
- ... Called Stations (Master Station)
- ... Called Stations (Door/Sub Station)
- ... Call Origination
- ... Incoming Call
- ... Contactless Call

Ringback Tone
Call Pattern 4
Call Pattern 4
Call Pattern 1
Call Pattern 1
Call Pattern 1
None
Call Pattern 1
Call Pattern 2
Call Pattern 3
Call Pattern 4
Call Pattern 5
Call Pattern 6
Tremolo Sound

- The “None” option is not available for IX-BA or IX-DA door stations.

Documents / Resources

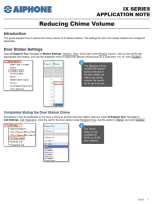	<p>AIPHONE IX Series Application Reducing Chime Volume [pdf] User Guide IX-BA, IX-DA, IX Series Application, IX Series, Application, IX Series Application Reducing Chime Volume, Reducing Chime Volume</p>
---	---

References

- [Home - Aiphone](#)