



airibi Sonic Aromatherapy Diffuser Instruction Manual

[Home](#) » [airibi](#) » airibi Sonic Aromatherapy Diffuser Instruction Manual 

Contents

- [1 airibi Sonic Aromatherapy Diffuser Instruction Manual](#)
- [2 Important safety instructions](#)
- [3 Diffuser's scheme](#)
- [4 Operation instruction](#)
- [5 Operations with remote control](#)
 - [5.1 1. Button MIST \(L\)](#)
 - [5.2 2. Button MODE \(P\)](#)
 - [5.3 3. Button](#)
 - [5.4 4. Button](#)
 - [5.5 5. Button +](#)
 - [5.6 6. Button –](#)
 - [5.7 7. Button](#)
- [6 Notice](#)
- [7 Accidental water leakage](#)
- [8 Product care and maintenance](#)
- [9 Problems and solutions](#)
- [10 Technická specifikace](#)
- [11 Disposal of the device \(environment\)](#)
- [12 Read More About This Manual & Download PDF:](#)
- [13 Documents / Resources](#)
- [14 Related Posts](#)

airibi Sonic Aromatherapy Diffuser Instruction Manual



Important safety instructions




Please read through the operating instructions carefully before you use the appliance for the first time and keep them safely for later reference. If necessary pass them on to the next owner.

1. The appliance is only to be used in the home for the purposes described in these instructions. Unauthorized use and technical modifications to the appliance can lead to danger to life and health.
2. This appliance can be used by children aged from 10 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
3. After unpacking, make sure that diffuser wasn't damaged during transport. If you find any damage, contact your dealer as soon as possible. We recommend you keep the packaging for possible future use .
4. Before first use check that the device parameters (electric voltage, etc.) correspond to local conditions.
5. Do not inhale!
6. Use appliance in an environment of 10°C to 30°C. Do not use outdoors.
7. Do not place the appliance near a heat source. Do not subject the power cord to direct heat (such as a heated hotplate, open flames, hot iron sole plates or heaters for example). Protect power cords from oil.
8. Always put the diffuser on a hard, flat horizontal surface, at least 15cm from the walls and away from any source of heat such as burners, radiators etc. The diffuser cannot operate on a surface that is not horizontal.
9. Before using the diffuser, check if AC adapter or power cord is not damaged. Do not use it if the cord is damaged.
10. If the power cord is damaged, it must be replaced by the manufacturer or a repair shop authorized by the manufacturer or by similarly qualified persons in order to avoid a hazard
11. Only use tap water.
12. Don't exceed the maximum water level. Always put the water before essential oils. Never use pure essential oils without water. Put some essential oils (1-2 drops). Too much drops may damage the unit.
13. Continued use of the diffuser in the long-term damage to the product and shorten its life.
14. Unplug the unit before any manipulation such as cleaning of filling for example. Always empty the tank when


the unit is not in use.

15. Do not remove the cover of the diffuser when the unit is running.
16. Refill frequently the water in the tank to prevent any dirt that could damage the unit.
17. Clean the water tank every week. Do not use any chemical products (acids,...) or corrosive product to clean the device.
18. In case of splashing water in the circuit, remove the diffuser immediately and let it dry in the open air for at least 3 days.
19. Store the appliance in a dry place inaccessible to children (pack the appliance).
20. Only use fragrances, aromas or essential oils that do NOT contain alcohol. Alcohol can damage the appliance.
Appliances that are damaged by such additives are not covered by the warranty.
21. Manufacturer is not responsible for any damage due to improper use of appliance.

Diffuser's scheme

- | | |
|---|-----------------|
| A) Mist nozzle | I) DC socket |
| B) Body cover | J) Water outlet |
| C) Water tank cover | K) Air inlet |
| D) Water tank | L) Button MIST |
| E) Air outlet | M) Button + |
| F) Base | N) Button - |
| G) Operation buttons | P) Button MODE |
| H) Infrared receiver | |
| O) Button  | |
| Q) Button  | |
| R) Button  | |

Operation instruction

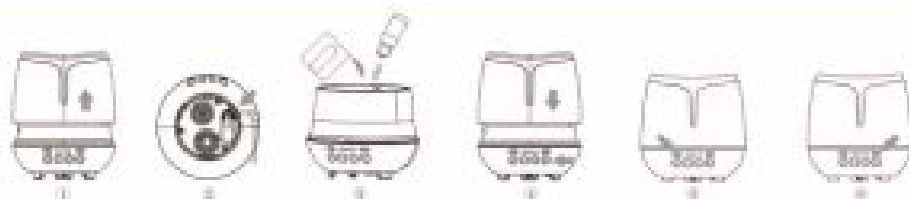

1. Place the product horizontally, remove the upper cover and inner cover (fig. 1).
2. Connect the adaptor to the DC jack on the bottom (fig. 2).
3. Fill water into the water tank, not higher than the max water level line – max. 300 ml. Fresh tap water is applicable. Do not pour water or other liquid into the air outlet. Add 3 to 4 drops of essential oils. The amount of oil can be on your hobby (fig. 3).
4. Replace the inner cover and upper to the original position, then plug the adaptor to power socket (fig. 4).
5. Press shortly button MIST (on the product, position low right) to switch on diffuser in continual mist mode (LED light CON is on). Press shortly once again to switch diffuser to low mist power. Press shortly once again to switch off mist power (all LED are off). You can switch off mist power also if you hold button MIST 2-3 seconds.
6. Press shortly button LIGHT (on the product, position top left) to switch on diffuser's light (colors are changing, default is highlight mode). Press shortly once again to stop changing colors. Press shortly once again to switch

off diffuser's light. If you hold button LIGHT for 2-3 sec., it will change to lowlight mode.

7. Press shortly button MODE (on the product, position top right) to active timer function – diffuser will switch off after 1 hour (LED light 1H is on). Press shortly once again to change timer setting – diffuser will switch off after 2 hour (LED light 2H is on). Press shortly once again to switch off timer function (fig. 6).
8. Press button for 2-3 sec. to switch on/off bluetooth function. Press this button shortly to stop/play music.
9. Press shortly button – to play previous song, press same button for 2-3 sec. to decrease volume of music.
Press shortly button + to play next song, press same button for 2-3 sec. to increase volume.

Operations with remote control

1. Button MIST (L)

- 1. short press – switch on diffuser with high mist power (LED diod CON is on)
- 2. short press – change diffuser to low mist power
- 3. short press – switch off diffuser (all LED are off)
- long press – switch off diffuser (all LED are off)

2. Button MODE (P)

- 1. short press – switch on timer (LED diod 1H is on)
- 2. short press – change setting of timer (LED diod 2H is on)
- 3. short press – switch off timer (LED diods 1H and 2H are off)
- long press – change between continual (LED diod CON is on) and interval mode (LED diod INT is on, diffuser is on for 20 sec. and off for 40 sec.)

3. Button

- 1. short press – switch on light (colour change)
- 2. short press – stop on current colour (no colour change)
- 3. short press – switch off light

4. Button

- 1. short press – decrease light level to 50% (with light switched on)
- 2. short press – increase light level back to 100% (with light switched on)

5. Button +

- short press – change to next music
- long press – increase volume of music

6. Button –

- short press – change to previous music

- long press – decrease volume of music

7. Button

- short press – play/stop music
- long press – switch on/off bluetooth function, play the indication sound after successful pairing with bluetooth device (e.g. mobile phone).

Notice

The appliance switches itself off as soon as the water in the water tank is almost empty. The amount and intensity of produced mist vary, but this is not unusual and should not be considered as a fault. If you want to use a different kind of essence, always clean water tank properly.

Accidental water leakage

If the appliance accidentally overturns or otherwise water gets inside the appliance, proceed as follows:

- disconnect the appliance from the power supply and remove the water tank cover
- carefully pour the rest of the water out of the water container
- gently shake the appliance to remove water from the inside and then let it dry for at least 24 hours at a

Product care and maintenance

After using 5-6 times or 3-5 days please clean the appliance as follows:

1. Before any cleaning operation, switch the appliance off and unplug it.
2. Clean the water tank with water and vinegar on a soft cloth regularly.
3. Please don't clean the appliance with thinner, gasoline and cleanser.
4. Please pour away the water when in no use.
5. Keep dry when in no use to avoid bacterial and mildew (fungus).
6. Never immerse the unit in water or let water enter the air outlet or any other openings.

Problems and solutions

When you switch on appliance, it will switch off in 1 second.

Without mist spray or abnormal mist spray

Water leakage.

- check water tank if there is water or not
- check if AC adaptor is connected correctly
- check water tank if there is water or not, also check if water is under max. line
- clean water tank
- • check air inlet and clean it from dust
- check if upper cover is placed correctly

- check ambient temperature and humidity (too low temperature or too high humidity may lead to mist get easier together and form water drops)

Technická specifikace

Power supply (input): AC100-240V 50/60 Hz
 Power supply (output): DC 24V
 Rated power: 12 W
 Product size: diameter 150 mm, height 150 mm
 Product weight: 220 g
 Water level: 300 ml
 Suitable area: 10-20 m²
 Complies with EU regulations: CE, EMC, WEEE



Disposal of the device (environment)

The European directive 2012 / 19 / CE on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

This product is in compliance with the essential requirements and other relevant provisions of EMC directive 2014/30/EU. The device was approved for use in EU countries, therefore, bear the CE. All necessary documentation is available at the importer address.

Changes in technical parameters, properties, printing errors in the instruction manual reserved.

EU Importer address:

Bibetus s.r.o.
 Loosova 262/1
 Brno 638 00
 Czech republic
 E-mail: info@bibetus.cz

Read More About This Manual & Download PDF:

Documents / Resources

	airibi Sonic Aromatherapy Diffuser [pdf] Instruction Manual Sonic Aromatherapy Diffuser
--	--

