



AIRIUS 10 Speed Controller Instruction Manual

[Home](#) » [AIRIUS](#) » AIRIUS 10 Speed Controller Instruction Manual 



10 Speed Controller Instruction Manual



Contents

1	INSTALLATION INSTRUCTIONS FOR 1 AMP SPEED CONTROLLERS
2	Technical Data
3	Mounting
4	Transport and Stock Keeping
5	Warranty
6	Maintenance
7	Motor Protection
8	DIMENSIONS
9	SPEED CONTROLLER COMPONENTS
10	WIRING DIAGRAM
11	Documents / Resources
11.1	References
12	Related Posts

INSTALLATION INSTRUCTIONS FOR 1 AMP SPEED CONTROLLERS

Speed controller for single phase voltage controllable motors

1 x 1 AMP CONTROLLER WILL OPERATE THE FOLLOWING:

AIRIUS MODEL	10	15	25	45/PS-4	45/PS-2	50/PS-4	60/PS-4
NO. OF UNITS	13	10	5	4	1	2	1

PLEASE CONTACT SIRIUS FOR RECOMMENDED QUANTITY OF FANS PER CONTROLLER FOR YOUR UNIQUE APPLICATION

Technical Data

Voltage: 230Vac – 50/60Hz

MAX AMPS FUSE

STR-1-10L10 1.0 FT-1.25A

Enclosure: Plastic R-ABS, UL94-V0, grey RAL 7035 or sheet steel (RAL 7032, polyester powder coating).

Recommended prim. Fuse: ca 1,5 extra.

Max ambient temperature: 35°C

These transformer speed controllers are based on the principle of voltage control with auto-transformers.

They are applicable to voltage-controllable motors (230V – 50/60Hz) to control the speed (of fans, pumps, etc.).

When choosing a controller it is important to know the current intensity consumption on the taps.

Mounting

The controllers are to be mounted on a smooth surface. Connect voltage supply, motor(s), and earth as shown in the scheme with cables of the proper diameter. On the side of the main, a safety switch with recommend pre-fuses has to be installed.

Transport and Stock Keeping

Avoid shocks and extreme conditions, stock in original packaging.

Warranty

Two years from delivery date against defects in manufacturing. Any modifications or alterations to the product relieve the manufacturer of all responsibility.

The manufacturer bears no responsibility for any misprints or mistakes in this data, and modifications or improvements to the product can be made at any time after date of publication.

Maintenance

In normal conditions the controllers are maintenance-free. If soiled clean with dry or dampish cloth. In case of heavy pollution clean with a non-aggressive product. In these circumstances, the controller should be disconnected from the mains. Pay attention that no fluids enter the controller. Only reconnect the controller to the mains when it is completely dry.

Motor Protection

It is always recommended to install a proper motor protection device.




All works may only be carried out by skilled personnel following the local regulations and AFTER the controller is completely separated from the mains. Replace fuse only with the same type and rating.



According to the low voltage directive: 2006/95/EC/The EMC directive: 2004/108/EC

DIMENSIONS

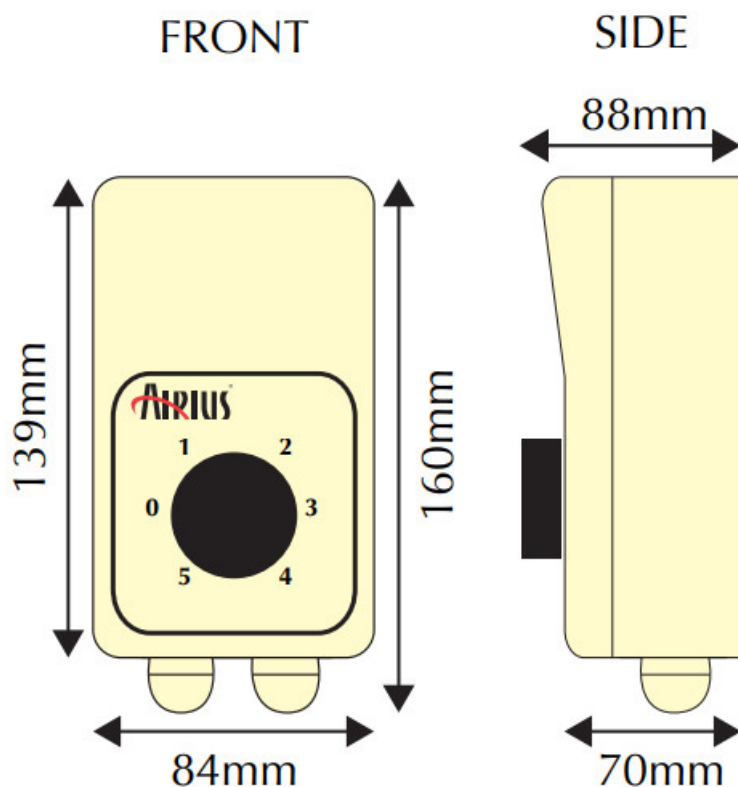

SPEED CONTROLLER COMPONENTS





**SPEED CONTROLLER
(FULLY ASSEMBLED)**



**4 x SCREWS AND WALL
PLUGS FOR WALL MOUNTING**

WIRING DIAGRAM

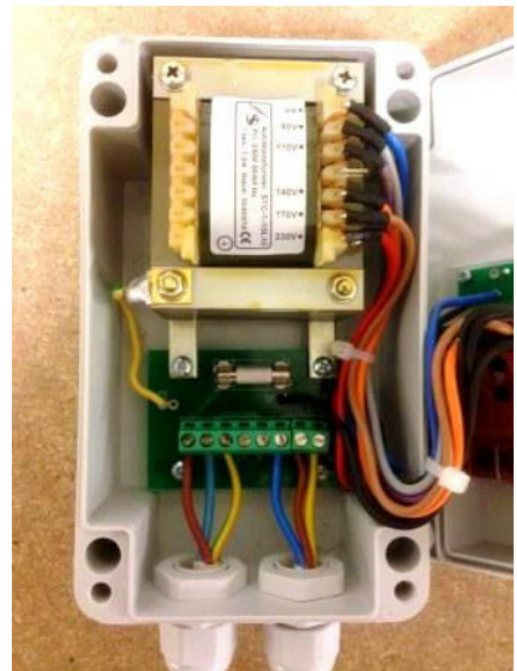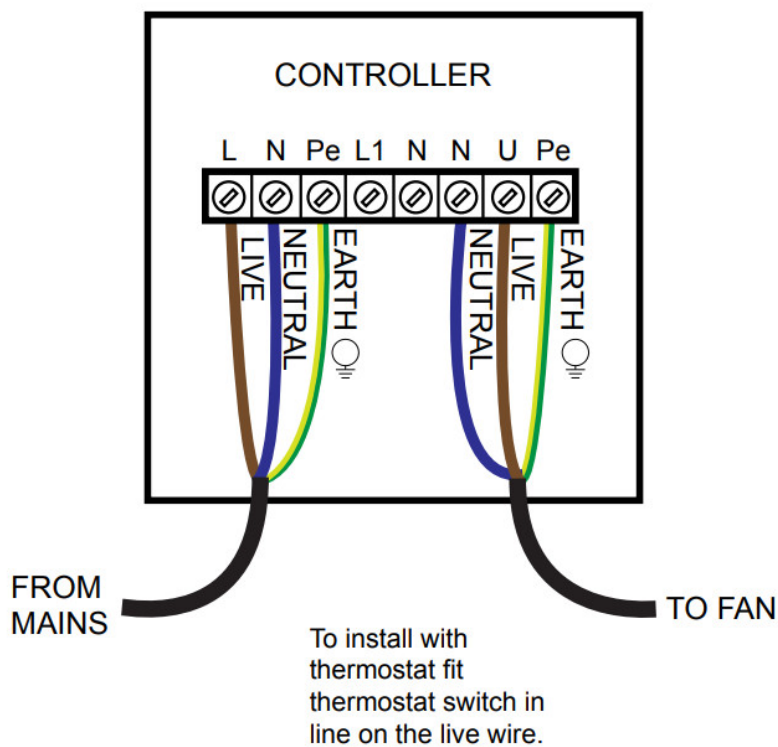

When wiring is complete controller should appear as above.

PLEASE NOTE: THIS CONTROLLER MUST BE EARTHED

Documents / Resources



Manuals+.