



# AIRIUS 45/PS-4 5 Amp Speed Controller Instruction Manual

[Home](#) » [AIRIUS](#) » AIRIUS 45/PS-4 5 Amp Speed Controller Instruction Manual 

## Contents

- 1 [AIRIUS 45/PS-4 5 Amp Speed Controller Instruction Manual](#)
- 2 [INSTALLATION INSTRUCTIONS FOR 5 AMP SPEED CONTROLLERS](#)
- 3 [PLEASE CONTACT AIRIUS FOR RECOMMENDED QUANTITY OF FANS PER CONTROLLER FOR YOUR UNIQUE APPLICATION](#)
- 4 [Technical Data](#)
- 5 [Mounting](#)
- 6 [Transport and Stock Keeping](#)
- 7 [Warranty](#)
- 8 [Maintenance](#)
- 9 [Motor Protection](#)
- 10 [DIMENSIONS](#)
- 11 [SPEED CONTROLLER COMPONENTS](#)
- 12 [WIRING DIAGRAM](#)
- 13 [PLEASE NOTE: THIS CONTROLLER MUST BE EARTHED](#)
- 14 [Get In Touch](#)
- 15 [Our Address](#)
- 16 [Read More About This Manual & Download PDF:](#)
- 17 [Documents / Resources](#)
- 18 [Related Posts](#)

## AIRIUS 45/PS-4 5 Amp Speed Controller Instruction Manual



### INSTALLATION INSTRUCTIONS FOR 5 AMP SPEED CONTROLLERS

Speed controller for single phase voltage controllable motors  
1 x 5 AMP CONTROLLER WILL OPERATE THE FOLLOWING:

AIRIUS MODEL	10	15	25	45/PS-4	45/PS-2	50/PS-4	60/PS-4
NO. OF UNITS	67	53	25	20	6	11	6

**PLEASE CONTACT AIRIUS FOR RECOMMENDED QUANTITY OF FANS PER CONTROLLER  
FOR YOUR UNIQUE APPLICATION**

#### Technical Data

Voltage: 230Vac – 50/60Hz

MAX AMPS      FUSE

STR-1-50L22      5.0      FT-8.0 A

Enclosure: Plastic R-ABS, UL94-V0, grey RAL 7035 or sheet steel (RAL 7032, polyester powder coating).  
Recommended prim. Fuse: ca 1,5 x trafo.

Max ambient temperature: 35°C

These transformer speed controllers are based on the principle of voltage control with auto-transformers. They are applicable to voltage-controllable motors (230V – 50/60Hz) to control the speed (of fans, pumps etc.). When choosing a controller it is important to know the current intensity consumption on the taps.

## Mounting

The controllers are to be mounted on a smooth surface. Connect voltage supply, motor(s) and earth as shown in the scheme with cables of the proper diameter. On the mains side, a safety switch with recommended pre-fuses has to be installed.

## Transport and Stock Keeping

Avoid shocks and extreme conditions, stock in original packaging.



## Warranty

Two years from delivery date against defects in manufacturing. Any modifications or alterations to the product relieve the manufacturer of all responsibility. The manufacturer bears no responsibility for any misprints or mistakes in this data, and modifications or improvements to the product can be made at any time after date of publication.

## Maintenance

In normal conditions the controllers are maintenance-free. If soiled clean with dry or dampish cloth. In case of heavy pollution clean with a non-aggressive product. In these circumstances the controller should be disconnected from the mains. Pay attention that no fluids enter the controller. Only reconnect the controller to the mains when it is completely dry.

## Motor Protection



It is always recommended to install a proper motor protection device.




All works may only be carried out by skilled personnel following the local regulations and AFTER the controller is completely separated from the mains. Replace fuse only with same type and rating.



According to the low voltage directive: 2006/95/EC/ The EMC directive: 2004/108/EC

## DIMENSIONS

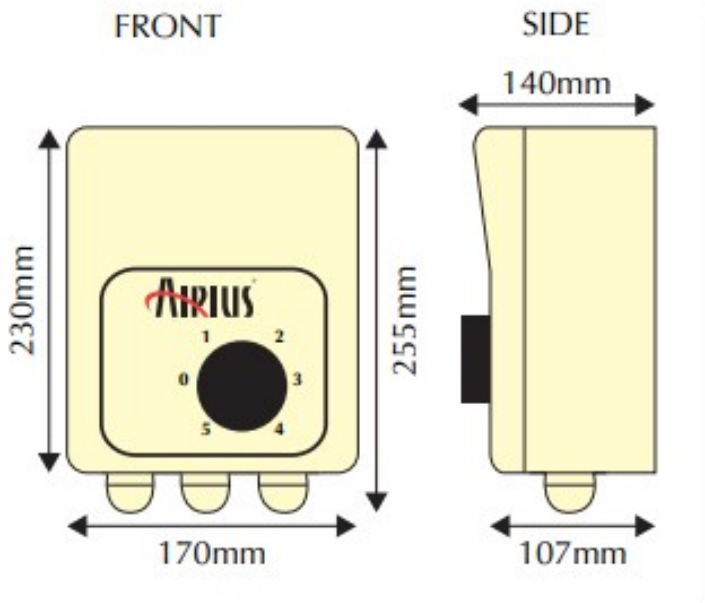

## SPEED CONTROLLER COMPONENTS




**SPEED CONTROLLER  
(FULLY ASSEMBLED)**



**4 x SCREWS AND WALL  
PLUGS FOR WALL MOUNTING**

## WIRING DIAGRAM

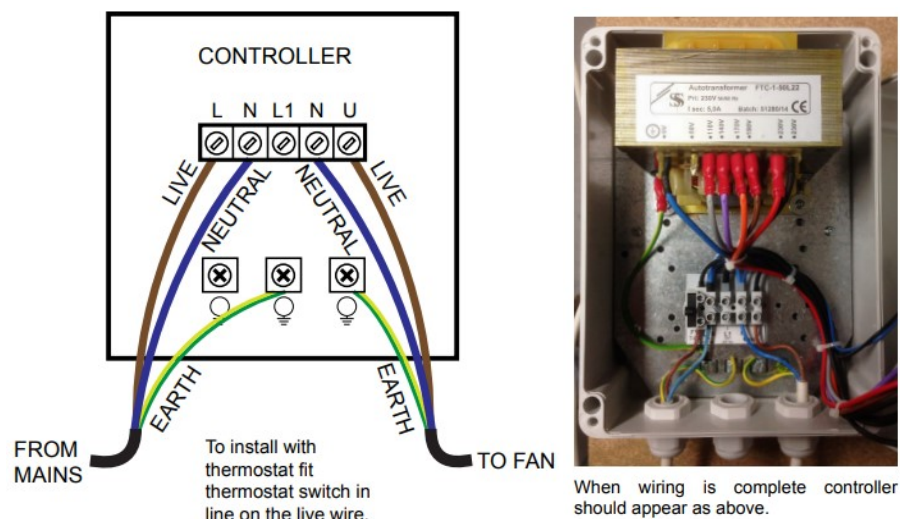

**PLEASE NOTE: THIS CONTROLLER MUST BE EARTHED**

## Get In Touch

Call: 0845 6880112  
Email: [info@adremit.co.uk](mailto:info@adremit.co.uk)

## Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,  
Settle, North Yorkshire, BD24 9RH

***Read More About This Manual & Download PDF:***

## Documents / Resources

	<p><a href="#">AIRIUS 45/PS-4 5 Amp Speed Controller</a> [pdf] Instruction Manual 45 PS-4, 5 Amp Speed Controller, 45 PS-4 5 Amp Speed Controller</p>
--	---