



AIRZONE Aidoo KNX Controller Instruction Manual

[Home](#) » [AIRZONE](#) » AIRZONE Aidoo KNX Controller Instruction Manual 

Contents

- 1 [AIRZONE Aidoo KNX Controller](#)
- 2 [Product Information: Aidoo KNX Controller](#)
- 3 [Product Usage Instructions](#)
- 4 [Warnings and Environmental Policy](#)
 - 4.1 [Precautions](#)
 - 4.2 [Environmental Policy](#)
- 5 [General requirements](#)
- 6 [Introduction](#)
- 7 [Assembly](#)
- 8 [Connection](#)
- 9 [Configuration](#)
- 10 [Communication objects](#)
- 11 [DEFAULT COMMUNICATION OBJECTS](#)
- 12 [CONFIGURATION PARAMETERS](#)
 - 12.1 [Enable use of scenes](#)
 - 12.2 [Inputs configuration](#)
 - 12.3 [Communication objects](#)
- 13 [KNX parameters for LG](#)
 - 13.1 [LGE PROTOCOL](#)
- 14 [Documents / Resources](#)
- 15 [Related Posts](#)



AIRZONE Aidoo KNX Controller



Product Information: Aidoo KNX Controller

The Aidoo KNX Controller is a device that manages and integrates HVAC units in KNX TP-1 control systems. It is externally powered by the indoor unit and has a standard KNX connector for connecting to the KNX bus. The device features indoor unit wires, digital inputs, common input, KNX connection, indoor unit port, device reboot, and enable KNX programming.

Product Usage Instructions

Follow these instructions to use the Aidoo KNX Controller:

1. Mount the device using screws or double-sided adhesive tape.
2. Follow the instructions on the technical data sheet for connecting the device to the AC unit.
3. Connect the Aidoo to the KNX TP-1 bus, following the color code.
4. Configure and set up the device through ETS tool using the product database downloaded from http://doc.airzone.es/producto/Gama_AZ6/Airzone/Aidoo/BBDD_AZAI6KNX.zip
5. Use the default communication objects available in ETS for the Aidoo KNX device to control the AC unit's on/off switch, operating mode, ventilation speed, and position of the slats.
6. For your security and to protect the devices, strictly follow the directions outlined in the manual and the environmental policy for the Airzone System and communications.

Warnings and Environmental Policy

Precautions

For your security and to protect the devices, follow these instructions:

- Strictly follow the directions outlined in the manual.
- Follow the instructions on the technical data sheet for connecting the device to the AC unit.
- Connect the Aidoo to the KNX TP-1 bus, following the color code.




General requirements: Strictly follow the directions outlined in this manual for the Airzone System and communications. Do not dispose of this equipment in the household waste. Electrical and electronic equipment contain substances that may damage the environment if they are not handled appropriately. The symbol of a crossed-out waste bin indicates that electrical equipment should be collected separately from other urban waste. For correct environmental management, it must be taken to the collection centers provided for this purpose, at the end of its useful life. The equipment's components may be recycled. Act in accordance with current regulations on environmental protection. If you replace it with other equipment, you must return it to the distributor or take it to a specialized collection center. Those breaking the law or by-laws will be subject to such fines and measures as are laid down in environmental protection legislation.

General requirements

Strictly follow the directions outlined in this manual:

- This system must be installed by a qualified technician.
- Verify that the units to be controlled have been installed according to the manufacturer's requirements and operate correctly before installing the Airzone System.
- Locate and connect all the devices of the installation in accordance with the electronic regulations in force.
- Verify that the air conditioning installation to be controlled is in accordance with the regulations in force.
- Perform all the connections with total absence of power supply.
- Do not place the system bus close to lines of force, fluorescent lights, LED lamps, motors, etc. It might cause interference on the communications.

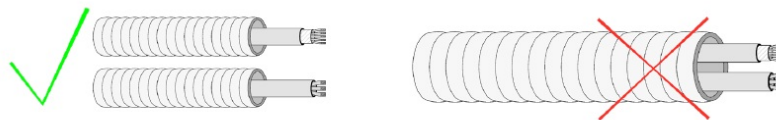


- Respect the connection polarity of each device. A wrong connection may seriously damage the product.

Introduction

Device to manage and integrate HVAC units in KNX TP-1 control systems.

Externally powered by the indoor unit. Features:


- Control of the parameters of the unit.
- KNX Control.
- KNX standard data.
- 3 digital inputs.
- Easily configurable from ETS.
- Communication errors detection.

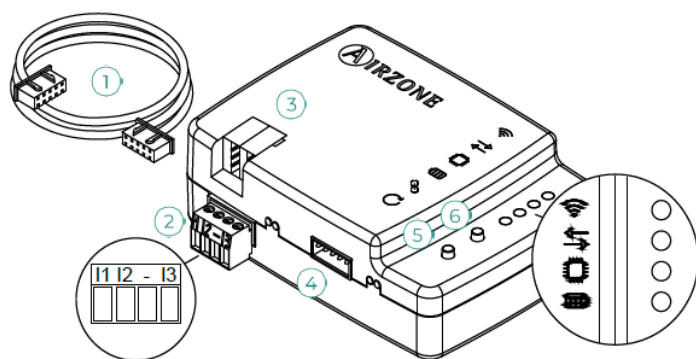

Meaning	
①	Indoor unit wire
	Digital input 1
②	Digital input 2
	Common input
	Digital input 3
③	KNX Connection
④	Indoor unit port
⑤	Device reboot
⑥	Enable KNX programming


Assembly

The device can be mounted using screws or double-sided adhesive tape (included with the product).

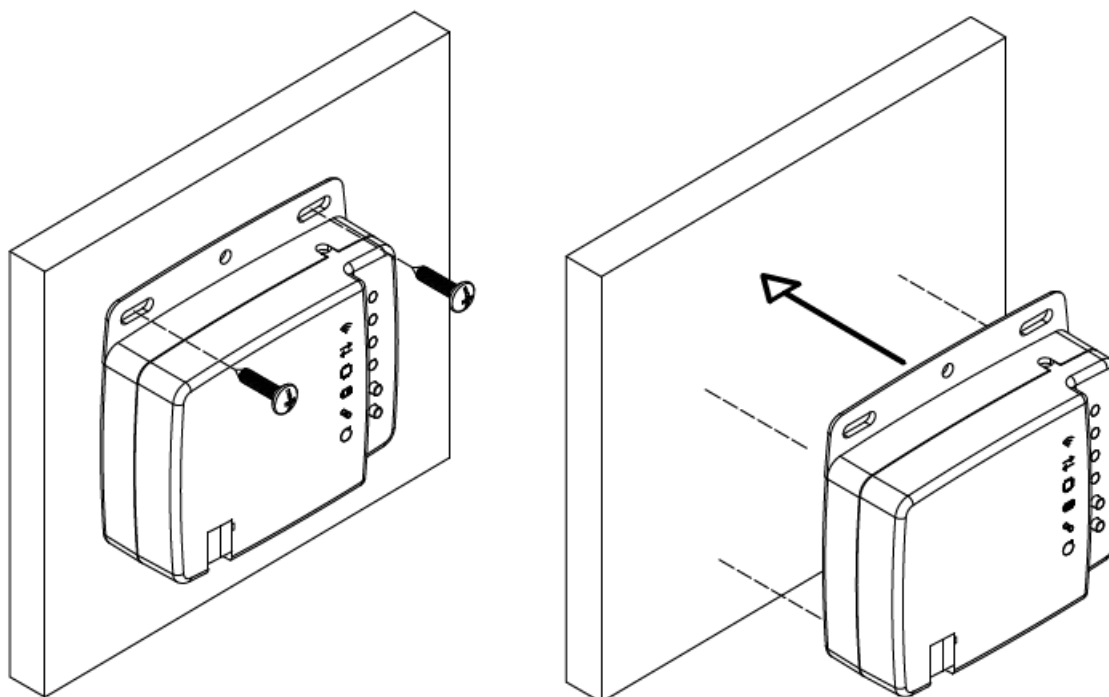

Connection

To connect the device to the AC unit, follow the instructions on the technical data sheet that comes with the Aidoo. It has a standard KNX connector for connecting to the KNX bus. Connect the Aidoo to the KNX TP-1 bus, following the color code.

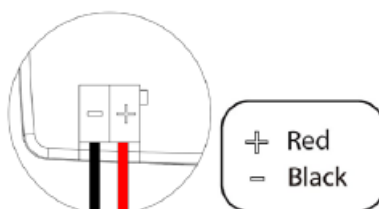

Configuration

This device is totally compatible with KNX, so you can configure it and set it up through ETS tool . **To do this, download the product database at:**

http://doc.airzone.es/producto/Gama_AZ6/Airzone/Aidoo/BBDD_AZAI6KNX.zip The installation of the database in the ETS tool is carried out following the usual procedure for importing new products.

Communication objects

The Aidoo KNX device has a series of communication objects available for configuration by default (see the Default communication objects section). If you wish to use all the communication objects contained in this device, go to the Parameters tab in order to enable them (see the Configuration Parameters section for more information). **IMPORTANT:** The number of functionalities that can be controlled by the different communication objects offered by the Aidoo KNX device will depend on the particular AC unit being controlled. To view all the communication objects available on the Aidoo KNX device, please go to Annexes – Index – Communication Objects for more information.

DEFAULT COMMUNICATION OBJECTS

The default communication objects available in ETS for the Aidoo KNX device are:

Object number	1: Control On/Off	
Description	This allows you to switch the AC unit on or off	
Values	0 -> Off	1 -> On
Type of access to the Bus	Write	
Data point identification	1.001 (DPT_Switch)	
Object number	2: Control Mode	

Note: You can configure the object type in the Fan Configuration section, under the Parameters tab in ETS. By default it is configured as Datapoint 5.001 (percentage control). See the Configuration Parameters – Fan Configuration section for more information.

Note: Configure the object type in the Vanes Up-Down configuration section, under the Parameters tab in ETS. By default it is configured as Datapoint 5.001 (percentage control). See the Configuration Parameters – Vanes Up-Down configuration section for more information.

Object number	51: Status On/Off	
Description	This displays the status of the AC unit (on or off)	
Valores disponibles	0 -> Off	1 -> On
Tipo de acceso al bus	Reading	
Identificación Datapoint	1.001 (DPT_Switch)	
Object number	52: Status mode	
Description	Position	
Values	0 -> Auto 1-> Heat 3 -> Cool	9 -> Fan 14 -> Dry
Type of access to the Bus	Reading	
Data point identification	20.105 (DPT_ Hvaccontrmode)	
Object number	60: Status Fan speed / 3 speed	
Description	This displays the AC unit's ventilation speed	
Values	33% -> Speed 1 67% -> Speed 2 100% -> Speed 3	1 -> Speed 1 2 -> Speed 2 3 -> Speed 3
Type of access to the Bus	Reading	
Data point identification	5.001 (DPT_Scaling)	5.010 (DPT_Enumerated)


Note: Configure the object type in the Vanes Up-Down configuration section, under the Parameters tab in ETS. By default it is configured as Datapoint 5.001 (percentage control). See the Configuration Parameters – Vanes Up-Down configuration section for more information.

Object number	66: Status Vanes U-D/5Pos	
Description	This displays the position of the AC unit's slats	
Values	20% -> Position 1 40% -> Position 2 60 % -> Position 3 80% -> Position 4 100% -> Position 5	1 -> Position 1 2 -> Position 2 3 -> Position 3 4 -> Position 4 5 -> Position 5
Type of access to the Bus	Reading	
Data point identification	5.001 (DPT_Scalling)	5.010 (DPT_Enumerated)

Note: Configure the object type in the Vanes Up-Down configuration section, under the Parameters tab in ETS. By default it is configured as Datapoint 5.001 (percentage control). See the Configuration Parameters – Vanes Up-Down configuration section for more information.

CONFIGURATION PARAMETERS

The Aidoo KNX device has a series of communication objects that can be enabled for use via the Parameters tab in ETS.

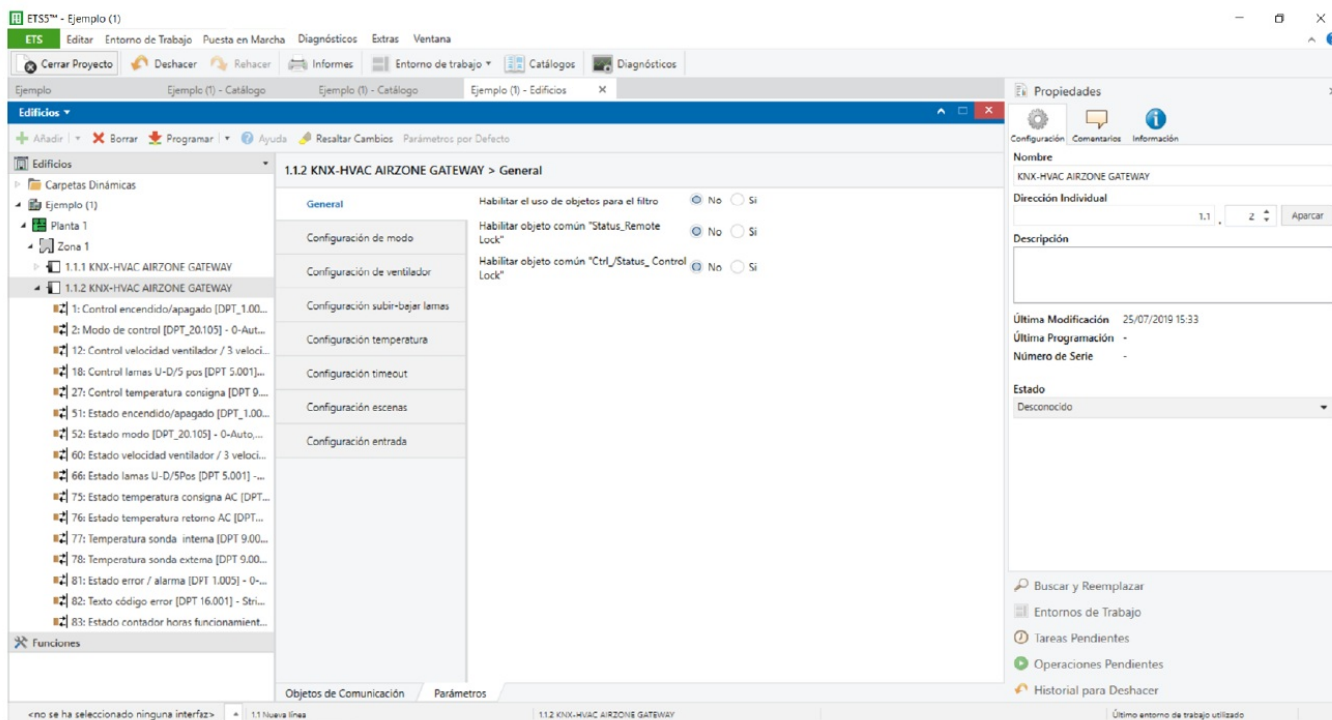

General

- Enable use of objects for filter

Object number	31: Control Reset Filter
Description	This resets the filter cleaning warning counter on the AC unit
Values	1 -> Reset
Type of access to the Bus	Write
Data point identification	1.015 (DPT_Reset)

Object number	79: Status Reset Filter
Description	This shows whether or not there has been a warning from the AC unit regarding filter cleaning
Values	0 -> No alarm 1 -> Alarm
Type of access to the Bus	Reading
Data point identification	1.002 (DPT_Bool)

- Enable comm obj "Status_Remote Lock"

Object number	84: Status Lock Remote Control
Description	This allows you to lock control from the AC unit's controller
Values	0 -> Unlocked 1 -> Locked
Type of access to the Bus	Reading
Data point identification	1.002 (DPT_Bool)

- Enable comm obj "Ctrl_/Status_Control Lock"

Object number	36: Control Lock Control Objects
Description	This allows you to lock control from KNX communication objects
Values	0 -> Unlocked 1 -> Locked
Type of access to the Bus	Write
Data point identification	1.002 (DPT_Bool)

Object number	85: Status Lock Control Objects
Description	This shows whether control has been locked from KNX communication objects
Values	0 -> Unlocked 1 -> Locked
Type of access to the Bus	Reading
Data point identification	1.002 (DPT_Bool)

Mode configuration

- Enable "Mode Cool/Heat" objects

Object number	3: Control Mode Cool/Heat
Description	This allows you to select the AC unit's operating mode (Cooling or Heating) by changing the value of the object
Values	0 -> Cool 1 -> Heat
Type of access to the Bus	Write
Data point identification	1.100 (DPT_Heat/Cool)

Object number	53: Status Mode Cool/Heat	
Description	This displays the operating mode (Cooling or Heating) currently selected for the AC unit	
Values	0 -> Cool	1 -> Heat
Type of access to the Bus	Reading	
Data point identification	1.100 (DPT_Heat/Cool)	

- Enable PID-Compat Scaling Mode Objects

Object number	4: Control Mode Cool & On	
Description	This allows you to switch the AC unit on or off, with the selected operating mode being Cooling	
Values	0 -> Off	1... 100% -> On + Cool
Type of access to the Bus	Write	
Data point identification	5.001 (DPT_Scaling)	

Object number	5: Control Mode Heat & On	
Description	This allows you to switch the AC unit on or off, with the selected operating mode being Heating	
Values	0 -> Off	1... 100% -> On + Heat
Type of access to the Bus	Write	
Data point identification	5.001 (DPT_Scaling)	

- Enable use of bit-type Mode objects

Object number	6: Control Mode Auto	
Description	This allows you to select the Auto mode as the AC unit's operating mode	
Values	1 -> Mode Auto	
Type of access to the Bus	Write	
Data point identification	1.002 (DPT_Bool)	

Object number	7: Control Mode heat	
Description	This allows you to select the Heating mode as the AC unit's operating mode	
Values	1 -> Mode Heat	
Type of access to the Bus	Write	
Data point identification	1.002 (DPT_Bool)	

Object number	8: Control Mode Cool	
Description	This allows you to select the Cooling mode as the AC unit's operating mode	
Values	1 -> Mode Cool	
Type of access to the Bus	Write	
Data point identification	1.002 (DPT_Bool)	

Object number	9: Control Mode Fan	
Description	This allows you to select the Ventilation mode as the AC unit's operating mode	
Values	1 -> Mode Fan	
Type of access to the Bus	Write	
Data point identification	1.002 (DPT_Bool)	

Object number	10: Control Mode Dry	
Description	This allows you to select the Dry mode as the AC unit's operating mode	
Values	1 -> Mode Dry	
Type of access to the Bus	Write	
Data point identification	1.002 (DPT_Bool)	
Object number	54: Status Mode Auto	
Description	This shows that the operating mode currently selected for the AC unit is Auto mode	
Values	1 -> Mode Auto	
Type of access to the Bus	Reading	
Data point identification	1.002 (DPT_Bool)	
Object number	55: Status Mode Heat	
Description	This shows that the operating mode currently selected for the AC unit is Heating mode	
Values	1 -> Mode Heat	
Type of access to the Bus	Reading	
Data point identification	1.002 (DPT_Bool)	
Object number	56: Status Mode Cool	
Description	This shows that the operating mode currently selected for the AC unit is Cooling mode	
Values	1 -> Mode Cool	
Type of access to the Bus	Reading	
Data point identification	1.002 (DPT_Bool)	
Object number	57: Status Mode Fan	
Description	This shows that the operating mode currently selected for the AC unit is Ventilation mode	
Values	1 -> Mode Fan	
Type of access to the Bus	Reading	
Data point identification	1.002 (DPT_Bool)	
Object number	58: Status Mode Dry	
Description	This shows that the operating mode currently selected for the AC unit is Dry mode	
Values	1 -> Mode Dry	
Type of access to the Bus	Reading	
Data point identification	1.002 (DPT_Bool)	

- Enable use of +/- object for mode

Select whether you want to use Datapoint DPT 1.007 (0 = Decrease) or DTP 1.008 (0 = Increase).

Object number	11: Control Mode +/-	
Description	This allows you to modify the system's operating mode	
Values	0 -> Decrease 1 -> Increase	0 -> Increase 1 -> Decrease
Type of access to the Bus	Write	
Data point identification	1.007 (DPT_Step)	1.008 (DPT_UpDown)

- Enable use of text object for Mode

Object number	59: Status Mode Text
Description	This displays the AC unit's operating mode
Values	ASCII String
Type of access to the Bus	Reading
Data point identification	16.001 (DPT_String_8859_1)

Fan configuration

- DPT object type for fan speed

Select whether you want to use Datapoint DPT 5.001 (percentage control) or DTP 5.010 (number control) for controlling and reading the AC unit's ventilation speed status:

5.001 (DPT_Scalling)	5.010 (DPT_Enumerated)
0...49% -> Speed 1	1 -> Speed 1
50...82% -> Speed 2	2 -> Speed 2
83...100% -> Speed 3	3 -> Speed 3

- Enable use of bit-type Fan Speed objects

Object number	13: Control Fan Speed Man/Auto
Description	This allows you to switch the AC unit's ventilation mode between Manual and Auto by changing the value of the object
Values	1 -> Auto
Type of access to the Bus	Write
Data point identification	1.002 (DPT_Bool)

Object number	14: Control Fan Speed 1
Description	This allows you to activate the ventilation speed 1 in the AC unit
Values	1 -> Activated
Type of access to the Bus	Write
Data point identification	1.002 (DPT_Bool)

Object number	15: Control Fan Speed 2
Description	This allows you to activate the ventilation speed 2 in the AC unit
Values	1 -> Activated
Type of access to the Bus	Write
Data point identification	1.002 (DPT_Bool)

Object number	16: Control Fan Speed 3
Description	This allows you to activate the ventilation speed 3 in the AC unit
Values	1 -> Activated
Type of access to the Bus	Write
Data point identification	1.002 (DPT_Bool)

Object number	61: Status Fan Speed Manual/Auto	
Description	This shows whether the AC unit's ventilation speed is set to Manual or Auto	
Values	0 -> Manual	1 -> Auto
Type of access to the Bus	Reading	
Data point identification	1.002 (DPT_Bool)	

Object number	62: Status Fan Speed 1
Description	This shows whether the AC unit's ventilation speed is set to Speed 1
Values	1 -> Speed 1
Type of access to the Bus	Reading
Data point identification	1.002 (DPT_Bool)

Object number	63: Status Fan Speed 2
Description	This shows whether the AC unit's ventilation speed is set to Speed 2
Values	1 -> Speed 2
Type of access to the Bus	Reading
Data point identification	1.002 (DPT_Bool)

Object number	64: Status Fan Speed 3
Description	This shows whether the AC unit's ventilation speed is set to Speed 3
Values	1 -> Speed 3
Type of access to the Bus	Reading
Data point identification	1.002 (DPT_Bool)

- Enable use of +/- object for fan speed

Select whether you want to use Datapoint DPT 1.007 (0 = Decrease) or DTP 1.008 (0 = Increase).

Object number	17: Control Fan Speed +/-	
Description	This allows you to control the AC unit's ventilation speed	
Values	0 -> Decrease 1 -> Increase	0 -> Increase 1 -> Decrease
Type of access to the Bus	Write	
Data point identification	1.007 (DPT_Step)	1.008 (DPT_UpDown)

- Enable use of Text object for fan speed

Object number	65: Status Fan Speed Text
Description	This displays the AC unit's ventilation speed
Values	ASCII String
Type of access to the Bus	Reading
Data point identification	16.001 (DPT_String_8859_1)

Vanes Up-Down configuration

- DPT object types for Vanes Up-Down

Select whether you want to use Datapoint DPT 5.001 (percentage control) or DTP 5.010 (number control) for controlling and reading the status of the AC unit's slats:

5.001 (DPT_Scalling)	5.010 (DPT_Enumerated)
0%...29% -> Position 1	1 -> Position 1
30%...49% -> Position 2	2 -> Position 2
50%...69% -> Position 3	3 -> Position 3
70%...89% -> Position 4	4 -> Position 4
90%...100% -> Position 5	5 -> Position 5

- Enable use of bit-type Vanes Up-Down objects

Object number	19: Control Vanes U-D Standby	
Description	This allows you to activate the Standby function for the AC unit's slats	
Values	0 -> Deactivated	1 -> Activated
Type of access to the Bus	Write	
Data point identification	1.002 (DPT_Bool)	
Object number	20: Control Vanes U-D Pos 1	
Description	This allows you activate Position 1 for the AC unit's slats	
Values	1 -> Activated	
Type of access to the Bus	Write	
Data point identification	1.002 (DPT_Bool)	
Object number	21: Control Vanes U-D Pos 2	
Description	This allows you activate Position 2 for the AC unit's slats	
Values	1 -> Activated	
Type of access to the Bus	Write	
Data point identification	1.002 (DPT_Bool)	
Object number	22: Control Vanes U-D Pos 3	
Description	This allows you activate Position 3 for the AC unit's slats	
Values	1 -> Activated	
Type of access to the Bus	Write	
Data point identification	1.002 (DPT_Bool)	
Object number	23: Control Vanes U-D Pos 4	
Description	This allows you activate Position 4 for the AC unit's slats	
Values	1 -> Activated	
Type of access to the Bus	Write	
Data point identification	1.002 (DPT_Bool)	
Object number	24: Control Vanes U-D Pos 5	
Description	This allows you activate Position 5 for the AC unit's slats	
Values	1 -> Activated	
Type of access to the Bus	Write	
Data point identification	1.002 (DPT_Bool)	
Object number	25: Control Vanes U-D swing	
Description	This allows you activate the Swing function for the AC unit's slats	
Values	0 -> Deactivated	1 -> Activated
Type of access to the Bus	Write	
Data point identification	1.002 (DPT_Bool)	
Object number	67: Status Vanes U-D Standby	
Description	This shows whether the Standby function is activated for the AC unit's slats	
Values	0 -> Deactivated	1 -> Activated
Type of access to the Bus	Reading	
Data point identification	1.002 (DPT_Bool)	

Object number	68: Status Vanes U-D Pos 1
Description	This shows whether the AC unit's slats are in Position 1
Values	1 -> Position 1
Type of access to the Bus	Reading
Data point identification	1.002 (DPT_Bool)

Object number	69: Status Vanes U-D Pos 2
Description	This shows whether the AC unit's slats are in Position 2
Values	1 -> Position 2
Type of access to the Bus	Reading
Data point identification	1.002 (DPT_Bool)

Object number	70: Status Vanes U-D Pos 3
Description	This shows whether the AC unit's slats are in Position 3
Values	1 -> Position 3
Type of access to the Bus	Reading
Data point identification	1.002 (DPT_Bool)

Object number	71: Status Vanes U-D Pos 4
Description	This shows whether the AC unit's slats are in Position 4
Values	1 -> Position 4
Type of access to the Bus	Reading
Data point identification	1.002 (DPT_Bool)

Object number	72: Status Vanes U-D Pos 5
Description	This shows whether the AC unit's slats are in Position 5
Values	1 -> Position 5
Type of access to the Bus	Reading
Data point identification	1.002 (DPT_Bool)

Object number	73: Status Vanes U-D Swing
Description	This shows whether the Swing function is activated for the AC unit's slats
Values	0 -> Deactivated 1 -> Activated
Type of access to the Bus	Reading
Data point identification	1.002 (DPT_Bool)

- Enable use of +/- Object for Vanes Up-Down

Select whether you want to use Datapoint DPT 1.007 (0 = Decrease) or DTP 1.008 (0 = Increase).

Object number	26: Control Vanes U-D +/-
Description	This allows you to control the AC unit's slats.
Values	0 -> Decrease 0 -> Increase 1 -> Increase 1 -> Decrease
Type of access to the Bus	Write
Data point identification	1.007 (DPT_Step) 1.008 (DPT_UpDown)

- Enable use of text object for Vanes Up-Down

Object number	74: Status Vanes U-D text
Description	This displays the position of the AC unit's slats
Values	ASCII String
Type of access to the Bus	Reading
Data point identification	16.001 (DPT_String_8859_1)

Object number	28: Control Setpoint Temperature +/-	
Description	This allows you to raise or lower the setpoint temperature of the AC unit in increments of 1°C	
Values	0 -> Decrease 1 -> Increase	0 -> Increase 1 -> Decrease
Type of access to the Bus	Write	
Data point identification	1.007 (DPT_Step)	1.008 (DPT_UpDown)

- Enable limits on Control_Setpoint obj

Select the minimum and maximum setpoint temperature that can be set for the AC unit (in increments of 1°C).

Object number	30: Control Setpoint limitation	
Description	This allows you to enable the function to limit the AC unit's setpoint temperature	
Values	0 -> Disabled	1 -> Enabled
Type of access to the Bus	Write	
Data point identification	1.001 (DTP_Switch)	

Object number	80: Status Setpoint limitation	
Description	This shows whether the function to limit the AC unit's setpoint temperature is enabled	
Values	0 -> Disabled	1 -> Enabled
Type of access to the Bus	Reading	
Data point identification	1.001 (DTP_Switch)	

- Ambient temperature is provided from KNK

This enables/disables ambient temperature reading from a KNX device.

Object number	29: Control Ambient Temperature	
Description	This sends the ambient temperature measured from a KNX device to the indoor unit	
Values	(°C)	
Type of access to the Bus	Write	
Data point identification	9.001 (DTP_Value_Temp)	

Object number	32: Control Window Contact Status	
Description	This displays the window contact status	
Values	0 -> Open	1 -> Closed
Type of access to the Bus	Write	
Data point identification	1.009 (DPT_OpenClose)	

- Enable use of Switch off timeout function. If you select Yes, object 33 will be enabled.
 - ◇ AC switch-off timeout (min). Select the time after which the AC unit will turn off, following the receipt of a warning that the switch has been activated (1) (from 0 to 255 minutes). If the switch is deactivated (0) during this time, the timer will be canceled.
 - ◇ Disallow On/Off operation when timeout is elapsed. Select whether you want to allow the AC unit to be switched on/off when the selected timeout has elapsed.

Object number	33: Control Switch Off timeout	
Description	This allows you to activate a timer for switching off the AC unit	
Values	0 -> Stop	1 -> Start
Type of access to the Bus	Write	
Data point identification	1.010 (DPT_Start)	

Object number	34: Control Occupancy	
Description	This allows you to activate the Unoccupied function in order to switch the AC unit off or put it into unoccupied mode	
Values	0 -> Not occupied	1 -> Occupied
Type of access to the Bus	Write	
Data point identification	1.018 (DPT_Occupancy)	

Object number	35: Control timeout Sleep	
Description	This allows you to activate a timer for switching off the AC unit	
Values	0 -> Stop	1 -> Start
Type of access to the Bus	Write	
Data point identification	1.010 (DPT_Start)	

- Enable use of scenes

Object number	37: Control save / scene	
Description	This allows you to save or execute scenes. Changing the value of the object will change the function and scene number	
Values	0...4 -> Exe Scene 1 to 5	128...132 -> Save Scene 1 to 5
Type of access to the Bus	Write	
Data point identification	18.001 (DPT_SceneControl)	

Object number	86: Status Current Scene	
Description	This displays the current scene being executed	
Values	0...4 -> 1 to 5	63 -> No scene
Type of access to the Bus	Reading	
Data point identification	17.001 (DPT_SceneNumber)	

- Enable use of bit object for storing scenes (you must have the Enable use of scenes parameter enabled)

Object number	38: Control Save Scene 1	
Description	This saves the AC unit's settings as Scene 1	
Values	1 -> Store Scene 1	
Type of access to the Bus	Write	
Data point identification	1.002 (DPT_Bool)	

Object number	39: Control Save Scene 2	
Description	This saves the AC unit's settings as Scene 2	
Values	1 -> Store Scene 2	
Type of access to the Bus	Write	
Data point identification	1.002 (DPT_Bool)	

Object number	40: Control Save Scene 3	
Description	This saves the AC unit's settings as Scene 3	
Values	1 -> Store Scene 3	
Type of access to the Bus	Write	
Data point identification	1.002 (DPT_Bool)	

Object number	41: Control Save Scene 4	
Description	This saves the AC unit's settings as Scene 4	
Values	1 -> Store Scene 4	
Type of access to the Bus	Write	
Data point identification	1.002 (DPT_Bool)	

Object number	42: Control Save Scene 5	
Description	This saves the AC unit's settings as Scene 5	
Values	1 -> Store Scene 5	
Type of access to the Bus	Write	
Data point identification	1.002 (DPT_Bool)	

Object number	45: Execute Scene 3
Description	This executes Scene 3
Values	1-> Execute Scene 3
Type of access to the Bus	Write
Data point identification	1.002 (DPT_Bool)

Object number	46: Execute Scene 4
Description	This executes Scene 4
Values	1-> Execute Scene 4
Type of access to the Bus	Write
Data point identification	1.002 (DPT_Bool)

Object number	47: Execute Scene 5
Description	This executes Scene 5
Values	1-> Execute Scene 5
Type of access to the Bus	Write
Data point identification	1.002 (DPT_Bool)

Enable use of scenes

Scene 1 / 2 / 3 / 4 (you must have the Enable use of scenes parameter enabled). Select the scene ID (values available from 0 to 63). If you wish to configure each scene from ETS, activate the System Preset parameter and configure the values of each parameter for the desired AC unit:

- Value for On-Off: Select if you want to turn the AC unit on/off, or if you do not want to carry out any action.
- Value for mode: Select if you want to change the AC unit's operating mode, or if you do not want to carry out any action.
- Value for fan speed: Select if you want to change the AC unit's ventilation speed, or if you do not want to carry out any action.
- Value vanes U-D: Select if you want to modify the position of the AC unit's slats, or if you do not want to carry out any action.
- Value for Setpoint: Select if you want to change the AC unit's setpoint temperature (16 – 30°C), or if you do not want to carry out any action.

Inputs configuration

Enable the use of the Aidoo KNX digital inputs:

- Input 1: Communication objects 87 and 88.
- Input 2: Communication objects 89 and 90.
- Input 3: Communication objects 91 and 92.

The objects will behave differently depending on the configuration of each input.

Parameters available for configuring each digital input:

- Contact type. Defines the contact logic as Normally Open or Normally Closed.
- Debounce time. Select the debounce time (in milliseconds) required for the system to recognize there has been a change in the contact.

- Disabling input object. Select whether or not you want to enable the object that allows the input to be disabled if necessary (communication objects 48, 49 and 50). If yes, select whether you want to use Datapoint DPT 1.002 (0 = False) or DTP 1.003 (0 = Disable).
- **Function. Select the digital input function of the Aidoo KNX:**
 - **Switching**
 - Send telegram after bus recovery. Select the action to be performed on this digital input after bus recovery (after a power failure): no action, off (0), on (1) or current status.
 - Sending delay after bus recovery. If an action is selected, indicate the time delay for sending the telegram (in seconds).
 - Value on raising Edge (contact activated). Select the action to be sent to the associated communication object, if it produces a rising edge (activated input): no action, off (0), on (1) or toggle.
 - Value on falling Edge (Contact deactivated). Select the action to be sent to the associated communication object, if it produces a falling edge (deactivated input): no action, off (0), on (1) or toggle.
 - Cyclical sending. Select if you want cyclical sending to occur depending on the status of the digital input: never, always, when the output value is Off, or when the output value is On.
 - Period for cyclical sending (s). If cyclical sending is selected, indicate the time period (in seconds) for this cycle.
 - **Dimming**
 - Send telegram after bus recovery. Select the action to be performed on this digital input after bus recovery (after a power failure): no action, off (0) or on (1).
 - Sending delay after bus recovery. If an action is selected, indicate the time delay for sending the telegram (in seconds).
 - Mode for short (long) operation. Select the action for a short operation to be sent on a rising edge (activated input): toggle, off/decrease (0) or on/increase (1). A press and hold will result in either an increasing step or a decreasing step.
 - Increasing step. Select the percentage of the increasing step that will be sent for a long operation.
 - Decreasing step. Select the percentage of the decreasing step that will be sent for a long operation.
 - Short/long operation limit (ms). Defines the time that must elapse for the object to interpret that a long operation has occurred (in milliseconds).
 - Cyclical sending period in long operation (0-No cyclical sending) (ms). Defines the time (in seconds) during which the long operation must be executed.
 - **Shutter/blind**
 - Send telegram after bus recovery. Select the action to be performed on this digital input after bus recovery (after a power failure): no action, increase (0) or decrease (1).
 - Sending delay after bus recovery. If an action is selected, indicate the time delay for sending the telegram (in seconds).
 - Operation. Select the action to be sent on a rising edge (activated input): increase (0), decrease (1) or toggle.
 - Method. Select the operating method for the shutter/blind: step-move-step or move-step.
 - Step-Move-Step. On a rising edge (activated input) a step telegram will be sent and the

counter defined in “Short/long operation limit (ms)” (counter 1) will start. Note: No action will be taken if a falling edge (deactivated input) occurs during this time. If the rising edge is maintained for longer than the time defined in counter 1, a move telegram will be sent and a second counter, defined in “Vanes adjustment time (ms)” (counter 2), will start. If a falling edge (deactivated input) occurs during the time specified in this second counter, a step telegram will be sent. Note: No action will be taken if a falling edge (deactivated input) occurs after this time.

- Move-Step. On a rising edge (activated input), a move telegram will be sent and counter 2 will start (“Vanes adjustment time” (ms)). If a falling edge (deactivated input) occurs during this time, a stop telegram will be sent. Note: No action will be taken if a falling edge (deactivated input) occurs after this time.
- Shot/long operation limit (ms). Defines the time that must elapse (counter 1) between a short operation and a long operation (in milliseconds).
- Vanes adjustment time (ms). Defines the time that must elapse (counter 2) before adjusting the slats or moving the shutter/blind (in milliseconds).
- **Value**
 - Send telegram after bus recovery. Select if you want to send an action (fixed value) on this digital input after bus recovery (after a power failure) or if you do not want to send any action.
 - Sending delay after bus recovery. If an action is selected, indicate the time delay for sending this telegram (in seconds).
 - DTP to be sent. Select the type of DTP to be sent:
 - DTP 5.010 (1 byte unsigned). Values: 0 ... 255
 - DTP 7.001 (2 bytes unsigned). Values: 0 ... 65535
 - DTP 8.001 (2 bytes signed). Values: -32768 ... 32767
 - DTP 9.001 (temperature). Values: 0 ... 255
 - DTP 12.001 (4 bytes unsigned). Values: 0 ... 4294967295
 - Value on raising edge (when contact activated). Defines the value to be sent when the contact is activated.
- Scene (internal). Activates a scene by activating the configured digital input.
 - Scene when contact is activated. Select the scene that will be activated when the digital input is activated.
- Occupancy (internal). Switches to Occupied mode when the configured digital input is activated.
- Window (internal). Activates the Window Contact timer when this digital input is activated.

Communication objects

Digital input status

Digital input I1

Object number	87: Status In1		
	Switching	Dimming On/Off	Blind step
Description	Displays the status of digital input I1 of the Aidoo KNX		
Values	0 -> Off 1 -> On	0 -> Off 1 -> On	0 -> Up 1 -> Down
Type of access to the Bus	Reading		
Data point identification	1.001 (DTP_Switch)	1.001 (DTP_Switch)	1.008 (DTP_UpDown)

Object number	88: Status In1		
	Value	Dimming step	Blind move
Description	Shows the value generated according to the behavior of the defined input		
Values	0 ... 255 0 ... 655335 -32768 ... 32767 0 ... 255 0 ... 4294967295	Regulation step	0 -> Up 1 -> Down
Type of access to the Bus	Reading		
Data point identification	5.010 (DTP_Value_1_Ucount) 7.001 (DTP_Value_2_Ucount) 8.001 (DTP_Value_2_Count) 9.001 (DTP_Value_Temp) 12.001 (DTP_Value_4_Ucount)	3.007 (DTP_Control_Dimm.)	1.008 (DTP_UpDown)

Digital input I2

Object number	89: Status In2		
	Switching	Dimmind On/Off	Blind step
Description	Displays the status of digital input I2 of the Aidoo KNX		
Values	0 -> Off 1 -> On	0 -> Off 1 -> On	0 -> Up 1 -> Down
Type of access to the Bus	Reading		
Data point identification	1.001 (DTP_Switch)	1.001 (DTP_Switch)	1.008 (DTP_UpDown)

Object number	90: Status In2		
	Value	Dimming step	Blind move
Description	Shows the value generated according to the behavior of the defined input		
Values	0 ... 255 0 ... 655335 -32768 ... 32767 0 ... 255 0 ... 4294967295	Regulation step	0 -> Up 1 -> Down
Type of access to the Bus	Reading		
Data point identification	5.010 (DTP_Value_1_Ucount) 7.001 (DTP_Value_2_Ucount) 8.001 (DTP_Value_2_Count) 9.001 (DTP_Value_Temp) 12.001 (DTP_Value_4_Ucount)	3.007 (DTP_Control_Dimm.)	1.008 (DTP_UpDown)

Object number	91: Status In3		
	Switching	Dimmind On/Off	Blind step
	Description Displays the status of digital input I3 of the Aidoo KNX		
	Values	0 -> Off 1 -> On	0 -> Up 1 -> Down
	Type of access to the Bus Reading		
Data point identification	1.001 (DTP_Switch)	1.001 (DTP_Switch)	1.008 (DTP_UpDown)
Object number	92: Status In3		
	Value	Dimming step	Blind move
	Description Shows the value generated according to the behavior of the defined input		
	Values	0 ... 255 0 ... 655335 -32768 ... 32767 0 ... 255 0 ... 4294967295	Regulation step 0 -> Up 1 -> Down
	Type of access to the Bus Reading		
Data point identification	5.010 (DTP_Value_1_Ucount) 7.001 (DTP_Value_2_Ucount) 8.001 (DTP_Value_2_Count) 9.001 (DTP_Value_Temp) 12.001 (DTP_Value_4_Ucount)	3.007 (DTP_Control_Dimm.)	1.008 (DTP_UpDown)

- Disable digital inputs

Object number	48: Control Disable Input 1	
	Description This allows the use of input I1 of the Aidoo KNX to be disabled	
	Values	0 -> False 1 -> True
	Type of access to the Bus Write	
	Data point identification	1.002 (DPT_Bool)
Object number	49: Control Disable Input 2	
	Description This allows the use of input I2 of the Aidoo KNX to be disabled	
	Values	0 -> False 1 -> True
	Type of access to the Bus Write	
	Data point identification	1.002 (DPT_Bool)
Object number	50: Control Disable Input 3	
	Description This allows the use of input I3 of the Aidoo KNX to be disabled	
	Values	0 -> False 1 -> True
	Type of access to the Bus Write	
	Data point identification	1.002 (DPT_Bool)

KNX parameters for LG

LGE PROTOCOL

3	Control Mode Cool / Heat W	DPT_Heat/Cool	1.100
1 -> Heat			

0% -> Off				DPT_Scaling	5.001
4	Control Mode Cool & On W				
0.1% – 100% -> On + Cool					
0% -> Off					
5	Control Mode Heat & On	0.1% – 100% -> On + Heat	W	DPT_Scaling	5.001
6	Control Mode Auto	1 -> Auto	W	DPT_Bool	1.002
7	Control Mode Heat	1 -> Heat	W	DPT_Bool	1.002
8	Control Mode Cool	1 -> Cool	W	DPT_Bool	1.002
9	Control Mode Fan	1 -> Fan	W	DPT_Bool	1.002
10	Control Mode Dry	1 -> Dry	W	DPT_Bool	1.002
		0 -> Decrease			
		W 1 -> Increase		DPT_Step	1.007
11	Control Mode + / –	0 -> Increase W 1-> Decrease		DPT_UpDown	1.008
		0% – 49% -> Speed 1			
50% – 82% -> Speed 2				DPT_Scaling	5.001
		W			
12	Control Fan Speed / 3 Speeds	83% – 100% -> Speed 3 1 -> Speed 1			
		2 -> Speed 2	W	DPT_Enumerated	5.010
		3 -> Speed 3			
13 o	Control Fan Speed Man / Aut	1 -> Auto	W	DPT_Bool	1.002
14	Control Fan Speed 1	1 -> Activated	W	DPT_Bool	1.002
15	Control Fan Speed 2	1 -> Activated	W	DPT_Bool	1.002
16	Control Fan Speed 3	1 -> Activated	W	DPT_Bool	1.002
		0 -> Decrease			

19	Control Vanes U-D Standby
25	Control Vanes U-D Swing
27	Control Setpoint Temperature

		0 -> Auto			
		1 -> Heat			
52	Status Mode	3 -> Cool Mode 20.105	R	DPT_HVACContr	
		9 -> Fan			
		14 -> Dry			
		0 -> Cool			
53	Status Mode Cool / Heat	1 -> Heat	R	DPT_Heat/Cool	1.100
54	Status Mode Auto	1 -> Auto	R	DPT_Bool	1.002
55	Status Mode Heat	1 -> Heat	R	DPT_Bool	1.002
56	Status Mode Cool	1 -> Cool	R	DPT_Bool	1.002
57	Status Mode Fan	1 -> Fan	R	DPT_Bool	1.002
58	Status Mode Dry	1 -> Dry	R	DPT_Bool	1.002
59	Status Mode Text	ASCII String	R	DPT_String_8859_1	16.001
		33% -> Speed 1			
		67% -> Speed 2	R	DPT_Scaling	5.001
60	100% -> Speed 3 Status Fan Speed / 3 Speeds				
1 -> Speed 1					DPT_Enumerated
2 -> Speed 2			R		
		3 -> Speed 3			
		0 -> Manual			

61	Status Fan Speed Manual / Auto	1 -> Auto	R	DPT_Bool	1.002
62	Status Fan Speed 1	1 -> Speed 1	R	DPT_Bool	1.002
63	Status Fan Speed 2	1 -> Speed 2	R	DPT_Bool	1.002
64	Status Fan Speed 3	1 -> Speed 3	R	DPT_Bool	1.002
65	Status Fan Speed Text	ASCII String	R	DPT_String_8859_1	16.001
0 -> Deactivated 73 Status Vanes U-D Swing R 1 -> Activated				DPT_Bool	1.002
75	Status AC Setpoint Temperature	Varies depending on manufacturer	R	DPT_Value_Temp	9.001
76	Status AC Return Temperature	Varies depending on manufacturer	R	DPT_Value_Temp	9.001
77	Internal probe temperature	Varies depending on manufacturer	R	DPT_Value_Temp	9.001
0 -> No alarm 79 Status Reset Filter R 1 -> Alarm				DPT_Bool	1.002


Object	Values	Name	Flags		Datapoint	
0 -> Disabled 80 Status Setpoint limitation R 1 -> Enabled				DPT_Switch		1.001
0 -> No error / alarm 81 Status Error / Alarm R 1 -> An error / alarm has occurred				DPT_Alarm		1.005

82	Error text code cturer R	Varies depending on manufa			DPT_String_8859_1	16.001
	0 Status In1 – Switching R	-> Off			DPT_Switch	1.001
	1	-> On				
87	0 Status In1 – Dimming On / Off R	-> Off			DPT_Switch	1.001
	1	-> On				
0 -> Up						
	Status In1 – Blind Step	1 -> Down	R	DPT_UpDown	1.008	
	Status In1 – Value	1 byte unsigned	R	DPT_Value_1_Ucou nt	5.010	
	Status In1 – Value	2 byte unsigned	R	DPT_Value_2_Ucou nt	7.001	
	Status In1 – Value	2 byte signed	R	DPT_Value_2_Coun t	8.001	
	Status In1 – Value	Temperature (°C)	R	DPT_Value_Temp	9.001	
88	Status In1 – Value	4 byte unsigned	R	DPT_Value_4_Ucou nt	12.001	
	Status In1 – Dimming Step	Dimming step	R	DPT_Control_Dimm.	3.007	
	0 Status In1 – Blind Move R	-> Up			DPT_UpD own	1.008
	1	-> Down				
	0 Status In2 – Switching R	-> Off			DPT_Swit ch	1.001
	1	-> On				
89	0 Status In2 – Dimming On / Off R	-> Off			DPT_Swit ch	1.001
	1	-> On				

		0 -> Up			
	Status In2 – Blind Step	1 -> Down	R	DPT_UpDown	1.008
	Status In2 – Value	1 byte unsigned	R	DPT_Value_1_Ucount	5.010
	Status In2 – Value	2 byte unsigned	R	DPT_Value_2_Ucount	7.001
	Status In2 – Value	2 byte signed	R	DPT_Value_2_Count	8.001
	Status In2 – Value	Temperature (°C)	R	DPT_Value_Temp	9.001
90	Status In2 – Value	4 byte unsigned	R	DPT_Value_4_Ucount	12.001
	Status In2 – Dimming Step	Dimming step	R	DPT_Control_Dimm.	3.007
	0 Status In2 – Blind Move R 1 -> Down	-> Up		DPT_UpDown	1.008
	0 Status In3 – Switching R 1 -> On	-> Off		DPT_Switch	1.001
91	0 Status In3 – Dimming On / Off R 1 -> On	-> Off		DPT_Switch	1.001
		0 -> Up			
	Status In3 – Blind Step	1 -> Down	R	DPT_UpDown	1.008
	Status In3 – Value	1 byte unsigned	R	DPT_Value_1_Ucount	5.010
	Status In3 – Value	2 byte unsigned	R	DPT_Value_2_Ucount	7.001
	Status In3 – Value	2 byte signed	R	DPT_Value_2_Count	8.001
	Status In3 – Value	Temperature (°C)	R	DPT_Value_Temp	9.001
92	Status In3 – Value	4 byte unsigned	R	DPT_Value_4_Ucount	12.001
	Status In3 – Dimming Step	Dimming step	R	DPT_Control_Dimm.	3.007

0 -> Up Status In3 – Blind Move R				DPT_UpDown	1.008	
		1 -> Down				

Documents / Resources

	AIRZONE Aidoo KNX Controller [pdf] Instruction Manual Aidoo KNX Controller, Aidoo, KNX Controller, Controller
---	--