



## aiwa RC6 II Multi-Functional Cooker User Manual

[Home](#) » [Aiwa](#) » aiwa RC6 II Multi-Functional Cooker User Manual 

**aiwa RC6 II Multi-Functional Cooker**



## Contents

- 1 Safety Precautions
- 2 Unboxing
- 3 Technical specifications
- 4 Operating Instructions
- 5 Operating Instructions
- 6 Preparation instructions before use
- 7 Cooking time reference table for each function
- 8 Tips for each function
- 9 Cleaning and Maintenance
- 10 Trouble and handling method
- 11 Environment
- 12 Customers Support
- 13 Documents / Resources
- 14 Related Posts

## Safety Precautions

- Please read this manual carefully before use and keep it properly.
- This product is only for household use, not suitable for other places.

- A grounded socket with a rated current of 10A or more must be used, and the plug must be inserted tightly. Do not use the universal socket with other electrical appliances at the same time.
- When the plug is inserted into the socket, it must be inserted all the way, otherwise the components will be overheated and burned out due to poor contact.
- Do not plug in or pull out the plug with wet hands to avoid electric shock. Please unplug the power plug when the product is not in use.
- Do not put the product in the reach of children, or let children use it alone to avoid electric shock or burns.
- It is forbidden to insert foreign objects such as metal chips, iron wires, needles, etc. into the product or in the gap, otherwise it will cause electric shock or abnormal operation.
- When using this product, it must be placed on a stable desktop. Do not use this product in a place with high temperature and high humidity. and keep away from flammable materials.
- This product is not suitable for the following people: people with sensory or psychological dysfunction, lack of relevant experience or knowledge (including children) and other people. unless they use this product under the supervision of a professional. Children should be supervised to ensure that they do not play with this product.
- Make sure that the power cord does not come into contact with sharp edges, burrs, other protruding sharp objects, or objects with hot surfaces, which may cause electrical leakage, resulting in electric shock or fire.
- It is normal that there may be a strange smell for a few minutes when using it for the first time.
- Only the inner pot attached to this product can be used, and cannot be replaced by other manufacturers or other inner pots, so as to avoid product failure or danger.
- Do not start the operation before the inner pot is placed in the pot or when the inner pot is empty.
- The inner pot cannot be heated on other stoves, otherwise it will easily cause damage.
- Do not put any food or water in the pot before the inner pot is put into the pot.
- Do not remove the inner pot when the product is working to avoid danger.
- The product generates high temperature and steam during use. Keep your hands and face away from the steam vents to prevent burns.
- Do not cover the steam hole with rags and other items during use, so as to avoid deformation of the top cover and product failure.
- Before putting the inner pot into the pot, please confirm whether there are rice grains or other vegetable residues on the bottom of the inner pot and the heating plate. And burn out components.
- After the inner pot is put in, make sure that the inner pot and the heating plate are completely and tightly fitted.
- If the inner pot is damaged, do not continue to use it, and contact our company's after-sales service personnel to purchase a new inner pot.
- When cleaning this product, do not immerse it in water or wash it under the tap.
- If the power cord or plug is found to be damaged or broken, it must be replaced with a special flexible cord or a special component purchased from its manufacturer or designated maintenance department.
- If the product fails, please turn off the power first, and pull out the plug from the socket, do not continue to use it, and contact the company's after-sales service personnel, do not replace non-original parts or disassemble and repair by yourself

## Unboxing




- RC6 II xl
- Inner Pot x1
- Rice Spoon x1
- Soup Spoon x1
- Measuring Cup x1
- Steamer x1
- Power Cord x1
- Manual x1

Please refrain from using any damaged components.  
Contact your local authorised aiwa distributor/ customer service.

## Technical specifications

Model: RC611  
Rated Voltage: 110V AC, 50-60HZ  
Rated Power: 600W  
Rated Capacity: 3 (Max) Liters  
Boiled Rice (cup): 1-6  
Suitable People: 1-6

## Operating Instructions

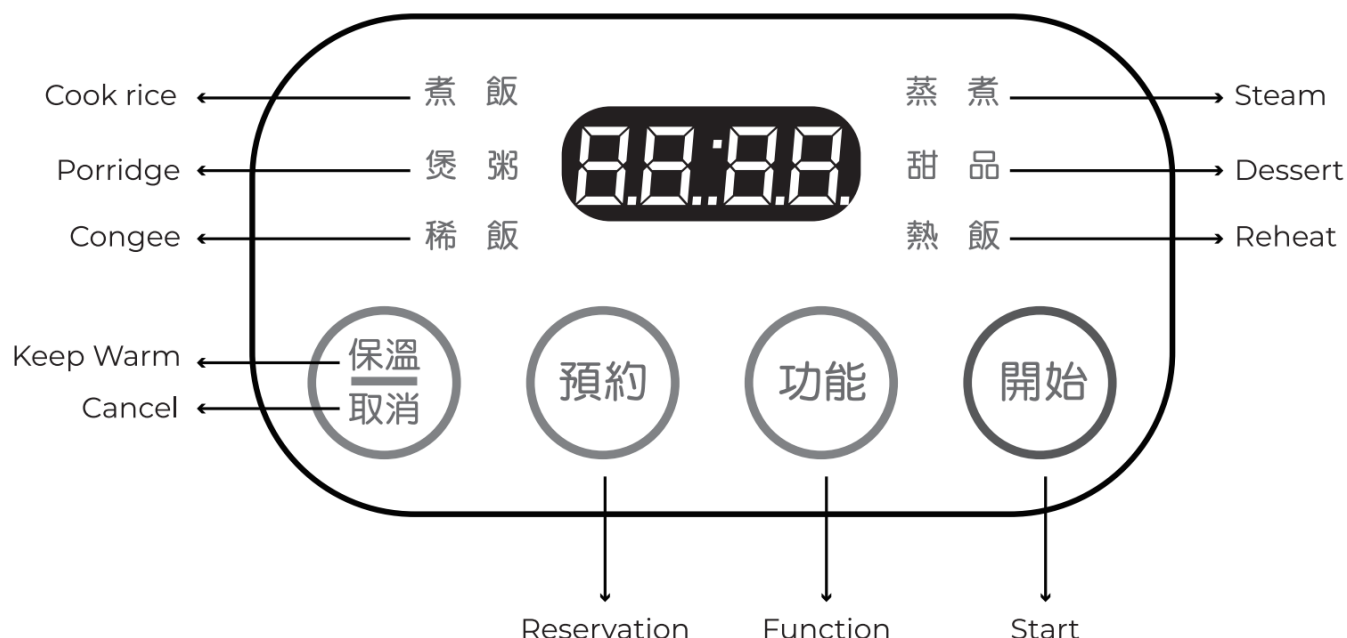

## Operating Instructions

RC6 II function key: Press the “Function” key to select the functions of cooking rice, porridge, porridge, steaming, dessert, and hot rice, the corresponding indicator lights up, press the “Start” key, and the rice cooker enters the cooking state.

Reservation button: Select any function of cooking rice, porridge, porridge, steaming, dessert, and press the reservation button. Press the reservation button to adjust the time according to the required time. After the selection is completed, press the “Start” button. The rice cooker enters the reservation cooking state

Reminder: Some functions cannot use the reservation function

To set the appointment time, press the appointment button to enter the appointment adjustment state:

- Press the appointment button to adjust the time
- The longest appointment time can be adjusted to 24 hours
- In order to prevent the food from being soaked in water for a long time to produce peculiar smell, it is best not to make an appointment for more than 12 hours
- The time set by the reservation is less than the cooking time, the rice cooker will not enter the reservation state, but directly enter the set function to start working
- After the setting is completed, press and hold the “Start” button to confirm and start the preset cooking function.

Keep Warm/Cancel Key:

- In the standby state, press the “Keep Warm” button to enter the keep warm function, the keep warm indicator light is on, the keep warm time is up to 24 hours, and it will automatically enter the standby state after the keep warm time expires.
- In the cooking state, press the “Cancel” button to cancel the current function and enter the standby state.

Start key:

- After selecting the desired cooking function, press the “Start” key, and the rice cooker starts to work.
- After the selected function is completed, the buzzer will beep a few times to indicate that the cooking is completed, the rice cooker will automatically enter the keep-warm state, the keep-warm indicator lights up, and the screen displays the keep-warm time.

## Preparation instructions before use

- Make sure the steam valve is installed correctly. If you start cooking without the steam valve installed, the soup may overflow.
- Use the provided measuring cup to measure the rice correctly and wash it clean.
  - A measuring cup is about 150g per flat cup.
  - Do not wash directly in the inner pot.
- The maximum cooking volume of 3L is 5 cups of rice. You can choose the amount of rice according to your actual needs. The recommended ratio of rice to water is 1 cup of rice and 7.2 cups of water. You can also add water according to the scale line. Put the washed rice into the pot, add water to the corresponding 2 marks, do not exceed the maximum amount of rice cooked (the ratio of rice to water can be adjusted according to personal preferences and rice types)
  - The maximum amount shall not exceed the maximum water level line marked in the inner pot.
- Before putting the inner pot into the pot, please confirm whether there are rice grains or other vegetable residues on the bottom of the inner pot and the heating plate. The disc fits tightly.

## Cooking time reference table for each function

Function	Default time Remarks	12-hour keep warm	24-hour reservation	Remarks
Cook rice	—	Yes	Yes	Countdown display of rice cooking stage
Porridge	1:30	Yes	Yes	
Congee	1:00	Yes	Yes	
Steam	1:00	Yes	Yes	Direct countdown
Dessert	1:30	Yes	Yes	
Reheat	0:25	Yes	NO	
Keep warm	0:00	Yes	/	Countdown now

Rice cooking time depends on the amount of rice.  
1 Cup requires~ 30 Mins

5 Cups requires~ 45 Mins

## **Tips for each function**

- The cooking time described in the table above will vary slightly depending on the voltage, amount of rice, amount of water, water temperature, and rice quality. To prevent the rice from clumping and unpalatable, please loosen the rice within 30 minutes after entering the keep warm state.
- When cooking rice, turn the rice cooker to keep warm and cook the rice for 15 minutes, the effect is better.
- For multigrain rice, it is recommended to cook up to 6 cups of rice.
- The maximum cooking volume of porridge is 1.5 cups of 5L, and the ratio of rice to water is recommended to be 1:8.
- Hot Rice Function Sprinkle 1 cup of water evenly on the surface of cold rice to make the rice softer.

## **Cleaning and Maintenance**

- Wash the inner pot and sealing lid with hot water, dish soap and sponge. Do not use detergent powder and steel wool.
- If there is food sticking to the bottom of the inner pot, you can soak it for a while before cleaning, and then wipe the inner pot clean.
- Do not wash the rice in the inner pot. It should be washed in another container and then poured into the inner pot of this product to avoid damage to the inner pot.
- Clean the middle ring, sealing cover and exterior of the rice cooker with a damp cloth.
- If there is water on the heating plate, please dry it with a rag. If there are burnt rice grains, please use a steel ball or sandpaper to polish it off.
- Please clean the sealing cover and steam valve regularly to prevent the rice from producing peculiar smell.
- When not in use for a long time, the plug should be pulled out from the socket and stored in a ventilated and dry place.
- Before cleaning this product, please confirm that the power plug has been unplugged from the power outlet, and wait until it is completely cooled before cleaning this product to prevent burns.

## **Trouble and handling method**

When the following abnormal phenomena occur during use, it is not entirely the machine failure, please check it again before sending it out for repair.

Except for repair technicians, unauthorized disassembly and repair are strictly prohibited.


Trouble phenomenon	Cause	Solution
Light does not shine	Power is not on	Check if the product is plugged in tightly
	circuit board failure	Contact the company customer service staff
no heating	circuit board failure	Contact the company customer service staff
	Hot plate failure	
	blown fuse	
Indicator light is on, but not heating	Hot plate failure	Contact the company customer service staff
	circuit board failure	



Trouble phenomenon	Cause	Solution
undercooked	overcooked or undercooked	Adjust the total volume of raw rice and water between the maximum and minimum tick marks
	Wrong ratio of rice to water	Adjust the ratio of rice to water
	Inner pot not set	Put the inner pot away and make it back to normal
	There is a foreign object between the inner pot and the heating plate	clean up foreign objects
	Damaged inner pot	Contact customer service to buy a new inner pot
	circuit board failure	Contact customer service
	sensor failure	Contact customer service
burnt rice	Damaged inner pot	Contact customer service to buy a new inner pot
	Inner pot not set	Put the inner pot away and make it back to normal
	circuit board failure	Contact customer service
	sensor failure	Contact customer service
overflow	overcooked	Adjust the amount to moderate
	Improper ratio of rice to water	reduce water
	functional error	Choose the right function
plastic smell	normal phenomenon	The smell disappears after a few uses of the product
The digital screen displays the error code	Circuit board or sensor failure	Unplug the power plug first, if the fault still occurs after cooling, contact the customer service staff

## Environment



 This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

## Customers Support



Mandrops AG Bahnhofstrasse 17 96106 Ebern Germany

AIWA Electronics International Co., Ltd.  
Explore more at [www.intaiwa.com](http://www.intaiwa.com)



## Documents / Resources

aiwa AIWA



[aiwa RC6 II Multi-Functional Cooker](#) [pdf] User Manual

RC6 II Multi-Functional Cooker, RC6 II, Multi-Functional Cooker, Functional Cooker, Cooker

[Manuals+](#)