



Contents [[hide](#)]

- [1 AJAX SYSTEMS 28298.08.WH3 LeaksProtect Wireless Flood Detector](#)
- [2 Functional Elements and Indication](#)
- [3 Operation as part of the water leak detection system](#)
- [4 Connecting the detector to the Ajax system](#)
- [5 Indication](#)
- [6 Indication when pressing the power button](#)
- [7 Functionality Testing](#)
- [8 Jeweller Signal Strength Test](#)
- [9 Selecting the Location](#)
- [10 Maintenance](#)
- [11 How long Ajax devices operate on batteries, and what affects this](#)
- [12 Technical specifications](#)
- [13 Warranty](#)
- [14 FAQ](#)
- [15 Documents / Resources](#)
 - [15.1 References](#)





Specifications

- Product Name: LeaksProtect
- Functional Elements: LED indicator, Water sensor contacts, QR code with device registration key, On/off button
- Operating Principle: Water-sensitive contacts trigger alarm signal when wet
- Compatibility: Works with Ajax WaterStop smart shutoff valve

LeaksProtect is a wireless leak detector for indoor use. Detects minimal leaks for you to respond and fix the problem in time.

- **LeaksProtect** connects to the Ajax system via the protected Jeweller protocol. The communication range is up to 1300 meters in line of sight.

LeaksProtect can work as part of a water leak detection system together with the Ajax hub and Ajax WaterStop smart shutoff valve. Also, LeaksProtect can be connected to third-party security systems using the uartBridge or ocBridge Plus integration modules.

- Users can configure LeaksProtect via the Ajax app for macOS, Windows, iOS, or Android. The system notifies users of all events through push notifications, SMS, and calls (if activated).

Functional Elements and Indication

1. LED indicator

2. Water sensor contacts
3. QR code with the device registration key
4. On/off button



Operating Principle

0:00 / 0:12

At the bottom of its body, LeaksProtect is equipped with four pairs of water-sensitive contacts. If at least one contact pair gets wet, the detector immediately transmits an alarm signal to the hub, notifying the user and security company. Also, the detector notifies users if the water dries out.

When switched on, LeaksProtect is always active and monitors the situation regardless of the security mode: disarmed or armed.

If the leak is detected, LeaksProtect notifies once, and the next alarm is transmitted when the contacts have dried out and gotten wet again.

Operation as part of the water leak detection system

LeaksProtect with a hub and Ajax WaterStop smart shutoff valve can operate as a water leak detection system. Ajax WaterStop shuts off the water supply as soon as LeaksProtect leak detector transmits an alarm. To do this, connect the necessary devices and configure the automation scenario.

You can configure other automation scenarios, for example, to stop the water supply either by schedule or after arming the system.

More about scenarios

Connecting the detector to the Ajax system

Detector connection to hub

Before connecting:

1. Following the hub user manual, install the Ajax app . Create an account, add the hub to the app, and create at least one room.
2. Check the internet connection (via Ethernet cable and/or GSM network).
3. Check the hub status in the app: make sure that it is disarmed and does not update.

Only users with administrator rights can add the device to the hub.

How to pair the detector with hub:

1. Select Add Device in the Ajax app.
2. Name the device, scan or enter the QR Code (located on the body and packaging), and select the location room.
3. Select Add — the countdown will begin.
4. Switch on the device.

LeaksProtect has a rigid “ON” button: press it with force to switch the detector on.

For the detection and pairing to occur, the device should be located within the wireless coverage area of the hub (at the same facility).

- Request for connection is transmitted for a short time at the moment of switching on the device.


- If the connection failed, LeaksProtect switches off after 6 seconds. To retry the connection, you do not need to reboot the device. If LeaksProtect is paired with another hub, switch the detector off, then retry the standard adding procedure.
- The detector connected to the hub is displayed in the list of devices in the app. The update of the detector status in the list depends on the device inquiry time set in the hub settings (the default value is 36 seconds).

Connecting to the third-party security systems

To connect the detector to a third-party security central unit using the uartBridge or ocBridge Plus integration module, follow the recommendations in the manual of the respective device.

The detector is always active. When connecting LeaksProtect to third party security systems, it is appropriate to place the detector in a permanently active protection zone.

States

1. Devices 
2. LeaksProtect

Parameter	Value
Data import	<div>Displays the error when transferring data to the new hub:</div> <div>Failed — the device has not been transferred to the new hub.</div>
	Learn more

Temperature	<p>Temperature of the detector, measured on the processor and changes gradually.</p> <p>Acceptable error between the value in the app and the room temperature — 2°C.</p> <p>The value is updated as soon as the detector identifies a temperature change of at least 2°C.</p> <p>You can configure a scenario by temperature to control automation devices</p> <p>Learn more</p>
Jeweller Signal Strength	Signal strength between the hub and detector
Battery Charge	<p>Battery level of the device. Displayed as a percentage</p> <p>How battery charge is displayed in Ajax apps</p>
Lid	The state of the tamper, which reacts to the body being disassembled or damaged
ReX	Displays the status of using a radio signal range extender
Connection	Connection status between the hub and detector

Leakage detected	Alarm if the water sensor contacts wet
Permanent Deactivation	Shows the status of the device: active, completely disabled by the user, or only

	notifications about triggering of the device tamper button are disabled
Firmware	Detector firmware version
Device ID	Device identifier

Settings

1. Devices
2. LeaksProtect
3. Settings



Setting	Value
First field	Detector name, can be edited
Room	Selecting the virtual room to which the device is assigned
Alert with a siren if leakage is detected	If active, <u>sirens</u> added to the system are activated if leakage is detected
Jeweller Signal Strength Test	Switches the detector to the signal strength test mode

Permanent Deactivation	<p>Allows the user to disconnect the device without removing it from the system.</p> <p>Three options are available:</p> <p>No — the device operates normally and transmits all events</p> <p>Entirely — the device will not execute system commands or participate in automation scenarios, and the system will</p>
------------------------	--

	<p>ignore device alarms and other notifications</p> <p>Lid only — the system will ignore only notifications about the triggering of the device tamper button</p> <p>Learn more about permanent deactivation of devices</p>
User Guide	Opens the detector User Manual
Delete Device	Disconnects the detector from the hub and deletes its settings

Indication

0:00 / 0:04

The LeaksProtect LED indicator may light up red or green depending on the device status.

Indication when pressing the power button

Event	Indication
Pressing the power button (detector is switched on)	Lights up red while the button is held down

Switching on	Lights up green while the device is switching on
Switching off	Initially lights up red, then blinks three times

Turned-on detector indication

Event	Indication	Note
Detector connection to the hub , ocBridge Plus and uartBridge	Lights up green for a few seconds	
Hardware error	Blinks red continuously	The detector requires repair, please contact Support Service
Leakage detected	Lights up red for about one second	
Battery needs replacing	During the alarm, it slowly lights up red and slowly goes out	Replacement of the detector battery is described in the Battery replacement manual

Functionality Testing

Ajax system allows conducting tests for checking the functionality of connected devices.

The tests do not start straight away but within a period of 36 seconds when using the standard settings. The test time start depends on the settings of the detector scanning period (the paragraph on “Jeweller” settings in the hub settings).

Jeweller Signal Strength Test

Attenuation Test

Selecting the Location



When selecting the device location, please take into account its remoteness from the hub (up to 1300 meters) and the absence of any obstacles between the devices hindering the radio signal transmission: walls, floors, large objects located in the room.

- The device developed only for indoor use.
- Check the Jeweller signal strength level at the installation place.

If the signal level is low (one bar), we cannot guarantee the stable operation of the device. Take all possible measures to improve the signal strength. At least, move the device: even a 20 cm shift can significantly improve the quality of signal reception.

If after moving the device still has a low or unstable signal strength, use a radio signal range extender.

Install LeaksProtect in the place of potential leakage: on the floor under the bath, sink, washing machine, etc.

Do not install the detector

- outside the premises (outdoors);
- nearby any metal objects or mirrors causing attenuation and screening of the signal;
- within any premises with the temperature beyond the range of permissible limit;
- on conductive surfaces;
- closer than 1 m to the hub.

Detector Testing

When the liquid gets on the detector contacts, it closes the electrical circuit. It is enough to close one contact pair to activate the alarm.

1. To check LeaksProtect, close one contact pair with a wet finger for 3 seconds (the delay prevents false triggering). If water is detected, the detector LED will light up red for 1 second.
2. Wipe the contacts with a dry napkin. When the electrical circuit is open, LeaksProtect switches on its LED red for 1 second and notifies that water dried out.

If you drown the detector with soapy water, it may continue signal flooding after getting dry. The issue is about the soapy film closes the contacts. To eliminate the problem, wipe the detector contacts with a napkin moistened with pure water and then dry them up.

Maintenance

- Check the LeaksProtect operational capability on a regular basis. We recommend cleaning the detector contacts as it gets dirty, at least, once every 2-3 months. Use an alcohol solution for cleaning the contacts.
- Clean the detector body from dust, spider webs and other contaminants as they appear: they can conduct electricity and cause false actuation. Use a soft dry napkin suitable for equipment maintenance.
- Do not use any substances containing alcohol, acetone, gasoline and other active solvents for cleaning the detector body.
- The batteries installed in the detector ensure up to 5 years of autonomous operation on the average (with the inquiry frequency by the hub of 1 minutes). If the detector

batteries are low, the security system sends the notification and the detector LED smoothly lights up and goes out green every hour, if the device is triggered.

- To replace the batteries, turn off the detector, loosen the screws and remove the LeaksProtect front panel. Change the batteries with new ones type AAA, adhering to polarity.

How long Ajax devices operate on batteries, and what affects this

Battery replacement

Technical specifications

- All technical specifications
- Compliance with standards

Warranty

Warranty for the Limited Liability Company “Ajax Systems Manufacturing” products is valid for 2 years after the purchase and does not apply to the pre-installed battery.

If the device does not work correctly, you should first contact the support service — in half of the cases, technical issues can be solved remotely!

The full text of the warranty

User Agreement

Technical support: support@ajax.systems

FAQ


- **Q: What should I do if LeaksProtect does not connect to the hub?**

A: If connection fails, switch off LeaksProtect, retry the standard adding procedure in the app without rebooting the device. Ensure the device is within wireless coverage area.

- **Q: How often does the hub update the detector status?**

A: The default update interval is 36 seconds, as set in the hub settings.

Documents / Resources

	AJAX SYSTEMS 28298.08.WH3 LeaksProtect Wireless Flood Detector [pdf] User Manual 28298.08.WH3, 28298.08.WH3 LeaksProtect Wireless Flood Detector, LeaksProtect Wireless Flood Detector, Wireless Flood Detector, Flood Detector, Detector
---	--

References

- [User Manual](#)

📁 Ajax

Systems

💡 28298.08.WH3, 28298.08.WH3 LeaksProtect Wireless Flood Detector, Ajax Systems, Detector, Flood Detector, LeaksProtect Wireless Flood Detector, Wireless Flood Detector

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.