

Ajax Systems 2xSIM Plus Intelligent Security Control Panel Hub



Ajax Systems 2xSIM Plus Intelligent Security Control Panel Hub User Manual

[Home](#) » [Ajax Systems](#) » Ajax Systems 2xSIM Plus Intelligent Security Control Panel Hub User Manual 

Contents

- [1 Ajax Systems 2xSIM Plus Intelligent Security Control Panel Hub](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Sockets and Indication](#)
- [6 LED indication](#)
- [7 Access to indications](#)
- [8 Installation](#)
- [9 Connecting Devices](#)
- [10 Events and Alarms Notifications](#)
- [11 Connecting a Security Company](#)
- [12 Maintenance](#)
- [13 Warranty](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)



Ajax Systems 2xSIM Plus Intelligent Security Control Panel Hub



Specifications

- Hub User manual
- Updated: October 6, 2023
- Supports iOS, Android, macOS, and Windows
- Up to 100 Ajax devices can be connected
- Protected Jeweller radio protocol for reliable communication up to 2 km

Product Usage Instructions

Connecting the Hub

Ensure both communication channels (Ethernet and SIM card) are connected for reliable communication with Ajax Cloud.

Controlling the Hub

Use the Ajax app on your preferred OS (iOS, Android, macOS, or Windows) to control the hub. Customize notifications and respond promptly to security system alerts.

Creating Scenarios

Utilize scenarios to automate the security system. Program actions for automation devices based on alarms, button presses, or schedules using the Ajax app.

LED Indications

The LED on the hub provides visual cues for different system states or events. Refer to the user manual for a detailed list of indications and their meanings.

FAQ

- **Q:** How many Ajax devices can be connected to the hub?
- **A:** Up to 100 Ajax devices can be connected to the hub.
- **Q:** What is the range of reliable communication between Ajax devices?
- **A:** The Jeweller radio protocol ensures reliable communication up to 2 km in the line of sight.
- **Q:** How can I customize notifications on the hub?
- **A:** You can customize notifications in the hub settings via the Ajax app. Choose between push notifications, SMS, or calls based on your preference.

Hub is a central device of the Ajax security system, coordinating the connected devices, and interacting with the user and security company. Hub is developed only for indoor use.

- Hub requires Internet access to communicate with the cloud server Ajax Cloud—for configuring and controlling from any point of the world, transferring event cations, and updating the software. The personal data and system operation logs are stored under multilevel protection, and information exchange with Hub is carried out via an encrypted channel on a 24-hour basis.
- Communicating with Ajax Cloud, the system can use the Ethernet connection and GSM network.
- Please use both communication channels to ensure more reliable communication between the hub and Ajax Cloud.
- Hub can be controlled via the app for iOS, Android, macOS, or Windows. The app allows responding promptly to any notifications of the security system.
- Follow the link to download the app for your OS:

Android

iOS

The user can customize notifications in the hub settings. Choose what is more convenient for you: push notifications, SMS, or calls. If the Ajax system is disconnected to the central monitoring station, the alarm signal will be sent directly to it, bypassing Ajax Cloud.

Buy an intelligent security control panel Hub


- Up to 100 Ajax devices can be connected to the hub. The protected Jeweller radio protocol ensures reliable communication between the devices at a distance of up to 2 km in the line of sight.

List of Jeweller devices

- Use scenarios to automate the security system and decrease the number of routine actions. Adjust the security schedule, and program actions of automation devices (Relay, WallSwitch or Socket) in response to an alarm, Button press or by schedule. A scenario can be created remotely in the Ajax app.


How to create and configure a scenario in the Ajax security system

Sockets and Indication

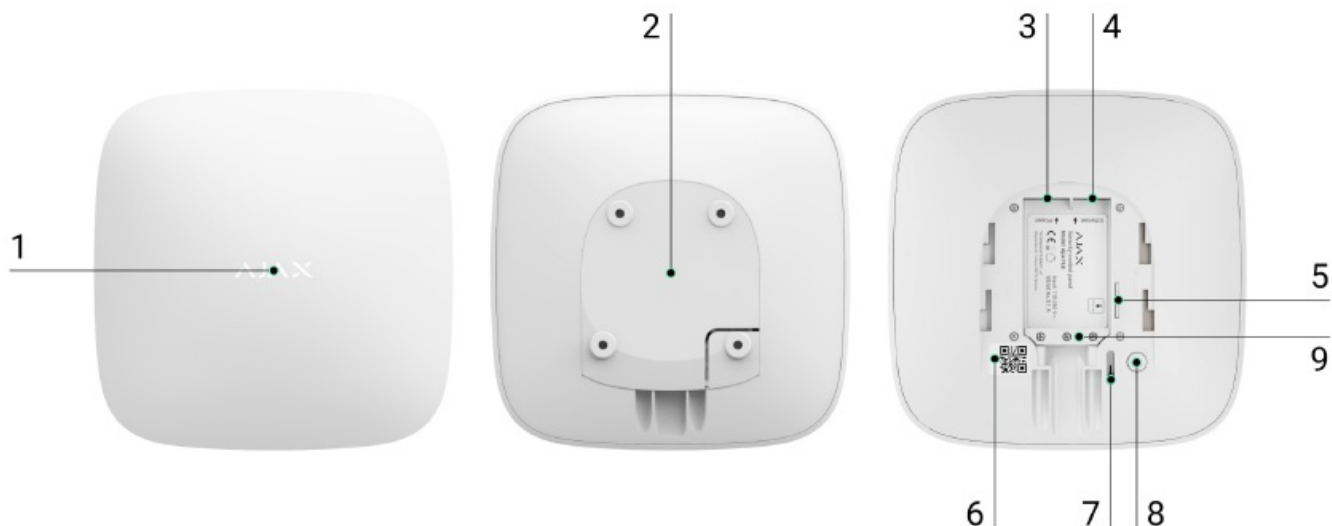

1. LED logo indicating the hub status
2. SmartBracket attachment panel. A perforated part is required for actuating the tamper in case of any attempt to dismantle the hub
3. Socket for the power supply cable
4. Socket for the Ethernet cable
5. Slot for the micro SIM
6. QR code
7. Tamper button
8. On/Off button
9. Cable retainer clamp

 LED indication



00:00

00:06

The hub LED has a list of indications showing the system state or events occurring. The Ajax logo on the front side of the hub can light up red, white, purple, yellow, blue, or green, depending on the state. When nothing is happening in the system (no alarm, malfunction, lid opening, etc.), the LED displays two hub states:

- Armed/partially armed or Night Mode enabled — the LED lights up white.
- Disarmed — the LED lights up green.

Indication	Event	Note
Lights up white.	Two communication channels are connected: Ethernet and SIM card.	<p>If the external power supply is off, the indicator will flash every 10 seconds.</p> <p>After a loss of power, the hub will not light up immediately, but will start flashing in 180 seconds.</p>
Lights up green.	One communication channel is connected: Ethernet or SIM card.	<p>If the external power supply is off, the indicator will flash every 10 seconds.</p> <p>After a loss of power, the hub will not light up immediately, but will start flashing in 180 seconds.</p>
Lights up red.	The hub is not connected to the internet or there is no connection with the Ajax Cloud service.	<p>If the external power supply is off, the indicator will flash every 10 seconds.</p> <p>After a loss of power, the hub will not light up immediately, but will start flashing in 180 seconds.</p>
Lights up 180 seconds after the loss of power, then flashes every 10 seconds.	The external power supply is disconnected.	The LED indication colour depends on the number of communication channels connected.
Blinks red.	The hub is reset to factory settings.	

If your hub has different indications, please contact our Technical Support. They will help you.

Access to indications

Hub users can see the Alerts and Malfunctions indication after they:

- Arm/disarm the system using the Ajax keypad.
- Enter the correct user ID or personal code on the keypad and perform an action that has already been performed (for example, the system is disarmed and the disarm button is pressed on the keypad).
- Press the SpaceControl button to arm/disarm the system or activate NightMode
- Arm/disarm the system using Ajax apps.

All users can see the Changing hub’s state indication.




British Disco


- The function is enabled in the hub settings in the PRO app (Hub → Settings →Services → LED indication).



The indication is available for hubs with firmware version OS Malevich 2.14 or higher and in apps of the following versions or higher:




- Ajax PRO: Tool for Engineers 2.22.2 for iOS
- Ajax PRO: Tool for Engineers 2.25.2 for Android
- Ajax PRO Desktop 3.5.2 for macOS
- Ajax PRO Desktop 3.5.2 for Windows

Indication	Event	Note
Changing hub’s state		
White LED flashes once per second.	Two-Stage Arming or Delay When Leaving.	One of the devices is performing Two-Stage Arming or Delay When Leaving.
Green LED flashes once per second.	Entry indication.	One of the devices is performing Delay When Entering.
White LED lights up for 2 seconds.	Arming is completed.	The hub (or one of the groups) is changing its state from Disarmed to Armed.
Green LED lights up for 2 seconds.	Disarming is completed.	The hub (or one of the groups) is changing its state from Armed to Disarmed.
Alerts and Malfunctions		

<p>Red and purple LED flashes in sequence for 5 seconds.</p>	<p>Confirmed hold-up alarm.</p>	<p>There is an unrestored state after a confirmed hold-up alarm.</p> <div data-bbox="1046 331 1458 698">  <p>The indication is displayed only if Restoration after confirmed hold-up alarm is enabled in the settings.</p> </div>
<p>Red LED lights up for 5 seconds.</p>	<p>Hold-up alarm.</p>	<p>There is an unrestored state after a hold-up alarm.</p> <div data-bbox="1046 1028 1458 1310">  <p>The indication is not displayed if there is a confirmed hold-up alarm state.</p> </div> <div data-bbox="1046 1413 1458 1780">  <p>The indication is displayed only if Restoration after hold-up alarm is enabled in the settings.</p> </div>

Red LED flashes.	The number of flashes equals the Device No. of a hold-up device (DoubleButton), the first to generate the hold-up alarm.	<p>There is an unrestored state after the confirmed or unconfirmed hold-up alarm:</p> <ul style="list-style-type: none"> • Single hold-up alarm <p>or</p> <ul style="list-style-type: none"> • Confirmed hold-up alarm
Yellow and purple LED flashes sequentially for 5 seconds.	Confirmed intrusion alarm.	<p>There is an unrestored state after the confirmed intrusion alarm.</p> <div data-bbox="1046 853 1458 1218">  <p>The indication is displayed only if Restoration after confirmed intrusion alarm is enabled in the settings.</p> </div>

<p>Yellow LED lights up for 5 seconds.</p>	<p>Intrusion alarm.</p>	<p>There is an unrestored state after the intrusion alarm.</p> <div data-bbox="1046 286 1458 611">  <p>The indication is not displayed if there is a confirmed intrusion alarm condition.</p> </div> <div data-bbox="1046 712 1458 1081">  <p>The indication is displayed only if Restoration after intrusion alarm is enabled in the settings.</p> </div>
<p>Yellow LED flashes.</p>	<p>The number of flashes equals the Device No. that first generated the intrusion alarm.</p>	<p>There is an unrestored state after the confirmed or unconfirmed intrusion alarm:</p> <ul style="list-style-type: none"> • Single intrusion alarm <p>or</p>

		<ul style="list-style-type: none"> Confirmed intrusion alarm
Red and blue LED flashes in sequence for 5 seconds.	Lid opening.	<p>There is an unrestored tamper state or an open lid on any of the devices, or the hub.</p> <div>  <p>The indication is displayed only if Restoration after Lid opening is turned on in the settings.</p> </div>
Yellow and blue LED flashes in sequence for 5 seconds.	Other malfunctions.	<p>There is an unrestored fault state or a malfunction of any device or the hub.</p> <div>  <p>The indication is displayed only if Restoration after faults is enabled in the settings.</p> </div> <div>  <p>Currently, Restoration after faults is not available in Ajax apps.</p> </div>

Dark blue LED lights up for 5 seconds.	Permanent deactivation.	One of the devices is permanently deactivated or the lid state notifications are disabled.
Blue LED lights up for 5 seconds.	Automatic deactivation.	One of the devices is automatically deactivated by an opening timer or the number of detections.
Green and blue LED flashes in sequence.	Alarm timer expiration. <u>Learn more about Alarm confirmation feature</u>	Displayed after the alarm timer expires (to confirm the alarm).

Alert indication

- If the system is disarmed and any of the indications from the table are present, the yellow LED flares once per second.
- If there are several states in the system, the indications are displayed one by one, in the same sequence as shown in the table.

Connecting to the Network

1. Open the hub lid by shifting it down with force.



Be careful and do not damage the tamper protecting the hub from dismantling.

2. Connect the power supply and Ethernet cables to the sockets.



- Power Socket
- Ethernet socket
- SIM-card slot
- Cable retainer clamp

3. Press and hold the power button for 2 seconds until the logo lights up. The hub needs approximately 2 minutes to identify the available communication channels.



- The bright green or white logo colour indicates that the hub is connected to Ajax Cloud.
- If the Ethernet connection does not occur automatically, disable proxy, and filtration by MAC addresses and activate the DHCP in the router settings: the hub will receive an IP address. During the next setup in the mobile app, you will be able to set a static IP address.
- To connect the hub to the GSM network, you need a micro-SIM card with a disabled PIN code request (you can disable it using the mobile phone) and a sufficient amount on the account to pay for the GPRS, SMS services and calls.

In some regions, Hub is sold with a SIM card along

- If the hub does not connect to Ajax Cloud via GSM, use Ethernet to set up the network parameters in the app. For the proper setting of the access point, username, and password, please contact the support service of the

operator.

Ajax Account

The user with administrator rights can configure the Ajax security system via the app. The administrator account with the information about the added hubs is encrypted and placed on Ajax Cloud.

All the parameters of the Ajax security system and connected devices set by the user are stored locally on the hub. These parameters are inextricably linked with the hub: changing the hub administrator does not affect the settings of the connected devices.

- One phone number may be used to create only one Ajax account.
- Create the Ajax account in the app following the step-by-step guide. As part of the process, you need to confirm your email and phone number.
- Ajax account allows you to combine the roles: you can be the administrator of one hub, as well as the user of another hub.

Adding the hub to the Ajax app


Granting access to all system functions (to display notifications in particular) is a mandatory condition for controlling the Ajax security system via the smartphone.

1. Login into your account.
2. Open the Add Hub menu and select the way of registering: manually or step-by-step guidance.
3. At the registration stage, type the name of the hub and scan the QR code located under the lid (or enter a registration key manually).



4. Wait until the hub is registered.
- If there are already users on the hub, the hub administrator, PRO with full rights or the installation company of the selected hub can add your account to it. You will receive notification that the hub is already added to another account.
 - Get in touch with our support to determine who has admin rights on the hub.

User account types and rights

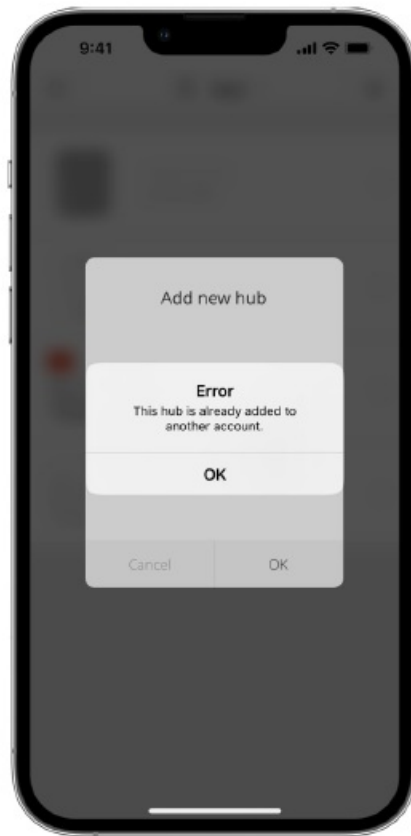

Installation

- Before installing the hub, make sure that you have selected the optimal location: the SIM card demonstrates consistent reception, all the devices have been tested for radiocommunication, and the hub is hidden from direct view.
- The device was developed only for indoor use.
- The hub should be reliably attached to the surface (vertical or horizontal). We do not recommend using double-sided adhesive tape: it cannot guarantee secure attachment and simplifies the removal of the device.

Do not place the hub

- outside the premises (outdoors);
- nearby or inside any metal objects that cause attenuation and shielding of the radio signal;
- in places with a weak GSM signal;
- close to radio interference sources: less than 1 meter from the router and power cables;
- in premises with temperature and humidity over the permissible limits.

Hub installation

1. Fix the hub lid on the surface using bundled screws. When using any other Xing accessories, make sure that they do not damage or deform the hub lid.
2. Fix the power and Ethernet cables with the supplied cable retainer clamp and screws. Use cables with a diameter no larger than the supplied ones. The cable retainer clamp must fit tightly to the cables so that the hub lid closes easily.


The cable retainer clamp helps to prevent sabotage — the power and Ethernet cables will not be pulled out on

purpose.


3. Put the hub on the lid and fix it with bundled screws.



- Do not flip the hub when attaching vertically (for instance, on a wall). When properly fixed, the Ajax logo can be read horizontally.
- Fixing the hub on the lid with screws prevents any accidental shifting of the hub and minimises the risk of device theft.
- If the hub is firmly fixed, the attempt to tear it off triggers the tamper, and the system sends a notification.

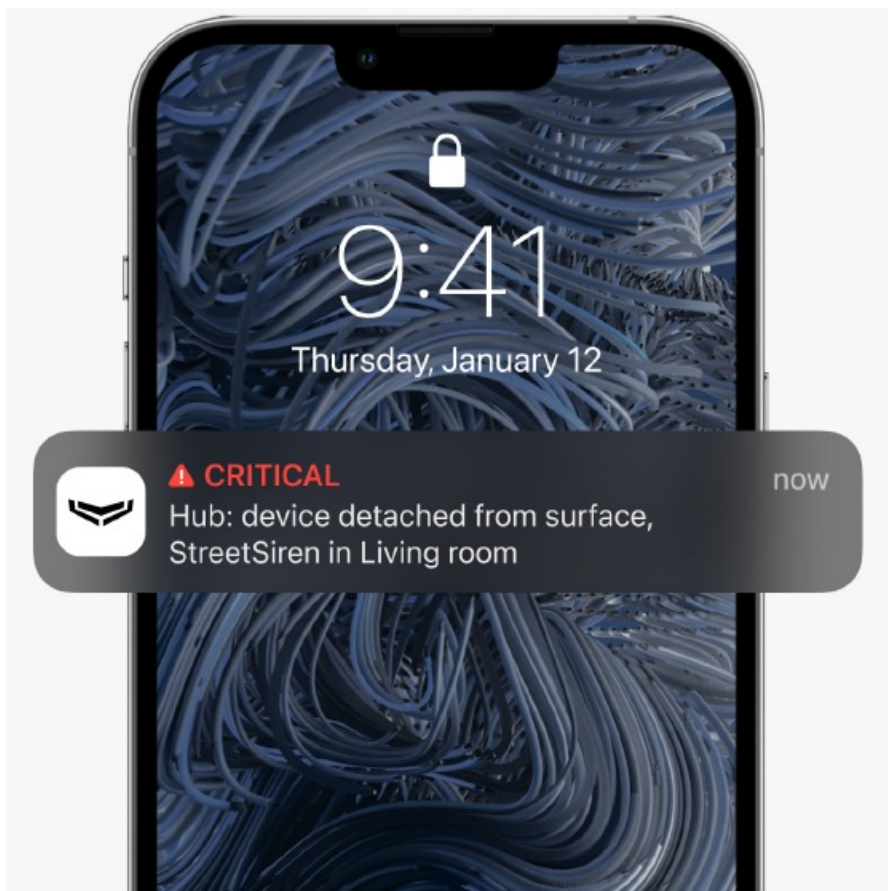


Rooms in the Ajax app

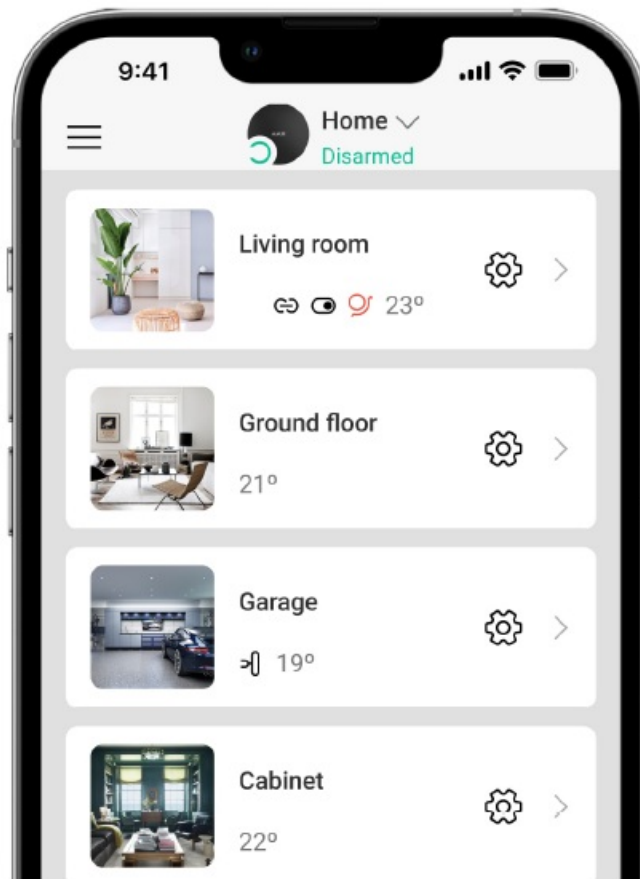


- The virtual rooms are used to group the connected devices. The user can create up to 50 rooms, with each device located only in one room.
- Without creating the room, you are not able to add devices in the Ajax app.

Creating and Setting Up a Room

- The room is created in the app using the Add Room menu.
- Please assign a name for the room, and optionally, attach (or make) a photo: it helps to find the needed room in the list quickly.
- By pressing on the gear button  go to the room settings menu.
- To delete the room, move all the devices to other rooms using the device setup menu. Deleting the room erases all its settings.

Connecting Devices

- The hub doesn't support uartBridge and ocBridge Plus integration modules.

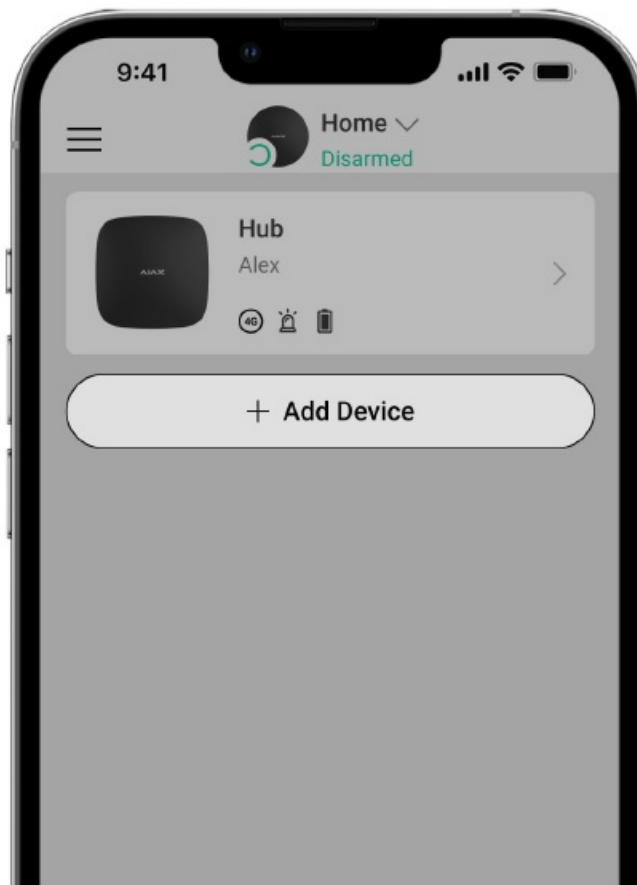


- During the first hub registration in the app, you will be prompted to add devices to guard the room. However, you can refuse and return to this step later.
- The user can add the device only when the security system is disarmed.


1. Open the room in the app and select the Add Device option.
2. Name the device, scan the QR code (or insert the ID manually), select the room and go to the next step.
3. When the app starts searching and launches countdown, switch on the device: its LED will blink once. For detection and pairing to occur, the devices should be located within the coverage area of the wireless network of the hub (at a single protected object).





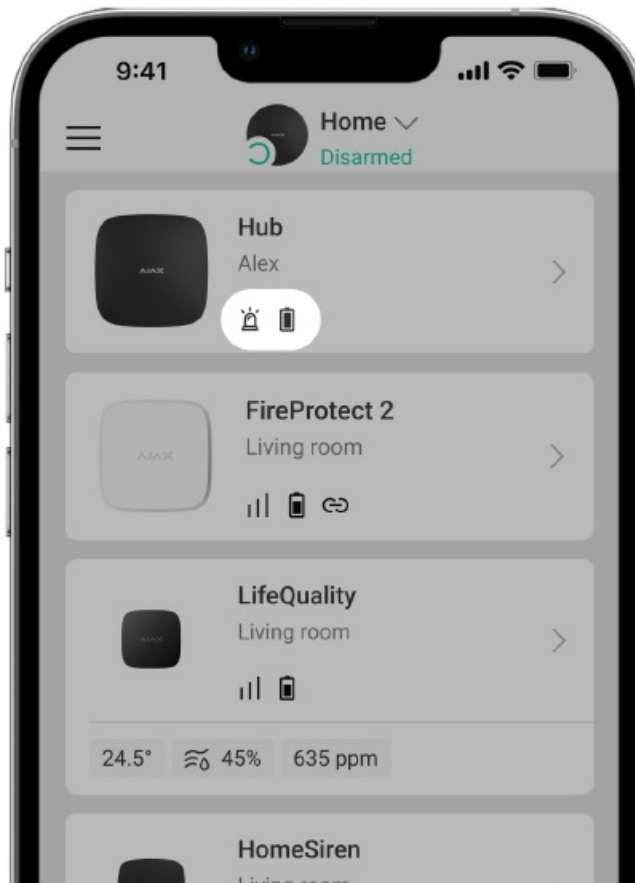


Connection request is transmitted for a short time when switching on the device.

- If the connection fails on the first try, switch off the device for 5 seconds and retry.
- Up to 10 cameras or DVRs that support RTSP protocol can be connected to Hub.
- How to configure and connect an IP camera to the Ajax security system


Hub icons




Icons display some of Hub statuses. You can see them in the Ajax app, in the Devices menu .

Icons	Meaning
	2G connected
	SIM card is not installed
	The SIM-card is defective or has a PIN-code on it
	Hub battery charge level. Displayed in 5% increments
	Hub malfunction is detected. The list is available in hub states list
	The hub is directly connected to the central monitoring station of the security organization
	The hub have lost connection with the central monitoring station of the security organization via direct connection

Hub states

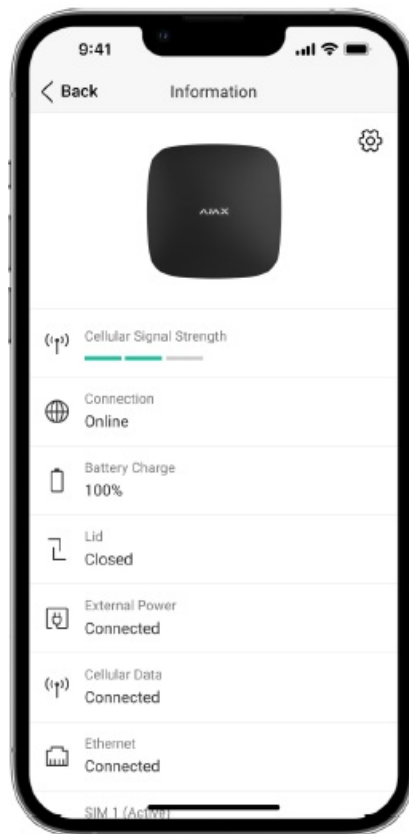

States can be found in the Ajax app

1. Go to the Devices tab .
2. Select Hub from the list.

Parameter	Meaning
-----------	---------



Malfunction	<p>Click ⓘ to open the list of Hub malfunctions.</p> <p>The field appears only if a malfunction is detected</p>
Cellular signal strength	<p>Shows the signal strength of the mobile network for the active SIM card. We recommend installing the hub in places with the signal strength of 2-3 bars. If the signal strength is weak, the hub will not be able to dial-up or send an SMS about an event or alarm</p>
Battery Charge	<p>Battery level of the device. Displayed as a percentage</p> <p><u>How battery charge is displayed in Ajax apps</u></p>
Lid	<p>Status of the tamper that responds to hub dismantling:</p> <ul style="list-style-type: none"> • Closed — the hub lid is closed • Opened — the hub removed from SmartBracket holder <p><u>What is a tamper?</u></p>
External power	<p>External power supply connection status:</p> <ul style="list-style-type: none"> • Connected — the hub is connected to external power supply • Disconnected — no external power supply

Connection	<p>Connection status between the hub and Ajax Cloud:</p> <ul style="list-style-type: none"> • Online – the hub is connected to Ajax Cloud • Offline – the hub is not connected to Ajax Cloud
Cellular data	The hub connection status to the mobile Internet:
	<ul style="list-style-type: none"> • Connected – the hub is connected to Ajax Cloud via mobile Internet • Disconnected – the hub is not connected to Ajax Cloud via mobile Internet <p>If the hub has enough funds on the account or has bonus SMS/calls, it will be able to make calls and send SMS messages even if the Not connected status is displayed in this field</p>
Ethernet	<p>Internet connection status of the hub via Ethernet:</p> <ul style="list-style-type: none"> • Connected – the hub is connected to Ajax Cloud via Ethernet • Not connected – the hub is not connected to Ajax Cloud via Ethernet
Average Noise (dBm)	<p>Noise power level at Jeweller frequencies at the hub installation site.</p> <p>The acceptable value is –80 dBm or lower</p>

Monitoring Station	<p>The status of direct connection of the hub to the central monitoring station of the security organization:</p> <ul style="list-style-type: none"> • Connected — the hub is directly connected to the central monitoring station of the security organization • Disconnected — the hub is not directly connected to the central monitoring station of the security organization <p>If this field is displayed, the security company uses a direct connection to receive events and security system alarms</p> <p><u>What is a direct connection?</u></p>
Hub model	Hub model name
Hardware version	Hardware version. Unable to update
Firmware	Firmware version. Can be updated remotely
ID	ID/serial number. Also located on the device box, on the device circuit board, and on the QR code under the SmartBracket panel

Settings

Settings can be changed in the Ajax app:

1. Go to the Devices tab .
2. Select Hub from the list.
3. Go to Settings by clicking on the icon .

Note that after changing the settings, you should click the Back button to save them.

Avatar	▼
Hub name	▼
Users	▼
Ethernet	▼
Cellular	▼
Geofence	▼
Groups	▼
Security schedule	▼
Detection zone test	▼
Jeweller	▼
Service	▼
Monitoring Station	▼
Installers	▼
Security Companies	▼

User Guide



Data Import



Unpair hub



Settings Reset


To return the hub to the factory default settings, switch it on, then hold the power button for 30 seconds (the logo will start blinking red).

At the same time, all the connected detectors, room settings and user settings will be deleted. User profiles will remain connected to the system.

Users

After adding the hub to the account, you become the administrator of this device. One hub can have up to 50 users/administrators. The administrator can invite users to the security system and determine their rights.

Events and Alarms Notifications

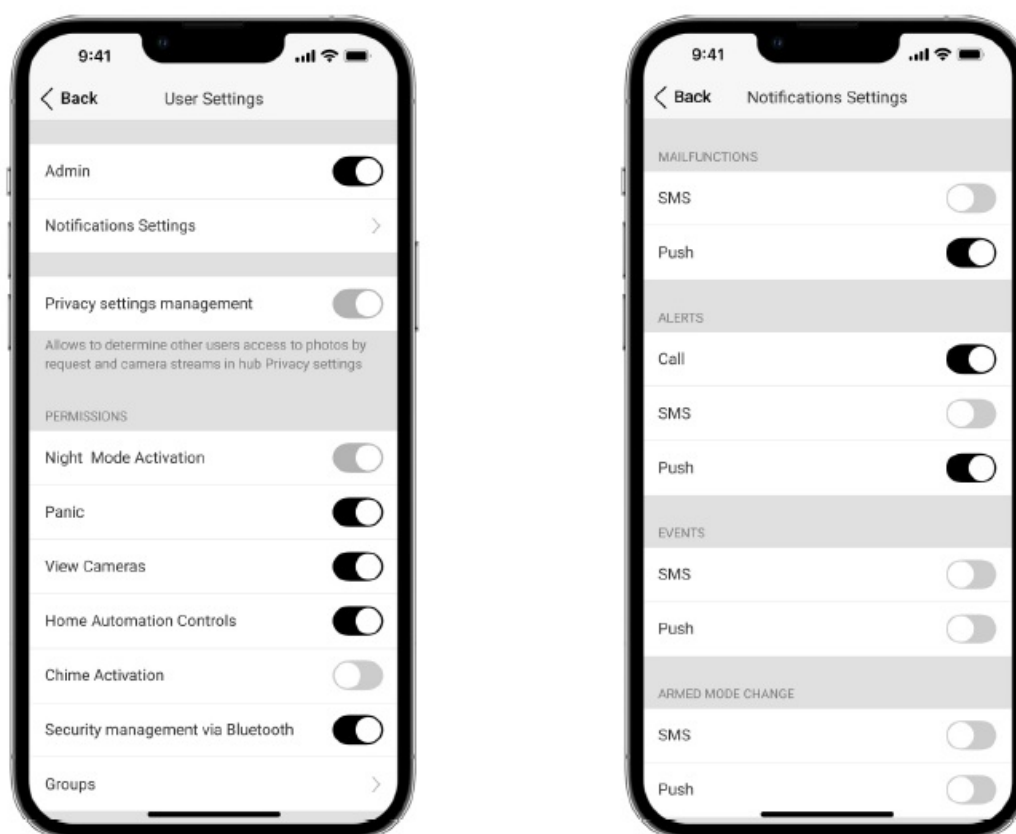

The hub notifies users of events in three ways: push notifications, SMS and calls. Notifications are set in the menu Users:

Event types	For what it is used	Types of notifications
Malfunctions	<ul style="list-style-type: none"> • Loss of connection between the device and the hub • Jamming • Low battery charge in device or hub • Masking • Tampering with the detector body 	<ul style="list-style-type: none"> • Push notifications • SMS
Alarm	<ul style="list-style-type: none"> • Intrusion 	<ul style="list-style-type: none"> • Calls
	<ul style="list-style-type: none"> • Fire • Flood • Loss of connection between the hub and the Ajax Cloud server 	<ul style="list-style-type: none"> • Push notifications • SMS
Events	<ul style="list-style-type: none"> • Activation of <u>WallSwitch</u>, <u>Relay</u>, <u>Socket</u> 	<ul style="list-style-type: none"> • Push notifications • SMS
Arming/Disarming	<ul style="list-style-type: none"> • Arming/Disarming entire premises or group • Turning on <u>Night mode</u> 	<ul style="list-style-type: none"> • Push notifications • SMS

- Push notification is sent by Ajax Cloud to the Ajax Security system app if an Internet connection is available.
- SMS is sent to the phone number indicated by the user when registering the Ajax account.

- The phone call means that the hub calls the number specified in the Ajax account.

We call only in the event of an alarm to get your attention and reduce the feasibility of you missing an important alert.

We recommend enabling this type of notification. The hub consecutively calls all users who have enabled this type of notification in the order specified in the Users Settings. If a second alarm occurs, the hub will make a call again but not more than once 2 minutes.


The call is automatically dropped as soon as you answer it. We recommend you to save the phone number associated with the hub SIM card in your contacts list.

Notification settings may be only changed for registered users.

The hub does not notify users of opening detectors triggering in the Disarmed model the Chime feature is enabled and configured. Only the sirens connected to the system notify about the opening.

How Ajax notifies users of alerts

Connecting a Security Company

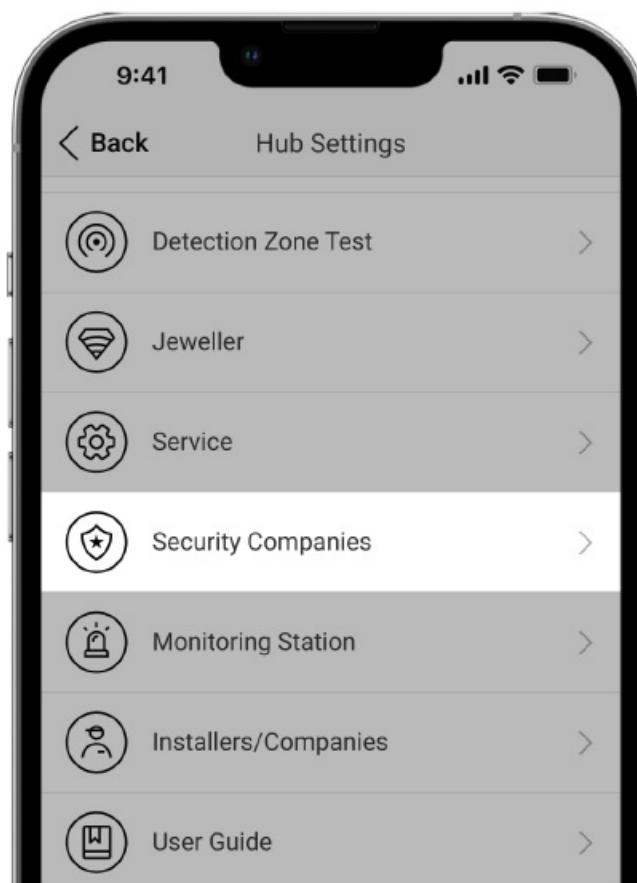

- The list of organizations connecting the Ajax system to the central monitoring station is provided in the Security Companies menu of the hub settings:
- Contact representatives of the company providing services in your city and negotiate the connection.
- Connection to the central monitoring station (CMS) is possible via the SurGard(Contact ID), ADEMCO 685, SIA (DC-09), and other proprietary protocols. A What is Chime
- How Ajax notifies users of alerts complete list of supported protocols is available at the link.

Maintenance

- Check the operational capability of the Ajax security system regularly.
- Clean the hub body from dust, spider webs and other contaminants as they appear. Use a soft dry napkin suitable for equipment maintenance.
- Do not use any substances containing alcohol, acetone, gasoline or overactive solvents for cleaning the hub.

How to replace the hub battery

Complete Set

1. Ajax Hub
2. SmartBracket mounting panel
3. Power supply cable
4. Ethernet cable
5. Installation kit
6. GSM start package (available not in all countries)
7. Quick Start Guide

Safety Requirements

While installing and using the hub, follow the general electrical safety regulations for using electrical appliances, as well as the requirements of regulatory legal acts on electrical safety.

It is strictly prohibited to disassemble the device under voltage. Do not use the device with a damaged power cable.

Technical Specifications


- All technical specifications of Hub
- Compliance with standards

Warranty

Warranty for the Limited Liability Company “Ajax Systems Manufacturing” products is valid for 2 years after the purchase and does not apply to the pre-installed accumulator.

If the device does not work correctly, you should first contact the support service—in half of the cases, technical issues can be solved remotely.

- The full text of the warranty
- User Agreement
- Technical support: support@ajax.systems.

 <p>Hub User manual</p> <p>2xSIM Plus Intelligent Security Control Panel Hub, 2xSIM, Plus Intelligent Security Control Panel Hub, Security Control Panel Hub, Control Panel Hub, Panel Hub</p>	<p>Ajax Systems 2xSIM Plus Intelligent Security Control Panel Hub [pdf] User Manual</p> <p>2xSIM Plus Intelligent Security Control Panel Hub, 2xSIM, Plus Intelligent Security Control Panel Hub, Security Control Panel Hub, Control Panel Hub, Panel Hub</p>
---	--

References

- [End user agreement - Ajax Systems](#)
- [How to connect security cameras to the Ajax security system](#)
- [Wireless panic button with control mode | Ajax Systems](#)
- [Hub — Intelligent security control panel | Ajax Systems](#)
- [Ajax wireless security system devices](#)
- [ocBridge Plus — Module for Ajax devices integration with wired systems](#)
- [Relay — Low current remote control relay with dry contact](#)
- [Socket \(type F\) — Wireless smart plug with energy monitor](#)
- [Hub Jeweller | Technical specifications](#)
- [uartBridge — Module for Ajax devices integration with third-party wireless alarms systems](#)
- [Ajax WallSwitch — Wireless power relay with energy monitor](#)
- [Software | Ajax Systems](#)
- [Ajax devices standards compliance list](#)
- [Support request](#)
- [Warranty - Ajax Systems](#)
- [User account types and rights | Ajax Systems Support](#)
- [How battery charge is displayed in Ajax apps | Ajax Systems Support](#)
- [What is the direct connection? | Ajax Systems Support](#)
- [What is a tamper | Ajax Systems Support](#)
- [How Ajax notifies users of alerts | Ajax Systems Support](#)
- [How to replace Hub battery? | Ajax Systems Support](#)
- [Which CMSs can Ajax hubs be connected to | Ajax Systems Support](#)
- [Jeweller radio protocol: technology and capabilities | Ajax Systems Support](#)
- [How to create and configure a scenario in the Ajax system | Ajax Systems Support](#)
- [What is alarm confirmation feature, and how to configure it | Ajax Systems Support](#)
- [What is Night Mode and how does it work | Ajax Systems Support](#)
- [What is Chime, and how does this function work | Ajax Systems Support](#)
- [support.ajax.systems/wp-content/uploads/2023/02/hub-1-0.jpg](#)
- [support.ajax.systems/wp-content/uploads/2023/02/hub-13-1-en.jpg](#)
- [support.ajax.systems/wp-content/uploads/2023/02/hub-2-1.jpg](#)
- [support.ajax.systems/wp-content/uploads/2023/02/hub-2-2.jpg](#)
- [support.ajax.systems/wp-content/uploads/2023/02/hub-2-3.jpg](#)
- [support.ajax.systems/wp-content/uploads/2023/02/hub-4-3.jpg](#)
- [support.ajax.systems/wp-content/uploads/2023/02/hub-4-4-en.jpg](#)
- [support.ajax.systems/wp-content/uploads/2023/02/hub-5-3.jpg](#)

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.