



## AJAX 6267 SpaceControl Smart Key Fob for Controlling User Guide

[Home](#) » [ajax](#) » AJAX 6267 SpaceControl Smart Key Fob for Controlling User Guide 



### Quick Start Guide

#### Key fob

**Model Name: Ajax SpaceControl**


**Two-way wireless key fob**

SpaceControl is a security system control key fob. It can arm and disarm and can be used as a panic button. IMPORTANT: This Quick Start Guide contains general information about SpaceControl. Before using the device, we recommend reviewing the User Manual on the website: [ajax.systems/support/devices/spacecontrol](https://ajax.systems/support/devices/spacecontrol)

## Contents

- [1 FUNCTIONAL ELEMENTS](#)
- [2 IMPORTANT INFORMATION](#)
- [3 KEY FOB CONNECTION](#)
- [4 COMPLETE SET](#)
- [5 TECH SPECS](#)
- [6 WARRANTY](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

## FUNCTIONAL ELEMENTS

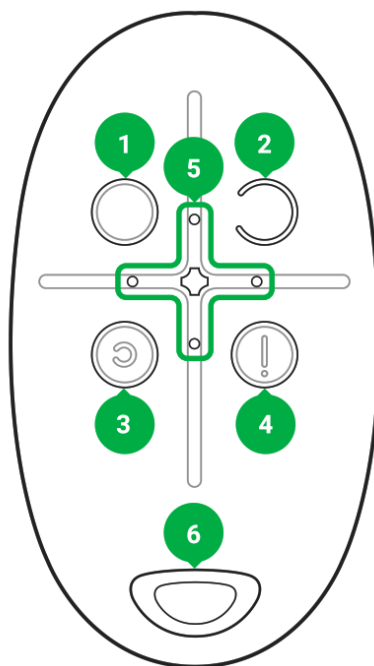

1. System arming button.
2. System disarming button.
3. Partial arming button.
4. Panic button (activates the alarm).
5. Light indicators.

Assignment of the buttons in using the key fob with Ajax Hub and Ajax cartridge. At the moment, the feature of modification of commands of the fob buttons when using with the Ajax Hub is not available.

## IMPORTANT INFORMATION

This product can be used across all EU member states. This device in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. All essential radio test suites have been carried out.



**CAUTION:** RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

## KEY FOB CONNECTION

The key fob is connected and set up via the Ajax Security System mobile application (the process is supported by prompt messages). For the key fob to become available for detection, at the time of adding the device,

simultaneously press the arming button  and the panic button .

QR is located on the interior side of the device box cover and inside the body at the battery attachment.

For the pairing to occur, the key fob and the hub should be located within the same protected object.





To connect the key fob to a third-party security central unit using the Ajax cartridge or Ajax Oxbridge Plus integration module, follow the recommendations in the user manual of the respective device.


## USING THE KEY FOB

SpaceControl operates with a single receiver device only (Hub, bridge).

The fob has protection against accidental button presses. Very fast pressings are ignored, to operate the button it is necessary to hold it for a while (less than a quarter of a second). The SpaceControl lights the green light indicator when a hub or integration module receives a command and red light when the command is not received or not accepted. For more detailed description of light indication refer to User Manual.

**The fob can:**

- Set the system to the armed mode – press the button .
- Set the system to the partially armed mode – press the button .
- Disarm the system – press the button .
- Switch on an alarm – press the button .

To mute the actuated security system (siren), press the disarming button  on the fob.

## COMPLETE SET

1. SpaceControl.
2. Battery CR2032 (pre-installed).
3. Quick Start Guide.

## TECH SPECS

Number of buttons	4
Panic button	Yes
Frequency band	868.0-868.6 mHz
Maximum RF output	Up to 20 mW
Modulation	FM
Radio signal	Up to 1,300 m(any obstacles absent)
Power supply	1 battery CR2032A, 3 V
Service life from the battery	Up to 5 years (depending on the usage frequency)
Operating temperature range	From -20°C to +50°C
Operating humidity	Up to 90%
Overall dimensions	65 x 37 x 10 mm
Weight	13 g

## WARRANTY

The warranty for the Ajax Systems Inc. devices is valid for 2 years after the purchase and does not apply to the supplied battery. If the device does not work correctly, you should first contact the support service—in half of the cases, technical issues can be solved remotely!

The full text of the warranty is available on the website: [ajax.systems/ru/warranty](https://ajax.systems/ru/warranty)

User Agreement: [ajax.systems/end-user-agreement](https://ajax.systems/end-user-agreement)

Technical support: [support@ajax.systems](mailto:support@ajax.systems)



**Manufacturer: Research and Production Enterprise “Ajax” LLC**

**Address: Sklyarenko 5, Kyiv, 04073, Ukraine**

**By request of Ajax Systems Inc.**

[www.ajax.systems](https://www.ajax.systems)

## Documents / Resources

	<a href="#">AJAX 6267 SpaceControl Smart Key Fob for Controlling</a> [pdf] User Guide 6267, SpaceControl Smart Key Fob for Controlling
	<a href="#">AJAX 6267 SpaceControl Smart Key Fob</a> [pdf] User Manual 6267 SpaceControl Smart Key Fob, 6267, SpaceControl Smart Key Fob, Smart Key Fob, Key Fob, Fob