



# AJAX Hub 2 Plus Alarm System User Manual

[Home](#) » [ajax](#) » AJAX Hub 2 Plus Alarm System User Manual 

## Contents

- [1 AJAX Hub 2 Plus Alarm System](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Installation](#)
- [5 Maintenance](#)
- [6 Technical Specifications](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)



**AJAX Hub 2 Plus Alarm System**



## Product Information

The Hub 2 Plus is a central device in the Ajax security system. It controls the operation of all connected devices and interacts with the user and the security company. The hub reports events such as the opening of doors, breaking of windows, and threat of fire or flood, and automates routine actions using scenarios. It can also send photos from MotionCam / MotionCam Outdoor motion detectors to a security company patrol if outsiders enter the secure room.

The Hub 2 Plus central unit must be installed indoors only. It requires Internet access to connect to the Ajax Cloud service. The central unit can be connected to the Internet via Ethernet, Wi-Fi, and two SIM cards (2G/3G/4G). Connecting to Ajax Cloud is necessary for configuring and managing the system through Ajax apps, transmitting notifications about alarms and events, as well as for updating the OS Malevich. All data on Ajax Cloud is stored under multilevel protection, and information is exchanged with the hub via an encrypted channel.

To ensure a reliable connection with Ajax Cloud and to secure against interruptions in the work of telecom operators, it is important to connect all communication channels.

You can manage the security system and quickly respond to alarms and notifications through apps available for iOS, Android, macOS, and Windows. The system allows you to choose how you want to be notified of events, such as push notifications, SMS, or calls. If the system is connected to a security company, events, and alarms will be transmitted directly and/or through Ajax Cloud to the monitoring station.

The Hub 2 Plus supports up to 200 Ajax devices connected, which can protect against intrusion, fire, and flooding, and control electrical appliances automatically according to scenarios or manually from an app.

## Product Usage Instructions

1. Install the Hub 2 Plus central unit indoors only.
2. Connect the central unit to the Internet using either Ethernet, Wi-Fi, or two SIM cards (2G/3G/4G).
3. Ensure all communication channels are connected to ensure a reliable connection with Ajax Cloud and to prevent interruptions in the work of telecom operators.

4. Download and install the Ajax app on your iOS, Android, macOS, or Windows device.
5. Configure and manage the system through the Ajax app.
6. Select your preferred notification method for events, such as push notifications, SMS, or calls.
7. If connecting to a security company, follow their instructions for integration and monitoring.
8. Monitor the security system using the Ajax app and respond quickly to alarms and notifications.

Please refer to the user manual for detailed instructions on the installation, configuration, and management of the Hub 2 Plus central unit and the Ajax security system.

## Hub 2 Plus



Hub 2 Plus is a central device in the Ajax security system, which controls the operation of all connected devices and interacts with the user and the security company.

The hub reports the opening of doors, breaking of windows, and the threat of fire or flood, and automates routine actions using scenarios. If outsiders enter the secure room, Hub 2 Plus will send photos from MotionCam / MotionCam Outdoor motion detectors and notify a security company patrol.

Hub 2 Plus central unit must be installed indoors only. Hub 2 Plus needs Internet access to connect to the Ajax Cloud service. The central unit is connected to the Internet via Ethernet, Wi-Fi, and two SIM cards (2G/3G/4G).

Connecting to Ajax Cloud is necessary for configuring and managing the system through Ajax apps, transmitting notifications about alarms and events, as well as for updating OS Malevich. All data on Ajax Cloud is stored under multilevel protection, information is exchanged with the hub via an encrypted channel.

Connect all communication channels to ensure a more reliable connection with Ajax Cloud and to secure against interruptions in the work of telecom operators.


You can manage the security system and quickly respond to alarms and notifications through for iOS, Android, macOS, and Windows. The system allows you to choose of what events and how to notify the user: by push notifications, SMS, or calls.

- How to set up push notifications on iOS
- How to set up push notifications on Android

If the system is connected to a security company, events and alarms will be transmitted to the monitoring station — directly and/or through Ajax Cloud.

## Buy Hub 2 Plus central unit

## Functional elements

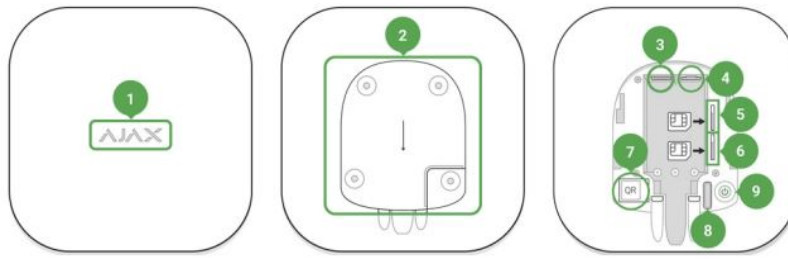

1. Ajax logo featuring LED indicator
2. SmartBracket mounting panel. Slide it down with force to open
  - A perforated part is required for actuating the tamper in case of any attempt to dismantle the hub. Do not break it off.
3. Power cable socket
4. Ethernet cable socket
5. Slot for micro SIM 2
6. Slot for micro SIM 1
7. QR Code
8. Tamper button
9. Power button

### Operating principle

The hub monitors the security system operation by communicating with connected devices via the Jeweller encrypted protocol. The communication range is up to 2000 m without obstacles (for example, walls, doors, inter- or constructions). If the detector is triggered, the system raises the alarm in 0.15 seconds, activates the sirens, and notifies the central monitoring station of the security organization and the users.

If there is interference at the operating frequencies or when jamming is attempted, Ajax switches to a free radio frequency and sends notifications to the central monitoring station of the security organization and to system users.

### What jamming of a wireless security system is and how to resist it

Hub 2 Plus supports up to 200 Ajax devices connected, which protect against intrusion, and coding, as well as control electrical appliances automatically according to scenarios or manually from an app.

To send photos from the MotionCam / MotionCam Outdoor motion detector, a separate Wings radio protocol and a dedicated antenna are used. This ensures the delivery of visual alarm verification even with an unstable signal level and interruptions in communication.

### List of Jeweller devices

Hub 2 Plus is running under a real-time operating system OS Malevich. Similar OS control spacecraft systems, ballistic missiles, and car brakes. OS Malevich expands the capabilities of the security system, automatically updating by air without user intervention.

Use scenarios to automate the security system and decrease the number of routine actions. Set up the security schedule, program actions of automation devices (Relay, WallSwitch, or Socket) in response to an alarm, temperature change, pressing of the Button or by schedule. A scenario can be created remotely in the Ajax app.

How to create and configure a scenario in the Ajax security system

### LED indication



The Ajax logo on the hub front lights up red, white, or green depending on the status of the power supply and Internet connection.

Event	LED indicator
At least two communication channels — Wi-Fi, Ethernet, or SIM card — are connected	Lights up white
A single communication channel is connected	Lights up green
The hub is not connected to the Internet or there is no connection with the Ajax Cloud server	Lights up red
No power	Lights up for 3 minutes, then blinks every 10 seconds. The color of the indicator depends on the number of connected communication channels

### Ajax account

The security system is configured and controlled through [Ajax apps](#). Ajax applications are available to professionals and users on iOS, Android, macOS, and Windows.

The settings of Ajax security system users and the parameters of connected devices are stored locally on the hub and are inextricably linked with it. Changing the hub administrator does not reset the settings of the connected devices.

To configure the system, install the Ajax app and create an account. One phone number and email address may be used to create only one Ajax account. There is no need to create a new account for each hub — one account can manage multiple hubs.


Your account can combine two roles: the administrator of one hub and the user of another hub.

### Security requirements

When installing and using Hub 2 Plus, strictly adhere to the general electrical safety regulations for using electrical appliances, as well as the requirements of regulatory legal acts on electrical safety. It is strictly forbidden to disassemble the device under voltage. Also, do not use the device with a damaged power cable.


### Connecting to the network

1. Remove the SmartBracket mounting panel by sliding it down with force. Avoid damaging the perforated part — it's essential for the tamper activation in case of hub dismantling.

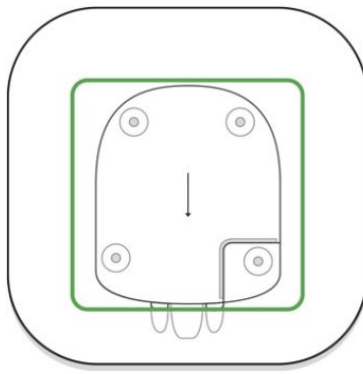

2. Connect the power supply and Ethernet cables to the appropriate sockets, and install SIM cards.

- Power socket
- Ethernet socket
- Slots for installing micro-SIM cards

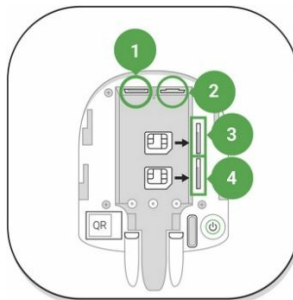


3. Press and hold the power button for 3 seconds until the Ajax logo lights up. It takes about 2 minutes for the hub to upgrade to the latest firmware and connect to the Internet. The green or white logo color indicates that the hub is running and connected to Ajax Cloud.

- If the Ethernet connection is not established automatically, disable proxy and MAC address filtration and activate DHCP in the router settings. The hub will automatically receive an IP address. After that, you will be able to set up a static IP address of the hub in the Ajax app.

4. To connect to the cellular network, you need a micro SIM card with a disabled PIN code request (you can disable it using a mobile phone) and a sufficient amount on your account to pay for the services at your operator's rates. If the hub does not connect to the cellular network, use Ethernet to confirm the network parameters: roaming, APN access point, username, and password. Contact your telecom operator for support to find out these options.

### Adding a hub to the Ajax app

- Turn on the hub and wait until the logo lights up green or white.
- Open the Ajax app. Give access to the requested system functions to fully use the capabilities of the Ajax app and not to miss alerts about alarms or events.
  - How to set up notifications on iOS
  - How to set up notifications on Android
- Open the Add hub menu Select the way of registering: manually or step-by-step guidance. If you are setting the system up for the first time, use step-by-step guidance.
- Specify the name of the hub and scan the QR code located under the SmartBracket mounting panel or enter it manually.
- Wait until the hub is added. The linked hub will be displayed in the Devices tab 


After adding a hub to your account, you become the administrator of the device. Administrators can invite other










users to the security system and determine their rights. Hub 2 Plus central unit can have up to 200 users. Changing or removing the administrator does not reset the settings of the hub or connected devices.

Ajax security system user rights

## Hub statuses

### Icons

Icons display some of Hub 2 Plus statuses. You can see them in the Ajax app, in the Devices menu .

Icons	Meaning
	2G connected
	3G connected
	LTE connected
	SIM card is not installed
	The SIM-card is defective or has a PIN-code on it
	Hub 2 Plus battery charge level. Displayed in 5% increments
	Hub 2 Plus malfunction is detected. The list is available in hub states list
	The hub is directly connected to the central monitoring station of the security organization
	The hub have lost connection with the central monitoring station of the security organization via direct connection

### States

States can be found in the Ajax app

1. Go to the Devices tab .
2. Select Hub 2 Plus from the list.

Malfunction	<p>Click ⓘ to open the list of Hub 2 Plus malfunctions.</p> <p>The field appears only if a malfunction is detected</p>
Cellular Signal Strength	<p>Shows the signal strength of the mobile network for the active SIM card. We recommend installing the hub in places with the signal strength of 2-3 bars. If the signal strength is weak, the hub will not be able to dial-up or send an SMS about an event or alarm</p>
Battery Charge	<p>Battery level of the device. Displayed as a percentage</p> <p><b><u>How battery charge is displayed in Ajax apps</u></b></p>
Lid	<p>Status of the tamper that responds to hub dismantling:</p> <ul style="list-style-type: none"> <li>• <b>Closed</b> — the hub lid is closed</li> <li>• <b>Opened</b> — the hub removed from SmartBracket holder</li> </ul> <p><b><u>What is a tamper?</u></b></p>
External power	<p>External power supply connection status:</p> <ul style="list-style-type: none"> <li>• <b>Connected</b> — the hub is connected to external power supply</li> <li>• <b>Disconnected</b> — no external power supply</li> </ul>
Connection	<p>Connection status between the hub and Ajax Cloud:</p> <ul style="list-style-type: none"> <li>• <b>Online</b> — the hub is connected to Ajax Cloud</li> <li>• <b>Offline</b> — the hub is not connected to Ajax Cloud</li> </ul>
	<p>The hub connection status to the mobile</p>

Cellular Data	<ul style="list-style-type: none"> <li>• <b>Connected</b> – the hub is connected to Ajax Cloud via mobile Internet</li> <li>• <b>Disconnected</b> – the hub is not connected to Ajax Cloud via mobile Internet</li> </ul> <p>If the hub has enough funds on the account or has bonus SMS/calls, it will be able to make calls and send SMS messages even if the <b>Not connected</b> status is displayed in this field</p>
Active SIM	Displays the active SIM card: SIM card 1 or SIM card 2
SIM 1	The number of the SIM card installed in the first slot. Copy the number by clicking it
SIM 2	The number of the SIM card installed in the second slot. Copy the number by clicking it
Wi-Fi	<p>Internet connection status of the hub via Wi-Fi.</p> <p>For greater reliability, it is recommended to install the hub in places with the signal strength of 2-3 bars</p>
Ethernet	<p>Internet connection status of the hub via Ethernet:</p> <ul style="list-style-type: none"> <li>• <b>Connected</b> – the hub is connected to Ajax Cloud via Ethernet</li> <li>• <b>Disconnected</b> – the hub is not connected to Ajax Cloud via Ethernet</li> </ul>
Average Noise (dBm)	<p>Noise power level at the hub installation site. The first two values show the level at Jeweller frequencies, and the third – at Wings frequencies.</p> <p>The acceptable value is -80 dBm or lower</p>
	<p>The status of direct connection of the hub to the central monitoring station of the security organization:</p> <ul style="list-style-type: none"> <li>• <b>Connected</b> – the hub is directly connected</li> </ul>


Monitoring Station	<p>security organization</p> <ul style="list-style-type: none"> <li>• <b>Disconnected</b> – the hub is not directly connected to the central monitoring station of the security organization</li> </ul> <p>If this field is displayed, the security company uses a direct connection to receive events and security system alarms</p> <p><u><b>What is a direct connection?</b></u></p>
Hub model	Hub model name
Hardware version	Hardware version. Unable to update
Firmware	Firmware version. Can be updated remotely
ID	ID/serial number. Also located on the device box, on the device circuit board, and on the QR code under the SmartBracket panel


## Rooms

Prior to linking a detector or device to a hub, create at least one room. Rooms are used to group detectors and devices, as well as to increase the information content of notifications. The name of the device and room will be displayed in the text of the event or alarm of the security system.



To create a room in the Ajax app:

1. Go to the Rooms tab .
2. Click Add Room.
3. Assign a name for the room, and optionally attach or take a photo: it helps to find the needed room in the list quickly.
4. Click Save.

To delete the room or change its avatar or name, go to Room settings by pressing .

## Connection of detectors and devices

The hub doesn't support uartBridge and ocBridge Plus integration modules. When adding a hub to your account using the step-by-step guidance, you will be prompted to connect devices to the hub. However, you can refuse

and return to this step later.



### **To add a device to the hub, in the Ajax app:**

- Open the room and select Add device.
- Name the device, scan its QR code (or enter it manually), select a group (if group mode is enabled).
- Click Add – the countdown for adding a device will begin.
- Follow the instructions in the app to connect the device.

Please note that in order to link to the hub, the device must be located within the hub's radio communication range (at the same protected object).

### **Hub settings**

Settings can be changed in the Ajax app

1. Go to the Devices tab .
2. Select Hub 2 Plus from the list.
3. Go to Settings by clicking on the icon .

Note that after changing the settings, you should click the Back button to save them.

- Avatar
- Hub name
- Users
- Ethernet
- Wi-Fi
- Cellular
- Geofence
- Keypad access codes
- Groups
- Security Schedule
- Detection Zone Test
- Jeweller
- Service
- Monitoring Station
- Installers
- Security companies
- User Guide
- Data Import
- Unpair hub

### **Settings reset**

Resetting the hub to the factory settings:

1. Turn on the hub if it is off.
2. Remove all users and installers from the hub.
3. Hold the power button for 30 s — the Ajax logo on the hub will start blinking red.
4. Remove the hub from your account.

Resetting the hub does not delete connected users.

### **Events and alarm notifications**

The Ajax security system informs the user about alarms and events in three ways: push notifications, SMS, and phone calls. The notification settings can be changed only for registered users.

Hub 2 Plus does not support calls and SMS transmission using VoLTE (Voice over LTE) technology. Before buying a SIM card, please make sure that it only supports the GSM standard.

Types of events	Purpose	Types of notifications
Malfunctions	<ul style="list-style-type: none"> <li>• Loss of connection between the device and the hub</li> <li>• Jamming</li> <li>• Low battery charge in device or hub</li> <li>• Masking</li> <li>• Tampering alarm</li> </ul>	Push notifications SMS
Alarm	<ul style="list-style-type: none"> <li>• Intrusion</li> <li>• Fire</li> <li>• Flood</li> <li>• Loss of connection between the hub and the Ajax Cloud server</li> </ul>	Calls  Push notifications SMS
Events	<ul style="list-style-type: none"> <li>• Activation of <a href="#">WallSwitch</a>, <a href="#">Relay</a>, <a href="#">Socket</a></li> </ul>	Push notifications SMS

The hub does not notify users of opening detectors triggering in the Disarmed mode when the Chime feature is enabled and configured. Only the sirens connected to the system notify about the opening.

### What is Chime

How Ajax notifies users of alerts



### Video surveillance

You can connect third-party cameras to the security system: seamless integration with Dahua, Hikvision, and Sare

IP cameras and video recorders has been implemented. You can also connect third-party cameras supporting RTSP protocol. You can connect up to 100 video surveillance devices to the system.

How to add a camera to the Ajax security system

### Connecting to a security company

The list of companies that accept the system to the central monitoring station is in the Security companies menu (Devices →  Hub → Settings  → Security companies):



Select a security company and click Send Monitoring Request. After that, the security company will contact you and discuss the connection conditions. Or you can contact them yourself (contacts are available in the app) to agree upon a connection.

Connection to the Central Monitoring Station (CMS) is implemented via the SurGard (Contact ID), ADEMCO 685, SIA (DC-09), and other proprietary protocols. A complete list of supported protocols is available at the link.

## Installation

Prior to installing the hub, make sure that you have selected the optimal location and that it complies with the requirements of this manual. It is desirable that the hub be hidden from direct view. Make sure that the communication between the hub and all connected devices is stable. If the signal strength is low (a single bar), we cannot guarantee a stable operation of the security system. Implement all potential measures to improve the signal quality. At the very least, relocate the hub as even repositioning by 20 cm can significantly improve the signal reception.

If the device has a low or unstable signal strength, use a radio signal range extender.


When installing and using the device, follow the general electrical safety regulations for using electrical appliances, as well as the requirements of regulatory legal acts on electrical safety. It is strictly forbidden to disassemble the device under voltage. Do not use the device with a damaged power cable.

### Hub installation:

1. Fix the SmartBracket mounting panel with bundled screws. When using other fasteners, make sure they do not damage or deform the panel.

We do not recommend using double-sided adhesive tape for installation: it can cause a hub to fall in case of an impact.

 2. Attach the hub to the mounting panel. After installation, check the tamper status in the Ajax app and then the quality of the panel xation. You will receive a notification if an attempt is made to tear the hub off the surface or remove it from the mounting panel.
3. Fix the hub on the SmartBracket panel with bundled screws.



Do not ip the hub when attaching vertically (for example, on a wall). When properly fixed, the Ajax logo can be read horizontally.



#### **Do not place the hub:**

- Outside the premises (outdoors).
- Nearby or inside any metal objects or mirrors causing attenuation and screening of the signal.
- In places with high radio interference level.
- Close to radio interference sources: less than 1 meter from the router and power cables.
- Inside any premises with a temperature and humidity beyond the range of permissible limits.

#### **Maintenance**

- Check the operational capability of the Ajax security system on a regular basis. Clean the hub body from dust, spider webs and other contaminants as they appear. Use soft dry napkin suitable for equipment maintenance.
- Do not use any substances containing alcohol, acetone, gasoline and other active solvents for cleaning the hub.

#### **How to replace hub battery**

#### **The package includes**

1. Hub 2 Plus
2. SmartBracket mounting panel
3. Power cable
4. Ethernet cable
5. Installation kit
6. Starter pack — not available in all countries
7. Quick Start Guide

**Technical Specifications**

Classification	Security system control panel with Ethernet, Wi-Fi, and dual SIM card support
Support of detectors with photo verification of alarms	Available
Number of connected devices	Up to 200
Number of connected ReX	Up to 5
Number of connected sirens	up to 10
Number of security groups	Up to 25
Number of users	Up to 200
Video surveillance	Up to 100 cameras or DVRs
Number of rooms	Up to 50
Number of scenarios	Up to 64  <a href="#">Learn more</a>
Central Monitoring Station communication protocols	SurGard (Contact ID) SIA (DC-09) ADEMCO 685  Other proprietary protocols  <a href="#">CMS software supporting visual alarms verification</a>  <a href="#">List of supported protocols</a>
Power supply	110-240 V~ AC with pre-installed battery 6 V DC with alternative <a href="#">6V PSU</a> power supply
Built-in back-up battery	Li-Ion 3 Ah  Ensures up to 15 hours of operation when using SIM card only
Energy consumption from the grid	Up to 10 W
Tamper proof	Available, tamper
	Jeweller — for transmitting events and alarms.

Radio communication protocols with Ajax detectors and devices	<a href="#">Learn more</a>  Wings — for transmitting photos.  <a href="#">Learn more</a>
Radio frequency band	866.0 – 866.5 MHz 868.0 – 868.6 MHz 868.7 – 869.2 MHz 905.0 – 926.5 MHz 915.85 – 926.5 MHz 921.0 – 922.0 MHz Depends on the region of sale.
RF output power	10.4 mW (max 25 mW)
Radio signal range	Up to 2000 m
Communication channels	2 SIM cards  <ul style="list-style-type: none"> <li>• 2G (GSM900/DCS1800 (B3/B8))</li> <li>• 3G (WCDMA 850/900/2100 (B1/B5/B8))</li> <li>• LTE (FDD B1/B3/B5/B7/B8/B20/B28)</li> </ul> Wi-Fi (802.11 b/g/n) Ethernet
Operating temperature range	From –10°C to +40°C
Operating humidity	Up to 75%
Size	163 × 163 × 36 mm
Weight	367 g
Service life	10 years

## Compliance with standards

### Warranty

The warranty for the Limited Liability Company “Ajax Systems Manufacturing” products is valid for 2 years after the purchase and does not apply to the bundled rechargeable battery.


If the device does not function properly, we recommend that you first contact the support service as technical issues can be resolved remotely in half of the cases.

## Warranty Obligations User Agreement

Technical support: [support@ajax.systems](mailto:support@ajax.systems)
















Subscribe to the newsletter about safe life. No spam

## Documents / Resources

 <p>Hub 2 Plus User manual version 1.0 (2021)</p> <p>Hub 2 Plus is a central device in the Ajax security system, which controls the operation of all connected devices and provides reliable communication between them.</p> <p>For the correct operation of the system, it is necessary to follow the instructions in the manual and connect the devices correctly. If you have any questions, contact the support service.</p> <p>Hub 2 Plus is a central device in the Ajax security system, which controls the operation of all connected devices and provides reliable communication between them.</p>	<p><a href="#">AJAX Hub 2 Plus Alarm System</a> [pdf] User Manual Hub 2 Plus Alarm System, Hub 2 Plus, Alarm System</p>
--	---

## References

- [How to set up alarm push notifications on Android | Ajax Systems Blog](#)
- [How OS Malevich updates | Ajax Systems Blog](#)
- [OS Malevich — how we made a system that embodies the idea of absolute simplicity | Ajax Systems Blog](#)
- [What jamming of a wireless security system is and how to resist it | Ajax Systems Blog](#)
- [Connecting Ajax to CMS](#)
- [End user agreement - Ajax Systems](#)
- [How to connect security cameras to the Ajax security system](#)
- [Wireless panic button with control mode | Ajax Systems](#)
- [Hub 2 Plus — Advanced control panel with 4 communication channels](#)
- [Ajax wireless security system devices](#)
- [MotionCam Outdoor — Wireless outdoor motion detector with photo](#)
- [MotionCam - Motion sensor with photo verification of alarms](#)
- [ocBridge Plus — Module for Ajax devices integration with wired systems](#)
- [Signal range extenders in the security system | Ajax Systems](#)
- [Relay — Low current remote control relay with dry contact](#)
- [Socket \(type F\) — Wireless smart plug with energy monitor](#)
- [uartBridge — Module for Ajax devices integration with third-party wireless alarms systems](#)
- [Ajax WallSwitch — Wireless power relay with energy monitor](#)
- [Automation scenarios | Your Ajax security automation](#)
- [Software | Ajax Systems](#)

-  [Ajax devices standards compliance list](#)
-  [Warranty - Ajax Systems](#)
-  [User account types and rights | Ajax Systems Support](#)
-  [How to set up notifications for the Ajax app on iPhone | Ajax Systems Support](#)
-  [How battery charge is displayed in Ajax apps | Ajax Systems Support](#)
-  [What is the direct connection? | Ajax Systems Support](#)
-  [How to create the Ajax account? | Ajax Systems Support](#)
-  [What is a tamper | Ajax Systems Support](#)
-  [Features of alarm photo verification by MotionCam detectors | Ajax Systems Support](#)
-  [How Ajax notifies users of alerts | Ajax Systems Support](#)
-  [How to replace Hub battery? | Ajax Systems Support](#)
-  [Which CMSs can Ajax hubs be connected to | Ajax Systems Support](#)
-  [Jeweller radio protocol: technology and capabilities | Ajax Systems Support](#)
-  [6V PSU for Hub 2/Hub 2 Plus/ReX 2 User manual | Ajax Systems Support](#)
-  [How to create and configure a scenario in the Ajax system | Ajax Systems Support](#)