



AJAX ReX Wireless Signal Repeater User Manual

[Home](#) » [ajax](#) » AJAX ReX Wireless Signal Repeater User Manual 



ReX Wireless Signal Repeater
User Manual



ReX is a range extender of communication signals that expands the radio communication range of Ajax devices fitted with a hub up to 2-fold. Developed only for indoor use. It has a built-in tamper resistance and is equipped with a battery that provides up to 35 hours of operation without external power.

The extender is compatible only with the [Ajax hubs!](#) Connection to [uartBridge](#) and [ocBridge Plus](#) is not

provided.


The device is configured via the [mobile application](#) for iOS and Android smartphones. Push notifications, SMS messages, and calls (if enabled) notify ReX users about all events. The Ajax security system can be used for independent monitoring of the site and can be connected to the Central Monitoring Station of the security company.

[Buy range extender ReX](#)

Contents

- 1 Functional elements
- 2 Principle of operation
- 3 The number of connected ReX
- 4 Prior to initiating the connection:
- 5 Connecting ReX to the hub:
- 6 Choosing devices for operation via Rex
- 7 ReX states
- 8 ReX settings
- 9 Indication
- 10 Functionality testing
- 11 Device installation
- 12 Installation procedure
- 13 Maintenance of the device
- 14 Tech specs
- 15 Warranty
- 16 Documents / Resources
 - 16.1 References
- 17 Related Posts


Functional elements

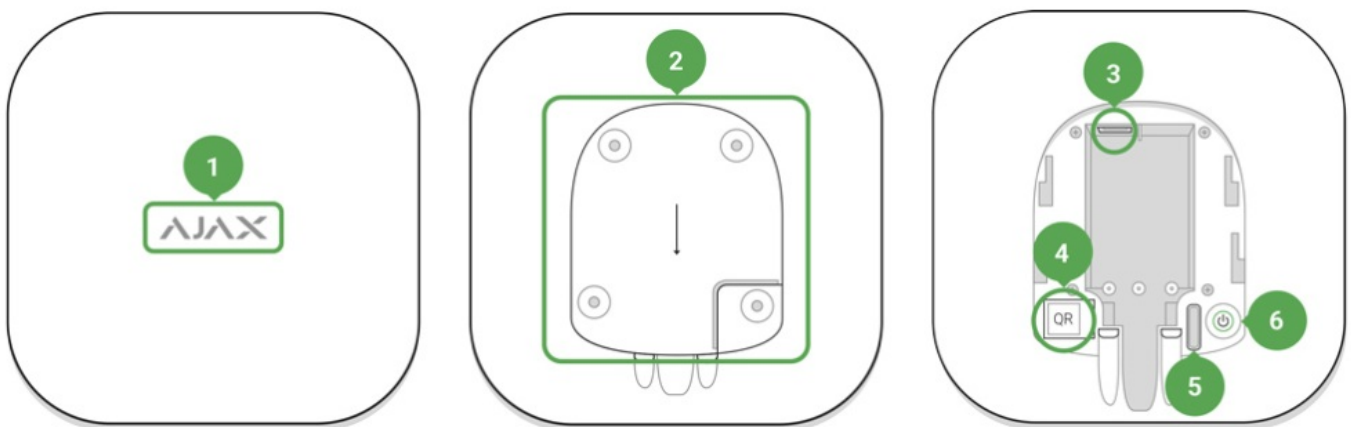

1. Logo with light indicator
2. SmartBracket attachment panel (perforated section is necessary to trigger the tamper during an attempt to lift the xed ReX from the surface)
3. Power connector
4. QR-code
5. Tamper button
6. Power button


Principle of operation

ReX expands the radio communication range of the security system allowing the installation of Ajax devices at a greater distance away from the hub.

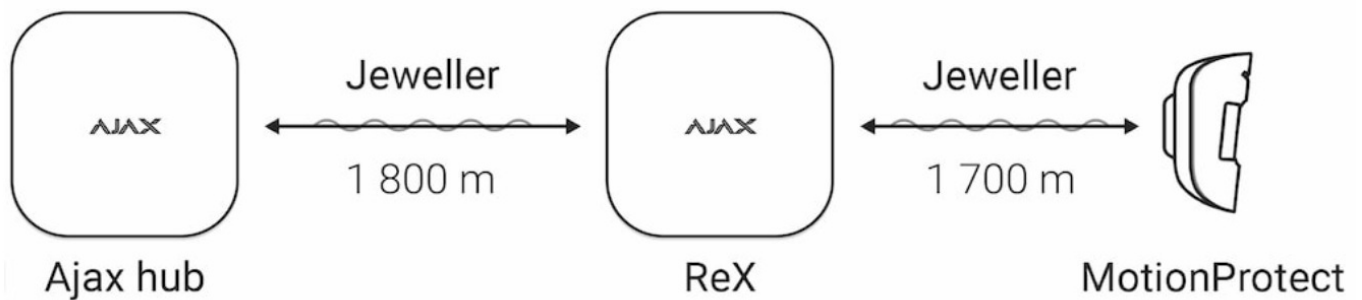

The communication range between ReX and the device is limited by the radio signal range of the device (indicated in the device specifications on the [website](#) and in the User Manual).

ReX receives hub signals and transmits them to the devices connected to ReX, and transmits signals from the devices to the hub. The hub polls the extender every 12~300 seconds (by default: 36 seconds) while the alarms are communicated within 0.3 seconds.

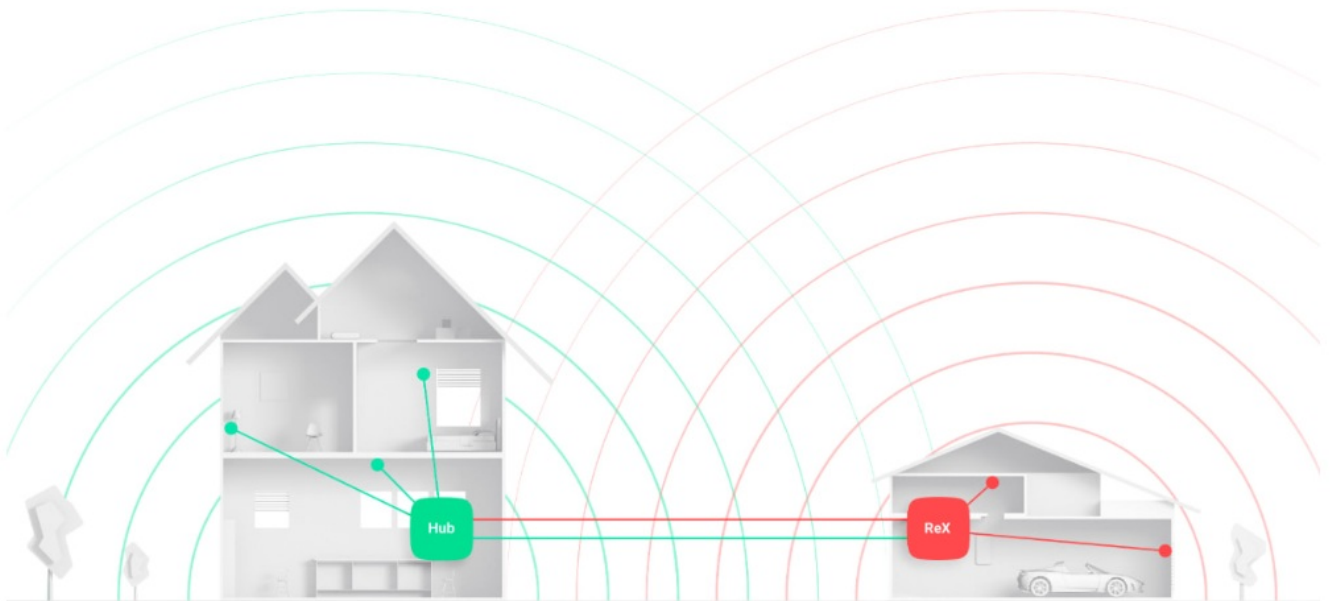

The number of connected ReX

Depending on the hub model, the following number of range extenders can be connected to the hub:

Hub	1 ReX
Hub Plus	up to 5 ReX
Hub 2	up to 5 ReX
Hub 2 Plus	up to 5 ReX

Connecting multiple ReX to the hub is supported by devices with OS Malevich 2.8 and later. At the same time, ReX can only be connected directly to the hub and connecting one range extender to another is not supported.



ReX does not increase the number of devices connected to the hub!

Connection of ReX to the hub

Prior to initiating the connection:


1. Install the [Ajax application](#) onto your smartphone following the instructions of the hub guide.
2. Create a user account, add the hub to the application, and create at least one room.
3. Open the Ajax application.
4. Turn on the hub and check the Internet connection.
5. Ensure that the hub is disarmed and is not updating by checking its status in the mobile application.
6. Connect ReX to external power.



Only users with administrator rights can add a device to the hub.

Connecting ReX to the hub:

1. Click Add Device in the Ajax application.
2. Name the extender, scan or manually enter the QR code (located on the lid and package), and select the room where the device is located.
- 3.

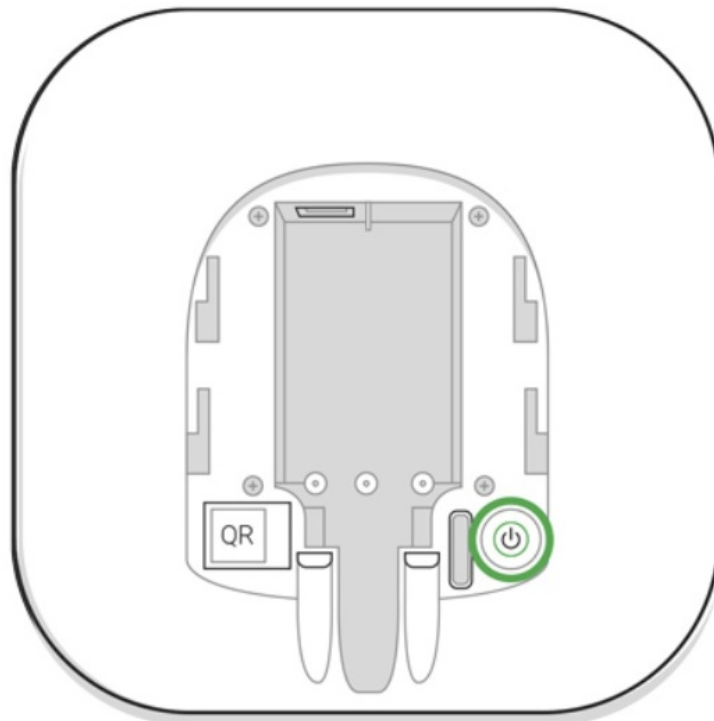

Click Add — the countdown begins.

4. Turn on ReX by pressing the power button for 3 seconds — shortly after connecting to the hub the logo will change its color from red to white within 30 seconds after ReX is switched on.




In order for detection and interfacing to occur, ReX must be located within the radio communication range of the hub (on the same guarded facility).


The request for connection to the hub is transmitted for a short time at the time of switching on the device. If the connection to the hub fails, turn off the extender by pressing the power button for 3 seconds and retry the connection procedure after 5 seconds.


The extender connected to the hub will appear in the list of hub devices in the application. The updating of device statuses in the list depends on the polling time set in the hub settings; the default value is 36 seconds.


Choosing devices for operation via Rex


In order to assign a device to the extender:

1. Go to the ReX settings (Devices → ReX → Settings )
2. Press Pair with the device.
3. Choose the devices that should operate via the extender.
4. Go back to the ReX settings menu.

Once the connection is established, the selected devices will be marked with the  icon in the mobile application.

 ReX does not support pairing with Motion [Cam motion](#) detector with visual alarm verification since the latter uses additional Wings radio protocol.


 A device can only be paired with one ReX. When a device is assigned to a range extender it is automatically disconnected from another connected range extender.

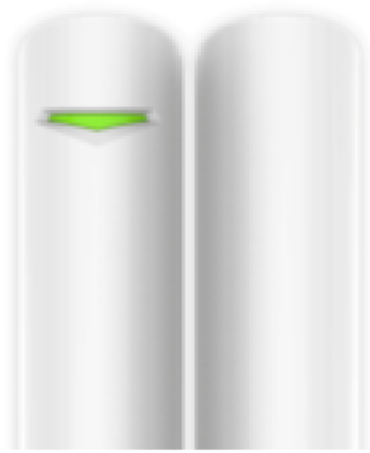

DoorProtect Garage



In order to assign a device to the hub:

1. Go to the ReX settings (Devices → ReX → Settings ).
2. Press Pair with the device.
3. Uncheck the devices that need to be connected to the hub directly.
4. Go back to the ReX settings menu.

ReX states

1.  Devices
2. ReX

Parameter	Value
Jeweler Signal Strength	Signal strength between the hub and ReX
Connection	Connection status between the hub and the extender
Battery Charge	The battery level of the device. Displayed as a percentage How battery charge is displayed in Ajax apps
Lid	Tamper mode reacts to an attempt to detach or violate the integrity of the extender body
External power	Availability of external power
Temporary Deactivation	Shows the status of the device: active, completely disabled by the user, or only notifications about triggering of the device tamper button is disabled
Firmware	ReX firmware version
Device ID	Identifier of the device

ReX settings

1.  Devices
2. ReX

3. Settings

Item	Value
First eld	Device name, can be edited
Room	Selection of a virtual room that the device is assigned to
LED Brightness	Adjusts the brightness of the logo light
Pair with device	Assignment of devices for the extender
Jeweller Signal Strength Test	Signal strength test between the extender and the hub
Temporary Deactivation	<p>Allows the user to disconnect the device without removing it from the system. Two options are available:</p> <ul style="list-style-type: none">• Entirely — the device will not execute the system commands or participate in automation scenarios and the system will ignore the device alarms and other notifications• Lid only — the system will ignore only notifications about the triggering of the device tamper button <p>Learn more about the temporary deactivation of devices Note that the system will ignore only the disabled device. Devices connected via ReX will continue operating normally</p>
User Guide	Opening ReX User Manual
Unpair device	Disconnecting the extender from the hub and deleting its settings

Indication

The ReX LED indicator may light red or white depending on the state of the device.



Event	State of logo with LED indicator
The device is connected to the hub	Constantly lights white
The device lost connection with the hub	Constantly lights red
No external power	Blinks every 10 seconds

Functionality testing

 The functionality testing of the associated to ReX devices will be added to the next updates of OS Malevich.

The Ajax security system allows for conducting tests for checking the functionality of connected devices. The tests do not start straight away but within a period of 36 seconds when using the standard settings. The test time start depending on the settings of the detector scanning period (the paragraph on “Jeweller” in hub settings). You can test the Jeweller signal strength between the range extender and the hub, as well as between the range extender and the device connected to it.

To check the Jeweller signal strength between the range extender and the hub, go to the ReX settings and select the Jeweller Signal Strength Test.

To check the Jeweller signal strength between the range extender and device, go to the settings of the device connected to ReX, and select Jeweller Signal Strength Test.

[Jeweler Signal Strength Test](#)

Device installation

Selection of the installation site

The location of ReX determines its distance from the hub, the devices connected to the extender, and the presence of obstacles preventing the passage of the radio signal: walls, interior bridgings, and large objects located in the facility.



The device was developed only for indoor use.



Check the signal strength at the installation site!

If the signal strength reaches just one bar on the indicator, the stable operation of the security system can not be guaranteed. Take whatever action is necessary to improve the quality of the signal! At the very least, moving ReX or hub — relocation even by 20 cm can significantly improve the reception quality.

Installation procedure

Before installing ReX, be sure to choose the best location that meets the requirements of this guide! It is desirable for the extender to be hidden from direct view.

During mounting and operating, follow the general electrical safety rules when using electrical appliances as well as the requirements of electrical safety laws and regulations.


Device mounting

1. Fix the SmartBracket attachment panel with the bundled screws. If you choose to use other fasteners, make sure that they do not damage or deform the panel.



It is not recommended to use double-sided adhesive tape for installation. This can result in ReX falling which can lead to the malfunctioning of the device.

2. Slide ReX onto the attachment panel. After installation, check the tamper status in the Ajax application and then the panel tightness.
3. In order to ensure higher reliability, fix ReX to the SmartBracket panel with the bundled screws.

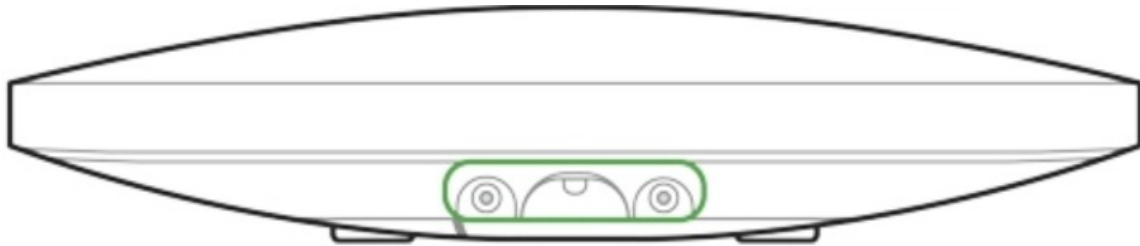

Do not tilt the range extender when attaching vertically (for instance, on a wall).

When properly fixed, the Ajax logo can be read horizontally.

You will receive a notification if an attempt to detach the extender from the surface or remove it from the attachment panel is detected.



It is strictly forbidden to disassemble the device connected to the power supply! Do not use the device with a damaged power cable. Do not disassemble or modify ReX or its individual parts — this may interfere with the normal operation of the device or lead to its failure.

Don't place ReX:

1. Outside the room (outdoors).
2. Near metal objects and mirrors that cause attenuation or screening of radio signals.
3. In rooms characterized by humidity and temperature levels beyond the permissible limits.
4. Close to radio interference sources: less than 1 meter from the router and power cables.

Maintenance of the device

Check the functionality of the Ajax security system regularly.

Clean the body from dust, cobwebs, and other contaminants as they emerge. Use a soft dry napkin suitable for equipment maintenance.

Do not use substances that contain alcohol, acetone, gasoline, or other active solvents to clean the extender.

[How to replace Rex radio signal range extender battery](#)

Tech specs

The maximum number of devices connected to ReX	When using with Hub — 99, Hub 2— 99, Hub Plus — 149, Hub 2 Plus — 199
Max number of connected ReX per hub	Hub — 1, Hub 2 — 5, Hub Plus — 5, Hub 2 Plus — 5
Power supply	110~240 V AC, 50 / 60 Hz
Backup battery	Li-Ion 2 A·h (up to 35 hours of autonomous operation)
Tamper protection	Available
Frequency band	868.0~868.6 MHz
Compatibility	Operates only with Ajax hubs featuring OS Malevich 2.7.1 and later Doesn't support MotionCam
Maximum radio signal power	Up to 25 mW
Radio signal modulation	GFSK
Radio signal range	Up to 1,800 m (any obstacles absent) Learn more
Installation method	Indoors
Operating temperature range	From -10°C to +40°C
Operating humidity	Up to 75%
Overall dimensions	163 × 163 × 36 mm
Weight	330 g
Service life	10 years

[Compliance with standards](#)

Complete set

1. ReX
2. SmartBracket mounting panel
3. Power cable
4. Installation kit
5. Quick Start Guide




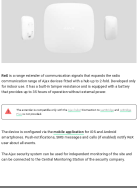
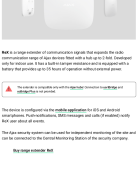
Warranty

Warranty for the “AJAX SYSTEMS MANUFACTURING” LIMITED LIABILITY COMPANY products is valid for 2 years after the purchase and does not apply to the pre-installed accumulator.
If the device does not work correctly, contact the support service rst — technical issues can be resolved remotely in half of the cases!

[The full text of the warranty](#)
[User Agreement](#)

Technical support: support@ajax.systems

Documents / Resources

	<p>AJAX ReX Wireless Signal Repeater [pdf] User Manual ReX, Wireless Signal Repeater, ReX Wireless Signal Repeater, Signal Repeater, Repeater</p>
	<p>AJAX ReX Wireless Signal Repeater [pdf] User Manual ReX, Wireless Signal Repeater, ReX Wireless Signal Repeater, Signal Repeater, Repeater, 18452396</p>
	<p>AJAX ReX Wireless Signal Repeater [pdf] User Manual ReX, Wireless Signal Repeater, Signal Repeater, Wireless Repeater, Repeater, ReX</p>
	<p>AJAX ReX Wireless Signal Repeater [pdf] User Manual ReX Wireless Signal Repeater, ReX, ReX Signal Repeater, Wireless Signal Repeater, Signal Repeater, Repeater</p>
	<p>AJAX ReX Wireless Signal Repeater [pdf] User Manual ReX Wireless Signal Repeater, ReX, Wireless Signal Repeater, Signal Repeater, Repeater</p>

References

- [End user agreement - Ajax Systems](#)
- [How to connect security cameras to the Ajax security system](#)
- [Current product lines of the Ajax security system](#)
- [Current product lines of the Ajax security system](#)

- [!\[\]\(eb702bc9266a6d0f19c969ae9e32edce_img.jpg\) Security system control panels | Ajax Systems](#)
- [!\[\]\(938ccd7be2d6788b713d1f1f94e07b6c_img.jpg\) Security system control panels | Ajax Systems](#)
- [!\[\]\(0ffa2c54816a7127e395fa6c500cefe4_img.jpg\) MotionCam - Motion sensor with photo verification of alarms](#)
- [!\[\]\(e9f6238a2ca12e029476d32aa5fac682_img.jpg\) ocBridge Plus — Module for Ajax devices integration with wired systems](#)
- [!\[\]\(a729d8ba14973ab58e5b3d3086bfaf5c_img.jpg\) ReX — Intelligent radio signal range extender | Ajax Systems](#)
- [!\[\]\(1fb4bc64ce2ce24962362c4d07cd2d51_img.jpg\) uartBridge — Module for Ajax devices integration with third-party wireless alarms systems](#)
- [!\[\]\(35523996a9a06d2db2151e59a6751978_img.jpg\) Jeweller and Wings radio protocols in the Ajax security system](#)
- [!\[\]\(04ca647e77a533dfc9a465096c735fda_img.jpg\) Software | Ajax Systems](#)
- [!\[\]\(f5f8317b8a647da51efe418609833439_img.jpg\) Ajax devices standards compliance list](#)
- [!\[\]\(b6f8b794bbe2f8943bf719941f482d40_img.jpg\) Warranty - Ajax Systems](#)
- [!\[\]\(68ec77745f51b047f358719dbde4544a_img.jpg\) How battery charge is displayed in Ajax apps | Ajax Systems Support](#)
- [!\[\]\(6adba55d49801cbbb9fa0abba681f974_img.jpg\) How to temporarily deactivate a device without removing it from the system | Ajax Systems Support](#)
- [!\[\]\(1d9bbbc54378c145ba1764193b0d0e44_img.jpg\) How to replace Hub battery? | Ajax Systems Support](#)
- [!\[\]\(78d03a41756a7145531ba59058c2c95d_img.jpg\) Jeweller radio protocol: technology and capabilities | Ajax Systems Support](#)
- [!\[\]\(388537467d046c3a0a96bf8193aa53cd_img.jpg\) What is Jeweller Signal Strength Test | Ajax Systems Support](#)