

AKAI ABTS-K5 Portable BT Speaker System User Manual

Home » AKAI » AKAI ABTS-K5 Portable BT Speaker System User Manual



AKAI

MANUAL











ABTS-K5 Portable BT Speaker System

Contents

- **1 SAFETY PRECAUTIONS**
- **2 CHARGER AND BATTERY**
- **3 TECHNICAL SPECIFICATION**
- **4 DESCRIPTION OF REMOTE CONTROL**
- **5 DESCRIPTION OF CONTROLS**
- **6 MICROPHONE CONTROLS AND BASIC OPERATION**
- **7 FUNCTIONS**
- **8 AWS FUNCTION (AKAI WIRELESS STEREO)**
- 9 BLUETOOTH OPERATION
- **10 ACCESSORIES**
- 11 TROUBLE SHOOTING GUIDE
- 12 DISPOSAL OF ELECTRICAL AND ELECTRONIC

EQUIPMENT

13 Documents / Resources

SAFETY PRECAUTIONS

Thank you for purchasing ABTS-K5:

This is your assurance of quality performance and value. Our engineers have included many useful and convenient features in this product. Please be sure to read this instruction Manual completely to make sure you are getting the maximum benefit from each feature.

This product was manufactured using the highest quality components and standards of workmanship.

It was tested by inspectors and found to be in perfect working order before it left our factory.

TO PREVENT FIRE OR SHOCK HAZARD DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. Notes:

- The images appearing in this manual are for reference only.
- Due to continual revision and improvement on our products design and specifications are subject to change without further notice.

CHARGER AND BATTERY


BATTERY CHARGE INDICATOR

LED panel has battery status indicator. In the middle of the shape of the battery has four horizontal lines, each horizontal line represents 25% of electricity remaining.

When no horizontal line in the shape of the battery or the shape flashes, please power of and promptly charge to avoid damage to the battery.

When charging, the battery indicator on LED display panel flashes.

The indicator stops blinking after full charged. Then please continue to charge the battery for 1-2 hours to extend the battery life.

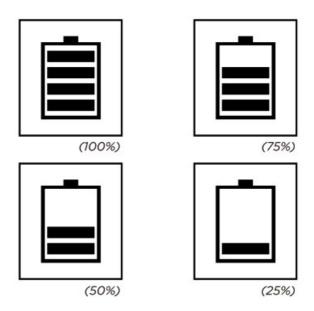

WARNING!


If the battery is under voltage, please fully charge it within 48 hours.

If the speaker has to be left unused for a long time, please let the battery fully charged, otherwise it will cause damage to the battery.

TECHNICAL SPECIFICATION

MODEL	ABTS-KS
Rated Power:	<30W
Input sensitivity:	450+50mV
Battery:	7.4V 4000mAh
• DC 5V IN:	DC 5V
Charging time:	4-6h
Working time:	3-6h
Frequency response:	20Hz-20KHz
• Audio S/N:	271dB
Bluetooth version:	5.0
Bluetooth channel emission power:	2dbm
Bluetooth frequency:	2.4 — 2.483GHz

DESCRIPTION OF REMOTE CONTROL

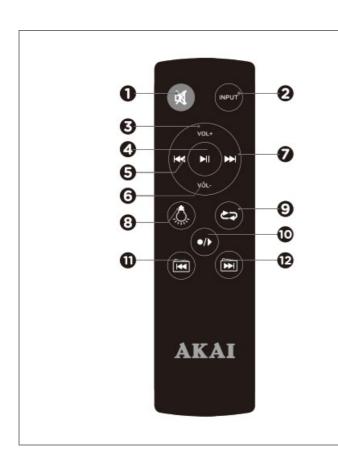

1. mute (14)

Mute or restart the speaker.

2. INPUT (INPUT SELECTION)

Input selection (AUX input / Bluetooth / USB / FM funct

- 3. VOL+ (INCREASE VOLUME)
- 4. PLAY /PAUSE/SCAN (►II)
- 5. Previous (I◀◀)
- 6. VOL-(DECREASE VOLUME)
- 7. NEXT (▶▶I)

8. LED LIGHT CONTROL ()

Turn on the light / change the light mode.

Long press to turn off the light.

9. REPEAT (**△→**)

Repeat one, repeat all, repeat folder.

10. RECORD/PLAY RECORDING (●/▶)

Start recording, long press it to play the recordings.


11. PREVIOUS FOLDER ((|

Change to the previous folder on USB input mode.

12. NEXT FOLDER ()

Change to the next folder on USB input mode.

DESCRIPTION OF CONTROLS

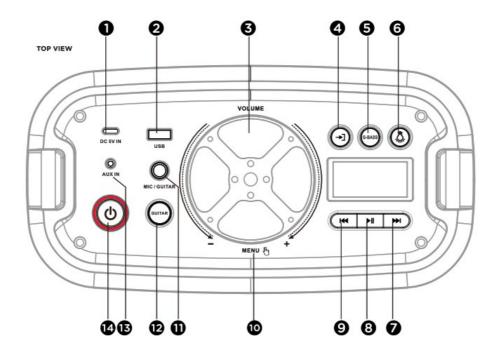

1. DC 5V IN

DC 5V charging interface (for adaptor).

 
- 2. USB PLAY SLOT
- 3. VOLUME
- 4. **INPUT** (→])

With a short press on the button, select the input mode (AUX input / Bluetooth/ USB / FM radio)

5. G-BASS

Super good bass button.

6. LED LIGHT CONTROL (



Short press to change the light mode.

7. NEXT (▶▶I)

8. PLAY / PAUSE / SCAN (|)

9. PREVIOUS (I◀◀)

10. MENU

With a short press on the button, adjust treble / bass / m rophone volume / microphone echo / guitar volume.

11 MIC / GUITAR SLOT

Use to connect the microphone / guitar jack.

12 GUITAR


Press to enter guitar mode.

13 AUX INPUT

14 POWER

MICROPHONE CONTROLS AND BASIC OPERATION

WIRELESS MICROPHONE

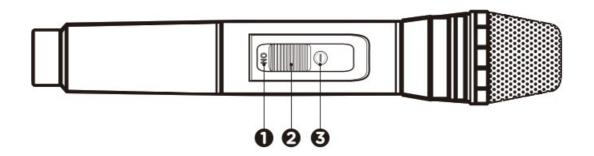

- 1. Microphone ON/OFF
- 2. mute
- 3. LIGHT INDICATOR

Microphone frequency: 201.6 MHz

Channel emission power for wireless microphone: 50mW

FUNCTIONS

RECORDING FUNCTION

Press to record the voice into the external memory like USB disk on the speaker.

If the external memory is first time used, the system will automatically built a new folder named VOICE, and recording files in it will be named RECO01, RECQO2, and so on.

In record mode, press •/ INPUT to stop recording.

Long press •/• to play the recordings in the external memory, press PREV and NEXT to choose the recordings to play.

FM FUNCTION

Choose INPUT to switch to FM RADIO.

Search and tune automatically to radio stations by pressing II on the remote control ro long press the button on the speaker.

Switch channels, by pressing I◀◀ and ▶▶I on the speaker or the remote control.

AWS FUNCTION (AKAI WIRELESS STEREO)

- 1. Select the Bluetooth mode on the 2 speakers you wish to pair.
- 2. The 2 speakers need to be exactly the same in order to pair under AWS mode.
- 3. Select any one of the speakers and long press the "NEXT" button.
- 4. A sound will be heard and the main speaker display will indicate "HOST" confirming that the 2 speakers are now paired.
- 5. The speaker display should indicate "BT".
- 6. To disconnect the AWS function, simply press the "PREVIOUS" button on the main speaker.
- 7. The speaker display should indicate "BT" in a flashing mode.
- 8. Long press the button to completely disconnect the Bluetooth connection with your mobile device.


BLUETOOTH OPERATION


IMPORTANT:

Prior to use Bluetooth function, your speaker should be paired firstly with your Bluetooth device. ("Paring" means establish connection between Bluetooth devices such as MOBILE PHONE, TABLETS, PC, ETC).

- 1. Press the BT MODE button to switch into Se the BT MODE (Bluetooth mode). (fig.1)
- 2. In BT MODE, a sound indication will announce that Bluetooth pairing mode is ready. Then the micro system will search automatically for Bluetooth devices.
- 3. Turn on Bluetooth functionality on your device and make it discoverable (See your device's instructions to add or set up a Bluetooth device).
- 4. Search for Bluetooth equipment: ABTS-KS is your speaker identification. (fig. 2) A sound indication will announce that Bluetooth devices are successfully paired. (During the pairing, if a password is required, you need to input code "O000").

Your Bluetooth device stores the speaker unique identification at the same time.

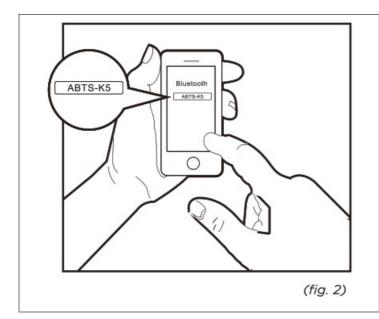

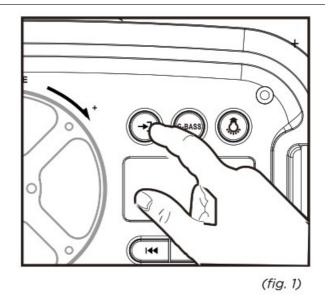

ACCESSORIES

- 1 Charging cable
- 1 remote control
- 1 wireless microphone

TROUBLE SHOOTING GUIDE

If a fault occurs, first check the points listed below before taking the speaker to repair.

Do not open the speaker as there is risk of electric shock.

If you are unable to remedy a problem by following these hints, consult your dealer or service center.

SYMPTM	CAUSE	CORRECTION
Sound		
No sound	No input sound source.	Use a better music signal.
	Volume is too low.	Adjust volume.
Distortion of sound	Volume too high.	Turn down the volume.
	Speaker may be damaged.	If speaker is damaged, repair or replace it.
Karaoke		
Karaoke does not work	Microphone plug is not fully inserted.	Plug microphone properly into the s ocket.
	Microphone switch is not on.	Turn on microphone switch.
	Microphone volume knob is at the lowest position.	Adjust microphone volume properly.
	Wireless microphone has low battery.	Replace battery.
MP3		
MP3 does not play	The song format in the USB disc is incorr ect.	Transform song format into MP3 for mat.
	Improper operation has caused a proces s disorder.	Reboot the machine.
	USB disk is disconnected.	Insert USB disc properly.
Remote control	•	
The remote control does not work properly	The remote control is too far from the unit .	Operate the remote control within a bout 6m.
	There is an obstacle in the path of the re mote control and the unit.	Remote the obstacle.
	The battery in the remote control is exhausted.	Replace the battery with new one.

WARNING!

Under no circumstances should you try to repair the set yourself, as this will invalidate the warranty.

DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

This symbol on the product or packaging means that the product should not be treated as household waste. Do not throw garbage at the end of its life, but take it to a collection center for recycling. in this way you will help to protect the environment and be able to prevent any negative consequences that it would have on the environment and human health.

To find your nearest collection center:

- Contact local authorities
- Access the website: www.mmediu.ro

Request additional information from the store where you purchased the product.

IMPORTATOR: INTERVISION TRADING-RO SRL

Bld.I.C Bratianu, nr. 48-52, corp A, etaj. 5, camera 504-505, oras Pitesti, judet Arges, Romania Cod postal: 110121



EU DECLARATION OF CONFORMITY

№INT 291

We, INTERVISION TRADING RO SRL, default importer (manufacturer), with registered office in Mosoaia Commune, Smeura Village, 8 Fagetului Alley, declare under sole responsibility that the following products:

Brand name: **AKAI**Type: **ABTS-K5**

Descriptions: PORTABLE SPEAKER

Lot: 2301K500XXX

to which this declaration related is in conformity with the essential requirements of the following directives of the Council of the European Communities:

EUROPEAN COMMUNITY DIRECTIVE 2014/53/EU EUROPEAN COMMUNITY DIRECTIVE 2011/65/EU Amd 2015/863/EU

The products are compliant with the following standards:

EN 62368-1:2014 + A11:2017
EN 301 489-1 V2.2.3 : (2019-11)
EN 301 489-1 V3.1.1 : (2017-02)
EN 300 328 V2.2.2 : (2019-07)
EN 303 345-1 V1.1.1 : (2019-06)
EN 303 345-3 V1.1.0 : (2019-11)
EN 300 422-1 V2.1.2 (2017-01)
EN 50663:2017 IEC 62321-3-1: 2014
IEC 62321-6: 2014 ;
IEC 62321-4:2014 + A1:2017 ;
IEC 62321-6: 2015 ;
IEC 62321-7-1: 2015 ;
IEC 62321-7-2: 2017 ;
IEC 62321-8: 2017

Certificate of conformity issued based on the Certificates and test CTL2010097021-W; CTL2010097021-WS; CTL2010097021-WH; CTL2010097021-WE; CTL2010097021-WR and U01602210127602E from Shenzhen

CTL Testing Technology Co., Ltd. Floor .1-A, Baisha Technology Park, No.3011, Shahexi Road, Nanshan District, Shenzhen, China and Shenzhen UONE Test Co., Ltd., Unit B4, Building B4, China Merchants Guangming Science Park, Tourist Road 3009, Guangming New District Shenzhen.

Intervision Trading Ro SRL, Signature:



Printed name and Position:
CIOBANU DORIN — GENERAL MANAGER

Date: December 16", 2022 Place: Pitesti, Romania

Documents / Resources



AKAI ABTS-K5 Portable BT Speaker System [pdf] User Manual

ABTS-K5, ABTS-K5 Portable BT Speaker System, Portable BT Speaker System, ABTS-K5 Portable BT Speaker, Portable BT Speaker, Speaker

Manuals+,