



Akko MOD007PC Wired Keyboard User Manual

[Home](#) » [AKKO](#) » Akko MOD007PC Wired Keyboard User Manual 



Thank you for supporting Akko

To provide you with a better user experience, please read this manual carefully before using the product.

Contents

- [1 Overview](#)
- [2 MOD007PC System Commands \(Windows\)](#)
- [3 MOD007PC System Commands \(Mac\)](#)
- [4 MOD007PC Backlight Settings](#)
- [5 Customization Instruction](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Overview



Packing List



System Requirement

Windows®XP / Vista / 7 / 8 / 10 or higher version

Connectivity Method

Connect the keyboard to your computer by plugging in the USB cable into an available USB port to start using it.

 
Indicator Description

| Status | Indicator Position | Indication Mode |
|----------|--------------------|-----------------|
| Caps | Caps key | Steady White |
| Lock Win | Left Win key | Steady White |

Shortcuts to Adjust Travel Distance

| | |
|------|--|
| Fn+1 | Switch Travel Distance = 2mm |
| Fn+2 | Switch Travel Distance = 0.5mm |
| Fn+3 | Switch Travel Distance = 0.5mm + Ultra Sensitive Mode |
| Fn+4 | Customize switch actuation distance through Akko Cloud Driver (2mm by default) |

MOD007PC HotKeys


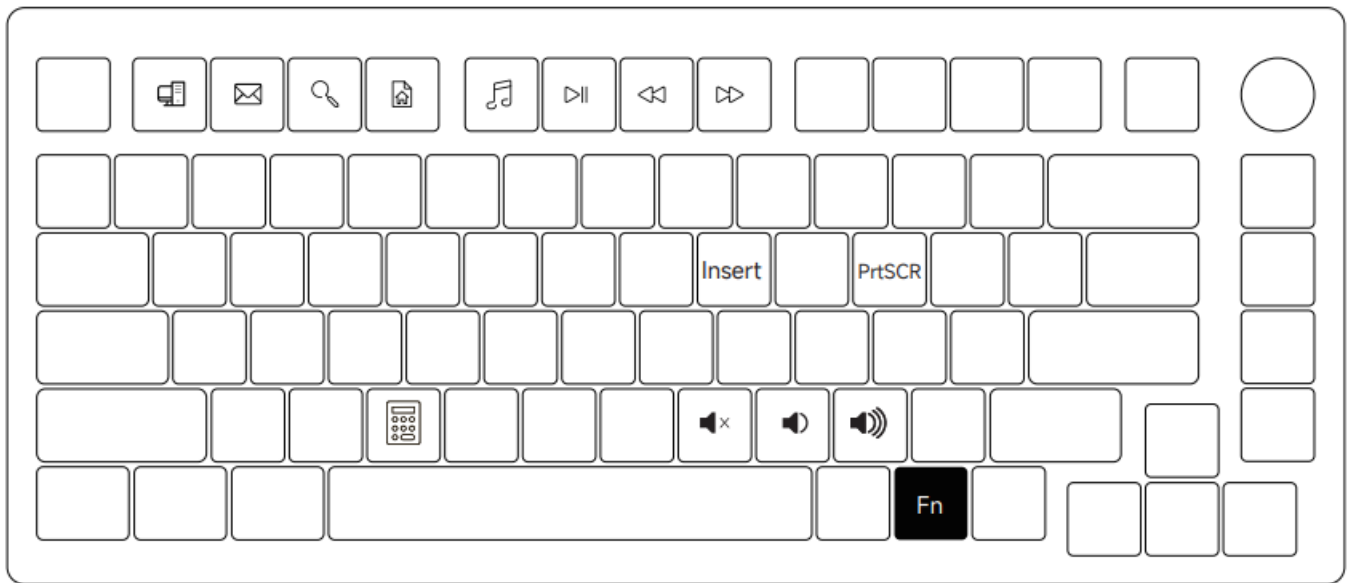


| | | | |
|-----|----|---|-----------------|
| Fn+ | F1 | = | My Computer |
| | F2 | | E-mail |
| | F3 | | Windows Search |
| | F4 | | Browser Homepag |
| | F5 | | Media |

| | | | |
|-----|----|---|----------------|
| Fn+ | F6 | = | Pause/Playback |
| | F7 | | Previous Song |
| | F8 | | Next Song |
| | C | | Calculator |
| | M | | Sound off |

| | | | |
|-----|---|---|-----------------------------|
| Fn+ | < | = | Decrease Volume |
| | > | | Increase Volume |
| | P | | Print SCR |
| | I | | Insert |
| | w | | Swap W A S D with ↑↓ ← → |

  MOD007PC System Commands (Windows)

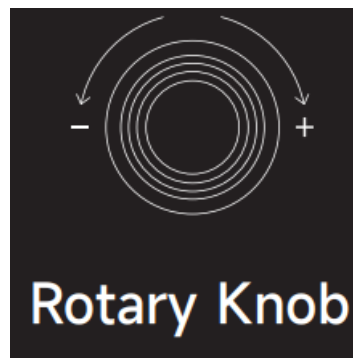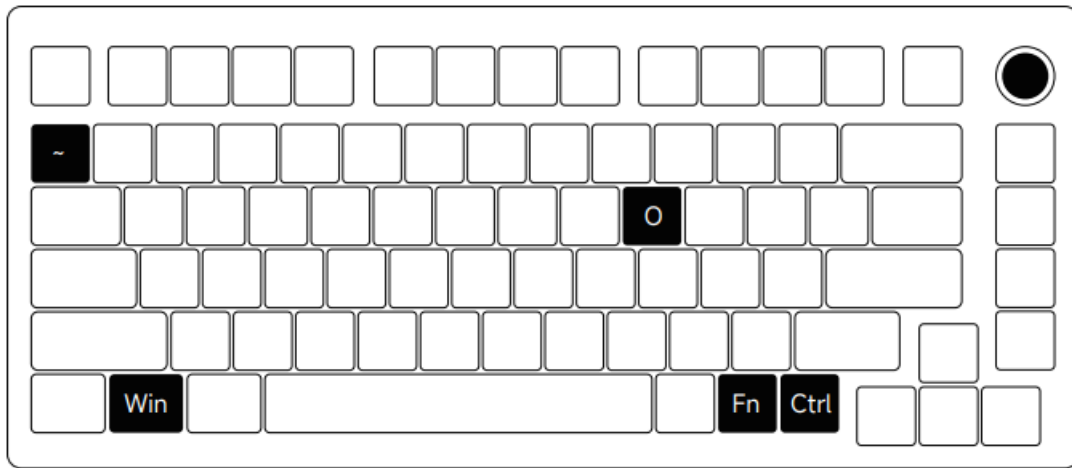

Default is volume function;

Rotate counterclockwise to decrease the volume; Rotate clockwise to increase the volume.

Press the middle to switch to brightness function;

Rotate counterclockwise to decrease brightness;

Rotate clockwise to increase brightness.

Lock Windows Key

Press Fn and

Left Win Key

Hold down Fn and

press ~ Key for 5S Restore Factory Settings

 
Revert Ctrl into Menu Key (Memorable)

Hold down Fn and press Right Ctrl Key for 3S

Win System  Mac System


Hold down Fn and press O Key for 3S

MOD007PC System Commands (Mac)

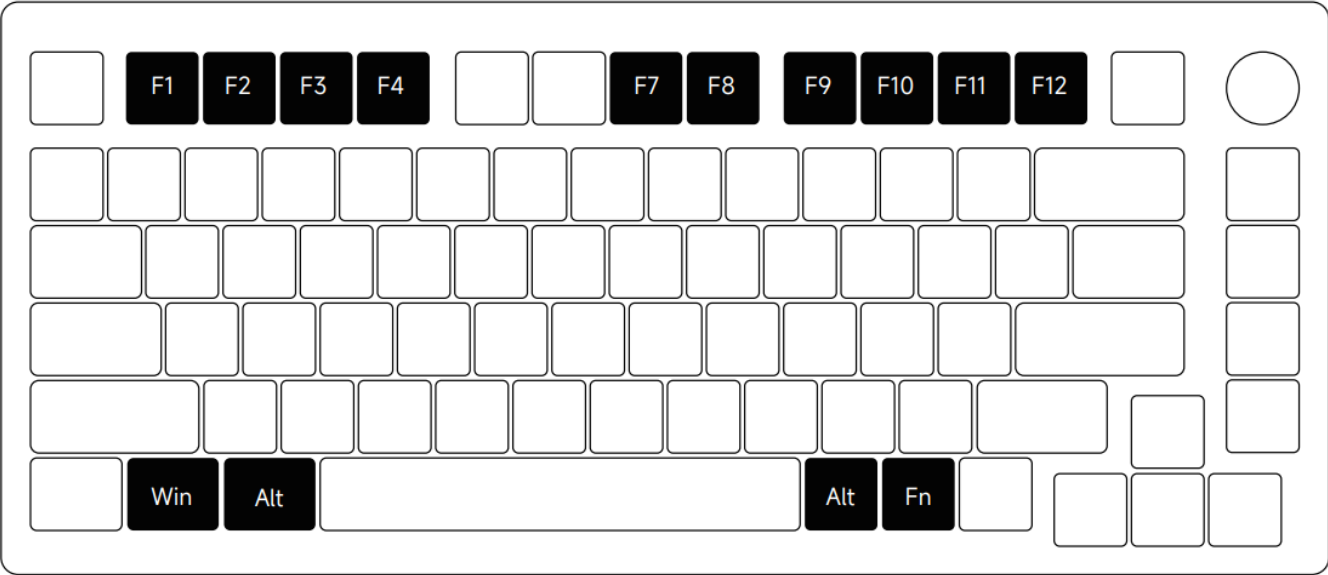

| | | | | | |
|-----------|-----------------------------|--------------|----------------------|----------|-----------------|
| F1 | Decrease display brightness | F7 | Skip back (Audio) | F11 | Decrease Volume |
| F2 | Increase display brightness | F8 | Pause/Play (Audio) | F12 | Increase Volume |
| F3 | Open mission control | F9 | Skip forward (Audio) | Left Win | Option |
| F4 | Activate Siri | F10 | Mute | Left Alt | Command |
| Right Alt | Command | Fn + (F1~12) | F1 F12 | | |

 MOD007PC Backlight Settings

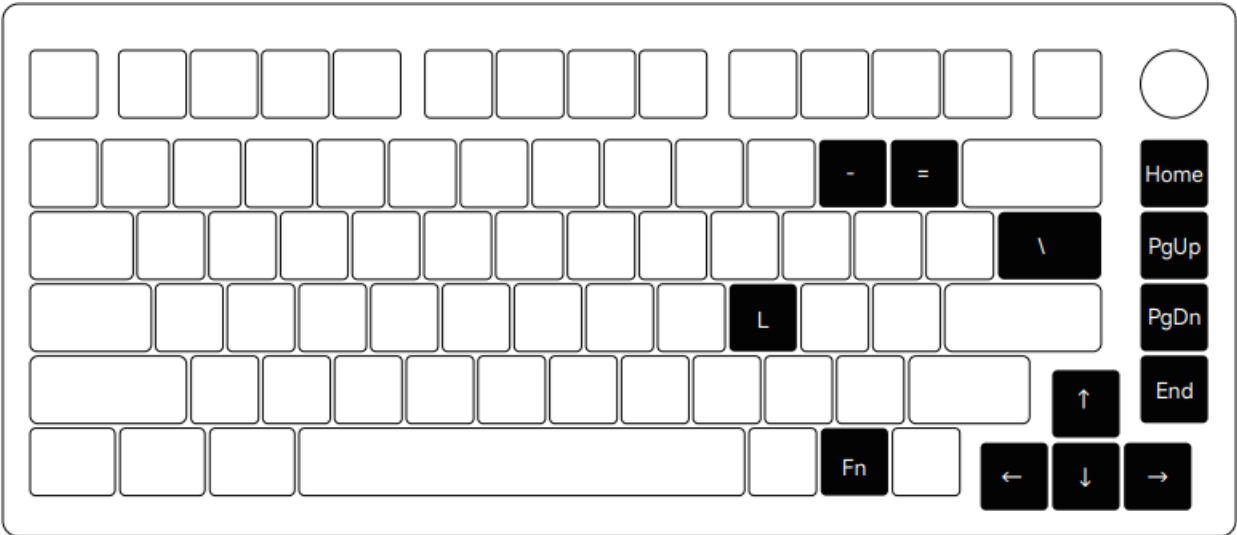

| | |
|---------|---|
| Fn+ | Slower Animation |
| Fn+= | Faster Animation |
| Fn+L | Light On / Off |
| Fn+↑ | Bright |
| Fn+↓ | Dim |
| Fn+← | Set Animation Direction to Left |
| Fn+→ | Set Animation Direction to Right |
| Fn+Home | Effect1 Effect2 Effect3 Effect4 Effect5 |
| Fn+PgUp | Effect6 Effect7 Effect8 Effect9 Effect10 |
| Fn+End | Effect11 Effect12 Effect13 Effect14 Effect15 |
| Fn+PgDn | Effect16 Effect17 Effect18 Effect19 Effect20 |
| Fn+\ | In all lighting effects with RGB colormode, Set the backlight color to 7 single color with RGB loop effect. |

Customization Instruction

1. The key/lighting effects customization can be programmed with Akko Cloud Driver
2. The lighting effects can also achieve music rhythm effects with Akko Cloud Driver
3. Please download the Akko Cloud Driver on our website
4. Users can download the driver via en.akkogear.com

Akko Warranty and Service Statement

1. Akko provides One-Year warranty for customers in mainland China. For other regions, please contact your seller (Akko distributor) for specific warranty policy.
2. If the warranty window expires, customers need to pay for repairs. Akko will also provide instructions if users prefer to repair the keyboard by themselves.
However, users shall take full responsibility for any loss happened during self-repair.
3. Disassembling the keyboard without manufacturer/seller's instruction will immediately void the warranty.
4. The return and warranty policy may vary in different platforms and are subject to the specific distributor at the time of purchase.




Company: Shenzhen Yinchon Technology Co., Ltd

Address: 33 Langbi Rd, Bitou Community 1st Industrial Zone, Bao'an District, Shenzhen, China


Tel: 0755-23216420

Website: www.akkogear.com

Origin: Shenzhen, China


| | |
|---|---|
|  | instagram.com/akkogear |
|  | facebook.com/akkogear |
|  | tiktok.com/@akkogear |

Precautions Man-made damage is not limited to immersion, falling off, and pulling off the wires with excessive forces, etc.

 **WARNING:** Water and Beverages can't be poured into the Keyboard.



 Made in China

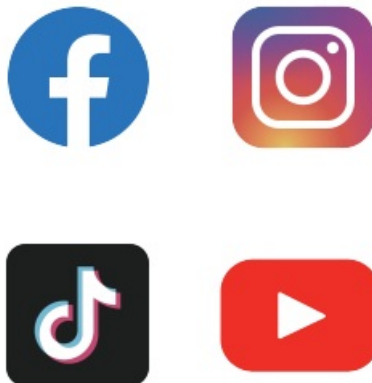

@akkogear



<http://weixin.qq.com/r/aDtOVoxE6tiVrcE19256>

<http://qr.weibo.cn/g/49ssmq>

Documents / Resources



[Akko MOD007PC Wired Keyboard](#) [pdf] User Manual
MOD007PC Wired Keyboard, MOD007PC, Wired Keyboard, Keyboard

References

- [User Manual](#)