


MU02 ISO
Tri Mode
Mechanical
Keyboard



Akko MU02 ISO Tri Mode Mechanical Keyboard User Manual

[Home](#) » [AKKO](#) » Akko MU02 ISO Tri Mode Mechanical Keyboard User Manual 

Contents

- [1 Akko MU02 ISO Tri Mode Mechanical Keyboard](#)
- [2 Packing List](#)
- [3 Key/Lighting Effects Customization Instruction](#)
- [4 AKKO Warranty and Service Statement](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



 
 
Akko MU02 ISO Tri Mode Mechanical Keyboard



Thank you for supporting Akko

To provide you with a better user experience, please read this manual carefully before using the product.

Packing List

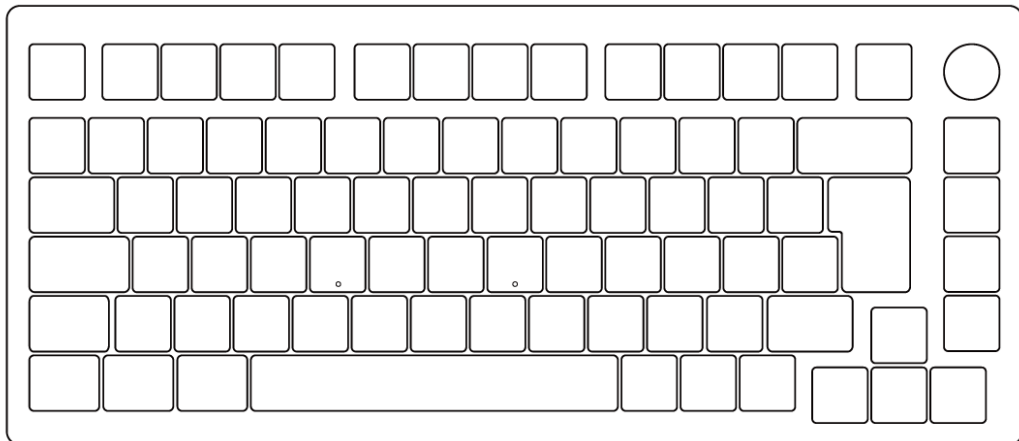

System Requirement

Windows®XP / Vista / 7 / 8 / 10 or higher version


Connectivity Method

Connect the keyboard to your computer by plugging in the USB cable into an available USB port to start using it.

LED Indicators

Status	Indicator	Re-Connecting	Pairing	Connected
Bluetooth device 1	LED for Key E	Blue light blinks slowly	Blue light blinks fast	Blue light stays on for 2 seconds and then turns off
Bluetooth device 2	LED for Key R	Blue light blinks slowly	Blue light blinks fast	Blue light stays on for 2 seconds and then turns off
Bluetooth device 3	LED for Key T	Blue light blinks slowly	Blue light blinks fast	Blue light stays on for 2 seconds and then turns off
2.4G wireless device	LED for Key Y	Green light blinks slowly	Green light blinks fast	Green light stays on for 2 seconds and then turns off
Wired mode	LED for Key U	N/A	N/A	White light stays on for 2 seconds and then turns off
Status	Indicator	Indicating Mode		
Low Battery	Independent LED Indicator (Rechts von Leertaste)	Green light blinks slowly		
Charging		Steady green		
Fully Charged		LED off		
Caps	LED for Caps Key	Steady white		
Lock Win	LED for left Win Key	Steady white		

 MU02 ISO Hotkeys

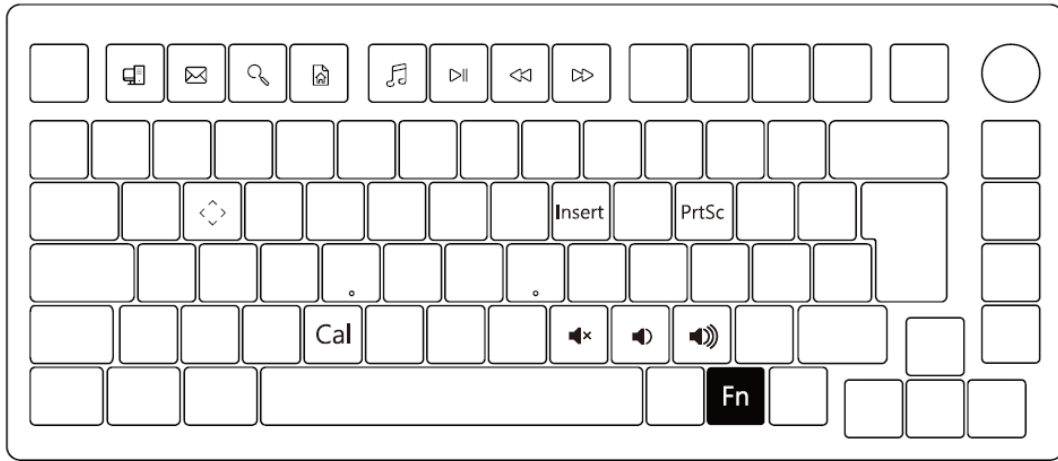


Fn+	F1		My Computer
	F2		E-mail
	F3	=	Windows Search
	F4		Browser Homepage
	F5		Multimedia Player

Fn+	F6		Play/Pause
	F7		Previous Song
	F8	=	Next Song
	P		Print SCR
	C		Calculator

Fn+	I		Insert
	M		Mute
	,	=	Decrease Volume
	.		Increase Volume
	W		Swap WASD with ↑ ↓ ← →

 MU02 ISO System Commands (Windows)

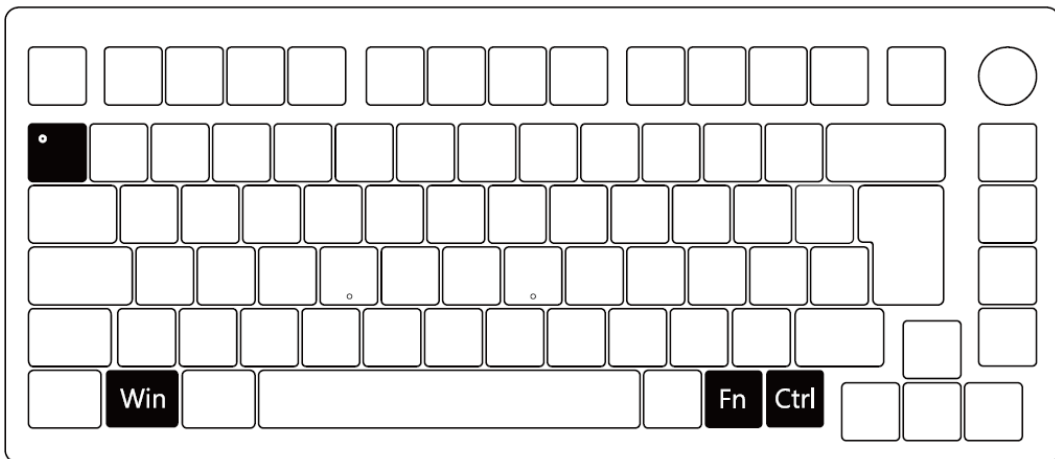

- **Lock Window Key**

Press Fn and left Win key.

 
- **Restore Factory Setting**

Hold down Fn and press • Key for 5s.

- **Revert Ctrl into Menu Key**

Hold down Fn and press right Ctrl for 3s.


MU02 ISO System Commands(Mac)

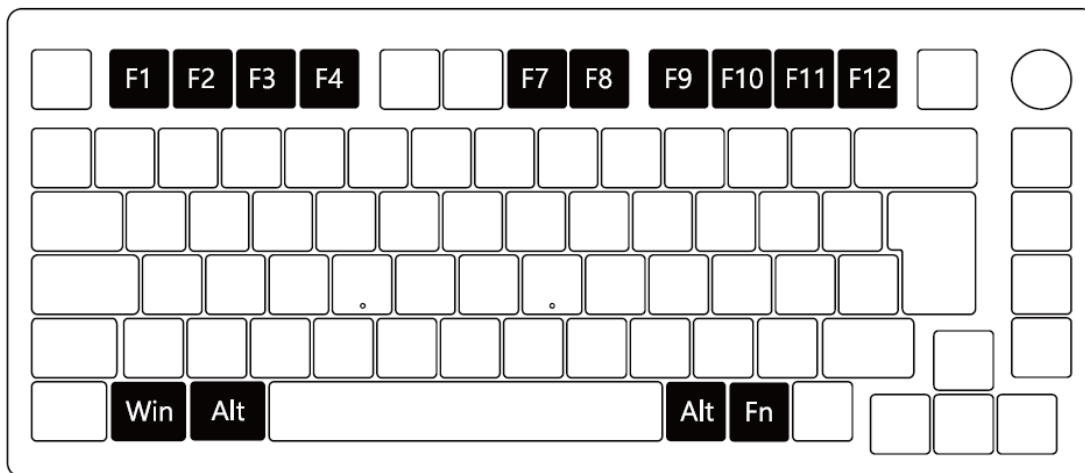

F1	Decrease display brightness
F2	Increase display brightness
F3	Open mission control
F4	Activate Siri
F7	Skip back (Audio)

F8	Pause/Play (Audio)
F9	Skip forward (Audio)
F10	Mute
F11	Volume down
F12	Volume up

 
MU02 ISO Backlight Settings

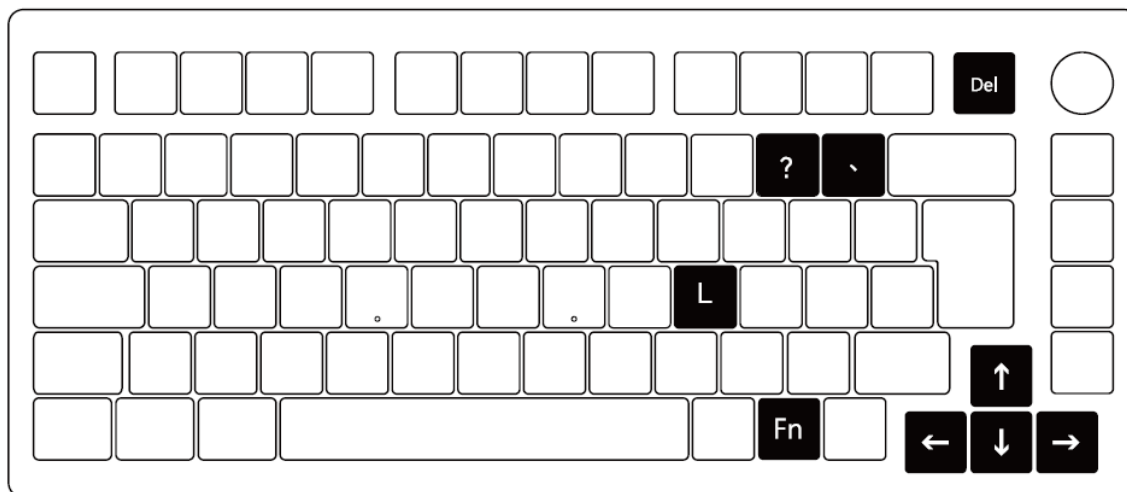

Fn+	?	=	Slower Animation
	`		Faster Animation
	↑		Bright
	↓		Dim

Fn+	←	=	Switch LED Backlight
	→		
	L		Light Off/On
	Del		Effect 1-16

 MU02 ISO Wireless/Wired Connection Guide

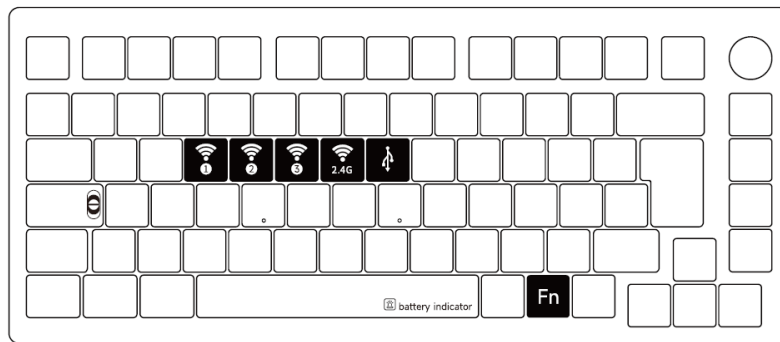

Fn+	E	=	Bluetooth Device 1
	R		Bluetooth Device 2
	T		Bluetooth Device 3
	Z		2.4G Wireless Device
	U		Wired Mode

<p>The switch is located under the CAPS key</p>	Top: Mac (built-in power supply on)
	Middle: Default Windows (built-in power supply off)
	Bottom: Windows (built-in power supply on)

Bluetooth Pairing

After turning on the keyboard, press Fn + E/R/T to enter Bluetooth mode. Press and hold the Fn+E/R/T combination keys for 3 seconds to put the keyboard in pairing mode, with the blue indicator light flashing quickly. Once the connection is established, the indicator light will stay on for 2 seconds. If the device fails to connect, the indicator light will turn off and the keyboard will enter sleep mode.

2.4G Pairing

After turning on the keyboard, press Fn + Y to enter 2.4G mode. Then press and hold the Fn +Y combination key for 3 seconds to enter pairing mode. Then insert the receiver, and the green indicator light will flash quickly. Once the pairing is successful, the LED indicator will stay on for 2 seconds. If no available device is found within 30 seconds, the LED indicator will turn off and the keyboard will enter sleep mode.

Battery Level Check

In wireless mode, please press Fn+Spacebar combinaton keys to check the battery level. If the battery level is less than 30%, the 1-2 keys will light up red. If the battery level is less than 100%, the 1-9 keys will light up green, and if the battery level is full, the 1-0 keys will light up green .

1	2	3	4	5	6	7	8	9	0
Low 30%		Low 40%	Low 50%	Low 60%	Low 70%	Low 80%	Low 90%	Low 100%	Full
Red light		Green light							

Note the LED Indicator os located under the spacebar. To check the battery level, please make sure

1. the keyboard is in wireless mode <D the RGB mode is turned on.

Key/Lighting Effects Customization Instruction

Option 1:

A deeper level of customization for the keyboard keys and lighting requires the use of the web-based driver. Akko official web-based driver address: <https://lakko.hsgaming.cn>

Option 2:

VIA is a widely recognized software that offers an intuitive interface for configuring and personalizing various keyboard settings. Users can utilize VIA to remap keys and adjust lighting on keyboards.

Web Version: <https://usevia.app/>

App: <https://github.com/the-via/releases/releases>

It enables you to remap keys, create custom macros, customize lighting effects, and more. If you encounter connection issues, please load the corresponding JSON file specific to your keyboard model. You can download JSON files from our dedicated Download page:

<https://akkogear.eu/pages/download-center>

AKKO Warranty and Service Statement

1. Akko provides One-Year warranty for customers in mainland China. For other regions, please contact your seller (Akko distributor) for specific warranty policy.
2. If the warranty window expires, customers need to pay for repairs. Akko will also provide instructions if users prefer to repair the keyboard by themselves. However, users shall take full responsibility for any loss happened during self-repair.
3. Defects resulting from disassembly of our product, improper usage and incorrect installation are not covered by warranty.
4. The return and warranty policy may vary in different platforms and are subject to the specific distributor at the time of purchase.


Company: Shenzhen Yinchen Technology Co., Ltd

Address: 33 Langbi Rd, Bitou Community 1st Industrial Zone, Bao'an District, Shenzhen, China Tel: 0755-23216420

Website: www.akkogear.eu

Origin: Shenzhen, China.

Documents / Resources

	<p>Akko MU02 ISO Tri Mode Mechanical Keyboard [pdf] User Manual MU02 ISO, MU02 ISO Tri Mode Mechanical Keyboard, Tri Mode Mechanical Keyboard, Mechanical Keyboard, Keyboard</p>
---	--

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.