

Akko SPR75 Wired Keyboard User Manual

Home » AKKO » Akko SPR75 Wired Keyboard User Manual 🖫



Thank you for supporting Akko


To provide you with a better user experience, please read this manual carefully before using the product.

Contents

- 1 Packing List
- 2 SPR75 Hotkeys
- 3 SPR75 System Commands (Mac)
- 4 Key/Lighting Effects Customization Instruction
- **5 Akko Warranty and Service Statement**
- 6 Documents / Resources
- 6.1 References

Packing List



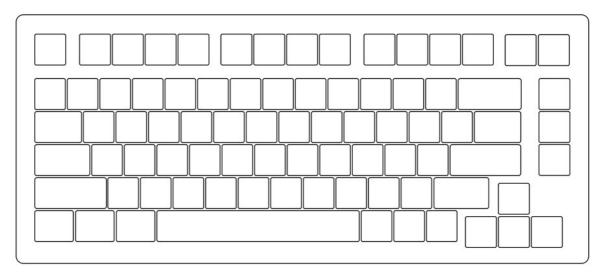


System Requirement

Windows®xP / Vista / 7 / 8 / 10 or higher version

Connectivity Method


Plug the keyboard USB cable into the USB port of your computer and start using it.

SPR75 System Commands (Windows)

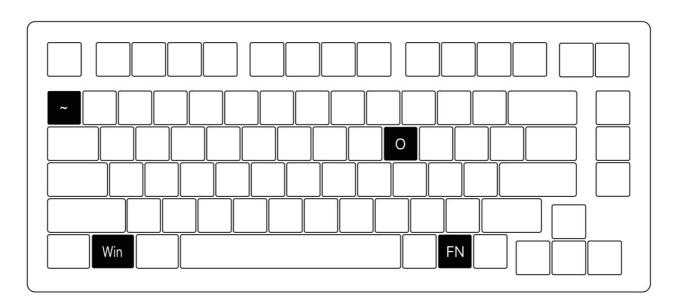


Lock Windows Key	Restore Factory Settings	
FN + Win_L	Hold FN + ~ 5s	

SPR75 Hotkeys

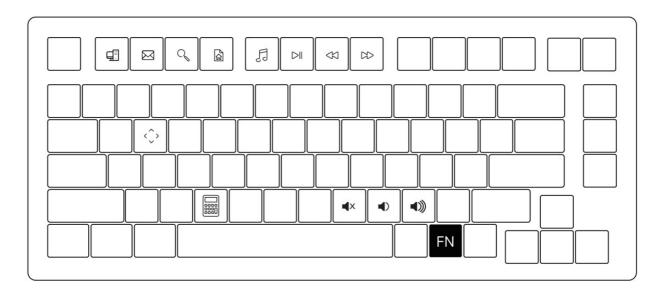

FN+	F1	=	My computer
	F2		E-mail
	F3		Windows search
	F4		Browser homepage
	F5		Multimedia player
	F6		Play/Pause
	F7		Previous song
	F8		Next song
	W		SwapWASD with $\uparrow\downarrow\leftarrow\rightarrow$)
	С		Calculator
	М		Mute
	<		Decrease Volume
	>		Increase Volume

SPR75 System Commands (Mac)

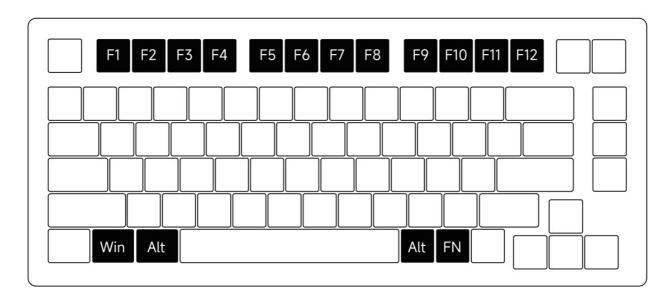

F1	Decrease display brightness	F7	Skip back (Audio)	F11	Decrease volume
F2	Increase display brightness	F8	Pause/Play (Audio)	F12	Increase volume
F3	Open mission control	F9	Skip forward (Audio)	Win_L	Option_L
F4	Activate siri	F10	Mute	Alt_L	Command_L
FN+(F1~F12)		F1 ~ F12		Alt _R	Command_R

Key/Lighting Effects Customization Instruction

- 1. The key/lighting effects customization must be completed in wired mode with Akko driver.
- 2. Please download the Akko Cloud driver on our website.
- 3. Users can download the driver via en.akkogear.com

Akko Warranty and Service Statement

- 1. Akko offers a One-Year warranty for customers in mainland China. For other regions, please contact your seller (Akko distributor) for specific warranty details.
- If the warranty period expires, customers are responsible for repair costs.
 Akko provides instructions for self-repair if preferred, but users assume full responsibility for any losses incurred during the process.
- 3. Disassembling the keyboard without manufacturer/seller's instruction will void the warranty immediately.
- 4. Return and warranty policies may vary across platforms and are subject to the specific distributor's terms at the time of purchase.

Company: Shenzhen Yinchen Technology Co., Ltd

Address: 33 Langbi Rd, Bitou Community 1st Industrial Zone, Bao'an District, Shenzhen, China

Tel: 0755-23216420

Website: en.akkogear.com Origin: Shenzhen, China



Water and Beverages can't be poured into the Keyboard.



Precautions Man-made damage is not limited to immersion, falling off, and pulling off the wires with excessive forces, etc.





Documents / Resources



Akko SPR75 Wired Keyboard [pdf] User Manual SPR75 Wired Keyboard, SPR75, Wired Keyboard, Keyboard

References

User Manual

Manuals+, Privacy Policy