

[Skip to content](#)

Manuals+

User Manuals Simplified.



Akuvox IT88S 10 Inch Smart Intercom Panel User Guide

[Home](#) » [Akuvox](#) » Akuvox IT88S 10 Inch Smart Intercom Panel User Guide

Contents [hide](#)

[1 Akuvox IT88S 10 Inch Smart Intercom Panel](#)

[2 Unpacking](#)

[3 Product Overview](#)

[4 Installation](#)

[5 Device Wiring](#)

[6 Application Network Topology](#)

[7 Configuration](#)

[8 Operation](#)

[9 Documents / Resources](#)

[10 Related Posts](#)





Akuvox IT88S 10 Inch Smart Intercom Panel




Unpacking

Before you begin using the device, please check the version you got and ensure that the following items are included in the shipped box:

- Plastic wall anchor x 4
- M3x6 cross head screw x 1
- 11-Pin cable x 1

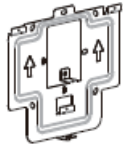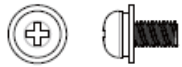

- Wall-mounting bracket x 1
- ST 4x20 cross head screw x 4
- M3x10.5 hex socket screw x 1
- 10-Pin cable x 1

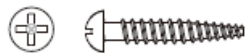


- M4x30 cross head screw x 4
- Diode x 2
- Allen wrench x 1



- IT88X x 1

Product Overview


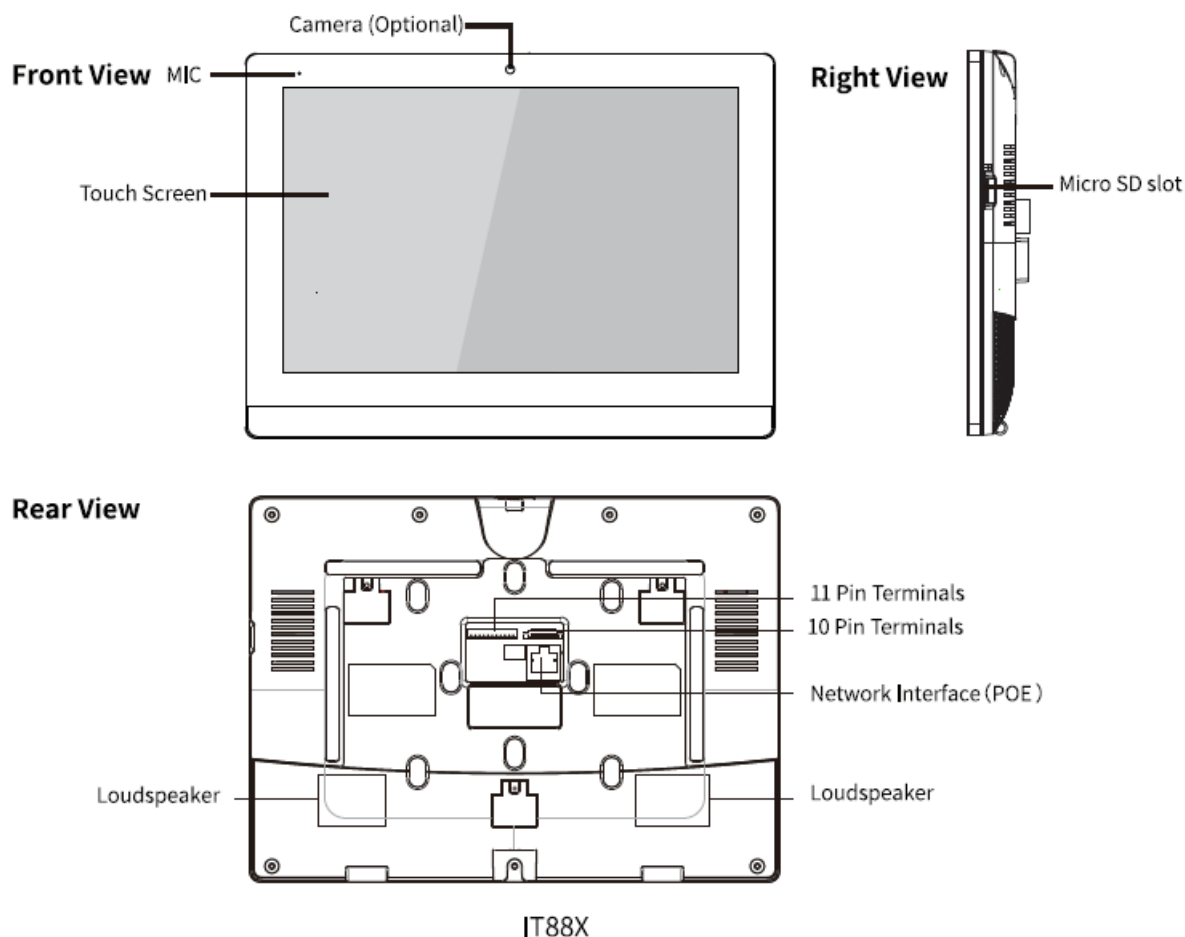


Installation



Step 1: Wall-mounting Bracket Installation

Without an embedded box in the wall




1. According to the position of the cable in the wall, dig out a square hole (height*width*depth=66*50 *50mm) that can accommodate all cables.
2. Align the square hole of the wall-mounting bracket with the hole dug out before, then mark the four fixation holes through wall-mounting bracket on the wall.

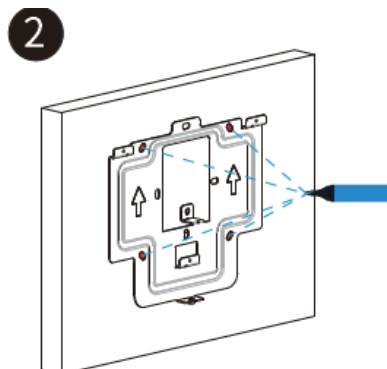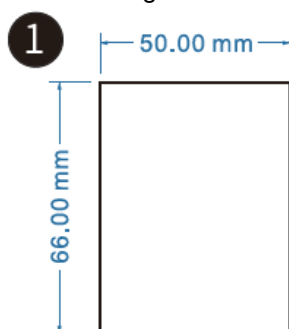

3. Take down the wall-mounting bracket, then using a 6mm hand drill to make the four fixation holes on the wall which marked before.
4. Once the fixing holes were made, insert four plastic wall anchors.

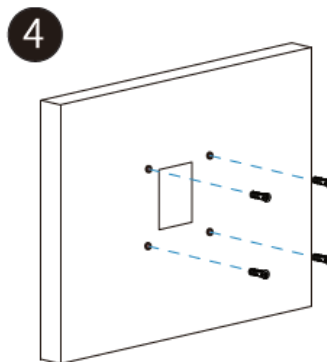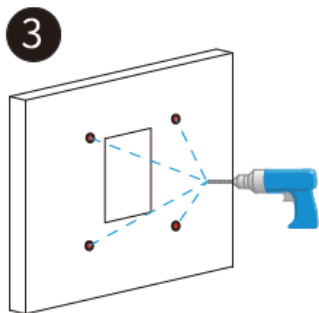

5. Twist M3x10.5 hex socket screw into the bottom hole of the wall-mounting bracket until the tail of which aligns with the edge. Then fix the wall-mounting bracket on the wall with four ST4x20 crosshead screws. If there is a ground wire to be connected, please use M3x6 crosshead screw to fix it on the wall-mounting bracket.

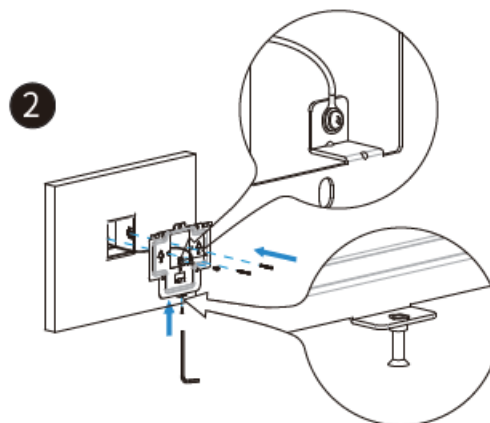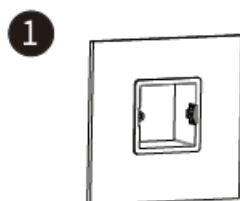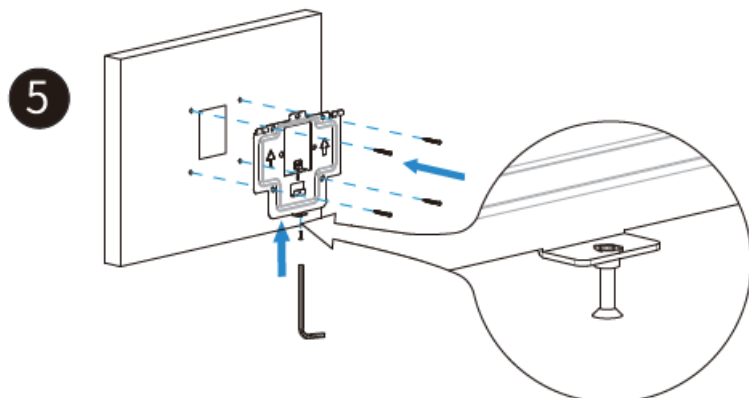


With embedded box in the wall


Twist the M3x10.5 hex socket screw into the bottom hole of the wall-mounting bracket until the tail of which aligns with the edge. Then fix the wall-mounting bracket on the wall with two M4x30 crosshead screws. If there is a ground wire to be connected, use an M3x6 crosshead screw to fix it on the wall-mounting bracket.

Step 2: Device Mounting

1. Connect the cables to device.

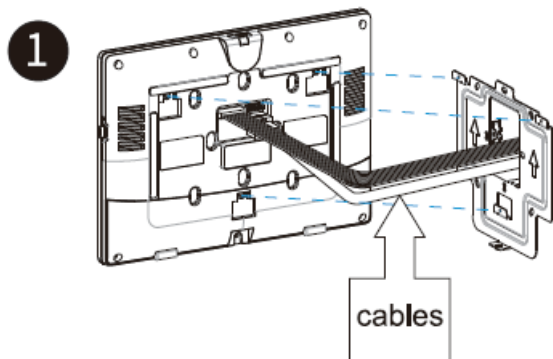


2. Push down to fix the device securely. Tighten the M3x10.5 hex socket screw on the device with alien wrench.

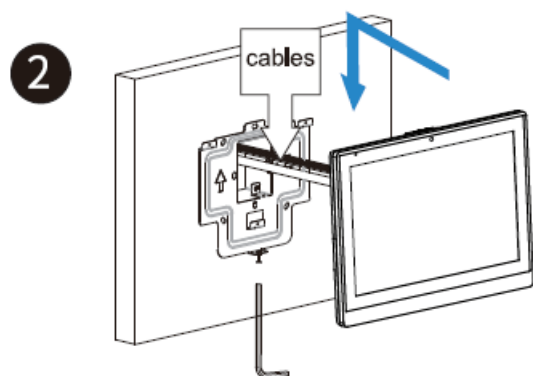


Device Wiring

Warning


When you connect a device containing a coil, such as a relay or an electromagnetic lock, it is necessary to protect the intercom against voltage peak while switching off the induction load. For this way of protection, we recommend e a

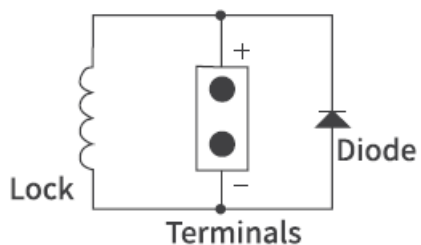

diode Lock

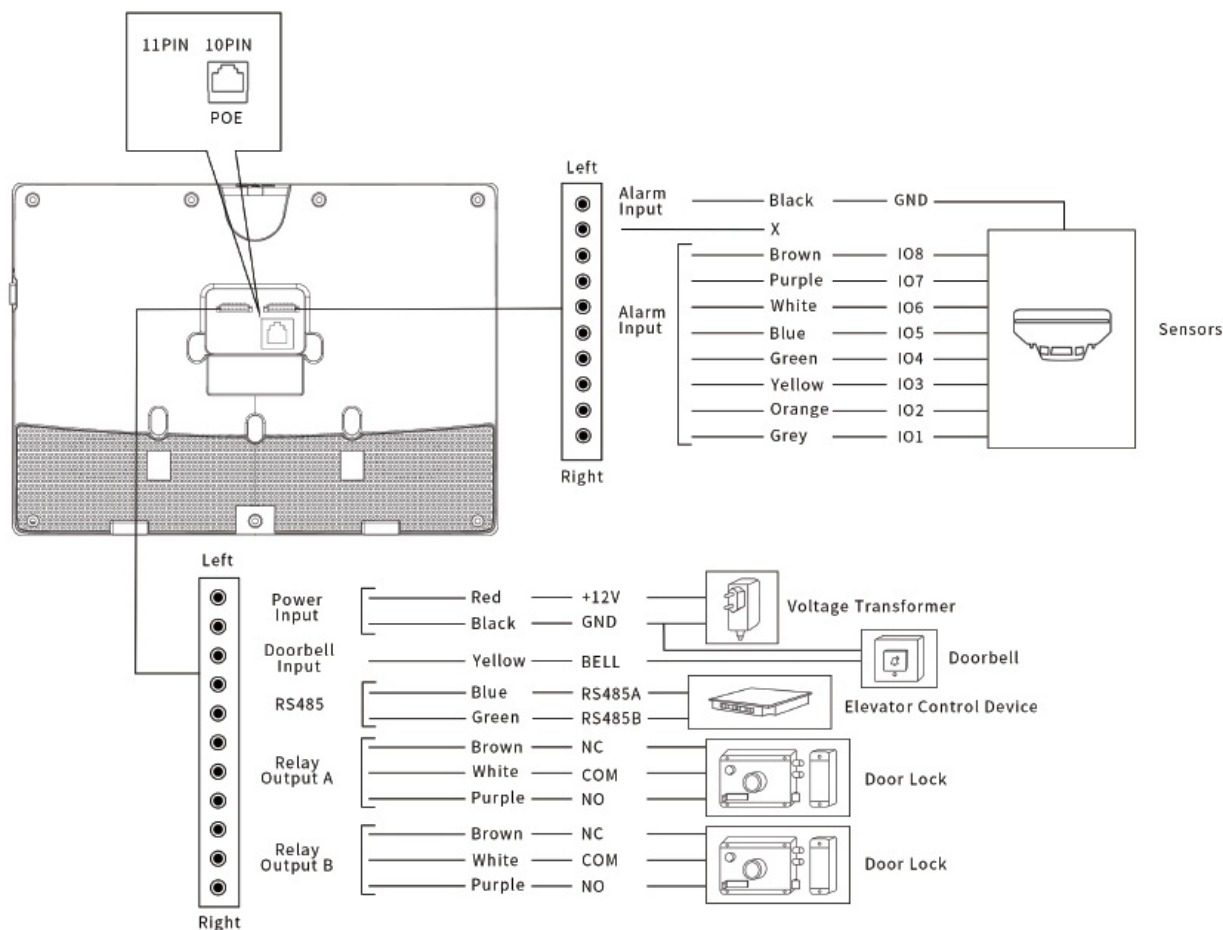

Application Network Topology

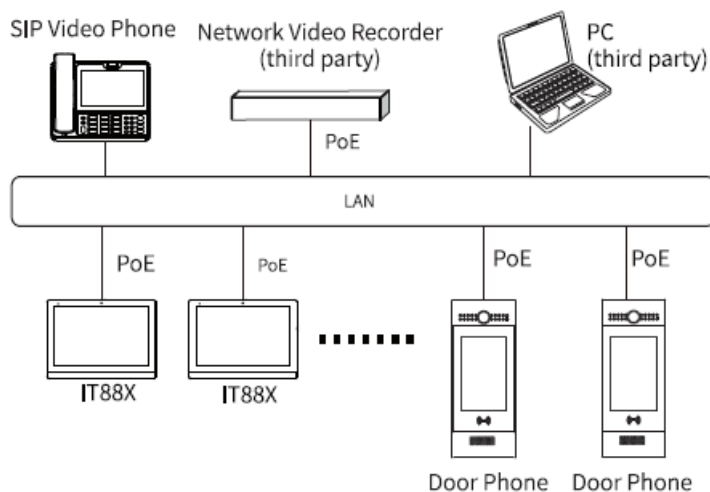

Configuration



1. Access basic information: After setting up network and power, enter Setting> System Info to check Account, Network, Version status.
2. Access the Website: Launch a browser and type in the IP address then enter the username and password to login (user name/password: ad min /ad min by default).
3. Account Registration: On web UI, go to the path: Account> Basic page to fill in the account information, click Submit to confirm (Please refer to user manual for more information).

Operation

Make a call:

Enter the callee's number or room address, then press the Dial icon to make an audio call or press the Video icon to make a video call. Press the Dial icon to hang up.

Receive a call:

Press the  icon to pick up the incoming call in video or press  icon to pick up the call in audio mode.

Unlock:

During the talk, you can press Unlock icon on the talking interface to unlock the door.

Monitor:

Press the Monitor icon to receive the video from the door phone or from third-party devices.

Notice Information

Information contained in this document is believed to be accurate and reliable at the time of printing. This document is subject to change without notice, any update to this document can be viewed on Akuvox's website:


© Copyright 2022 Akuvox Ltd. All rights reserved.

AKUVOX (XIAMEN) NETWORKS CO., LTD.

ADD: 10/F, NO.56 GUAN RI ROAD, SOFTWARE PARK 11, XIAMEN 361009, CHINA

www.akuvox.com

Documents / Resources

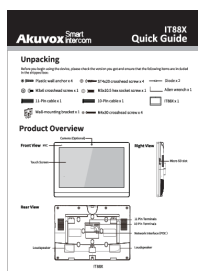

[Akuvox IT88S 10 Inch Smart Intercom Panel](#) [pdf] User Guide

IT88S, IT88S 10 Inch Smart Intercom Panel, 10 Inch Smart Intercom Panel, Smart Intercom Panel, Intercom Panel, Panel

[Manuals+](#),

- [home](#)
- [privacy](#)