



Alcatel F685 Smart Call Block User Guide

[Home](#) » [Alcatel](#) » Alcatel F685 Smart Call Block User Guide 

Alcatel F685 Smart Call Block User Guide



The Call Blocking's operation is described on a separate sheet attached

Contents

- 1 BEFORE 1st USE
- 2 Display icons
- 3 Using the Phone
- 4 Phonebook settings: 100 entries
- 5 General settings
- 6 TROUBLESHOOTING
- 7 SAFETY
- 8 ENVIRONMENT
- 9 CONFORMITY
- 10 Documents / Resources
- 11 Related Posts

BEFORE 1st USE

Connecting your phone


- Connect plugs in corresponding sockets in the base station. Plug the telephone line into telephone socket and insert power plug in an electrical outlet.
- Insert batteries in Handset
Before you start to use your telephone, charge batteries continuously for 15 hours.










Use only plug adapter and rechargeable batteries supplied with your phone.

Handset / Base Station Keys













1. **OK/Menu key**
2. **key* *** To block calls, it is necessary to subscribe to the Calling Number Presentation service. Contact your landline operator. In standby mode: Direct access to the Call blocking menu
3. **3 & 4. Navigation key**
4. **3 & 4. Navigation key**
5. **Hang-up/Exit key**
6. **MI, M2 keys**
7. **Star key**
 - Long press 0 key
 - Recall (flash) to access to operator services*
8. Talk key / Loudspeaker
9. Back/Mute/Intercom key
10. Paging key – To locate handset / to start registration procedure.
Subject to subscription and availability of the service from the fixed line operator.

Display icons

-  Indicates that the Call Blocking function is activated. (See the attached Call Blocking addendum) CM

-  Indicates battery is fully charged.
-  Indicates battery is fully discharged.
-  Indicates that an external call is connected or held. Icon blinks when receiving an incoming call.
-  Indicates you have a new voice mail message*.
-  Indicates you have new missed calls*
-  Displays when the alarm clock is activated.
-  Displays when handsfree is activated.
-  Displays when ringer volume is turned off.
-  Indicates that the handset is registered and within range of the base station. Icon disappears when the handset is out of range or is searching for a base.

Set language and flashtime to operate correctly on your network:

- OK MENU /  or  select REGL. COMB / OK MENU /  or  select LANGUAGE/ OK MENU /  or  select your desired language/ OK MENU
- OK MENU /  or  select |BS SETTING / OK MENU /  or  select FLASH TIME/ OK MENU /  or  select SHORT/MEDIUM or LONG / OK MENU .

Using the Phone





Receive and end a call

-  / 

Make a call

- 4 either before or after dialing your number

- From redial list:  /  or  / 

- From call log list*:  /  or  / 
- Note: You need to subscribe to Caller Line Identification service to caller's number or name in the call log.
- From direct memories: long press on **KEY 1** or **KEY 2** or **KEY 3** or **M2** keys in idle mode.

- From phonebook:  /  or  / 




- During a call, to activate/deactivate handsfree: 

To make an internal call

- If only 2 registered handsets: CAINT.
- If more than 2 registered handsets: CAINT / enter the handset number







To make a three-party conference call:

During call












- Press  / select **INTERCOM** /  / enter handset number.
- Press  on the called handset to answer.
- Long press-won the calling handset to establish conference call.

Phonebook settings: 100 entries

To register in phonebook

 /  or  / select **ADD** /  / enter name of contact /  / select melody /  .




To register the direct memories in keys M1, M2, 1, 2 & 3

 /  or  select **HS SETTING** /  /  or  select **DIRECT MEM** /  /  or  select **M1, M2, KEY 1, KEY 2 & KEY 3** /  / edit or enter the number / 

For Duo and Trio models, the phonebook, call log list and redial number saved in the phone are common to all handsets.

General settings

This phone can be customized according to your preferences, to access the different possibilities press:

- To customize handset (name, melody, language,...)  or  select **HS SETTING/**  ,
- To change PIN, registration handset, reset:

-  or  select **BS SETTING/** 

TROUBLESHOOTING

As a general rule, if a problem occurs, remove the batteries from all handsets for about 1 minute, then disconnect and reconnect the power supply to the base and reinstall the handset batteries. For more information, you can download full user guide or get on-line assistance www.alcatel-home.com

SAFETY

This telephone is not designed for Emergency calls when the main power fails. Do not use your telephone to notify a gas leak or other potential explosion hazard. Do not open your device or its power supply to avoid risk of electrical shock. Do not attempt to open the batteries, as they contain hazardous chemical substances. Your telephone must be located in a dry place away from hot, humide and direct sunlight condition. To avoid radio signal interference, place the phone at least 1 meter away from other electrical appliances or other phones.

ENVIRONMENT



■ This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste. The European Union has implemented a specific collection and recycling system for which producers are responsible. Help us protect the environment in which we live!

CONFORMITY

Hereby, ATL1NKS EUROPE declares that the radio equipment type DECT is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.alcatel-home.com – Average power per channel: 10mW – Maximum Output Power (NTP) : 24dBm – Frequency Range : 1880-1900 MHz

Documents / Resources

	<p>Alcatel F685 Smart Call Block [pdf] User Guide F685, Smart Call Block</p>
---	--