

ALCATEL T76 Corded CLI with Name Display Telephone User Manual

Home » Alcatel » ALCATEL T76 Corded CLI with Name Display Telephone User Manual



PLEASE READ THIS USER'S GUIDE BEFORE USING YOUR PHONE

Contents

- **1 BASE STATION KEYS**
- **2 INSTALLATION AND**

SETUP

- **3 USING THE PHONE**
- **4 GENERAL SETTINGS**
- **5 SAFETY**
- **6 ENVIRONMENT**
- **7 CONFORMITY**
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts

BASE STATION KEYS

- 1. Ring indicator
- 2. Delete button
- 3. A Up button
- 4. Out button
- 5. Down button
- 6.

 Mute/Contrast button
- 7. Phone book button
- 8. Programme button
- 9. Memory button
- 10. Microphone
- 11. R Flash button
- 12. Speaker button
- 13. A Redial button
- 14. Speaker volume switch
- 15. **MENU** Menu button
- 16. A D D Ringer volume switch

DISPLAY ICONS

- 17. Month
- 18. Day
- 19. Hour
- 20. Minute
- 21. Afternoon
- 22. Voice mail
- 23. Morning
- 24. Speakerphone
- 25. Mute
- 26. Repeat


- 27. Repeat*
- 28. Call-log number*
- 29. Call waiting*
- 30. Name display*
- 31. Phone number display*
 - * Subject to subscription and availability of the service from the fixed line operator.

INSTALLATION AND SETUP

Your phone should be placed on a level surface, such as a desk or table top, or you can mount it on a wall.


DESKTOP INSTALLATION

- 1. Connecting the handset.
- 2. Connecting the telephone line.

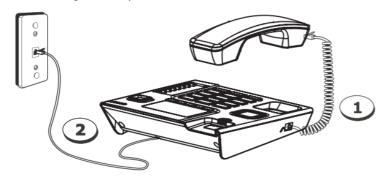


WALL MOUNT INSTALLATION


Rotate the wall mounting knob as shown in the following layout:
 The knob is designed to keep this unit in place when the telephone is vertical on the wall.

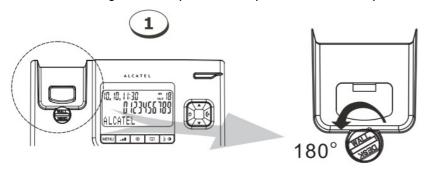

2. Install the base unit to the wall and then plug one end of line cord into junction box and the other end into modular telephone line jack marked " .(Fig. 4)

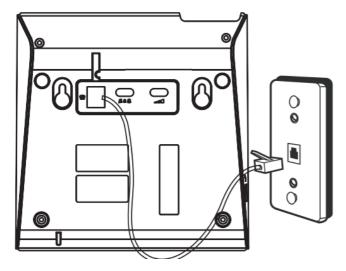

3. Fix the telephone on the wall. (Fig. 5)

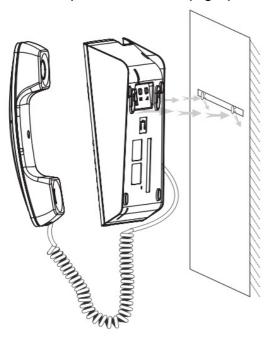


SET LANGUAGE AND FLASHTIME TO OPERATE CORRECTLY ON YOUR NETWORK

- Press on MENU key / A or SELECT LANGUAGE / MENU / A or to select language desire / MENU / R
- Press on MENU key / A or SET FLASH TIME / MENU / A or to select flash time FLASH 100ms / FLASH 300ms / FLASH 600ms or FLASH 1000ms / MENU / R


USING THE PHONE

RECEIVE AND END A CALL

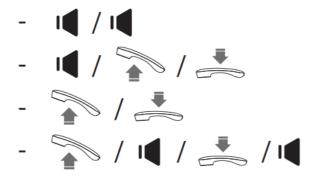

MAKE A CALL

 - or either before or after dialing your number or,
- dial number /
- · From redial list:



- · From call log list*
 - 1. ▼ or ▼ to select the caller number / □ or ▶ or ▶
 - 2. V or V to select the caller number / ... S to add number prior to the select number / or
- · From direct memories
 - 1. M to select memory location from M1~M8 or + to add number prior to the select number / or
 - 2. ♣ or ♣ / to select memory location from M1~M8 or ♥ ♣ ♥ ... ₩XYZ


MUTE THE MICROPHONE

In off-hook state, user can press the \P button to access mute function. When CONTRAST/MUTE is on, the CONTRAST/MUTE indicator will show on the screen. Press the \P button to exit mute function and resume normal conversation. In on-hook state, user can press the button \P to select the LCD Contrast (1 \sim 5 choice, default is 3)

DELETE CALLER ID NUMBER

- Delete a Caller ID number: ▲ or ▼ to select the number /
- Delete all Caller ID numbers: ▲ or ▼ to select the number / long press of to confirm DELETE ALL? /

STORE NUMBER

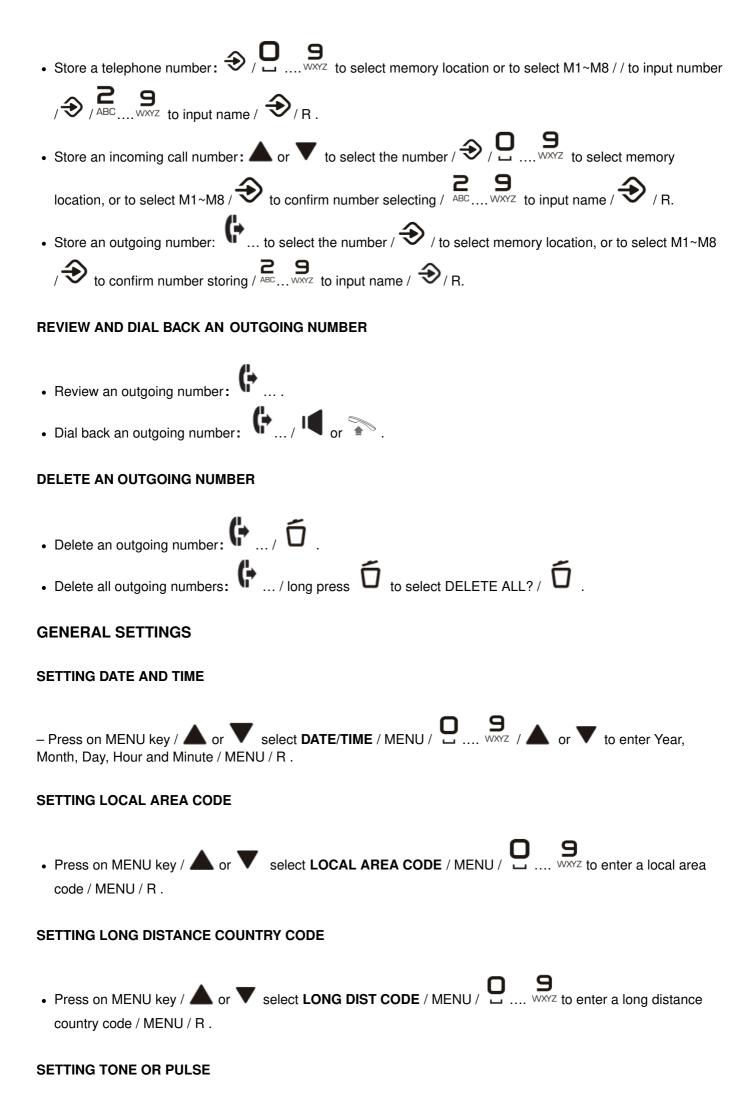

Press on MENU key / ▲ or ▼ SET TONE/PULSE / MENU / ▲ or ▼ to select TONE DIAL or PULSE
 DIAL / MENU / R .

SAFETY

Do not use your telephone to notify a gas leak or other potential explosion hazard. Do not open your device to avoid risk of electrical shock. Your telephone must be located in a dry place away from hot, humid and direct sunlight condition

ENVIRONMENT

This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste.

Help us to protect the environment in which we live!



CONFORMITY

The logo printed on the products indicates the conformity with all essential requirements and all applicable directives. You can download the Declaration of Conformity from our website www.alcatel-home.com Alcatel Logo and Alcatel name are trademarks of Alcatel-Lucent and used under license by Atlinks.



Documents / Resources



ALCATEL T76 Corded CLI with Name Display Telephone [pdf] User Manual T76 Corded CLI with Name Display Telephone, T76, Corded CLI with Name Display Telephone

References

Homepage | Alcatel-Phones

Manuals+, home privacy