



alcatel T76 Residential Phone with Large Display and Handsfree Function User Guide

[Home](#) » [Alcatel](#) » alcatel T76 Residential Phone with Large Display and Handsfree Function User Guide 

Contents

- 1 T76 Residential Phone with Large Display and Handsfree Function
 - 1.1 PLEASE READ THIS USER'S GUIDE BEFORE USING YOUR PHONE
 - 1.2 INSTALLATION AND SETUP
 - 1.3 SET LANGUAGE AND FLASHTIME TO OPERATE CORRECTLY ON YOUR NETWORK:
 - 1.4 MUTE THE MICROPHONE:
 - 1.5 GENERAL SETTINGS
- 2 Documents / Resources
 - 2.1 References
- 3 Related Posts

T76 Residential Phone with Large Display and Handsfree Function

ALCATEL
home & business phones
ALCATEL T76



USER GUIDE

www.alcatel-home.com

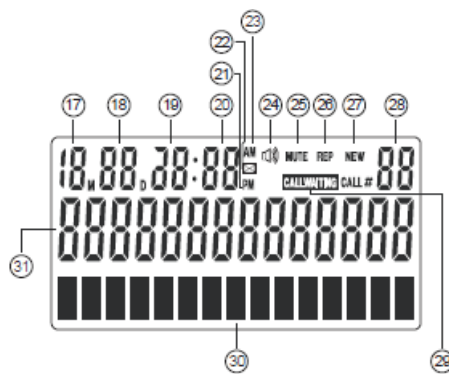


Fig 3

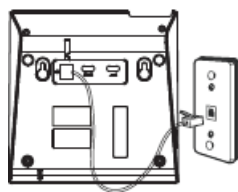


Fig 4



Fig 5

PLEASE READ THIS USER'S GUIDE BEFORE USING YOUR PHONE

BASE STATION KEYS:

- 01. Ring indicator
- 03. Up button
- 05. Down button
- 07. Phonebook button
- 09. Memory button
- 11. Flash button
- 13. Redial button
- 15. Menu button
- 02. Delete button
- 04. Out button
- 06. Mute/Contrast button
- 08. Programmed button
- 10. Microphone
- 12. Speaker button
- 14. Speaker volume switch
- 16. Ringer volume switch

DISPLAY ICONS:

- 17. Month
- 19. Hour
- 21. Afternoon
- 23. Morning
- 25. Mute
- 27. New CID*
- 29. Call waiting*

- 31. Phone number display*
- 18. Day
- 20. Minute
- 22. Voice mail
- 24. Speakerphone
- 26. Repeat
- 28. Call-log number*
- 30. Name display*

* Subject to subscription and availability of the service from the fixed line operator.

INSTALLATION AND SETUP

Your phone should be placed on a level surface, such as a desk or table top, or you can mount it on a wall.

DESKTOP INSTALLATION

1. Connecting the handset.
2. Connecting the telephone line.



WALL MOUNT INSTALLATION

1. Rotate the wall mounting knob as shown in the following layout:



The knob is designed to keep this unit in place when the telephone is vertical on the wall.

2. Install the base unit to the wall and then plug one end of line cord into junction box and the other end into modular telephone line jack marked “T”. (Fig. 4)
3. Fix the telephone on the wall. (Fig. 5)

SET LANGUAGE AND FLASH TIME TO OPERATE CORRECTLY ON YOUR NETWORK:

- Press on MENU key / or SELECT LANGUAGE / MENU / or to select language desire / MENU / R
- Press on MENU key / or SET FLASH TIME / MENU / or to select flash time FLASH 100ms / FLASH 300ms / FLASH 600ms or FLASH 1000ms / MENU / R

USING THE PHONE

RECEIVE AND END A CALL

- /
- //
- /
- ///

MAKE A CALL

- or either before or after dialing your number or,
- dial number /
- From redial list:
- 1. / or
- 2. or /




– From call log list*:

1. or to select the caller number / or
2. or to select the caller number / to add number prior to the select number / or

– From direct memories:

1. to select memory location from M1~M8 or
or
2. or / to select memory location from M1~M8 or

MUTE THE MICROPHONE:

In off-hook state, user can press the  button to access mute function. When CONTRAST/MUTE is on, the CONTRAST/MUTE indicator will show on the screen. Press the  button to exit mute function and resume normal conversation. In on-hook state, user can press the  button to select the LCD Contrast (1 ~ 5 choice, default is 3).

DELETE CALLER ID NUMBER:

- Delete a Caller ID number: ▲ or ▼ to select the number /
- Delete all Caller ID numbers: ▲ or ▼ to select the number / long press to confirm DELETE ALL? /

STORE NUMBER:

- Store a telephone number: / to select memory location or to select M1~M8 // to input number // to input name // R .
- Store an incoming call number: or to select the number / / to select memory location, or to select M1~M8 / to confirm number selecting / to input name // R.
- Store an outgoing number: ... to select the number // to select memory location, or to select M1~M8 / to confirm number storing / to input name // R.

REVIEW AND DIAL BACK AN OUTGOING NUMBER:

- Review an outgoing number:
- Dial back an outgoing number: ... / or .

DELETE AN OUTGOING NUMBER:

- Delete an outgoing number: ... / .
- Delete all outgoing numbers: ... / long press to select DELETE ALL? / .

GENERAL SETTINGS

SETTING DATE AND TIME:

- Press on MENU key / or select DATE/TIME / MENU / / or to enter Year, Month, Day, Hour and Minute / MENU / R .

SETTING LOCAL AREA CODE:

- Press on MENU key / or select LOCAL AREA CODE / MENU / to enter a local area code / MENU / R .

SETTING LONG DISTANCE COUNTRY CODE:

- Press on MENU key / or select LONG DIST CODE / MENU /

to enter a long distance country code / MENU / R .

SETTING TONE OR PULSE:

– Press on MENU key / or SET TONE/PULSE / MENU / or
to select TONE DIAL or PULSE DIAL / MENU / R .

SAFETY

Do not use your telephone to notify a gas leak or other potential explosion hazard. Do not open your device to avoid risk of electrical shock. Your telephone must be located in a dry place away from hot, humid and direct sunlight condition.

ENVIRONMENT


This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste.

Help us to protect the environment in which we live!

CONFORMITY

The logo printed on the products indicates the conformity with all essential requirements and all applicable directives. You can download the Declaration of Conformity from our website www.alcatel-home.com
Alcatel Logo and Alcatel name are trademarks of Alcatel-Lucent and used under license by Atlinks.

Documents / Resources

	alcatel T76 Residential Phone with Large Display and Handsfree Function [pdf] User Guide T76, Residential Phone with Large Display and Handsfree Function, T76 Residential Phone with Large Display and Handsfree Function
-------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [Homepage | Alcatel-Phones](#)