

Alecto ADB30WT Self-Powered Wireless Doorbell User **Manual**

Home » Alecto » Alecto ADB30WT Self-Powered Wireless Doorbell User Manual





ADB30WT Self-Powered Wireless Doorbell ADB30WT ADB30ZT **User Manual**

Contents

- 1 Disconnect indoor bell
- 2 Specifications
- **3 DECLARATION OF CONFORMITY**
- 4 Documents / Resources
 - **4.1 References**

Disconnect indoor bell


- 1. Unplug the inner bell.
- 2. Press and hold button while putting the inner door bell back into the socket.
- 3. Wait until the blue light goes out.
- 4. The inner doorbell is now disconnected.

Specifications


Indoor bell power supply:	220-240V AC, 50Hz
Outdoor bell power supply:	Battery-free
Transmission range:	Up to 200 meter (depending on the environment)
RF information:	Type AM
Transmission frequency:	433.92 MHz
Transmission power:	<0 dBm
Number of ringtones:	36
Volume levels:	4
Water resistant:	IP44

DECLARATION OF CONFORMITY


Hereby, Commaxx declares that the radio equipment type Alecto ADB30 is in compliance with directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://commaxx-certificates.com/doc/adb30_doc.pdf

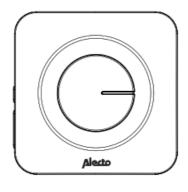




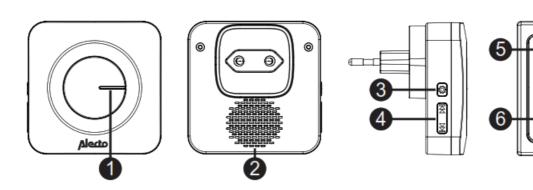


- 1. Indoor bell LED
- 2. Speaker
- 3. Pairing and volume setting button
- 4. Ringtone change button
- 5. Doorbell LED
- 6. Doorbell button

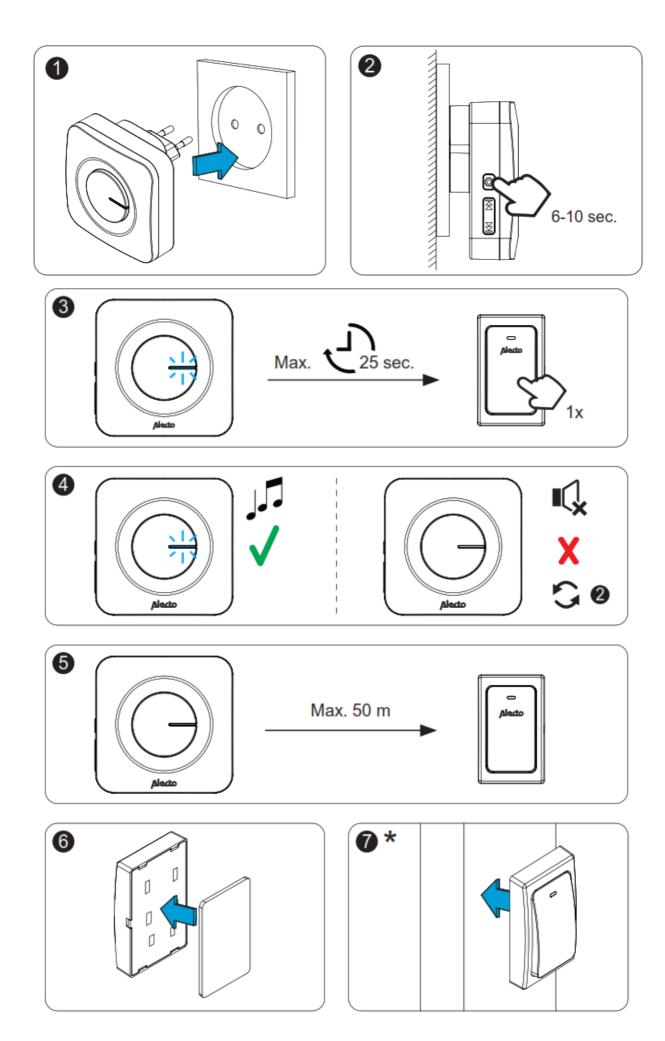

Do not place the doorbell directly on a metal surface or on a surface containing metal. This will have a negative effect on the doorbells operation.

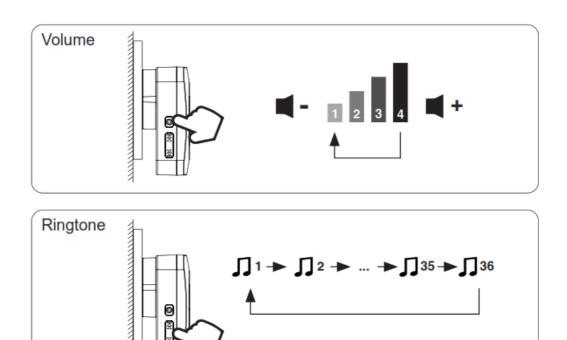

Multiple indoor bells

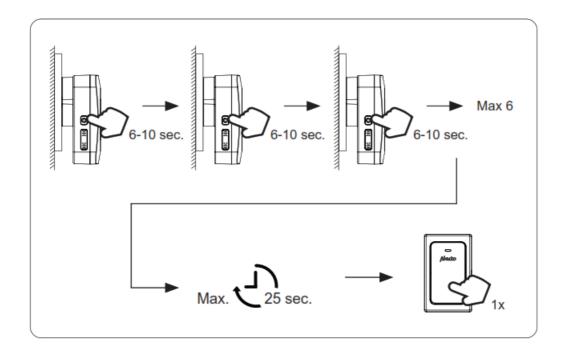



Documents / Resources



Alecto ADB30WT Self-Powered Wireless Doorbell [pdf] User Manual

ADB30WT, ADB30ZT, ADB30WT Self-Powered Wireless Doorbell, Self-Powered Wireless Doorbell, Wireless Doorbell, Doorbell

References

▲ Alecto.nl | 45+ jaar een betrouwbaar merk voor Consument Elektronica

Manuals+,