


ALFRESCO ALX2 42 Warming Rack



# ALFRESCO ALX2-42 Warming Rack User Manual

[Home](#) » [Alfresco](#) » **ALFRESCO ALX2-42 Warming Rack User Manual** 

## Contents

- [1 ALFRESCO ALX2-42 Warming Rack](#)
- [2 Specifications](#)
- [3 TOOLS REQUIRED TO INSTALL THIS KIT](#)
- [4 REPLACEMENT PROCEDURE](#)
- [5 FAQ](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)

*Alfresco™*

## ALFRESCO ALX2-42 Warming Rack




## Specifications

**Required Tools:** Screwdriver (Philips size #2), Screwdriver (Flat 1/8 wide tip), 7/8 inch Wrench (Open type), 9/16 inch Wrench (Open type), 1/2 inch Wrench (Open type), Ratcheting Socket Wrench, Socket Extension Driver (3 inches), 1/2 inch Socket, 7/16 inch Socket, 10 mm Socket, 7 mm Socket

## TOOLS REQUIRED TO INSTALL THIS KIT

ITEM	DESCRIPTION:
A	SCREWDRIVER – PHILIPS SIZE # 2
B	SCREWDRIVER – FLAT 1/8" WIDE TIP
C	7/8 in WRENCH – OPEN TYPE
D	9/16 in WRENCH – OPEN TYPE
E	1/2 in WRENCH – OPEN TYPE
F	RATCHETING SOCKET WRENCH
G	SOCKET EXTENSION DRIVER – 3 in.
H	1/2 in SOCKET
I	7/16 in SOCKET
J	10 mm SOCKET
K	7 mm SOCKET

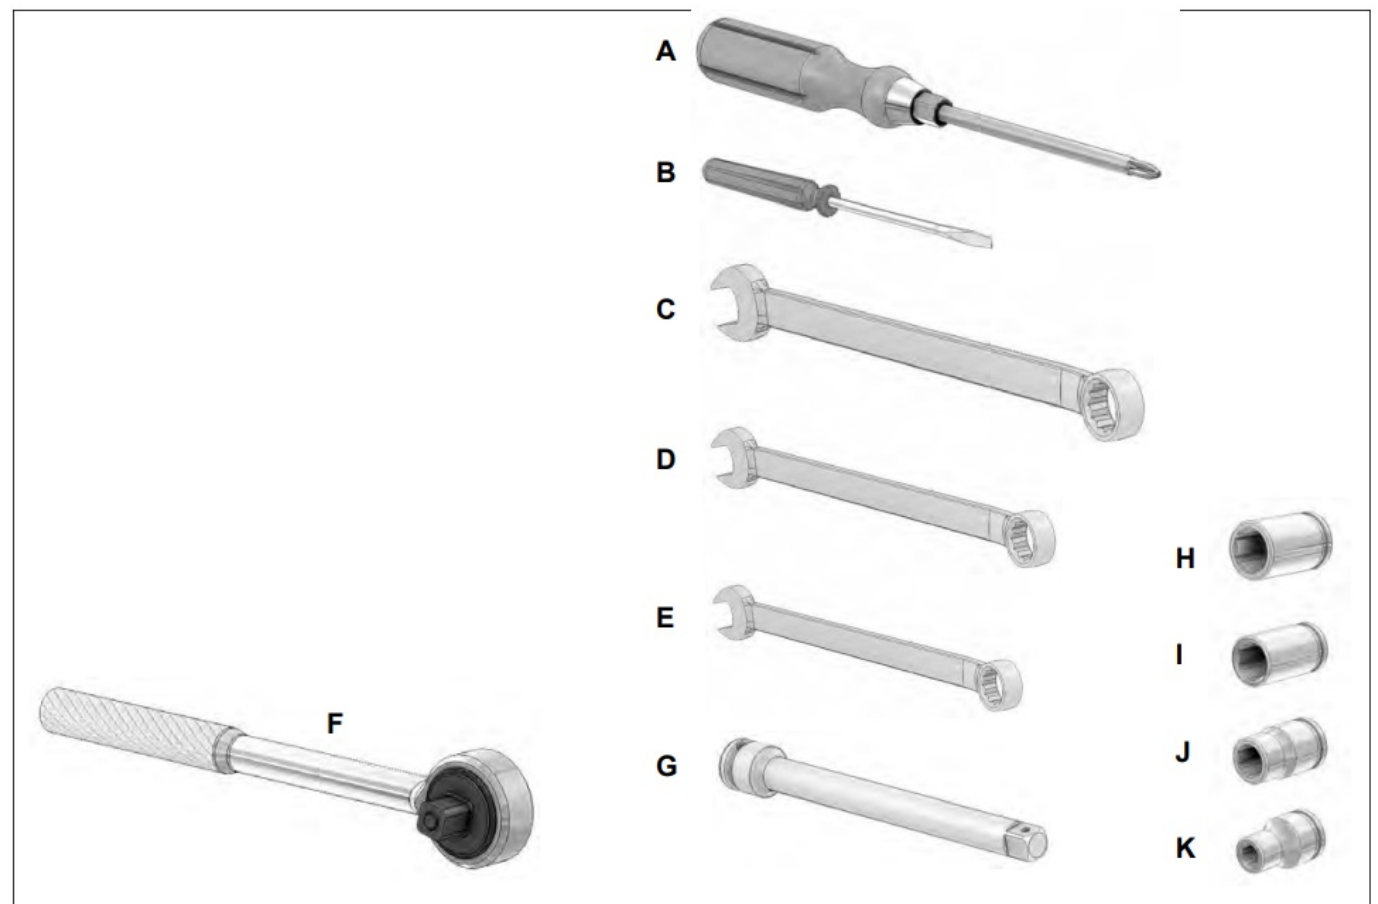


## REPLACEMENT PROCEDURE

## ROTISSERIE ORIFICE

- **STEP 1:** Remove all Grills, Warming Racks, Briquette Trays and Grill Burners from the grill's firebox.
- **STEP 2:** Detach the Rotisserie Panel by removing the holding screws located at each top corner of the panel.  
(Note: ALX2-56 BFG units have two separate panels – remove screws from both panels)
- **STEP 3:** To access the burner's orifice behind the panel, "tilt" the panel forward. The panel can be supported by the bottom tabs, as you tilt the panel. (See figure at right – ALX2-42 shown).


**IMPORTANT:** The Rotisserie Burner has a flexible, stainless steel, 3/8" gas tube. Flex the tube forward slowly towards you. (It's quite strong).

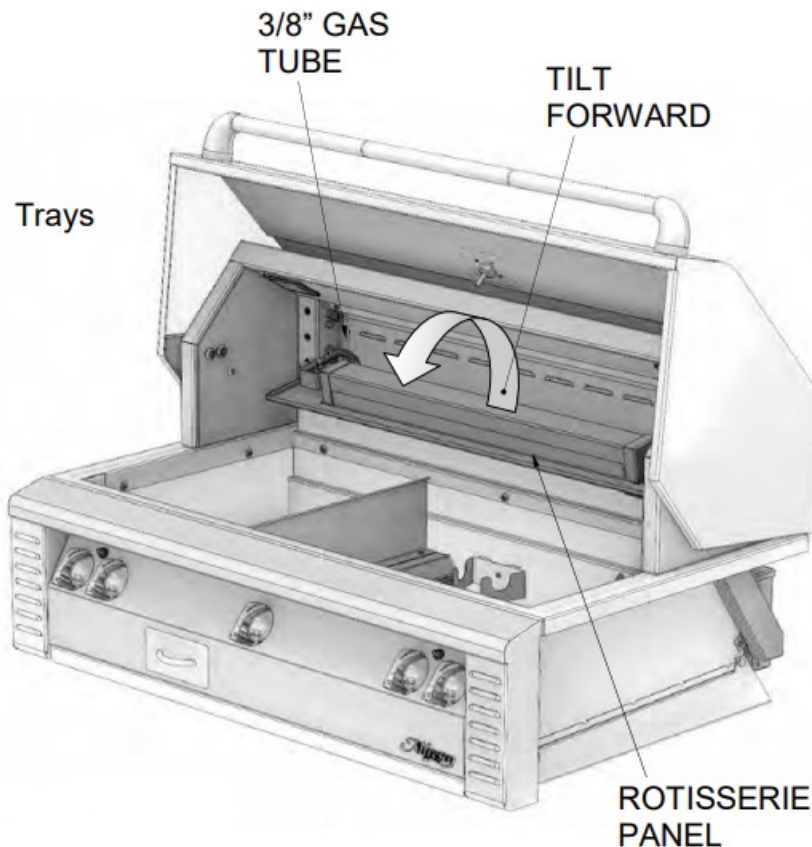

**STEP 4:** Remove the Rotisserie orifice with a 1/2" open wrench from the 3/8" compression elbow fitting. Install the replacement orifice for the proper fuel you are replacing.  
(See orifice kits at the end of this booklet).  
Tighten the orifice to ensure no leaks will occur.

**IMPORTANT:** Verify that the igniter cable, located opposite to the orifice assembly, is properly secured before reassembly of the panel.


**STEP 5:** Reassemble the Rotisserie Panel by reversing the procedure. Tilt the panel backwards, and insert the top back into the rear hood assembly. Fasten the top 2 screws at each end to secure the panel in place.

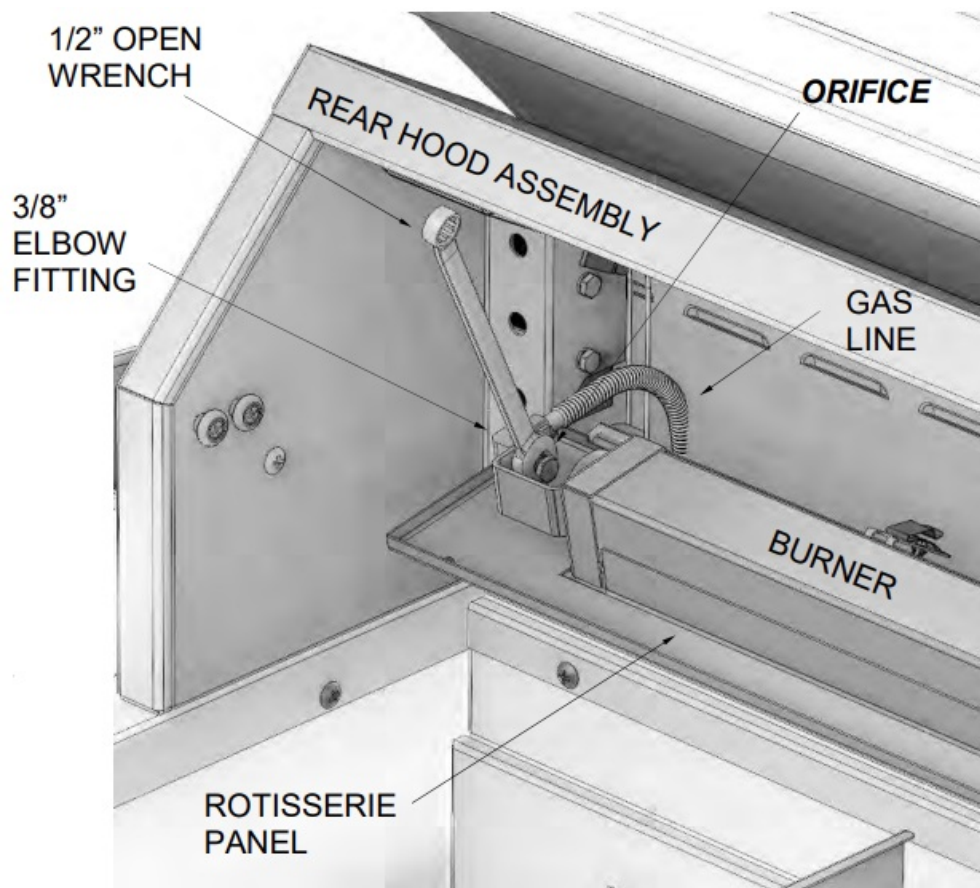

## GRILL BURNER ORIFICES

**STEP 6:** Remove the gas Knobs from all the valves.

**STEP 7:** Replace each of the U-Burner orifices for the proper fuel you'll be using on the valve stems. Use a 7 mm socket, socket driver and ratchet wrench as shown at right and below.

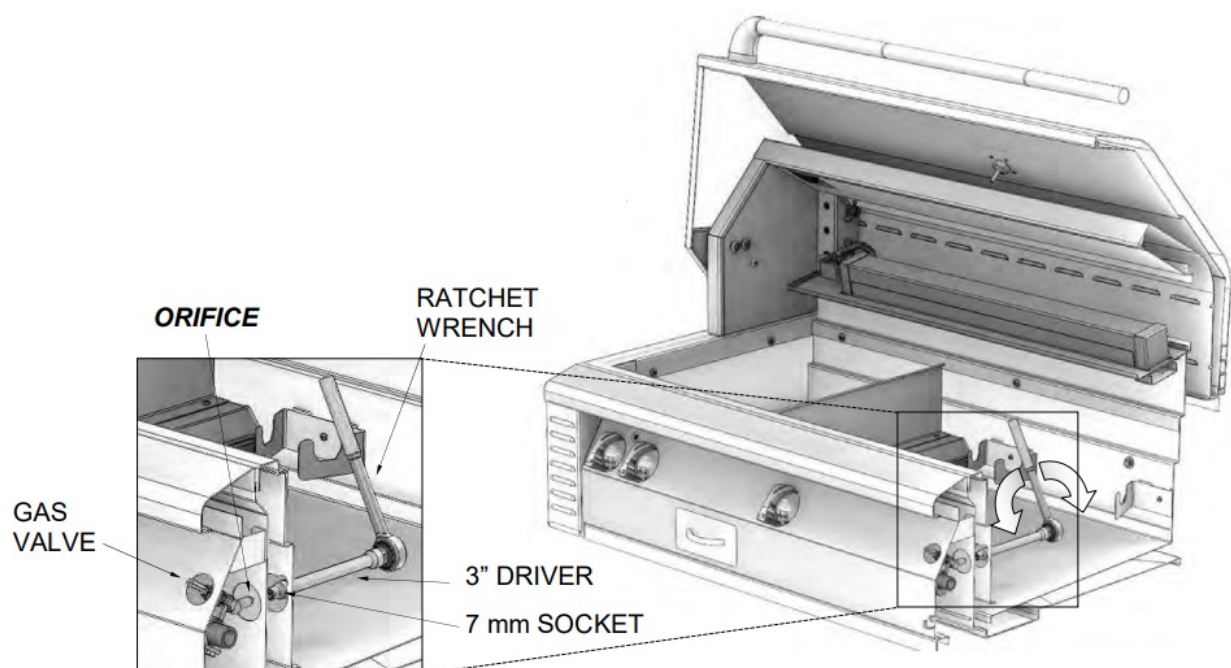


## GRILL BURNER ORIFICES (SEARZONE™) :

**STEP 7:** If your grill has a SearZone™ burner, use a ratcheting wrench, a 3" driver extender and a 1/2" socket, remove the orifice from the inside of the grill. The SearZone™ orifice is located just below the burner's igniter electrode. The orifice is attached to a 3/8" elbow fitting directly in the firewall (between the front panel and the

firebox). It is not attached to the gas valve as the U-Burners. (Refer to the images below as a reference).

## DO NOT OVER TIGHTEN

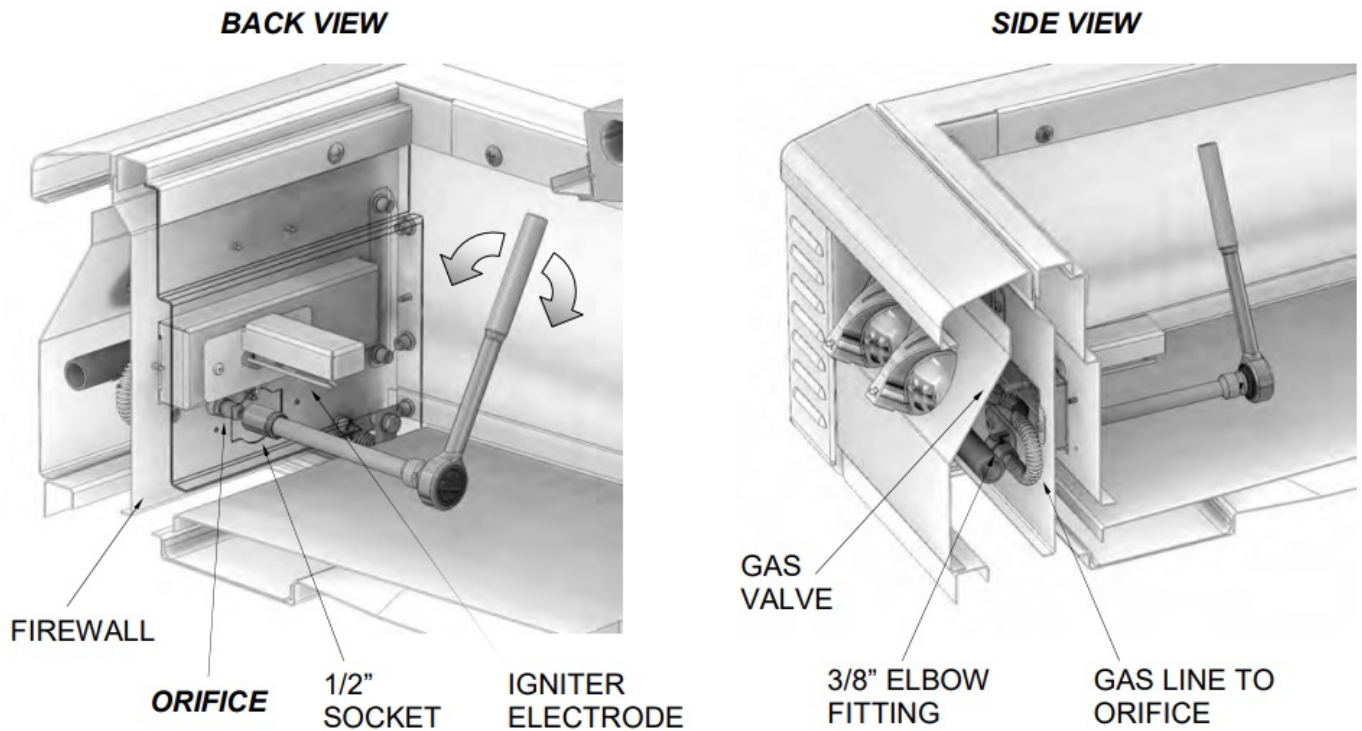


## SMOKER ORIFICE

### STEP 8:

Remove the Smoker Tray and Grease Tray Assemblies out of the grill's body.

### STEP 9:

Using a 7/16" open wrench, loosen the compression fitting from the 1/8" aluminum smoker gas line. The smoker orifice assembly is attached to the firewall with one screw, remove it.

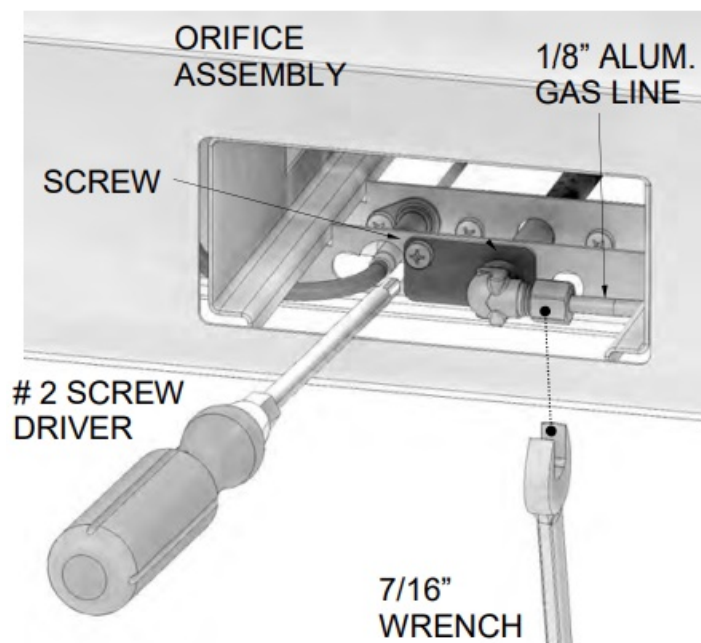


**NOTE:** The aluminum gas line is very soft. Carefully, bend the gas line forward and remove the orifice assembly. If the gas line is NOT free after loosening the nut, continue to unscrew the nut until the assembly is free to be removed. The nut along with the compression ferrule will remain with the pipe.



**STEP 10:** With the smoker orifice assembly removed, remove the orifice using a 9/16" wrench (for the elbow's body) and a 7/16" for the orifice itself.  
Replace with the proper fuel you'll be using.  
(Refer to the assembly at right as a guide)

**STEP 11:**


- Reinstall the orifice assembly into the grill by following these last 2 steps in reverse.
- DO NOT over-tighten the compression fitting to the 1/8" aluminum gas line.

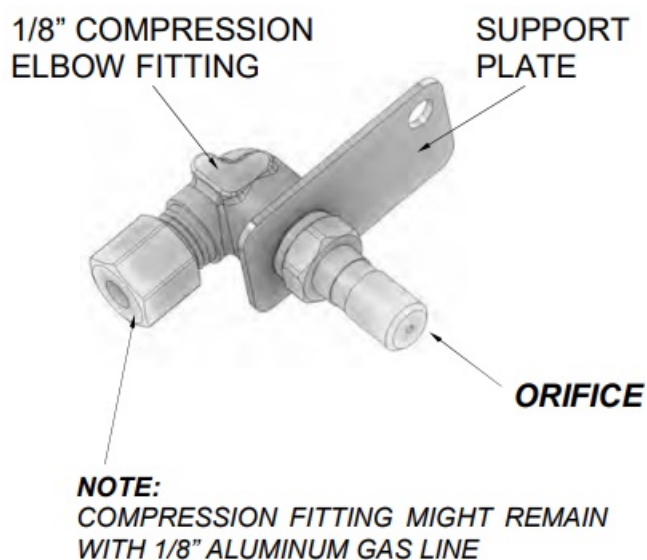


**SIDE BURNERS: (ALX2-56 MODEL ONLY)**

**STEP 12:** Remove the side burner's cover, cooking grate, burner exterior, and inner cap.

**STEP 13:** Looking directly over the burner, locate and remove the orifice from the bottom of the cone-shaped burner body. Use a 10 mm socket, driver extension and ratchet wrench for this procedure.

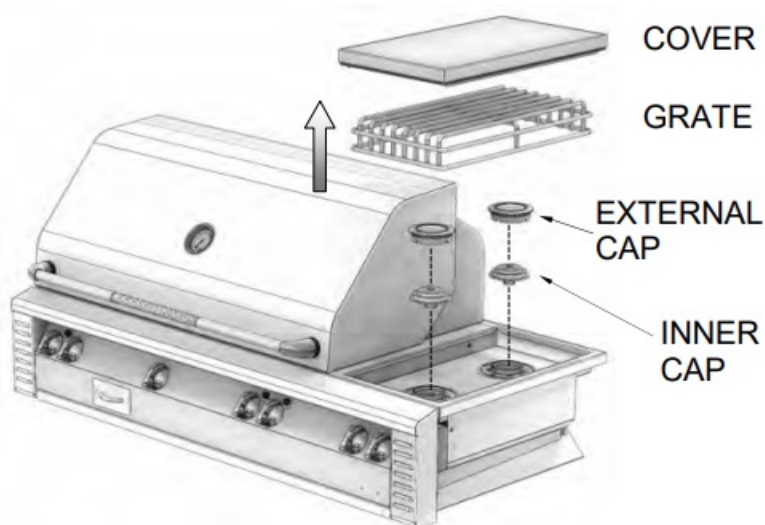


**STEP 14:** Replace the orifice with one for the proper fuel to be used. DO NOT OVER TIGHTEN!

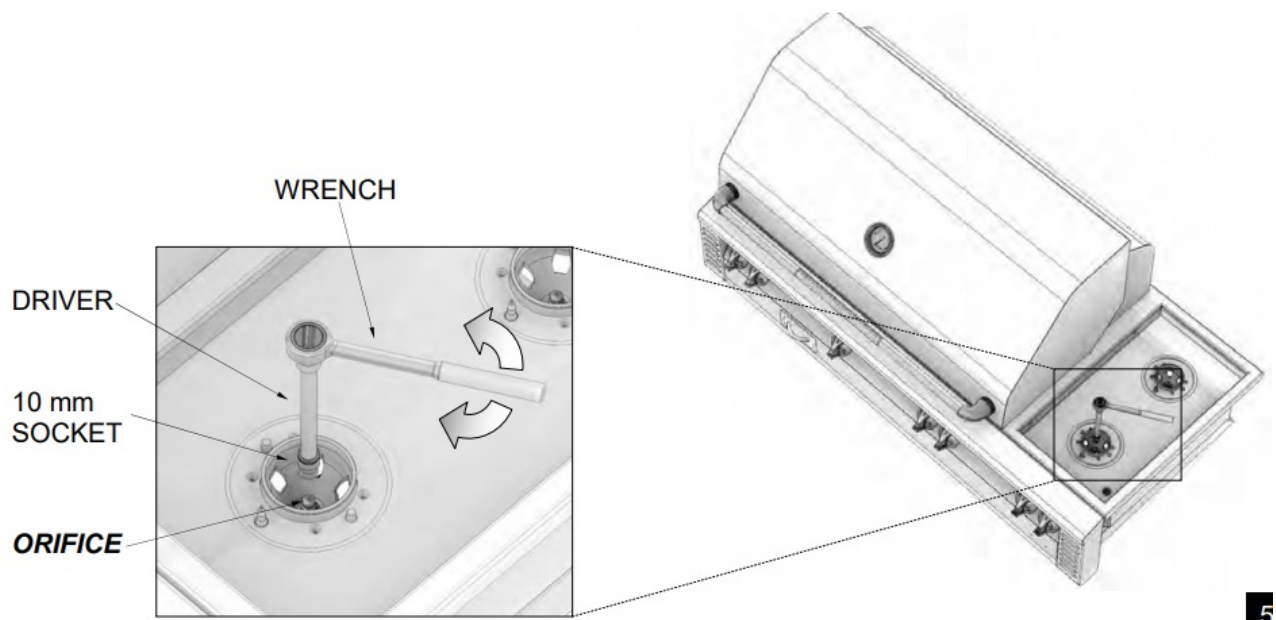

### GAS PRESSURE REGULATOR CONVERSION:

**STEP 15:** The ALX2 grill is equipped with a Maxitrol™ pressure regulator that is suitable for LP or NG fuel regulation. To convert the regulator to proper fuel, remove the brass cap located in its center.

**CAUTION:** There are several components in this regulator assembly. Be careful with the gas sealing washer, the plunger, and the plunger's spring located inside the regulator.

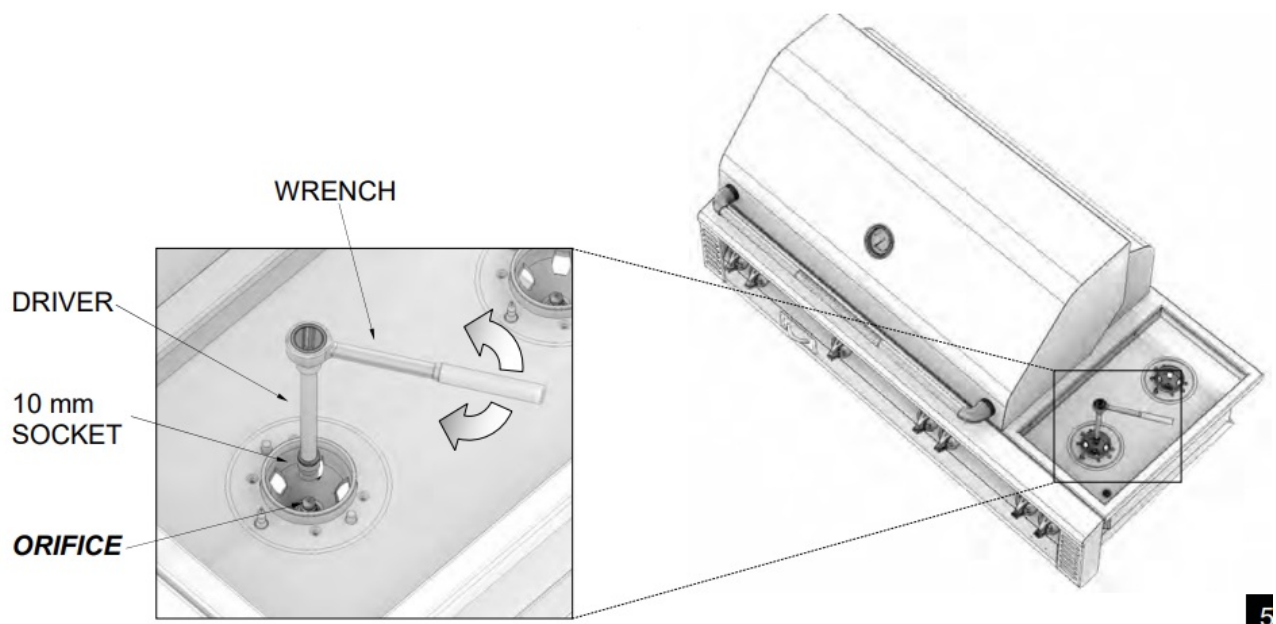

### PLUNGER DETAIL

The plunger LP side has a WIDE disk on the end. The NG (NAT) side does not. The side pointing to the body of the regulator determines the fuel to be used in the grill.

### STEP 16:

- Locate the black plastic plunger inside the brass cap. The plunger provides the right pressure setting at the regulator outlet by changing the spring pressure.
- Pull (pop-out) the plunger out of the brass cap, reverse its direction, and re-insert into the cap with the proper fuel desired pointing toward the regulator spring and body.

- Reattach the brass cap into the regulator body and tighten it securely with the gasket.

#### STEP 17:


- If the unit is being converted from NG to LP, the LP kit will include a 1/2" NPT X 3/8" ODF reducer (hose adapter) that needs to be installed on the gas inlet elbow attached to the regulator.
- Install with a reducer with a gas approved plumbing seal Teflon® paste or gas approved yellow Teflon® tape.

**NOTE:** The conversion is now complete. Pressurize the gas line with the correct fuel for the application and check for leaks before lighting up the grill. Before using the grill, all the grill's surface burners will need to be adjusted for proper combustion and low flame settings. Refer to the following steps for adjustment.

#### AIR SHUTTER ADJUSTMENT

Adjust the "AIR SHUTTER" to regulate the amount of air that enters the burner for combustion. Loosen the set screw of the air shutter. Reinstall the burner. Make certain that the burners are sitting properly on the orifices. Light the burners and adjust them according to the following directions:

1. Turn the valve on "HI", light the burner and allow it to "WARM UP" for 10 minutes.
2. If the flame is yellow, indicating insufficient air, turn the air shutter to allow more air to the burner.
3. If the flame is noisy and tends to lift away from the burner, indicating too much air, turn the air shutter to reduce the amount of air to the burner.

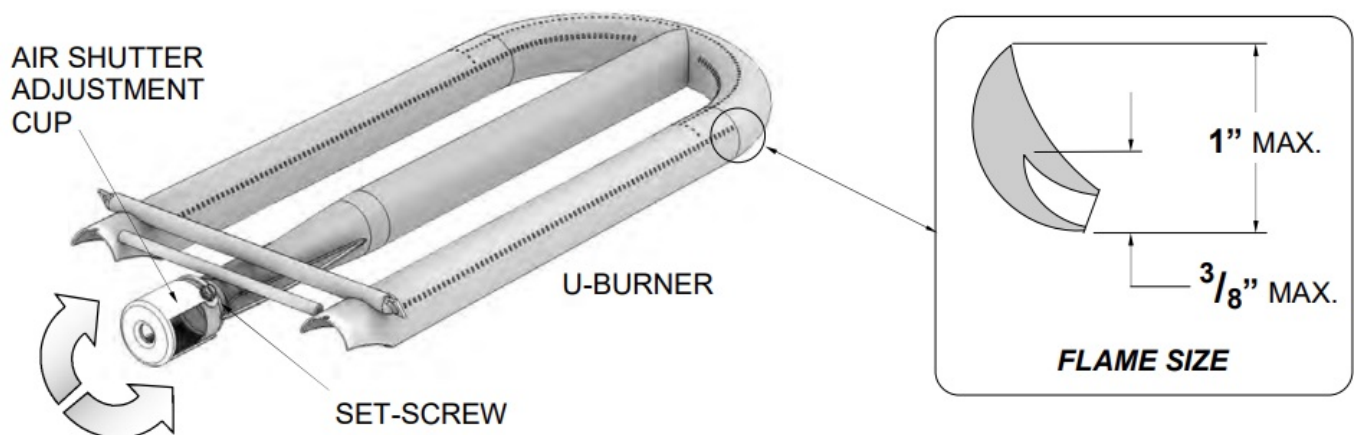

#### LOW HEAT SETTING ADJUSTMENT:

**NOTE:** ADJUST THE LOW HEAT SETTING WHEN CHANGING FUELS OR WHEN ALTITUDE OR OTHER ENVIRONMENTAL FACTORS ARE CAUSING POOR, LOW HEAT, PERFORMANCE.


**WARNING:** NEVER ADJUST THE BURNER SO LOW THAT IT MAY GO OUT DURING USE. DO NOT OPERATE THE GRILL WITH THE LOW HEAT SCREW REMOVED. GAS CAN ESCAPE AND CAUSE A POTENTIALLY HAZARDOUS CONDITION.

#### ADJUSTMENT STEPS:

1. Follow lighting instructions by setting the control knob on "HI" and allowing the burner to preheat for 10 minutes.
2. Turn the control knob to "LOW" and wait for the burner temperature to drop and stabilize.
3. Attempting adjustment at any setting other than LOW can create a dangerous condition.



4. Remove the knob by pulling straight away from the control panel.
5. Insert a small blade (1/8" wide) screwdriver into the valve stem to begin the adjustment.
6. Turn counter-clockwise to INCREASE the low heat flame, or clockwise to DECREASE the flame height.(see figure at right).

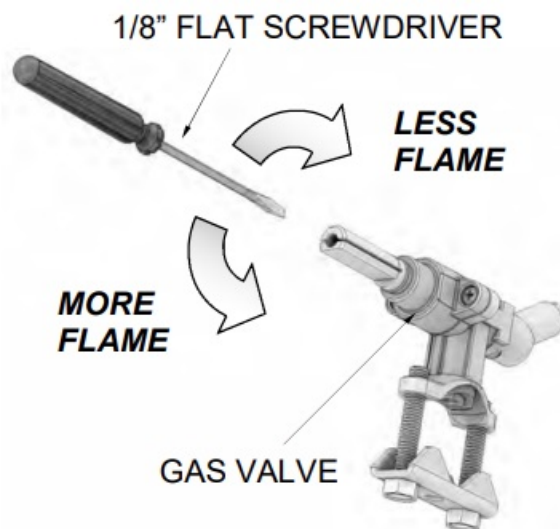

Adjust the flames so the burner is fully lit around the perimeter when the knob is in the LOW position. Do not adjust the burner flame so low that it may go out during use. Once proper adjustment is reached, reattach the knob by pushing it onto the stem. Your Alfresco™ Gourmet Grill is now ready for use with the new fuel.

<b>ALX2 GAS CONVERSION KIT NUMBERS</b>		
<b>GRILL SIZE:</b>	<b>NG TO LP</b>	<b>LP TO NG</b>
<b>ALX2-30 (30SZ)</b>	190-0048	190-0049
<b>ALX2-42 / 56 (42SZ / 56SZ)</b>	190-0050	190-0051
<b>ALX2-56 BFG</b>	190-0052	190-0053

## FAQ

### • Q: What tools are required to install this kit?

- A: The tools required are a Screwdriver (Philips size #2), Screwdriver (Flat 1/8 wide tip), 7/8 inch Wrench (Open type), 9/16 inch Wrench (Open type), 1/2 inch Wrench (Open type), Ratcheting Socket Wrench, Socket Extension Driver (3 inches), 1/2 inch Socket, 7/16 inch Socket, 10 mm Socket, and 7 mm Socket.


### • Q: How do I replace the Rotisserie Orifice?

- A: To replace the Rotisserie Orifice, follow these steps:
  - Remove all Grills, Warming Racks, Briquette Trays, and Grill Burners from the grill's firebox.
  - Detach the Rotisserie Panel by removing the holding screws located at each top corner of the panel.
  - To access the burner's orifice behind the panel, tilt the panel forward. The panel can be supported by the bottom tabs as you tilt the panel.
  - Flex the Rotisserie Burner's stainless steel gas tube forward slowly towards you.
  - Remove the Rotisserie orifice with a 1/2 open wrench from the 3/8 compression elbow fitting.
  - Install the replacement orifice for the proper fuel you are replacing.

- Tighten the orifice to ensure no leaks will occur.
- Verify that the igniter cable, located opposite to the orifice assembly, is properly secured before reassembly of the panel.
- Reassemble the Rotisserie Panel by reversing the procedure.
- **Q: How do I replace the Grill Burner Orifice?**
  - A: To replace the Grill Burner Orifice, follow these steps:
    - Remove the gas Knobs from all the valves.
    - Replace each of the U-Burner orifices for the proper fuel you'll be using on the valve stems using a 7 mm socket, socket driver, and ratchet wrench.
- **Q: How do I replace the SearZone™ Burner Orifice?**
  - A: To replace the SearZone™ Burner Orifice, follow these steps:
    - If your grill has a SearZone™ burner, use a ratcheting wrench, a 3-driver extender, and a 1/2 socket to remove the orifice from the inside of the grill.
- **Q: How do I replace the Smoker Orifice?**
- A: To replace the Smoker Orifice, follow these steps:
  - Remove the Smoker Tray and Grease Tray Assemblies out of the grill's body.
  - Using a 7/16 open wrench, loosen the compression fitting from the 1/8 aluminum smoker gas line.
  - Remove the screw attaching the smoker orifice assembly to the firewall.
  - Carefully bend the gas line forward and remove the orifice assembly.

Alfresco™ ALX2 Grill Gas Supply Conversion Instructions  
 Alfresco™ Gourmet Grills  
 All Rights Reserved • 09/2011

## Documents / Resources

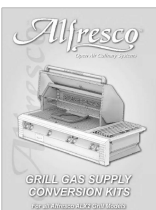	<p><a href="#">ALFRESCO ALX2-42 Warming Rack</a> [pdf] User Manual          ALX2-42 Warming Rack, ALX2-42, Warming Rack, Rack</p>
---	---

## References

-  [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.