


algodue MFC140-UI-O Rogowski Coil



# algodue MFC140-UI-O Rogowski Coil User Manual


[Home](#) » [algodue](#) » algodue MFC140-UI-O Rogowski Coil User Manual 

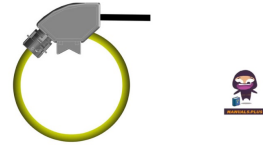

## Contents

- 1 [algodue MFC140-UI-O Rogowski Coil](#)
- 2 [Specifications](#)
- 3 [Product Usage Instructions](#)
- 4 [INTRODUCTION](#)
- 5 [AVAILABLE MODELS](#)
- 6 [SAFETY INSTRUCTIONS](#)
- 7 [MOUNTING](#)
- 8 [CONNECTIONS](#)
- 9 [MAINTENANCE](#)
- 10 [TECHNICAL FEATURES](#)
- 11 [Documents / Resources](#)
  - 11.1 [References](#)

**algodue MFC140-UI-O Rogowski Coil**

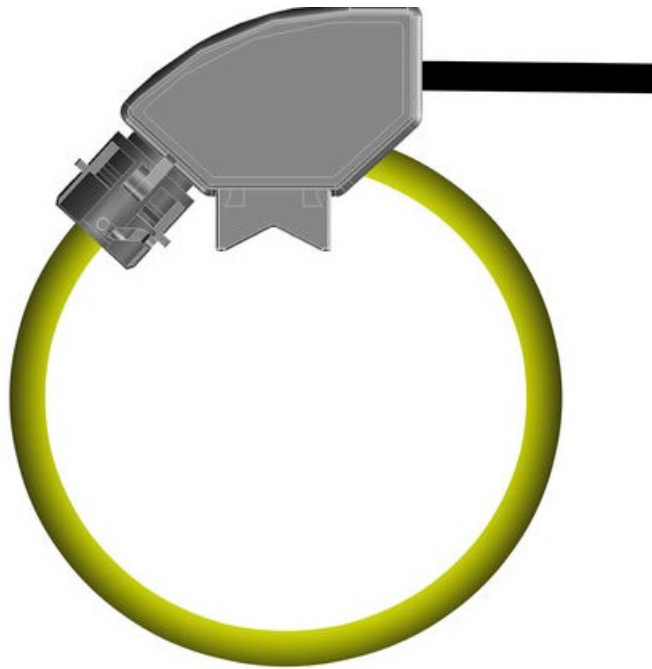

## Specifications

- **Model:** MFC140-UI
- **Compliance:** IEC 61010-1, IEC 61010-2-032, UL 2808 standards
- **Available Models:** MFC140-UI/O, MFC140-UI/OF
- **Features:** Built-in INTEGRATOR, suitable for OUTDOOR use

## Product Usage Instructions

### Introduction

The Rogowski coil is designed for professional technicians authorized to work with electrical installations. Proper training and Personal Protective Equipment are required for installation and use.

### Safety Instructions

Ensure the installation environment meets the coil's operational conditions. Installation should only be done by qualified technicians aware of voltage risks. Check for powered bare conductors before any operation.

### Mounting

Proper installation is crucial for accurate measurements. The coil should not tightly fit around the conductor. Follow these steps for installation:

1. Wrap the coil around the conductor and bring the ends together.
2. Lock the coil by overlapping the hooks.
3. Seal the lock if needed.
4. Fix the coil on the conductor if required.

### Connections

The coil has an arrow indicating the load side. For models with integrators, follow the connection instructions provided. The coil is protected against the reverse polarity of the power supply.






FAQ

- **Q:** Who should install and use the Rogowski coil?
- **A:** The coil should only be installed and used by qualified, professional technicians with appropriate training and safety gear.
- **Q:** What standards does the Rogowski coil comply with?
- **A:** The coil complies with IEC 61010-1, IEC 61010-2-032, UL 2808 standards and relevant European standards.

INTRODUCTION

The manual is intended only for qualified, professional and skilled technicians, authorised to act in accordance with the safety standards provided for the electrical installations. This person must have appropriate training and wear suitable Personal Protective Equipment.

**WARNING!** It is strictly forbidden for anyone who does not have the above-mentioned requires to install or use the coil.It is forbidden to use the coil for purposes other than intended ones, specified in this manual. The symbols on the product are following described:

-  Attention! Refer to the user manual.
-  Protected throughout by DOUBLE INSULATION or REINFORCED INSULATION.
-  Do not apply around or remove from HAZARDOUS LIVE conductors without additional protective means.
-  Complies with the relevant European standards.
-  Underwriters' Laboratory Listed product.

AVAILABLE MODELS

MODEL	Built-in INTEGRATOR	OUTDOOR use
MFC140-UI/O		•
MFC140-UI/OF	•	•

SAFETY INSTRUCTIONS

The Rogowski coil must be installed in an environment which are according to the max operation conditions of the coil itself.

**WARNING!** The connection and installation of the Rogowski coil must be carried out only by qualified technicians aware of the risks involved to the presence of voltage and current. Before carrying out an operation, check if:

1. bare conductor wires are not powered,
2. there are no neighbour bare powered conductors

**NOTE:** The Rogowski coil complies with IEC 61010-1 and IEC 61010-2-032, UL 2808 standards and following amendments. The installation must be carried out in accordance with the standards in force, the instructions of this user manual and the coil insulation value in order to avoid any danger to people. The Rogowski coil is a sensor for accurate measurement so it must be handled with care. Before use, read the following instructions carefully.

- Do not use the product if damaged.
- Always wear protective clothing and gloves when required.
- Avoid strongly twisting, blowing and pulling load on the product, as the measurement accuracy may be impaired.
- Do not paint the product.
- Do not put metallic labels or other objects on the product: the insulation may be impaired.
- It is forbidden to use products different from the manufacturer's specifications.

## MOUNTING

**WARNING!** Before installing the coil, make sure to comply with the following statements:

- Always open or disconnect the circuit from the power distribution system (or service) of a building before installing of servicing coils.
- The coils may not be installed in equipment where they exceed 75 per cent of the wiring space of any cross-sectional area within the equipment.
- Restrict installation of a coil in an area where it would block ventilation openings.
- Restrict installation of a coil in the area of breaker arc venting.
- Not suitable for Class 2 wiring methods" and "Not intended for connection to Class 2 equipment".

**WARNING!** Check if the coil is properly installed: a bad locking can affect measurement accuracy and the coil will become sensitive to adjacent conductors or other sources of electromagnetic fields.

**NOTE:** The coil must not fit tightly around the conductor, therefore its internal diameter must exceed that of the conductor. To carry out the installation, proceed as follow:

1. Fit the coil around the conductor, bringing the coil ends together.
2. Lock the coil by turning the ring until the two hooks are overlapped (see picture A).


**A**



3. Seal the locking if requested (see picture B).

**B**


4. Fix the coil on the conductor if requested (see picture C).

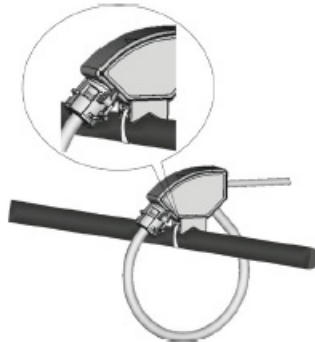**C**

## CONNECTIONS

The coil has an arrow indicating the load side.

In the case of the model WITHOUT integrator refer to picture D:

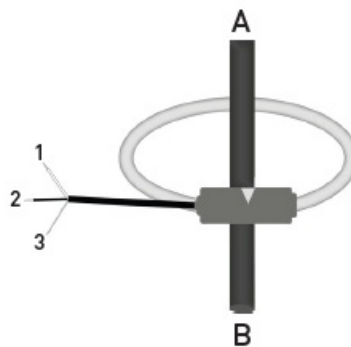**D**

- A = SOURCE
- B = LOAD


1. WHITE wire, OUT+
2. BLACK wire, OUT-
3. SHIELD, connect to GND or OUT- If the cable is provided with crimp pins

**If the cable is provided with crimp pins:**

- YELLOW crimp pin, OUT+
- WHITE crimp pin, OUT-

**In the case of model WITH integrator refer to picture E:**

**E**

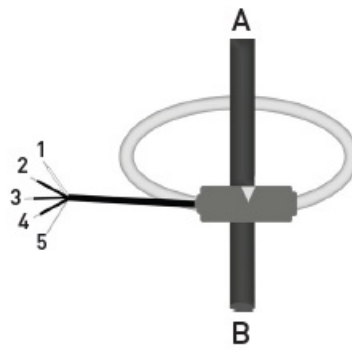

- A = SOURCE
- B = LOAD

1. WHITE wire, OUT+
2. BLACK wire, OUT-
3. RED wire, positive power, 4...26 VDC
4. BLUE wire, negative power, GND
5. SHIELD, connect to GND The coil is protected against reverse polarity of the power supply

## **MAINTENANCE**


- Refer to the following instructions carefully for product maintenance.
- Keep the product clean and free of surface contamination.
- Clean the product with a soft cloth damp with water and neutral soap. Avoid to use of corrosive chemical products, solvents or aggressive detergents.
- Make sure the product is dry before further use.
- Do not use or leave the product in particularly dirty or dusty environments

## **TECHNICAL FEATURES**

NOTE: For any doubt on the installation procedure or on product application, please contact our technical services or our local distributor

<b>COIL</b>	
Coil length	150 ... 500 mm (5.9 ... 19.7 in)
Sensor internal diameter	40 ... 150 mm (1.6 ... 5.9 in)
Cord diameter	7.2 ±0.2 mm (0.28 ±0.007 in)
Jacket material	Polyphenylene and thermoplastic elastomer
Fastening	Bayonet holder
Weight	150 ... 500 g (5.3 ... 17.6 oz)
<b>ELECTRICAL CHARACTERISTICS FOR MODEL WITHOUT INTEGRATOR</b>	
Nominal output rate	120 mV / kA @ 60 Hz (RMS values) 100 mV / kA @ 50 Hz (RMS values) Refer to the value indicated on the product label
Max measurable current	600 A with 150 ... 280 mm (5.9 ... 11 in) coil length 2500 A with 290 ... 410 mm (11.4 ... 16.1 in) coil length 5000 A with 420 ... 500 mm (16.5 ... 19.7 in) coil length
Coil resistance	170 ... 690 Ω
Accuracy	Class 1-A1 according to IEC 61869-10
Frequency	50/60 Hz
Maximum primary voltage	600 V CAT IV, Service Entrance
Pollution degree	3, Uncontrolled Environment
Insulation test voltage	7400 VRMS / 5 s
<b>ELECTRICAL CHARACTERISTICS FOR MODEL WITH INTEGRATOR</b>	
Power voltage	4 ... 26 VDC
Max consumption	5 mADC
Nominal output rate	333 mV / FS (RMS values) FS changes according to the model: 200, 250, 600, 1000 A Refer to the value indicated on the product label
Positioning error	Better than ±1% of reading
Frequency	50/60 Hz
Maximum primary voltage	600 V CAT IV, Service Entrance
Pollution degree	3, Uncontrolled Environment
Insulation test voltage	7400 VRMS / 5 s
<b>CONNECTION CABLE FOR MODEL WITHOUT INTEGRATOR</b>	
Type	3 x 24 AWG shielded
Length	3 m (9.8 ft). Other lengths on request: 5, 7, 10, 15 m (16.4, 23.0, 32.8, 49.2 ft)
<b>CONNECTION CABLE FOR MODEL WITH INTEGRATOR</b>	
Type	5 x 24 AWG shielded
Length	3 m (9.8 ft). Other lengths on request: 5, 7, 10, 15 m (16.4, 23.0, 32.8, 49.2 ft)
<b>ENVIRONMENTAL CONDITIONS</b>	
Protection degree	IP68
Altitude	Up to 2000 m over sea-level
Operating temperature	-35 ... +75°C (-31 ... +167°F) up to 2500 A with 150 ... 410 mm (5.9 ... 16.1 in) coil length -35 ... +60°C (-31 ... +140°F) up to 5000 A with 420 ... 500 mm (16.5 ... 19.7 in) coil length
Storage temperature	-40 ... +90°C (-40 ... +194°F)
Relative humidity	0 ... 95%
Installation and use	Uncontrolled Environment, outdoor use
<b>STANDARD COMPLIANCE</b>	
IEC, UL standards	ANSI/CAN/UL 2808, CSA C22.2 NO. 61010-1-12, IEC 61010-2-032, IEC 61010-1 Ed3, IEC 60529

Documents / Resources



[algodue MFC140-UI-O Rogowski Coil](#) [pdf] User Manual

MFC140-UI-O, MFC140-UI-OF, MFC140-UI-O Rogowski Coil, MFC140-UI-O, Rogowski Coil, C oil

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.