



## Allflex APR450 Reader User Guide

[Home](#) » [Allflex](#) » Allflex APR450 Reader User Guide 

**Allflex APR450 Reader**



The Allflex APR450 Reader is made to read livestock electronic identification Tags (EID) that offer simple-to-use essential reading and management capabilities and delivers outstanding value even for small farms.

## Contents

- [1 Getting Started](#)
  - [1.1 Battery Charge](#)
- [2 Initial Configuration](#)
- [3 Device Properties](#)
- [4 Display](#)
- [5 Keypad](#)
- [6 Quick Reading Steps](#)
  - [6.1 Assigning Tags](#)
- [7 What is in the Box](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

 
## Getting Started

### Battery Charge

The device should be fully charged before the first use.  
To charge, use the provided Magnetic-USB power source.  
Connecting the USB cable:

The magnetized connectors “find” the proper orientation almost automatically by attracting each other in the appropriate order.

**Note:** DO NOT FORCE a connection to the reader. If it does not insert smoothly, verify that it is correctly oriented.

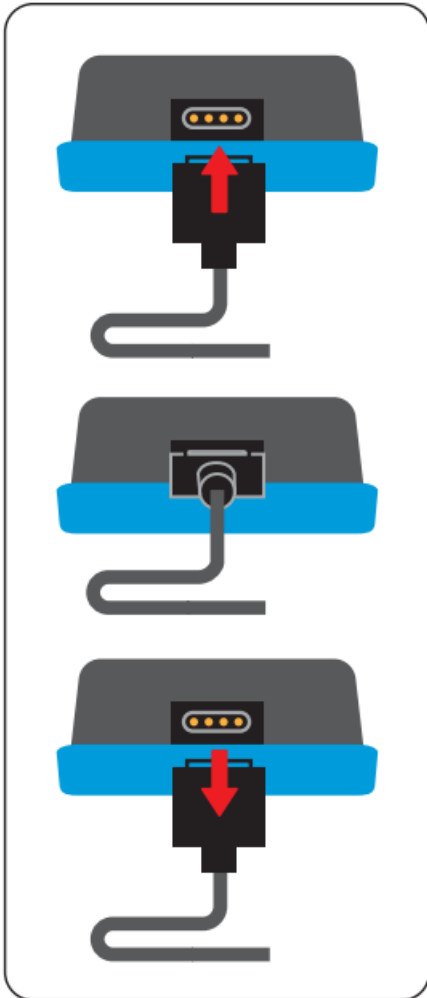


Charging is complete if no bars are flashing anymore



To disconnect, pull the connector away from the device

 When fully charged, the battery info will show '100%,' and you can see a rough estimation for operating time in Standby Mode and continuous Read Mode.

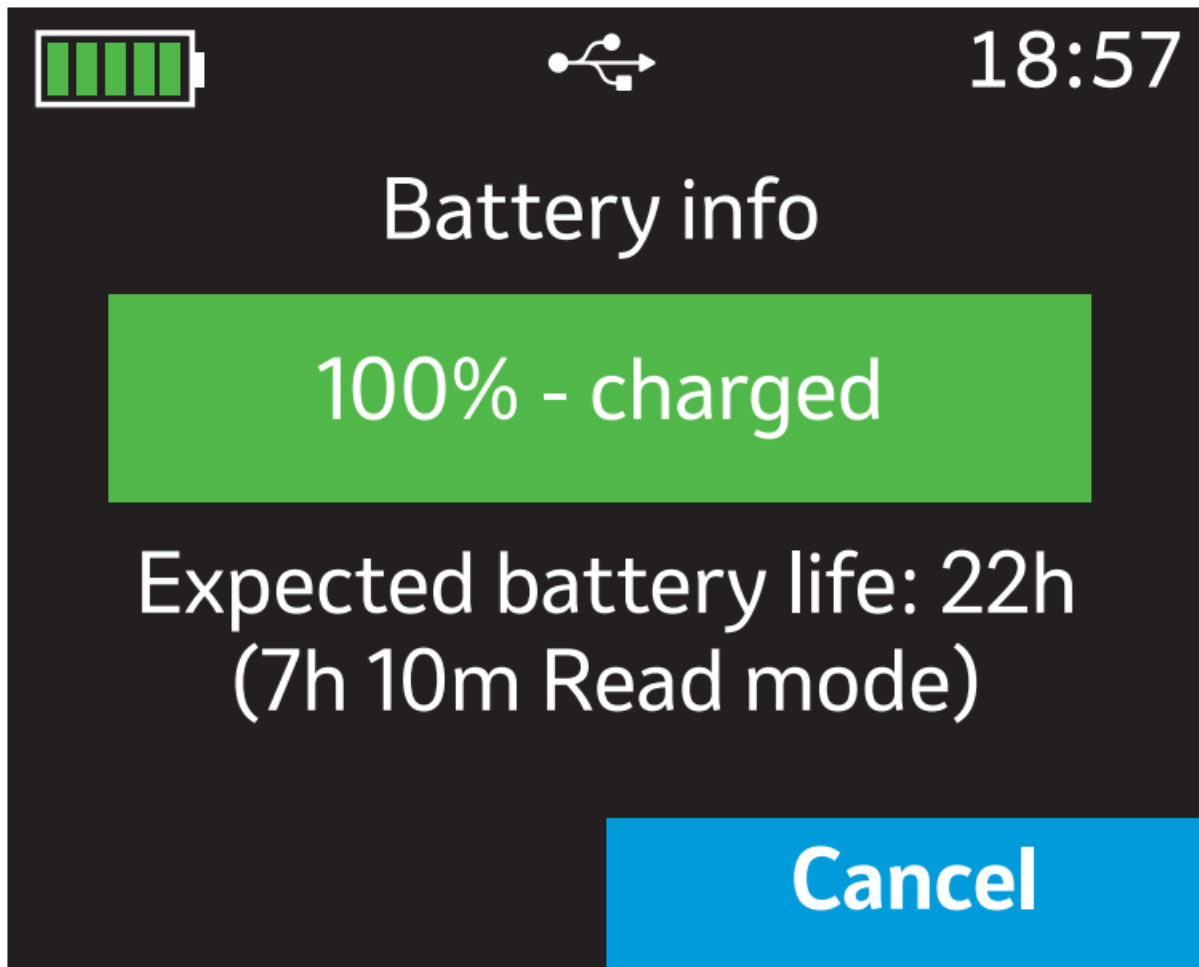

## Initial Configuration

### Set Language:

The default display language will be English at first start-up. You can change the language by accessing the menu, going to "setup," and choosing "set language." Navigating the options using the direction keys, you can then select your language preference by pressing ENTER.



18:57

## Sett language

English (Default)

Nederlands / Dutch

Francais / French

Deutsch / German

 
Italiano / Italian

Portugues / Portuguese

Cancel

### Set Read mode:

By default, the reader is set to 'Single Read' - one scan click per animal.  
Choosing the 'Continuous mode' enables batch reading.

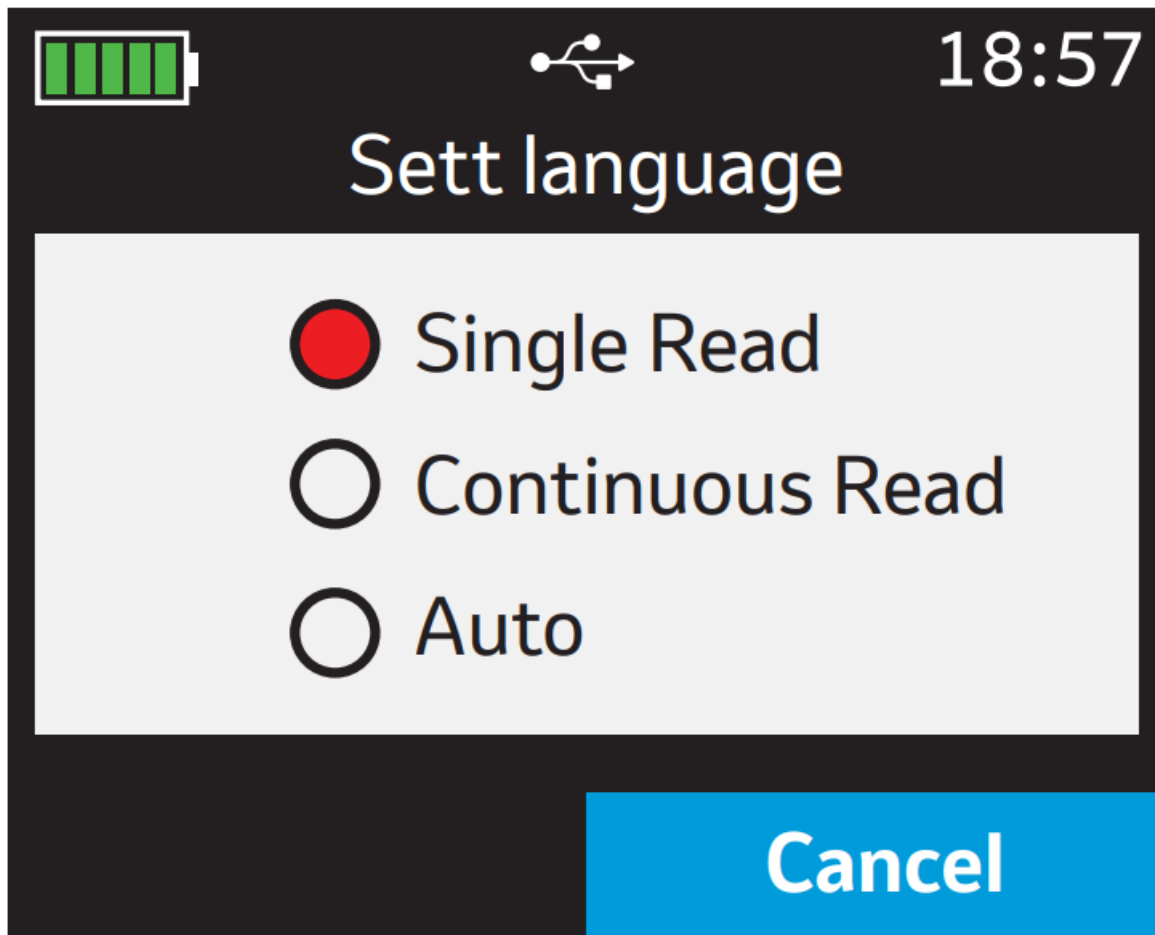

## Device Properties

### Multi-Color Status Led

The color changes according to the charging status when the display is switched of

### Blue Status Led

Used to indicate the connection status when the display is switched of



## Display

### Battery Status Indicator

 
Shows the approximate battery level. It also displays battery faults, such as high temperature.

### USB connection

Indicates when the reader is connected via USB

### Clock

Clock time in 24-hour mode

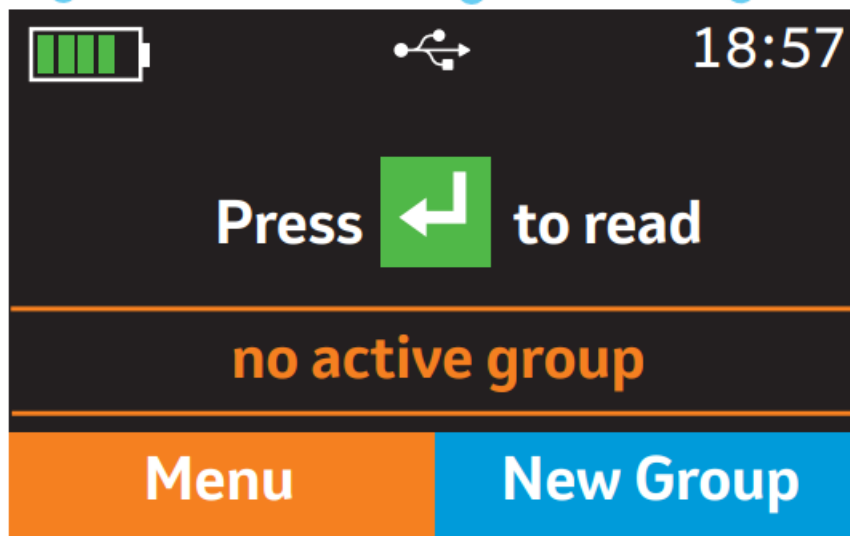

### Left Soft-Key

Performs various functions depending on the associated screen display

### Right Soft-Key

Performs various functions depending on the associated screen display

Keypad



**Left Soft-Key**

 
**Power On/  
ENTER Key**

**Right Soft-Key**

**Direction Keys**

For navigation,  
scrolling, and  
character selection  
in input fields

**Alphanumeric  
Keys for data  
entry**

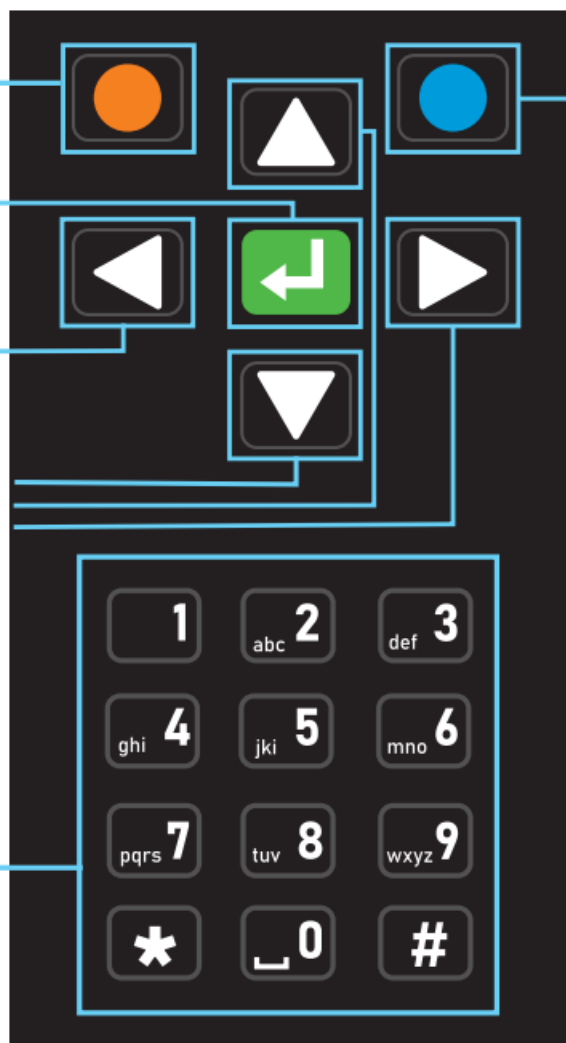

**NOTE:** Press the down button key for >2 seconds to switch off the device


### Quick Reading Steps



 Not  
Recommended



Best  
Orientation

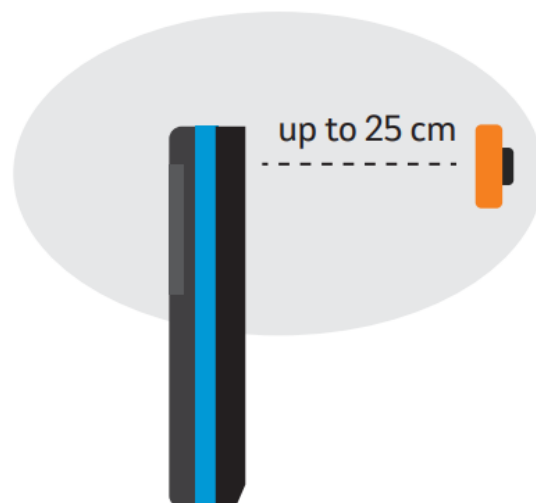

Reading EID Tags:

1. Press ENTER to Read
2. Scan the EID tag near the field lines of the reader
3. The device's RGB LED signal will turn on, as well as the signalization motors (sound and vibration)



4. The tag will be shown on the display screen when successfully read




5. A 'No Tag' message will appear on the screen if the reading fails




#### Assigning Tags

 1. At the home display, press the New Group button
2. Insert Group Name using the direction keys to navigate the letters, numbers, or symbols

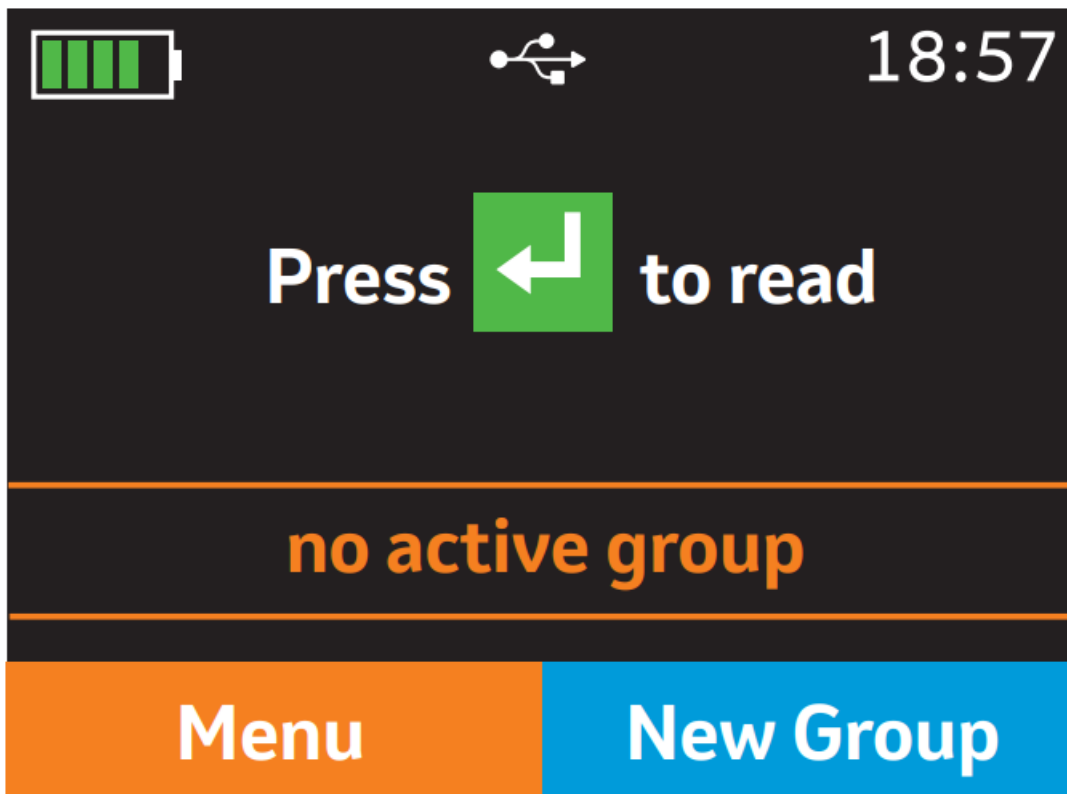

 
3. When finished, press 'Close' to exit the keyboard, and confirm the name by pressing ENTER.
4. To assign tags to the group created, enter the group and start reading.

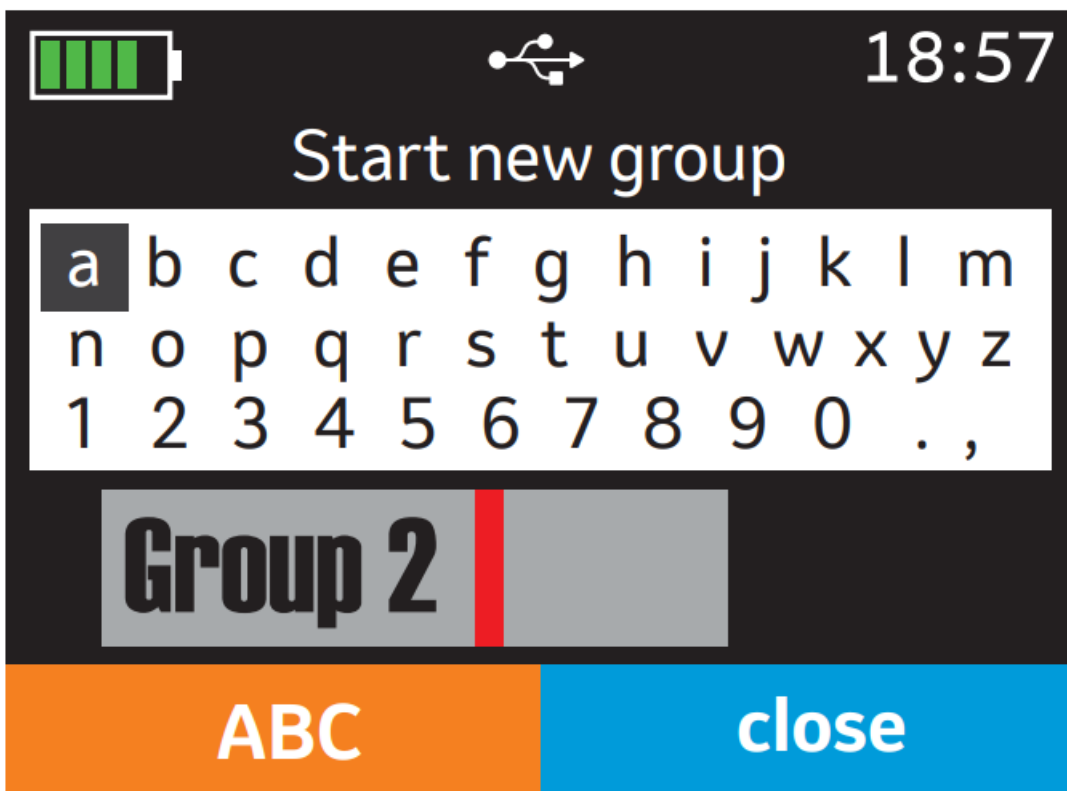

**NOTE:** After 10.000 records within one group, the device will force the user to create a new group

## What is in the Box

 ATB400 – Transport box

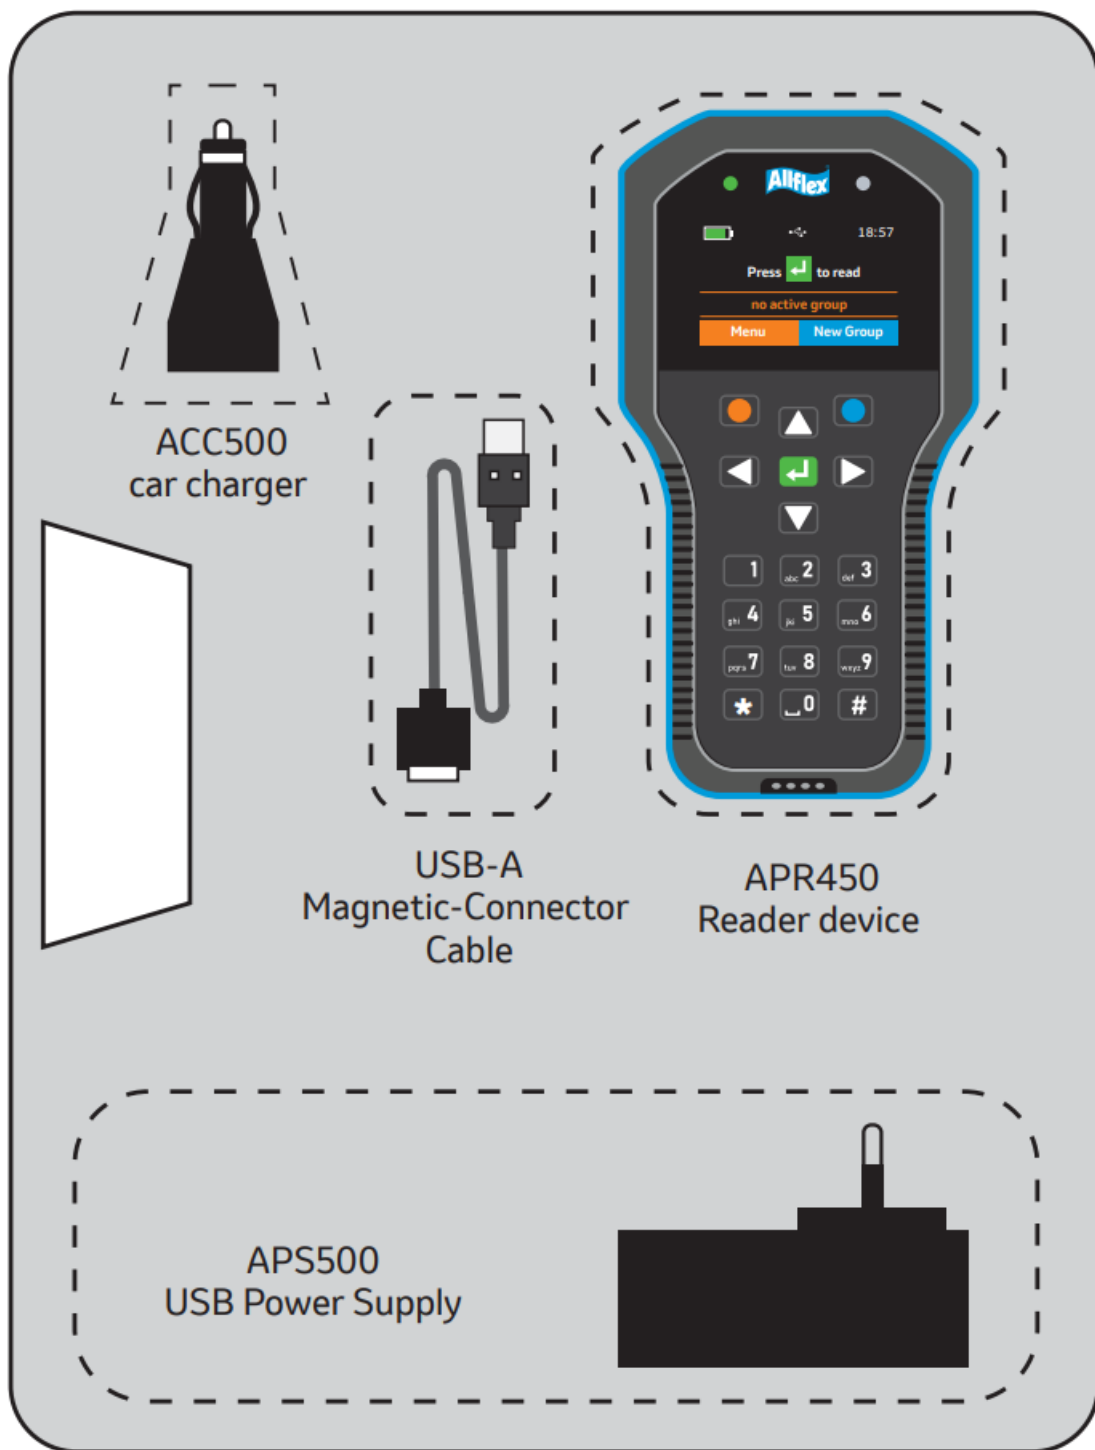


For more information visit





## Documents / Resources

 <p>The Allflex APR450 Reader is made to read livestock electronic identification Tags (EID) that offer simple to use essential reading and management capabilities and delivers outstanding value even for small farms.</p>	<p><a href="#">Allflex APR450 Reader</a> [pdf] User Guide APR450_new mob, APR450 Reader, APR450, Reader</p>
---	---

Manuals+