

ALPHA DATA ADM-VPX3-9Z5-RTM Rear Transition Module User Manual

[Home](#) » [ALPHA DATA](#) » ALPHA DATA ADM-VPX3-9Z5-RTM Rear Transition Module User Manual 



ADM-VPX3-9Z5-RTM
User Manual
Document Revision: 1.0
8th June 2021

Contents

- 1 Introduction
 - 1.1 Key Features
 - 1.2 References & Specifications
- 2 Installation
 - 2.1 Software Installation
 - 2.2 Hardware Installation
 - 2.2.1 Handling Instructions
- 3 Functional Description
 - 3.1 Block Diagram
 - 3.2 Assembly Drawing
 - 3.3 Connector Definitions
 - 3.4 LED Definitions
 - 3.5 JTAG Interface
 - 3.5.1 On-board Interface
 - 3.5.2 JTAG Voltages
 - 3.6 SATA Connectors
 - 3.7 FireFly Connectors
 - 3.8 CAN BUS Header
 - 3.9 RS232 Dtype
 - 3.10 GPIO Headers
- 4 Documents / Resources
 - 4.1 References
- 5 Related Posts

Introduction

The ADM-VPX3-9Z5-RTM is a 3U, VPX, Rear Transition Module (RTM) designed to interface with Alpha Data ADM-VPX3-9Z5 Zynq Ultrascale+ FPGA board.

The ADM-VPX3-9Z5-RTM provides complete breakout of all backplane signals providing the user with complete flexibility during development and debug.

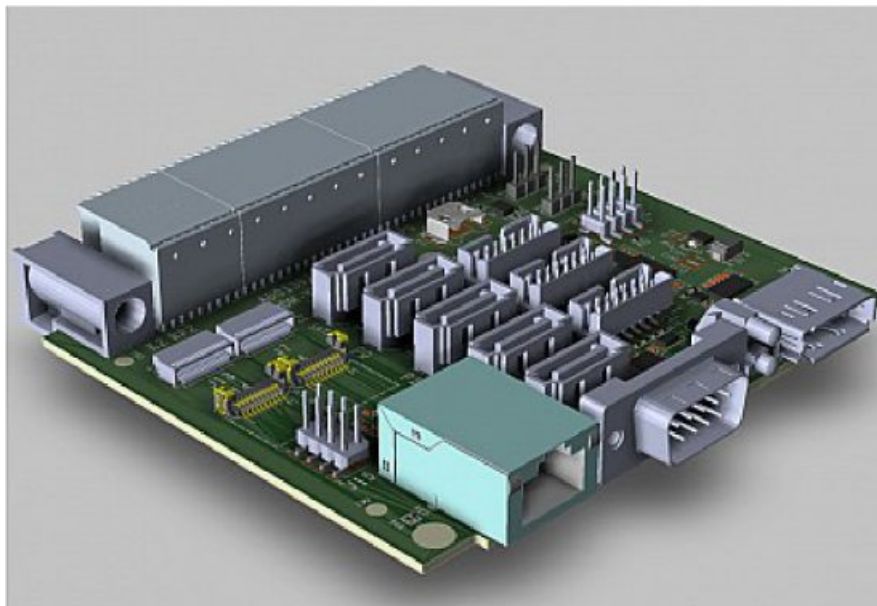


Figure 1: ADM-VPX3-9Z5-RTM

Key Features

PS GTR IO

- IO Connectors from the GTR lanes from the PS side of the ADM-VPX3-9Z5:
 - One Gigabit Ethernet RJ45 port, available on the front panel
 - 1 SATA interface, via an internal standard connector
 - 1 DisplayPort interface, 2 lanes wide, available via the front panel
- 1 Serial COM port interfaces, available on the front panel
- 1 Serial CAN BUS interfaces, available on an internal header
- RTC Battery connection header
- GPIOs routed to an internal header which can be looped back via jumper links (for internal testing).
- 12 HSSIO differential pairs – connected to GTH lanes on the PL side of the ADM-VPX3-9Z5:
 - Two Firefly connectors (8 HSSIO pairs)
 - 4 SATA interfaces, via internal standard connectors (4 HSSIO pairs)
- Xilinx JTAG programming header

References & Specifications

ANSI/VITA 46.0	VPX Baseline Standard, October 2007, VITA, ISBN 1-885731-44-2
ad_ug_1341	ADM-VPX3-9Z5 User Manual, June 2021, Alpha Data,

Table 1: References

Installation

Software Installation

Please refer to the ADM-VPX3-9Z5 area on the Alpha-Data support site for access to system monitoring utilities, documentation and FPGA reference designs.

Hardware Installation

Handling Instructions

The components on this board can be damaged by electrostatic discharge (ESD). To prevent damage, observe ESD precautions:



- Always wear a wrist-strap when handling the card
- Hold the board by the edges
- Avoid touching any components
- Store in ESD safe bag.

Functional Description

Block Diagram

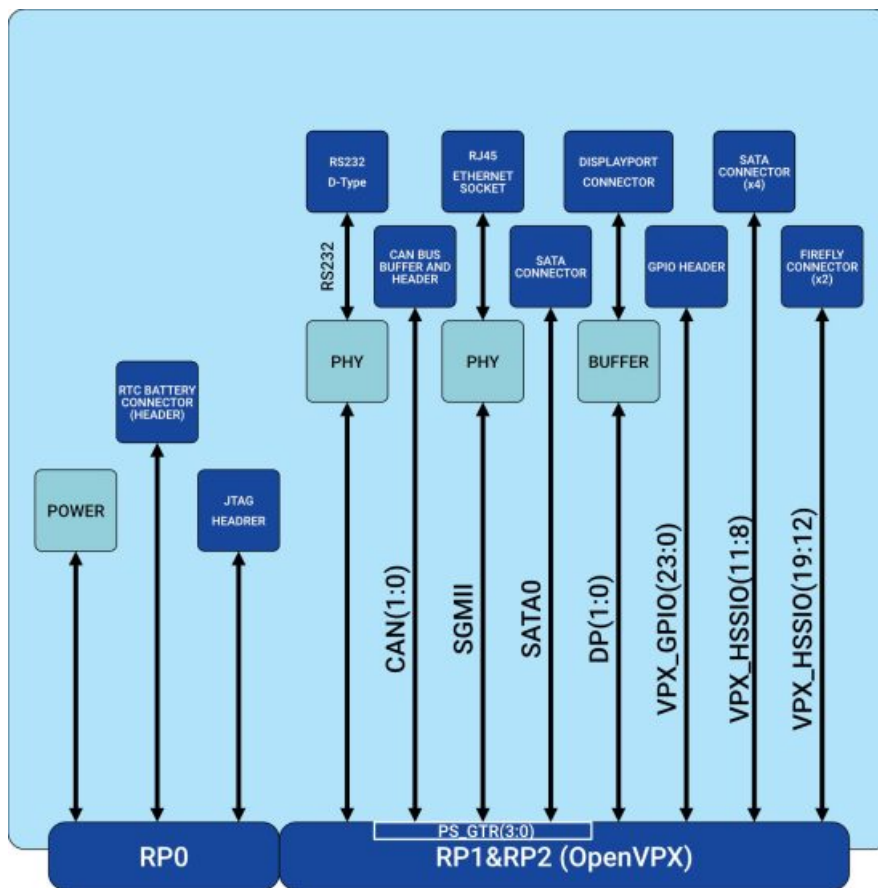


Figure 2 : ADM-VPX3-9Z5-RTM Block Diagram

Assembly Drawing

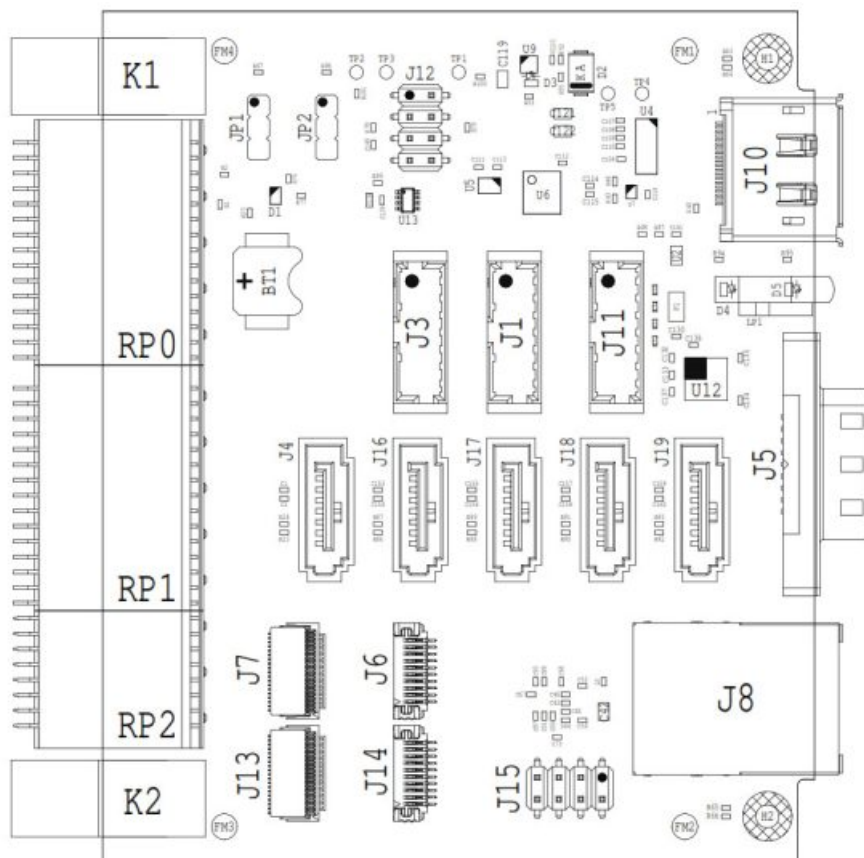


Figure 3 : ADM-VPX3-9Z5-RTM Top View

Connector Definitions

The description of the connectors on the board status shown below:

Comp. Ref.	Function
JP1	NVMRO – not required on ADM-VPX3-9Z5
JP2	GPIO Enable. position 1-2 = GPIO Headers Disabled : 2-3 = Enabled
J12	CANBUS Header
J10	DisplayPort Connector
BT1	RTC Battery Holder
J1+J3	GPIO Headers
J11	Xilinx Programming cable Connector
J4	PS side SATA interface
J16-J19	PL side SATA connectors
J5	RS232 Serial Port
J6-J7	Firefly Connector 0
J13-J14	Firefly Connector 1
J8	Ethernet
J15	GPIO Header

Table 2 : Connector Definitions

LED Definitions

The position and description of the board status LED is shown in LED Locations:

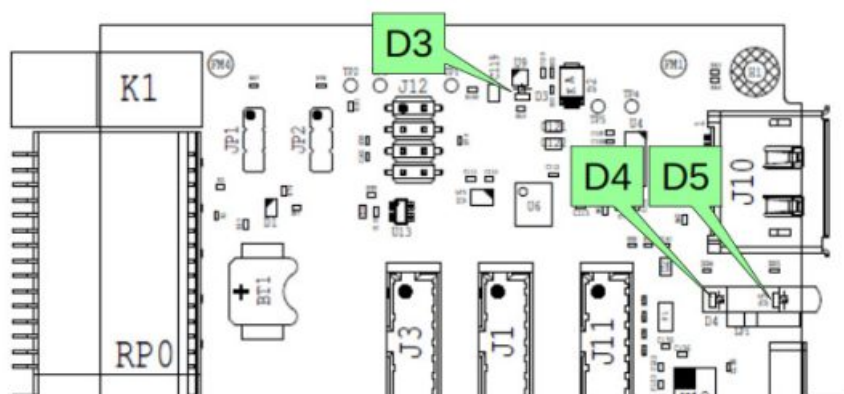


Figure 4 : LED Locations

Comp. Ref.	Function	ON State	Off State
D3(Green)	Display Port 3.3V Supply Status	Normal operation	Fault
D4(Green)	PSMIO31 LED	PSMIO=Logic Low	PSMIO=Logic High
D5(Green)	3.3V Supply Status	Normal operation	Power Off

Table 3 : LED Definitions

JTAG Interface

On-board Interface

The JTAG boundary scan chain can be accessed via a standard header (J11). This allows the connection of the Xilinx JTAG cable for FPGA debug and Flash programming via the Xilinx toolchain.

JTAG Voltages

The Vcc supply provided to the JTAG cable on the config header is +3.3V and is protected by a poly fuse rated at 350mA.

SATA Connectors

The ADM-VPX3-9Z5-RTM board has five standard right angle SATA receptacles for use with SATA compliant storage devices. One of the SATA devices is connected to the PS side and the remainder are connected to the PL side.

Connector	Signal	FPGA Bank	P pin	N pin
PS_SATA (J4)	PS_TX0	PS Bank 505	AH39	AH40
	PS_RX0	PS Bank 505	AG41	AG42
PL_SATA0 (J16)	DP2_C2M	MGT Quad 226	AL6	AL5
	DP2_M2C	MGT Quad 226	AM4	AM3
PL_SATA1 (J17)	DP3_C2M	MGT Quad 226	AK8	AK7
	DP3_M2C	MGT Quad 226	AL2	AL1
PL_SATA2 (J18)	DP2_C2M	MGT Quad 226	AJ6	AJ5
	DP2_M2C	MGT Quad 226	AK4	AK3
PL_SATA3 (J19)	DP3_C2M	MGT Quad 226	AH8	AH7
	DP3_M2C	MGT Quad 226	AJ2	AJ1

Table 4 : SATA Connections

FireFly Connectors

Connector	Ref Des	FPGA Bank
0	J6-J7	MGT Quad 227
1	J13-J14	MGT Quad 228

Table 5 : Firefly Connectors

CAN BUS Header

Pin	Signal Name
1	GND
2	GND
3	CAN_GND
4	CAN_H
5	CAN_L
6	CAN_GND
7	CAN_L
8	CAN_H

Table 6 : Header J12

RS232 Dtype

Pin	Signal Name
1	—
2	TXD
3	RXD
4	—
5	GND
6	—
7	—
8	—
9	—

Table 7 : Header J5

GPIO Headers

Pin	Signal Name	FPGA Pin
1	P1_GP_1V8_P_10	AU11
2	P1_GP_1V8_P_9	AW11
3	P1_GP_1V8_N_10	AV11
4	P1_GP_1V8_N_9	AW10
5	GP4_1V8_P	AJ15
6	GP3_1V8_P	AM13
7	GP4_1V8_N	AK15
8	GP3_1V8_N	AN13
9	GP2_1V8_P	AN14
10	GP1_1V8_P	AJ14
11	GP2_1V8_N	AP14
12	GP1_1V8_N	AK14

Table 8 : Header J1

Pin	Signal Name	FPGA Pin
1	P1_GP_1V8_P_12	BB5
2	P1_GP_1V8_P_11	AV12
3	P1_GP_1V8_N_12	BB4
4	P1_GP_1V8_N_11	AW12
5	GP8_1V8_P	AM11
6	GP7_1V8_P	AM10
7	GP8_1V8_N	AN11
8	GP7_1V8_N	AN10
9	GP6_1V8_P	AL15
10	GP5_1V8_P	AL14
11	GP6_1V8_N	AM15
12	GP5_1V8_N	AM14

Table 9 : Header J2

Pin	Signal Name	FPGA Pin
1	GP_SE_3V3_5	D2
2	GP_SE_3V3_2	C3
3	GP_SE_3V3_4	C5
4	GP_SE_3V3_3	C6
5	GP_SE_3V3_6	C1
6	GP_SE_3V3_1	C4
7	GP_SE_3V3_7	D4
8	GP_SE_3V3_0	B1

Table 10 : Header J15

Revision History

Date	Revision	Nature of Change
8-Jun-21	1	Initial Release

© 2021 Copyright Alpha Data Parallel Systems Ltd.

All rights reserved.

This publication is protected by Copyright Law, with all rights reserved. No part of this publication may be reproduced, in any shape or form, without prior written consent from Alpha Data Parallel Systems Ltd.

Head Office Address: Suite L4A, 160 Dundee Street, Edinburgh, EH11 1DQ, UK Telephone: +44 131 558 2600 Fax: +44 131 558 2700 email: sales@alpha-data.com website: http://www.alpha-data.com	US Office 611 Corporate Circle, Suite H Golden, CO 80401 (303) 954 8768 (866) 820 9956 – toll free sales@alpha-data.com http://www.alpha-data.com
--	--

All trademarks are the property of their respective owners.

Page Intentionally left blank

Documents / Resources

 ALPHA DATA ADM-VPX3-9Z5-RTM User Manual Document Revision: 1.0 100 pages (2022)	ALPHA DATA ADM-VPX3-9Z5-RTM Rear Transition Module [pdf] User Manual ADM-VPX3-9Z5-RTM, Rear Transition Module, ADM-VPX3-9Z5-RTM Rear Transition Module, Transition Module, Module
 ALPHA DATA ADM-VPX3-9Z5-RTM User Manual Document Revision: 1.1 100 pages (2022)	ALPHA DATA ADM-VPX3-9Z5-RTM Rear Transition Module [pdf] User Manual ADM-VPX3-9Z5-RTM Rear Transition Module, ADM-VPX3-9Z5-RTM, Rear Transition Module, Transition Module, Module

References

-  [Accurate Business Information and Company Profiles from Leading Business Data - Data.com](#)
-  [Alpha Data - committed to providing solutions](#)