



Alpha Membrane Instruction Manual

[Home](#) » [Alpha](#) » Alpha Membrane Instruction Manual 

Contents

- [1 Alpha Membrane](#)
- [2 CLEANING AND MAINTAINING](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

ALPHA

SYSTEMS LLC.

Alpha Membrane



CLEANING AND MAINTAINING

Proper care and maintenance of the Alpha Systems roof membrane is critical to sustain years of trouble-free performance. Normal maintenance is simple, easy and requires no special materials.

Periodic cleaning (three to four times per year) is the primary maintenance required. Alpha Systems recommends using a non-abrasive household cleaner, such as dish soap, and a medium-bristled scrub brush. Do not use any harsh or highly abrasive products during routine cleaning. When finished cleaning, remember to thoroughly rinse the roof and sidewalls in order to remove any soap residue and to prevent streaking.

CARE SHOULD BE EXERCISED WHEN WORKING ON TOP OF YOUR UNIT! THE ROOF MAY BECOME SLIPPERY WHEN WET. DO NOT USE ACETONE, OR ANY OTHER PRODUCTS CONTAINING PETROLEUM DISTILLATES, ON THE ALPHA SYSTEMS ROOF MEMBRANE. USE OF THESE PRODUCTS WILL DAMAGE THE MEMBRANE.

Periodic inspection of the roof, during cleaning, is highly recommended. Check the membrane for signs of damage. If damage does occur, the membrane can most often be patched (refer to the Care and Repair Instructions).

The Alpha roof membrane is quite inert and will resist weathering well; nor does it require the periodic application of products to protect it from ultra-violet light or ozone. In fact, these products can often cause damage to the roof membrane.

While inspecting the roof during cleaning, it is also important to check the lap sealant used in all termination areas. Inspect the existing sealant around all accessories and fasteners for signs of cracking or voids.


If additional sealant is needed, Alpha's #1021 and/or #1010 sealant can be ordered through a local dealer or supply store. Please note **ONLY ALPHA BRAND SEALANTS CAN COME IN CONTACT WITH ALPHA ROOF MEMBRANE.**

TOLL FREE: 1-800-462-4698

www.alphalhc.us



Documents / Resources

	<p>ALPHA Alpha Membrane [pdf] Instruction Manual</p> <p>Alpha, Membrane</p>
---	---

Manuals+.