




ALPHACOOL Core DDR5-Ram Modul Instruction Manual

[Home](#) » [ALPHACOOL](#) » ALPHACOOL Core DDR5-Ram Modul Instruction Manual 



DDR5-Ram Modul
Instruction Manual

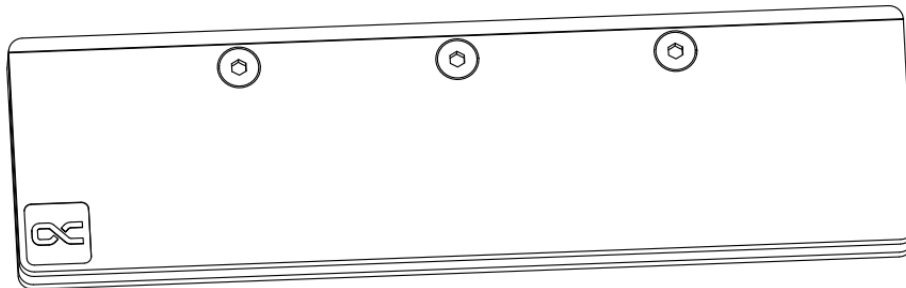

Contents

- [1 Core DDR5-Ram Modul](#)
- [2 Accessories](#)
- [3 Prepare](#)
- [4 Mounting the cooler](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Core DDR5-Ram Modul




Read the safety instructions before starting the installation.

Safety instruction



<https://www.alphacool.com/download/SAFETY%20INSTRUCTIONS.pdf>

Accessories

		
1x PAD 25mm x 124mm x 1,0mm	2x PAD 25mm x 124mm x 0,5mm	1x Hexagon


Compatibility Check

Before mounting, check the height of your DDR5 memory. The height of the PCB may vary due to different revisions. When mounting, make sure that the contacts of the RAM protrude far enough to ensure contact with the RAM slot.

Warning

Alphacool International GmbH is not liable for assembly errors occurring due to negligence, such as selecting an incompatible cooler.

Prepare

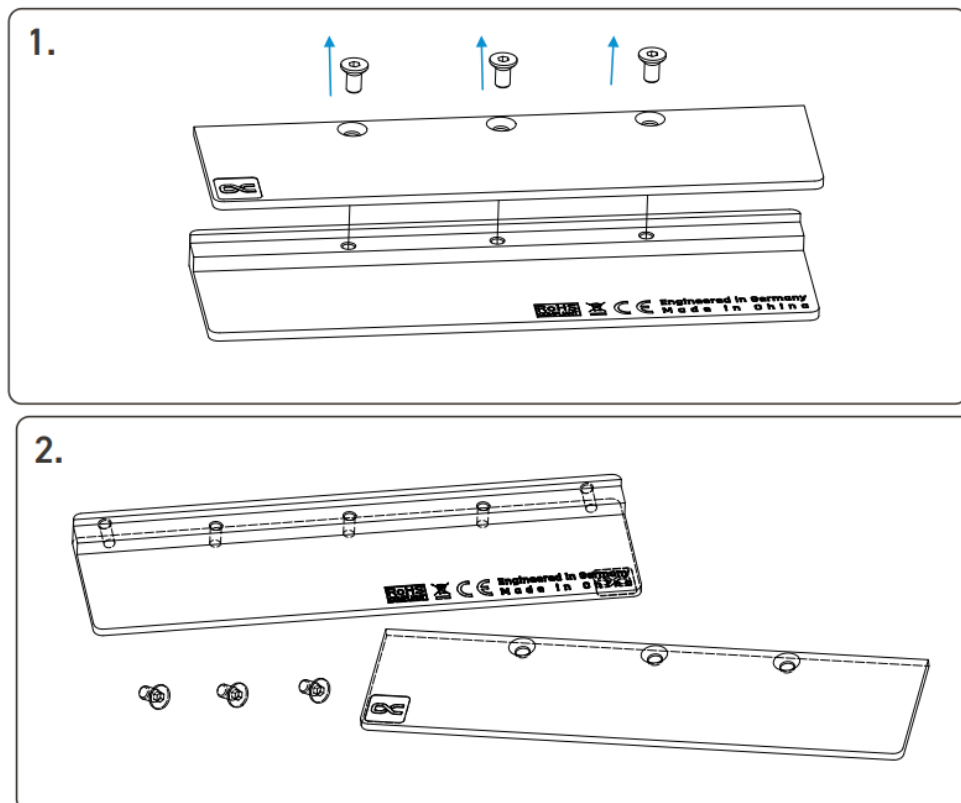


Place the hardware on an antistatic surface.

Extreme care must be taken. Components can easily be torn off. Clean dust and dirt from the hardware with a solvent (e.g. isopropanol alcohol). Unscrew your cooler by the three screws as shown.


Mounting the cooler

1. For double-sided storage: Place the 0,5mm pad in the cooler as shown.
2. For single-sided storage: place the 1,0mm pad in the cooler as shown.

1.

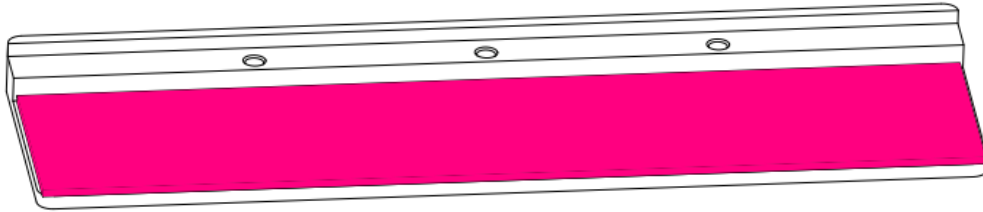


2.

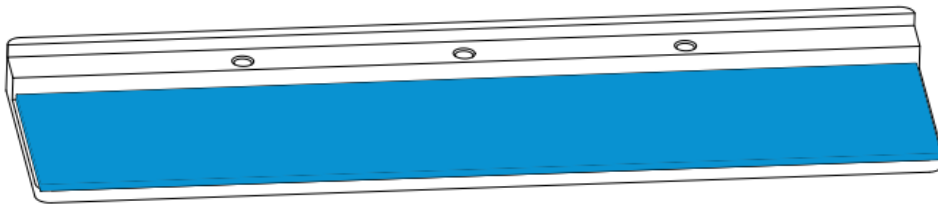


3. Place the memory on the pad as shown.
4. Then place the second 0,5 mm pad on the memory as shown.
5. Screw the previously removed cooler plate firmly back onto the cooler using the three screws.
6. Insert the module into a free memory slot on your mainboard.


3.

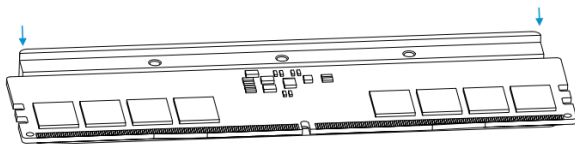


4.

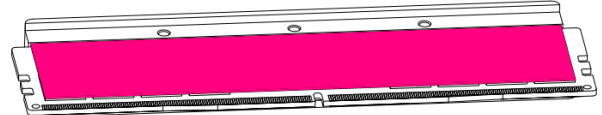


5.

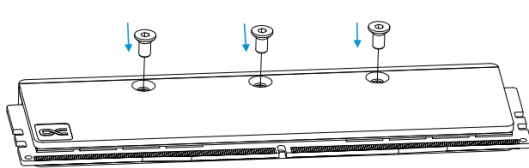

6.

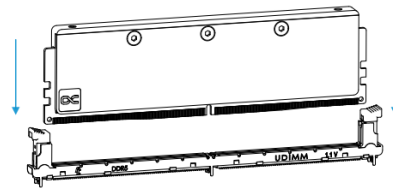

Mounting the optional cooler

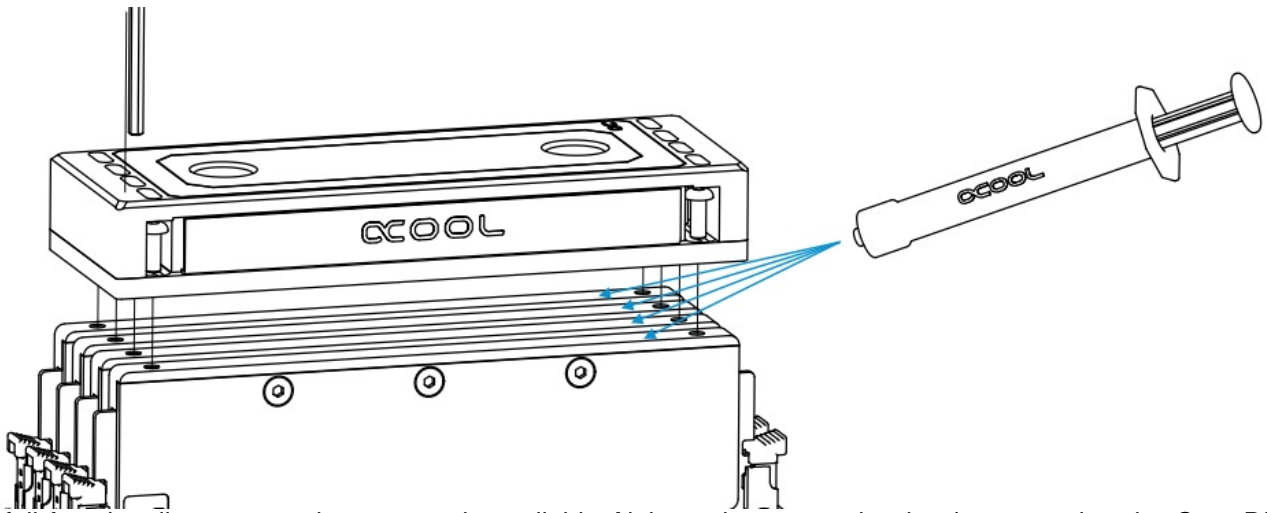

For full functionality, you need a separately available Alphacool water cooler that is screwed to the Core DDR5 modules. The corresponding manual is enclosed with the coolers.

| **CORE** **Alphacool**

Alphacool International GmbH
 Marienberger Str. 1
 D-38122 Braunschweig
 Germany

Support: +49 (0) 531 28874 – 0


Fax: +49 (0) 531 28874 – 22

E-mail: info@alphacool.com

<https://www.alphacool.com>

V.1.01-05.2022

Documents / Resources

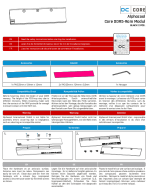	<p>ALPHACOOL Core DDR5-Ram Modul [pdf] Instruction Manual Core DDR5-Ram Modul, DDR5-Ram Modul, Ram Modul, Modul</p>
---	--

References

- [Alphacool International GmbH - Wasserkühlungs Spezialist!](#)