





# Alphacool VPP-D5 Pump Distro Plate Apex Instruction Manual

[Home](#) » [ALPHACOOL](#) » Alphacool VPP-D5 Pump Distro Plate Apex Instruction Manual 

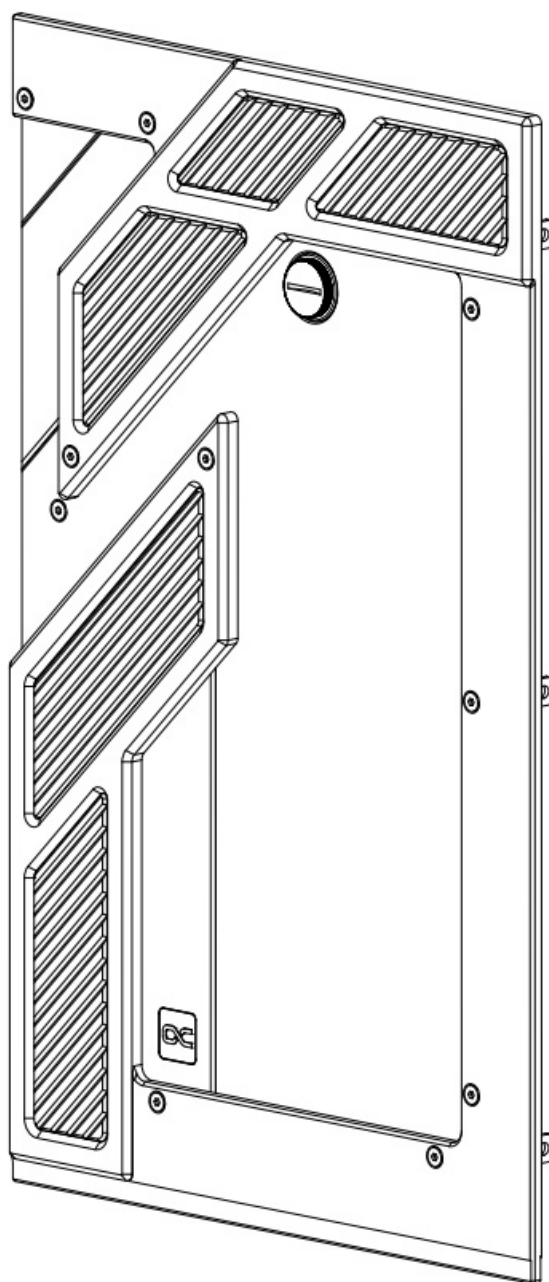

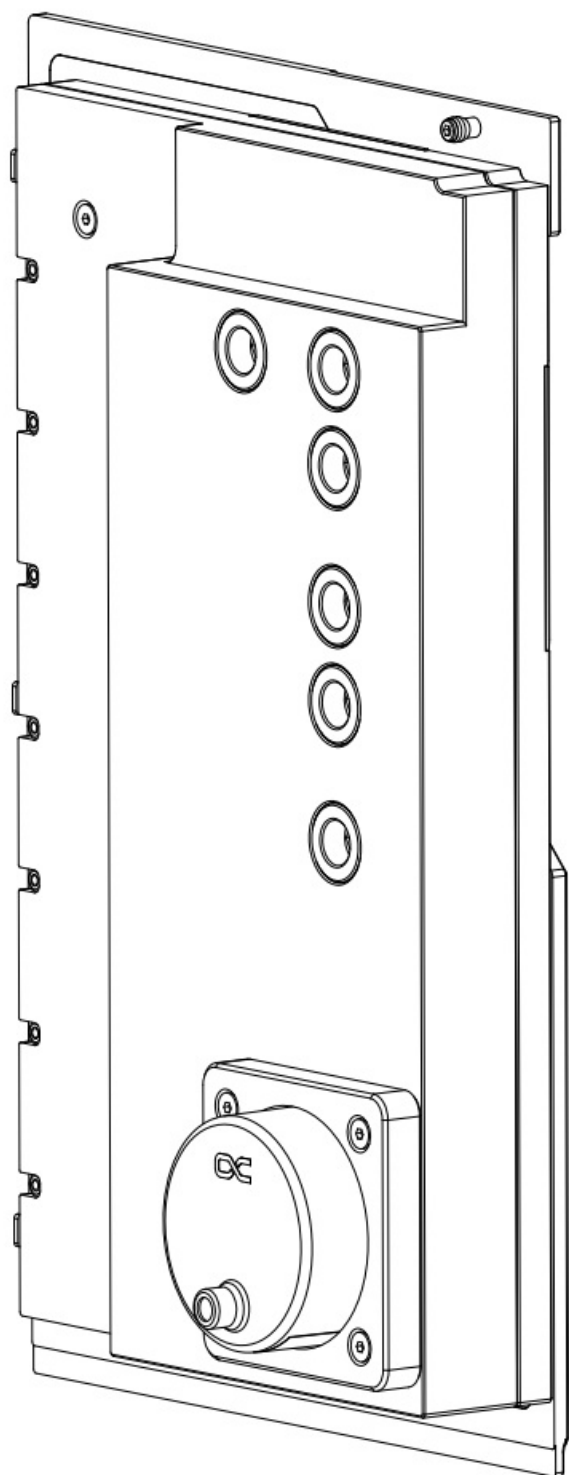

Alphacool VPP-D5 Pump Distro Plate Apex



**Contents**

- 1 Safety instructions
- 2 Accessories
- 3 Prepare the case
- 4 Bring the Distro Plate into position
- 5 Screw the Distro Plate to the case
- 6 Configuration inlet and outlet
- 7 Assembly example 1
- 8 Connect ARGB lighting
- 9 Connection pump cable
- 10 Filling and ventilation
- 11 Finishing touches
- 12 Dimensions in millimeter (mm)
- 13 CUSTOMER SUPPORT
- 14 Documents / Resources
  - 14.1 References


**Safety instructions**

	Safety instructions	
	Digital guide	


**Accessories**

\*Only the pre-assembled version includes the pump.


- 1x Apex Distro Plate Y60

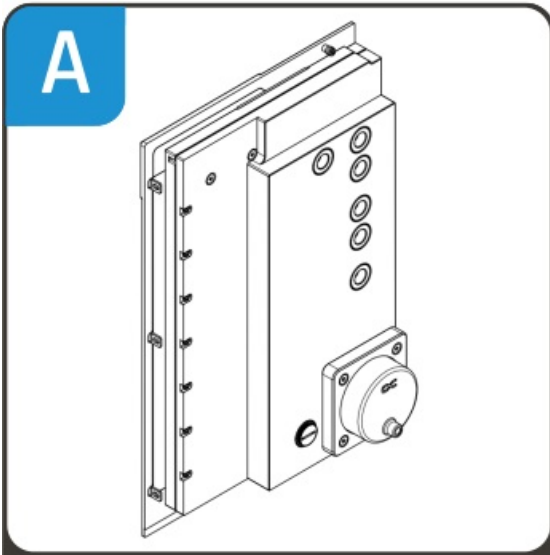

- 1x VPP-D5 Pump\*

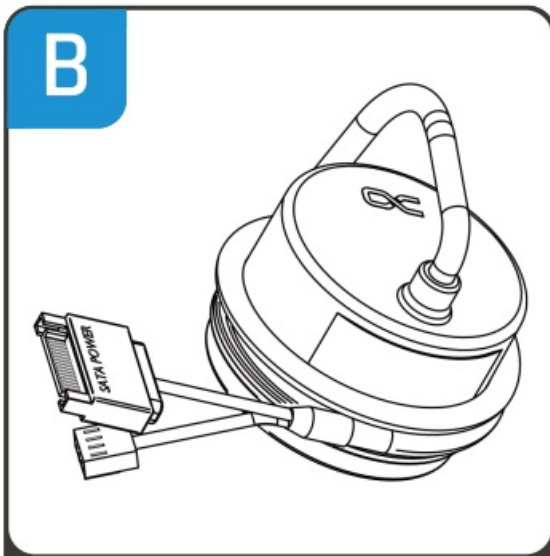


- 2x G1/4 Plug

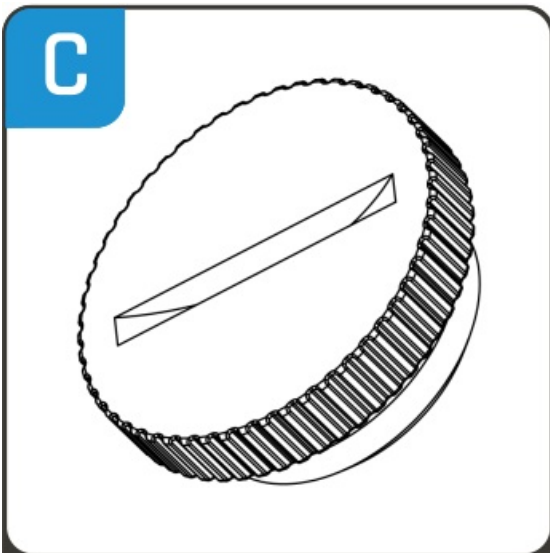

- 1x Plug tool





- 1x ARGB Adapter

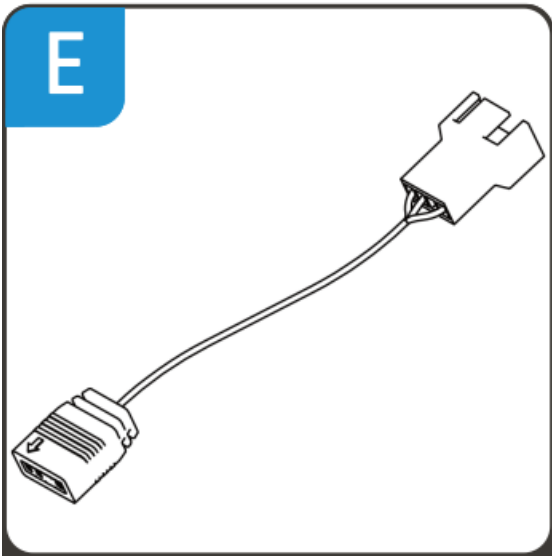


## Prepare the case

Remove side and front panel.

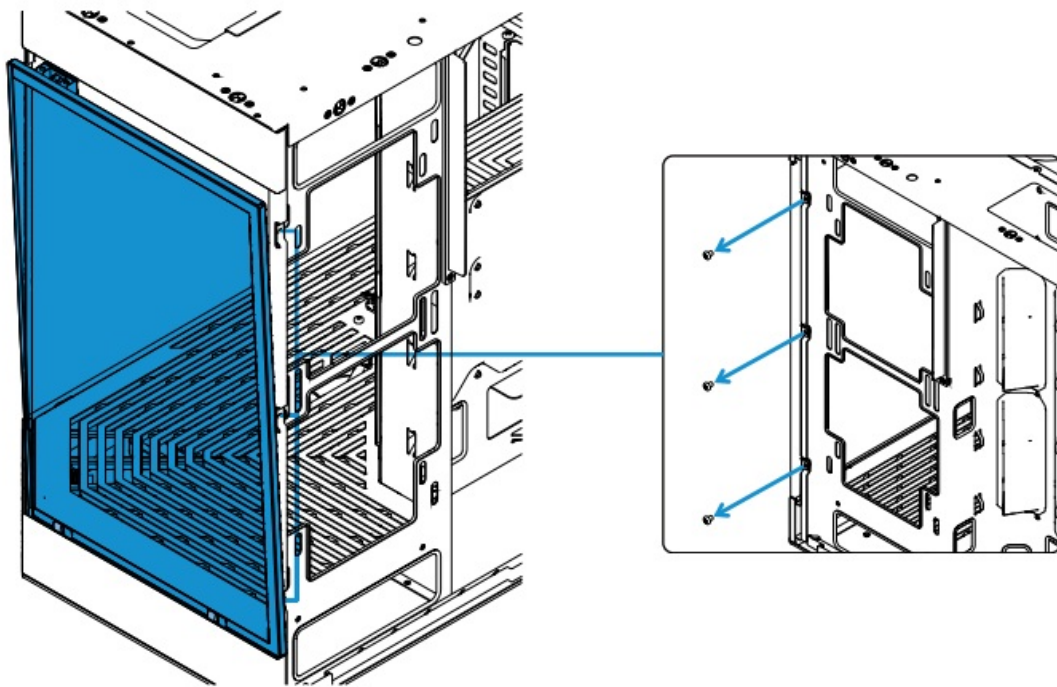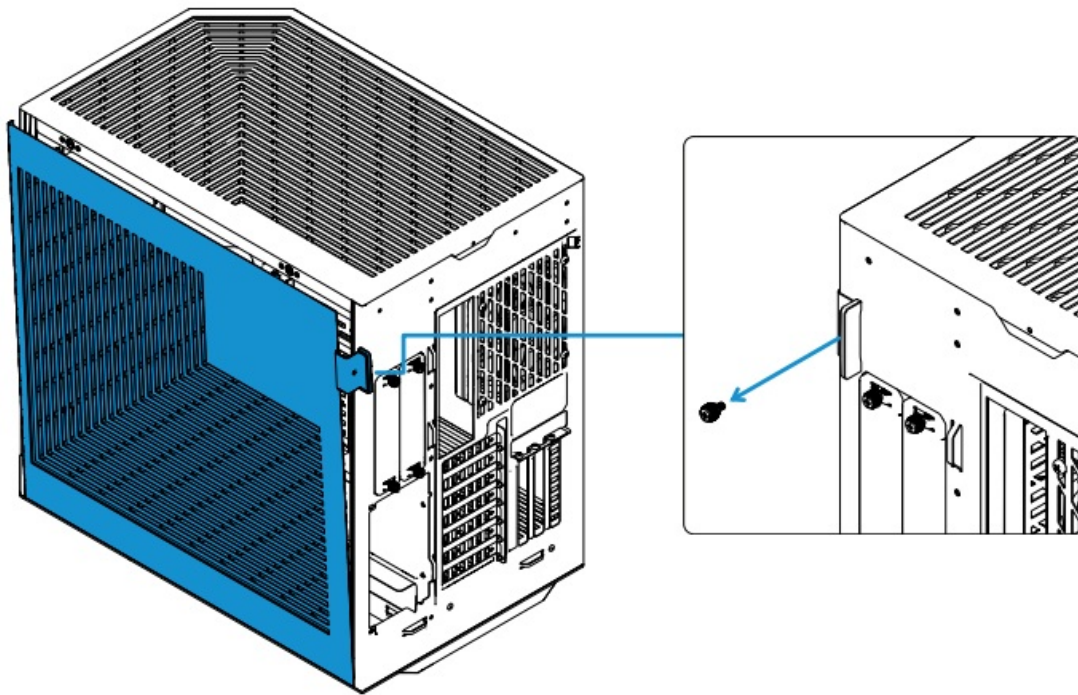

### **Bring the Distro Plate into position**


Distro Plate will be mounted like the front panel.

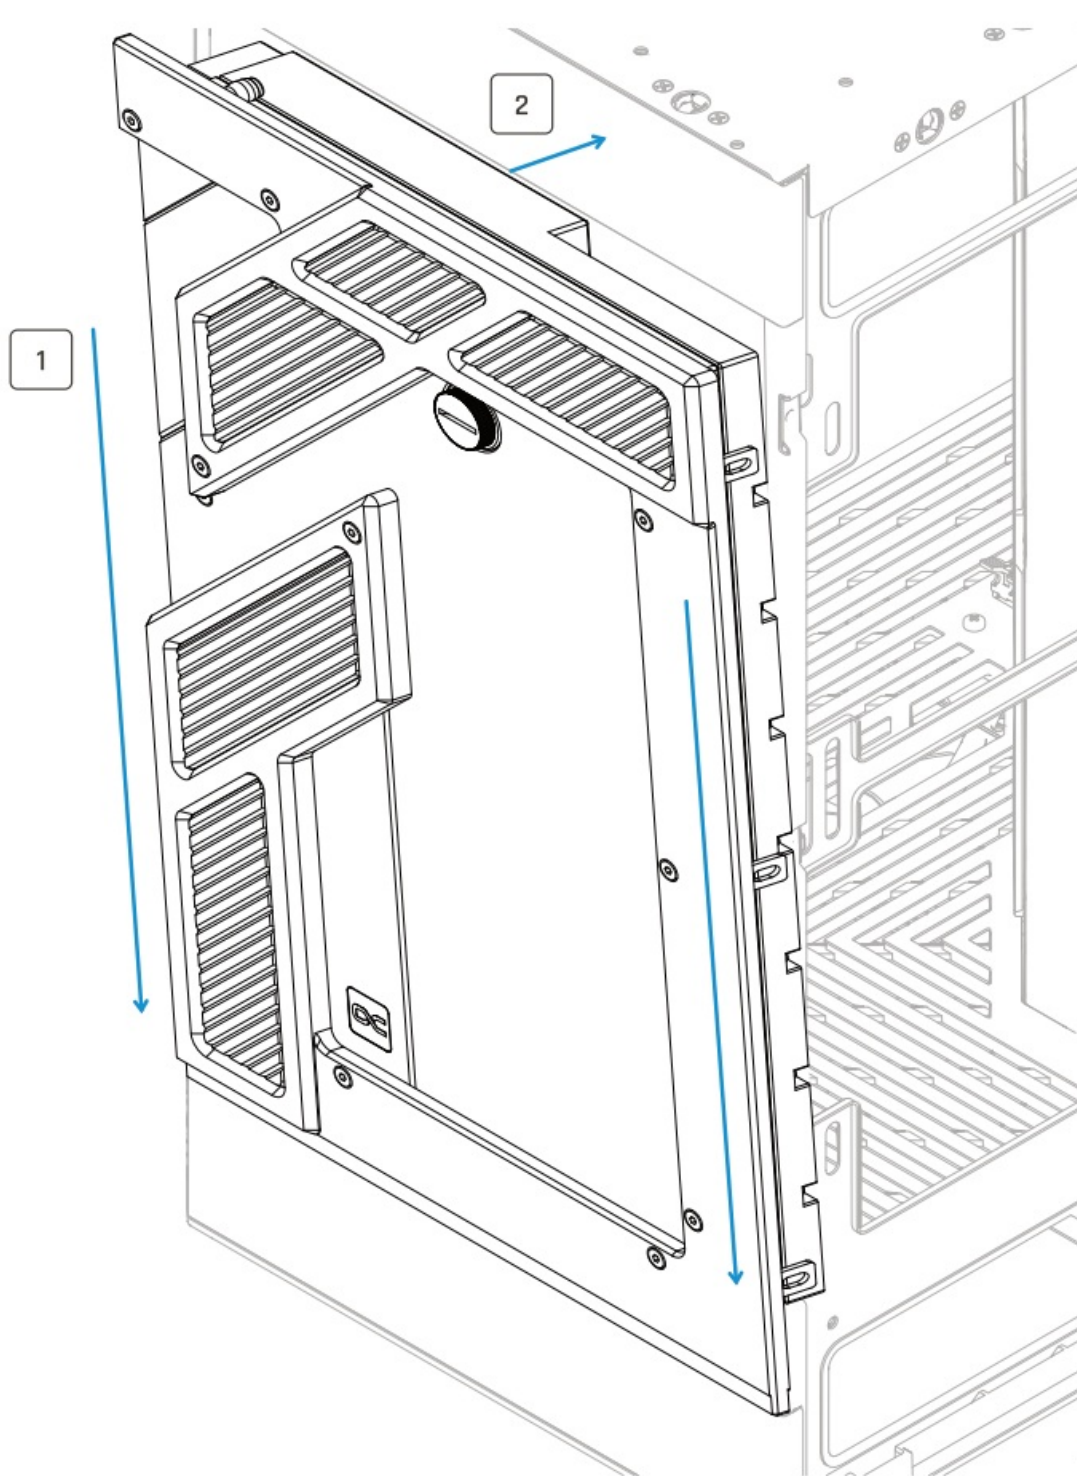

### **Screw the Distro Plate to the case**

Use the original screws from the case.



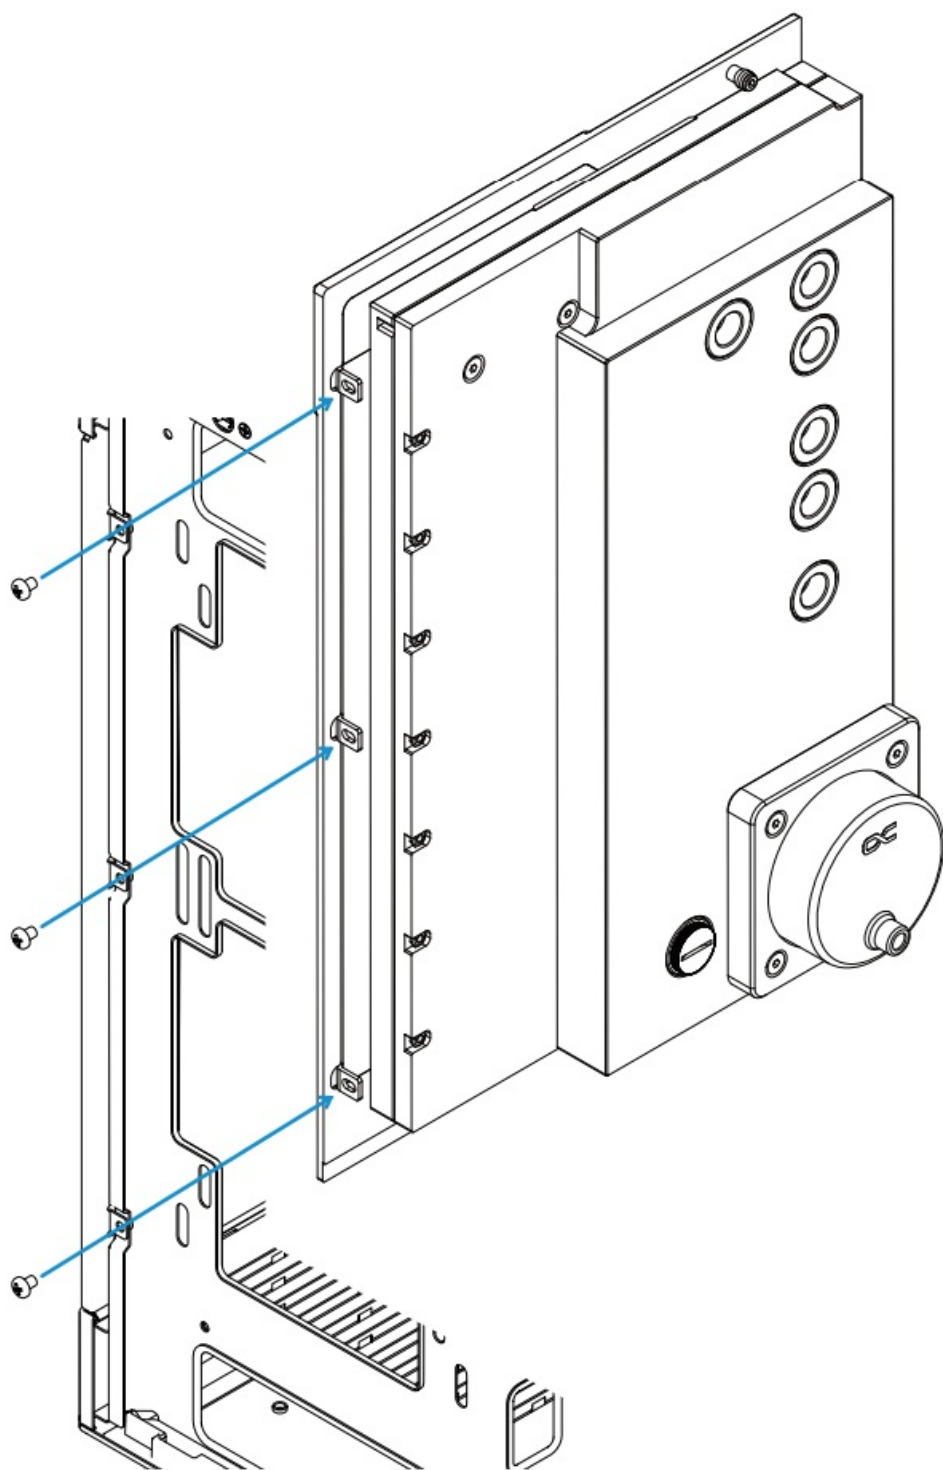


## Configuration inlet and outlet

### (Part 1)


(OUT) leads from the Distro Plate to the component.

(IN) comes back from the component to the Distro Plate.



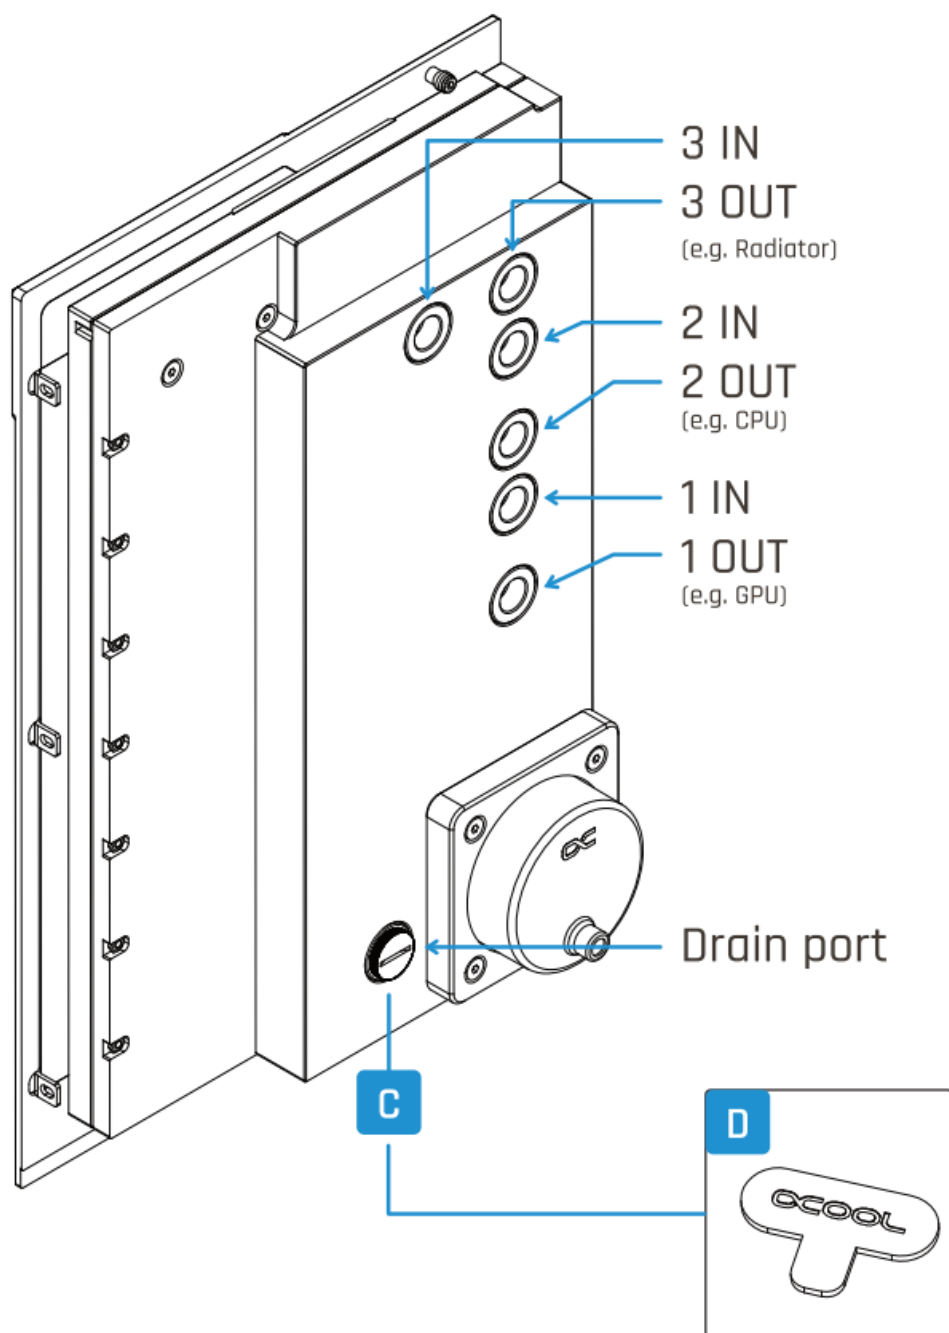


(Part 2)

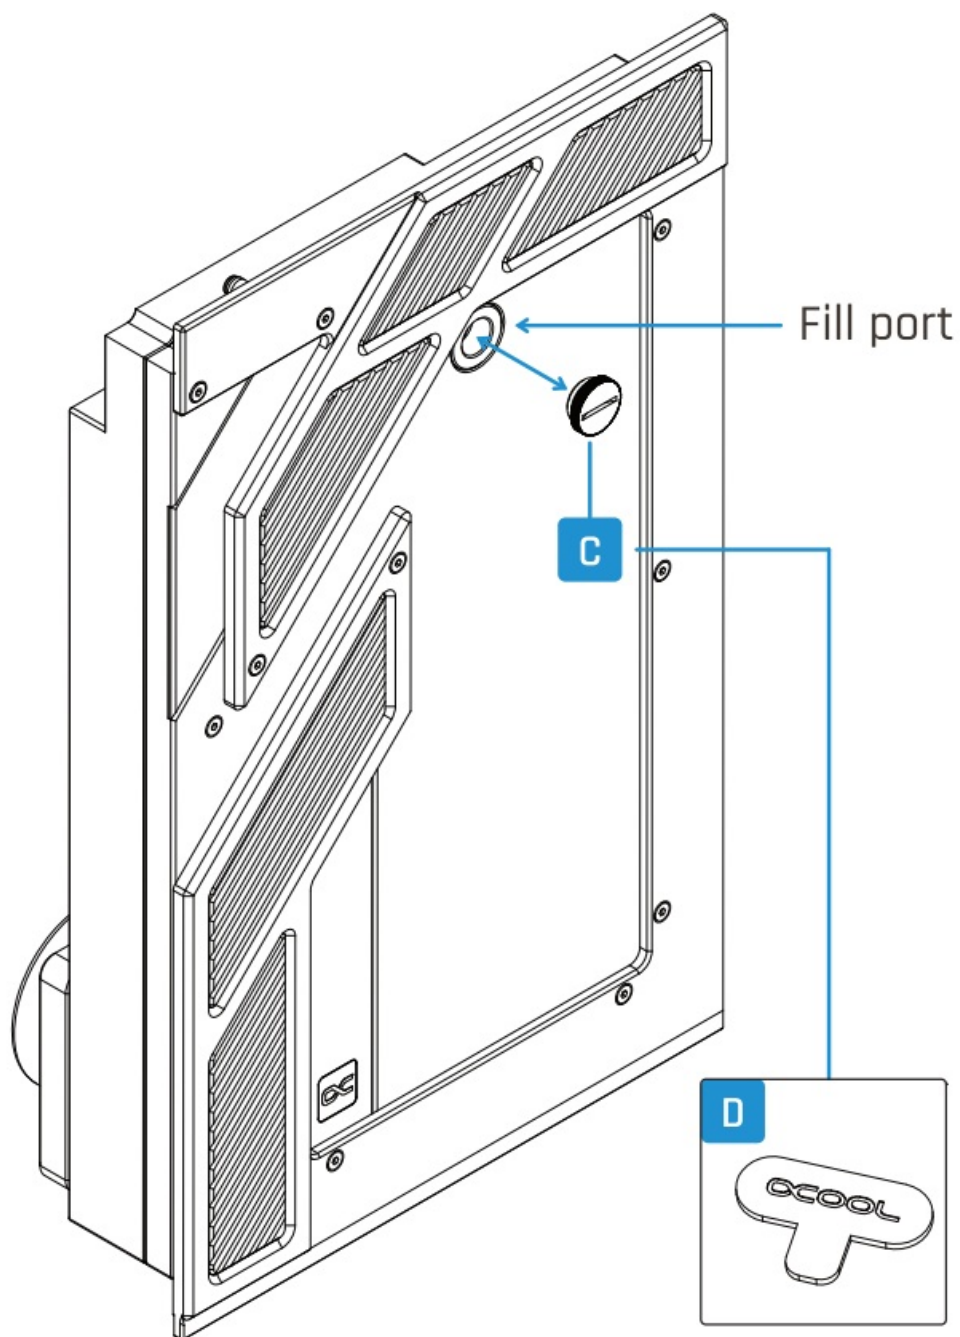


### Assembly example 1


If less than 3 components are to be connected, the remaining associated inlets and outlets must be bridged.

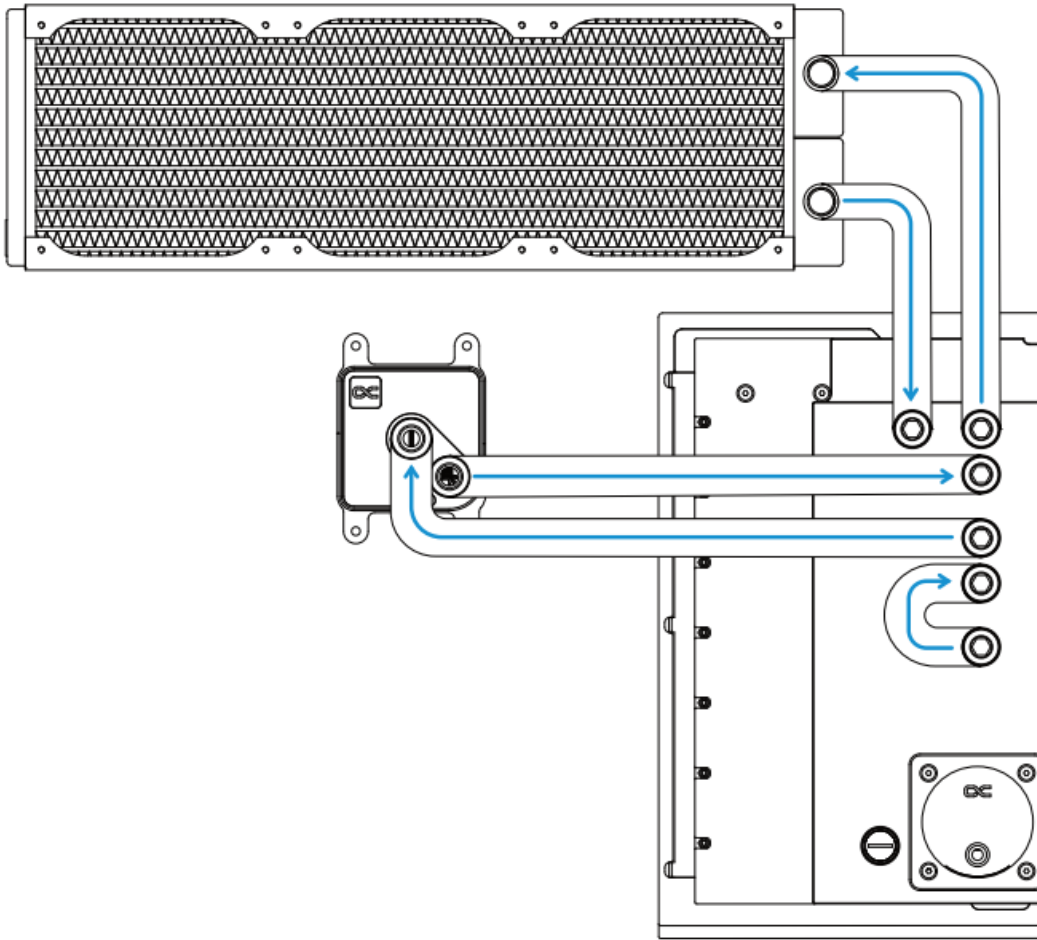


The assembly with three components may look as shown in the figure.

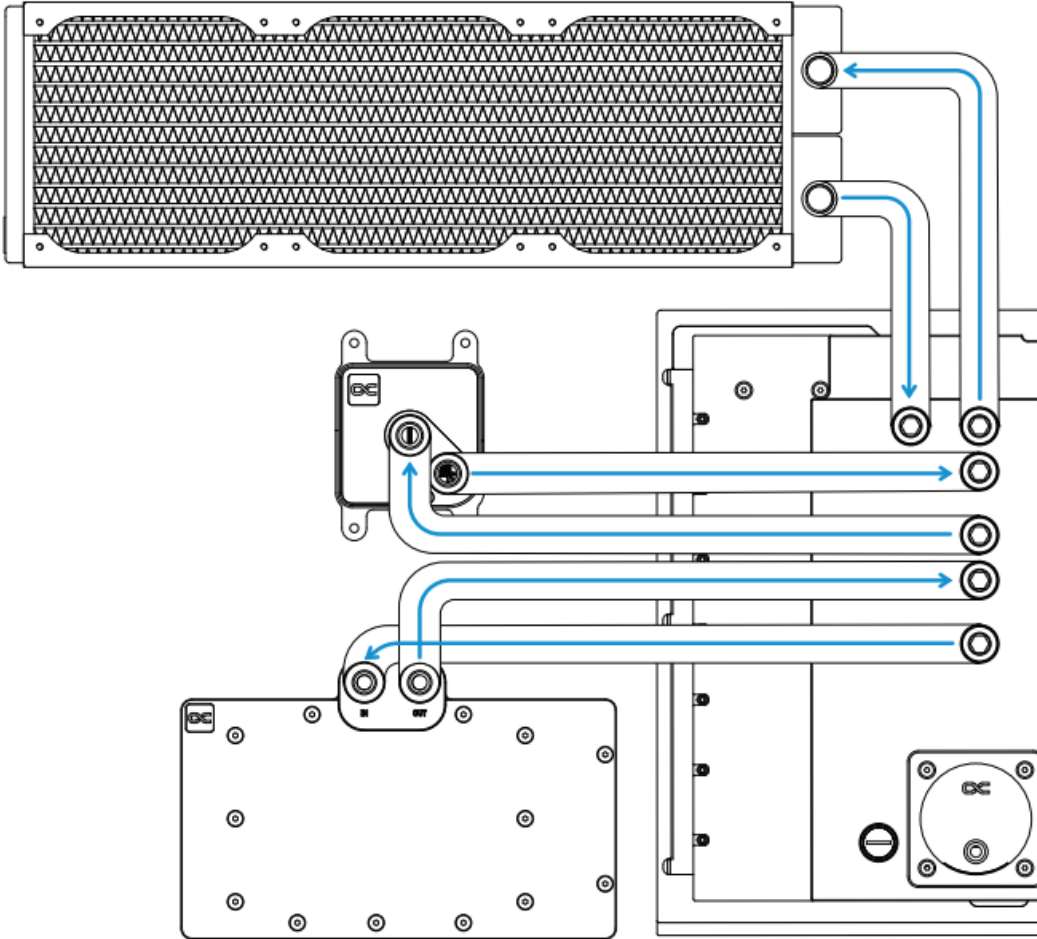


If more than 3 components are to be connected (e.g. another radiator), the setup can look as shown.

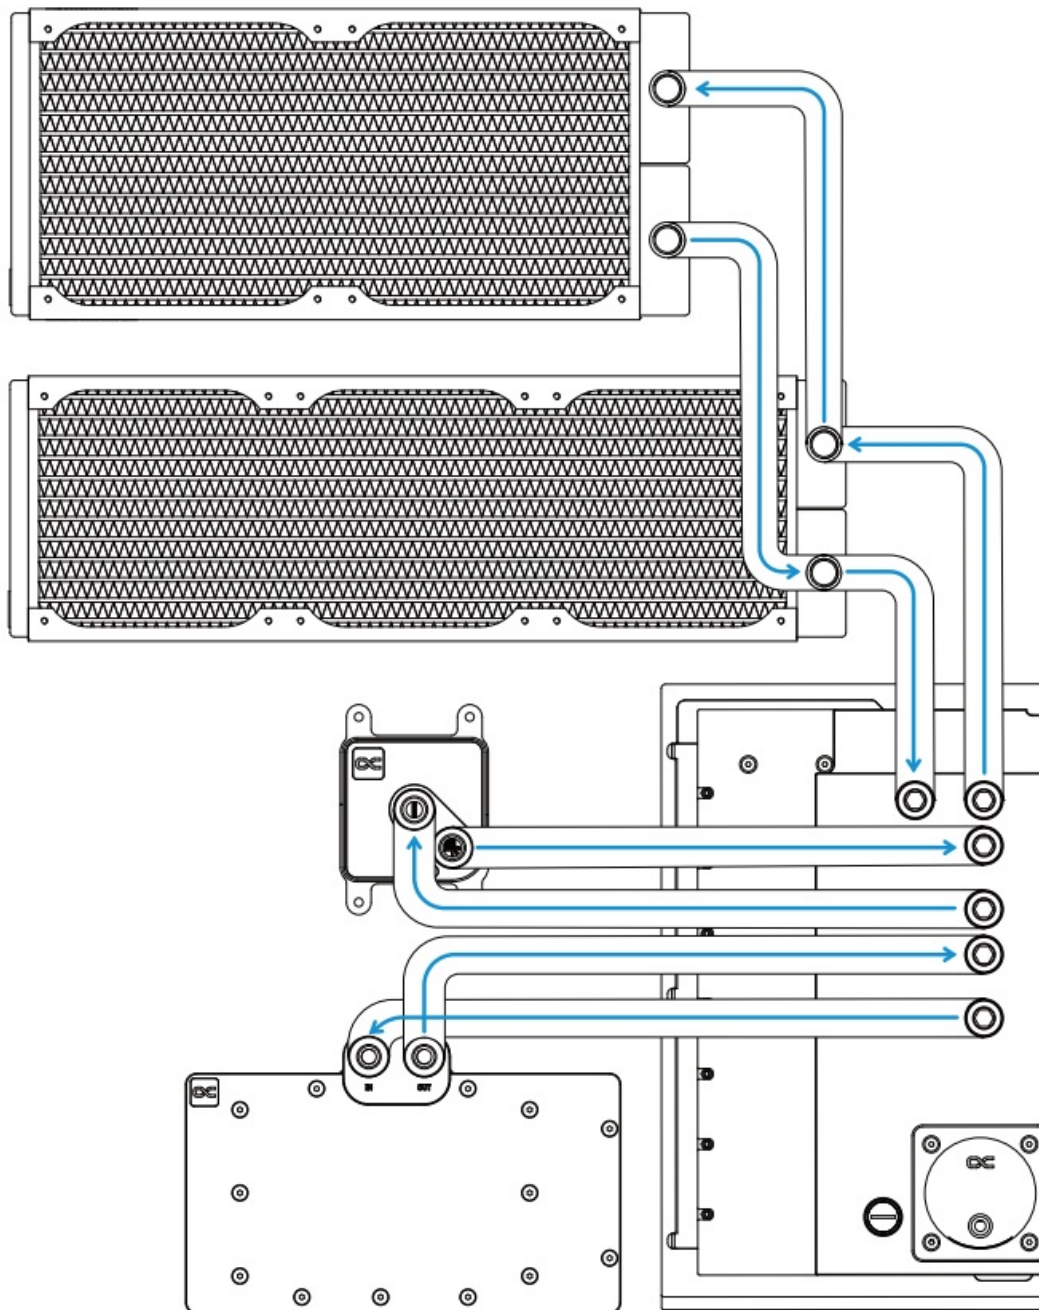

### Connect ARGB lighting

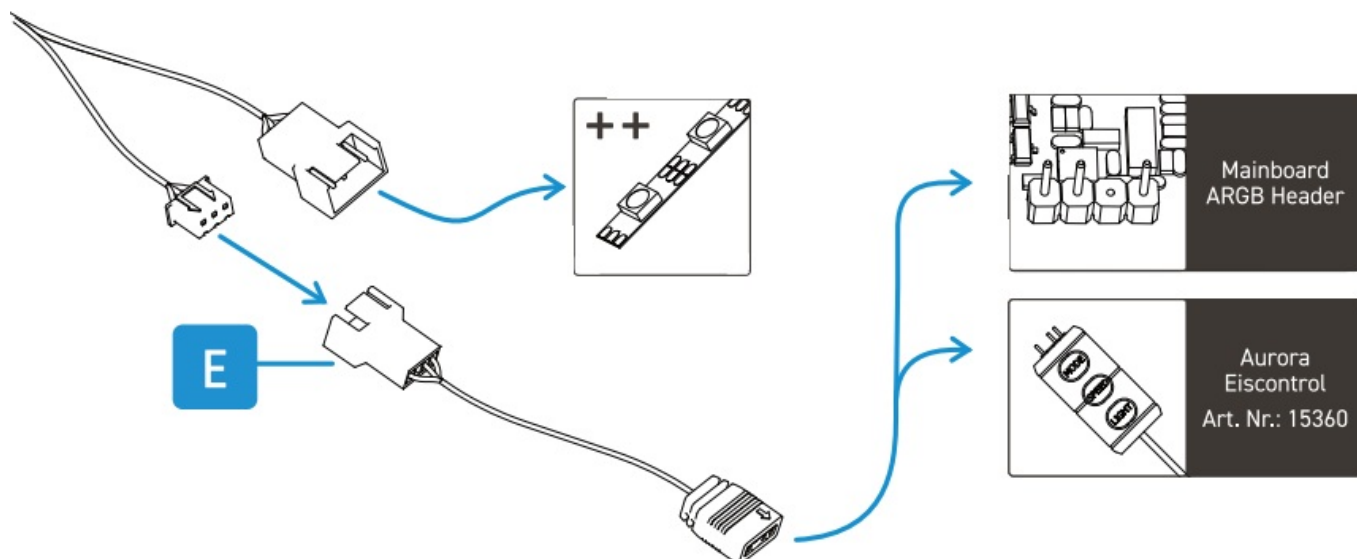

## Connection pump cable

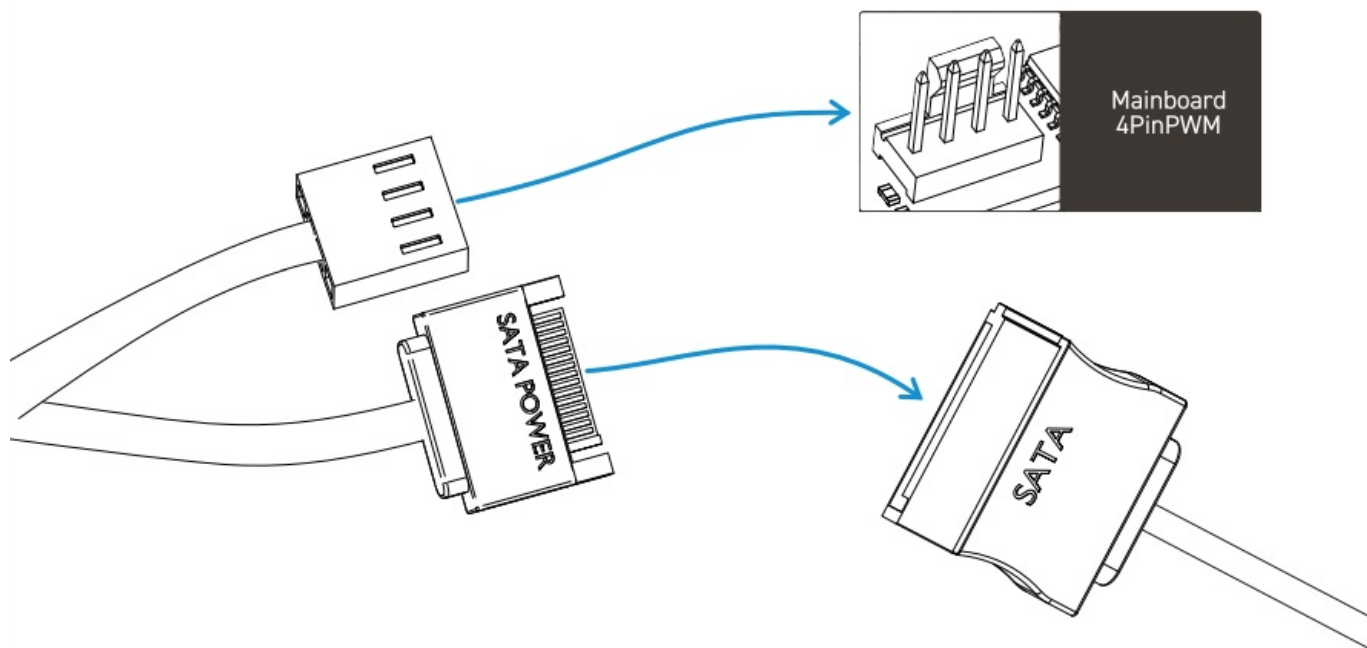

## Filling and ventilation

Fill the reservoir with suitable coolant. We recommend using only our own products for this purpose.


To remove trapped air from the reservoir, sway the reservoir back and forth a little and then open a suitable port so that the air bubbles can escape from the device. When swinging, make sure that all openings are closed or in use except for the ventilation opening.

If necessary, coolant must be topped up. Then switch on the pump so that the water is distributed in the circuit. Switch the pump off again and repeat the process until all the air escapes from the reservoir.

## Finishing touches


Mount the side panel.



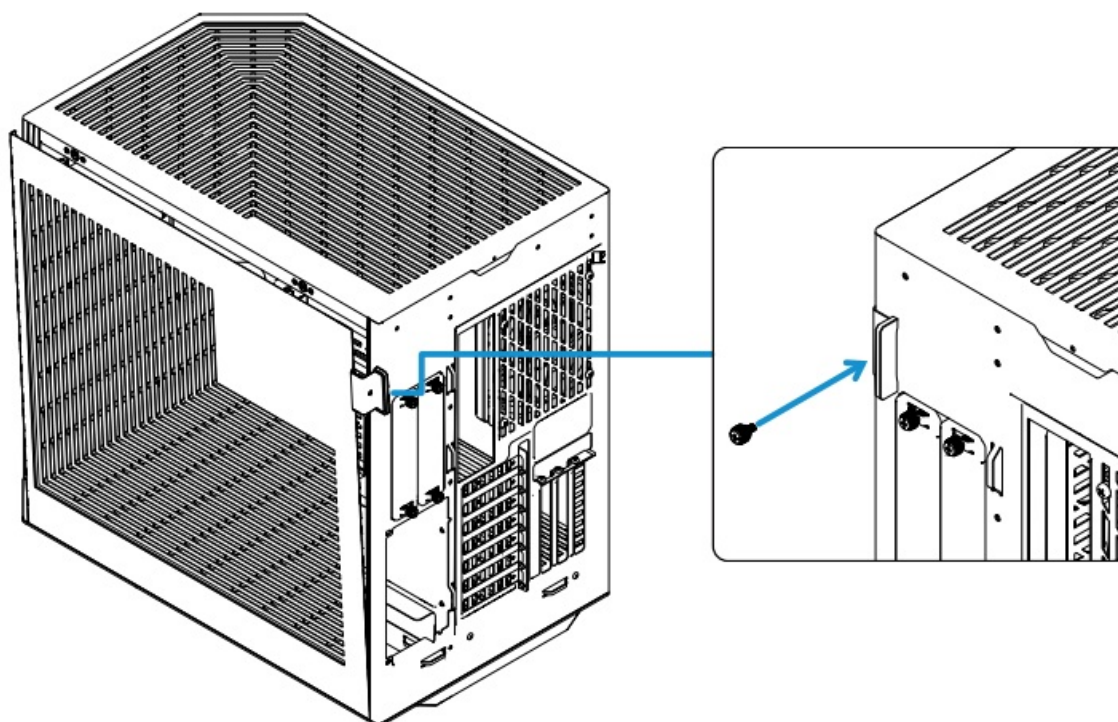


**Dimensions in millimeter (mm)**

**(Part 1)**

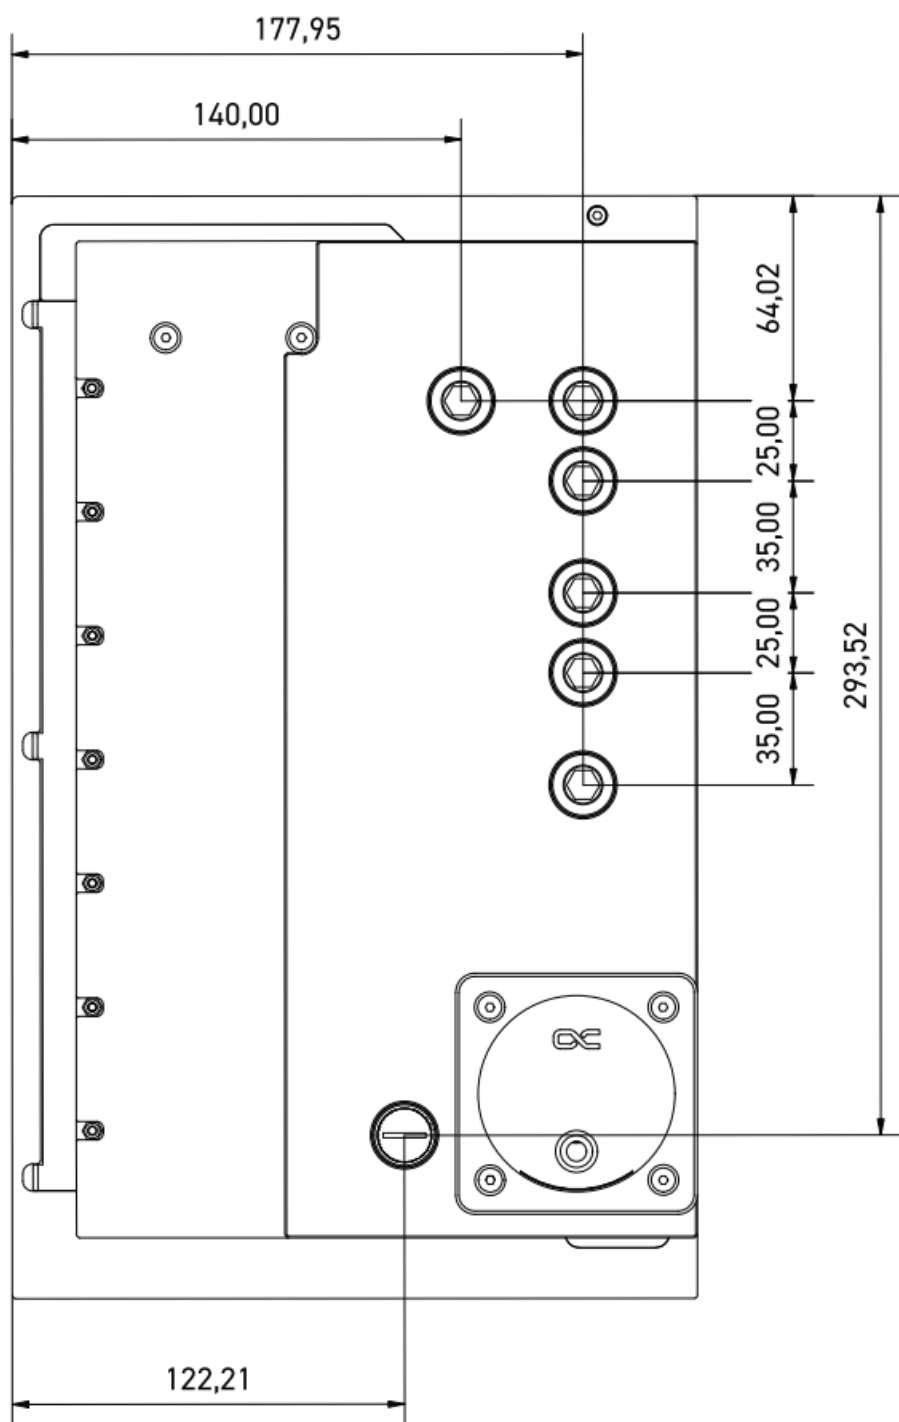

(Part 2)



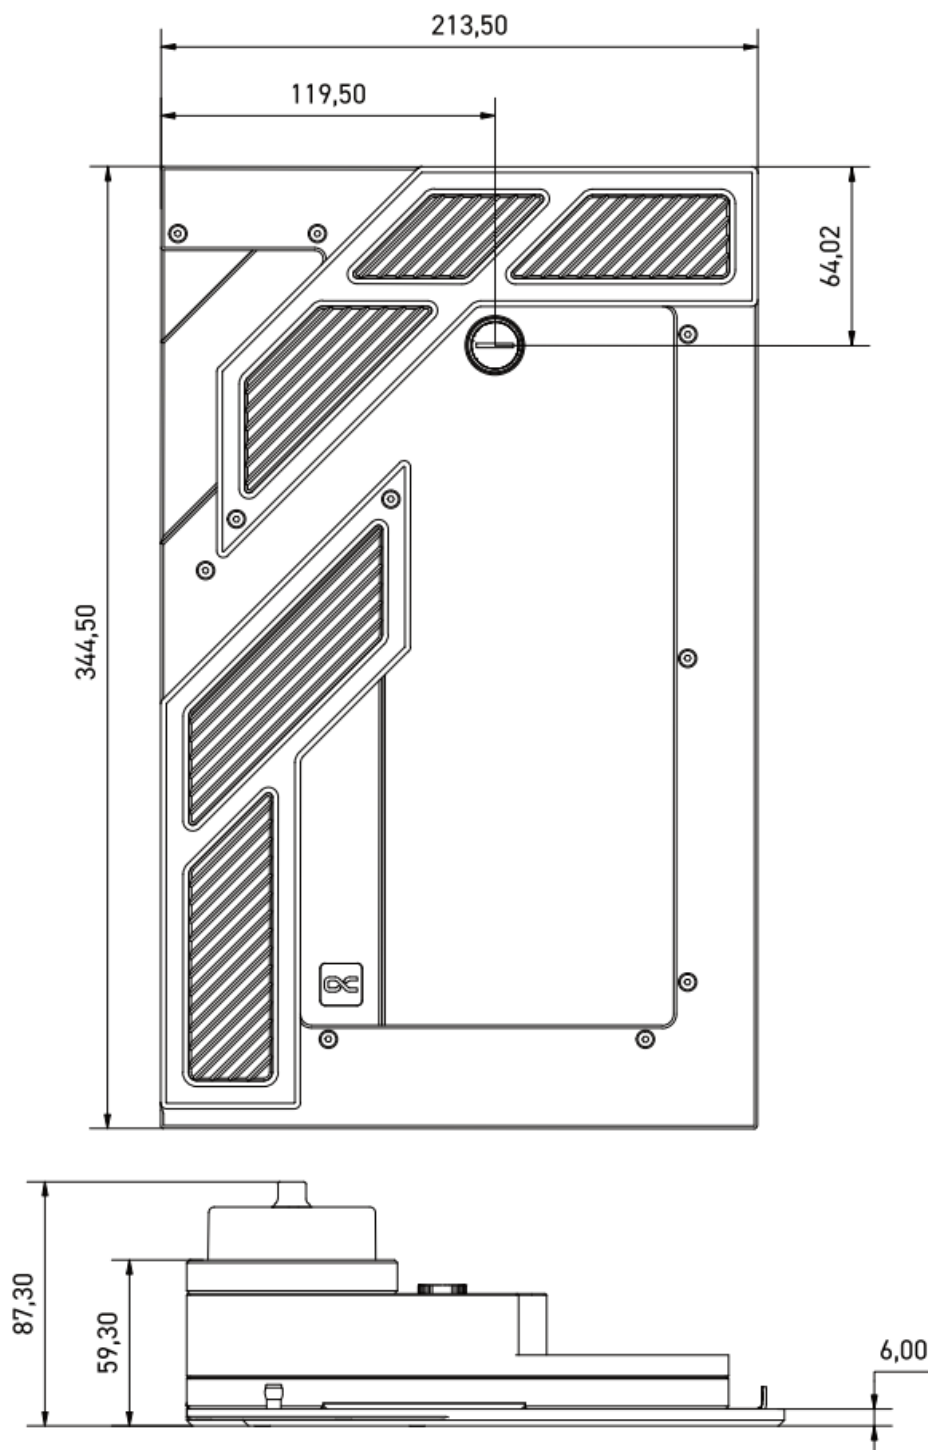

## CUSTOMER SUPPORT

### Need help?

Alphacool International GmbH  
 Marienberger Str. 1  
 D-38122 Braunschweig  
 Germany

**Support:** +49 (0) 531 28874-0

**Fax:** +49 (0) 531 28874 – 22

**E-Mail:** [info@alphacool.com](mailto:info@alphacool.com)


<https://www.alphacool.com>



# alpha**COOL**

---

## Documents / Resources

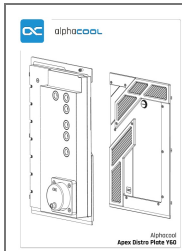

### [Alphacool VPP-D5 Pump Distro Plate Apex](#) [pdf] Instruction Manual

VPP-D5 Pump Distro Plate Apex, VPP-D5, Pump Distro Plate Apex, Distro Plate Apex, Plate Apex, Apex

## References

- [User Manual](#)

### Manuals+ Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.