



# **ALPS ALPINE B2211 Automatic Access Gesture Control User Manual**

Home » ALPS ALPINE » ALPS ALPINE B2211 Automatic Access Gesture Control User Manual



#### **Contents**

- 1 ALPS ALPINE B2211 Automatic Access Gesture
- **2 Product Information**
- **3 Product Usage Instructions**
- **5 Documents / Resources** 
  - **5.1 References**
- **6 Related Posts**



**ALPS ALPINE B2211 Automatic Access Gesture Control** 



#### **Product Information**

# **Specifications:**

Device Type: Vehicle Transmitter
Compliance: FCC Part 15 Rules

• Radiation Exposure Limits: FCC Compliant

• Minimum Separation Distance: 30mm from the body

# **Product Usage Instructions**

## **User Manual**

Since this device is always used with vehicle, it is not sold to general end users separately. Therefore there is no user manual of this device by alone. The following statements must be described on the user manual of the vehicle; [for FCC]

## **FCC CAUTION**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment should be installed and operated keeping the radiator at least 30mm or more away from person's body. This device complies with part 15 of the FCC Rules.

## Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. this device must accept any interference received, including interference that may cause undesired operation.

The minimum separation distance from the body of a nearby person is 30mm.

#### Installation:

- 1. Install the device in the vehicle according to the vehicle's user manual.
- 2. Ensure that the device is positioned at least 30mm away from any person's body.

# Operation:

- 1. Turn on the device by following the vehicle's operating instructions.
- 2. Ensure that the transmitter is not co-located or operated with any other antenna or transmitter.
- 3. Maintain a minimum separation distance of 30mm from any person's body during operation.

#### **FAQ**

## Q: Can I use this device outside of a vehicle?

A: No, this device is intended for use only within a vehicle and should not be operated separately.

#### Q: What should I do if the device causes interference?

A: If the device causes interference, try adjusting its position within the vehicle to maintain the recommended separation distance from the body.

#### **Documents / Resources**



ALPS ALPINE B2211 Automatic Access Gesture Control [pdf] User Manual CWTB2211, b2211, B2211 Automatic Access Gesture Control, B2211, Automatic Access Gesture Control, Access Gesture Control, Control

# References

User Manual

### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.