

ALTEC LANSING IMW1032 Hydra Wave Everything Proof Speaker Installation Guide

Home » Altec Lansing » ALTEC LANSING IMW1032 Hydra Wave Everything Proof Speaker Installation Guide 1



Contents

- 1 ALTEC LANSING IMW1032 Hydra Wave Everything Proof **Speaker**
- 2 IN THE BOX
- 3 Assembly Diagram
- **4 A CLOSER LOOK**
- **5 CHARGING**
- **6 BLUETOOTH PAIRING**
- **7 SPEAKER CONTROLS**
- **8 MORE CONTROLS**
- **9 SAFETY PRECAUTIONS**
- **10 SPECIFICATIONS**
- 11 FCC STATEMENT
- **12 WARRANTY**
- 13 Documents / Resources
 - 13.1 References
- 14 Related Posts



ALTEC LANSING IMW1032 Hydra Wave Everything Proof Speaker



WELCOME

Thank you for purchasing an Altec Lansing product. Download our App to unlock all the features our products have to offer!

Bluetooth





PARTY SYNC
PAIR 100 OR MORE



IN THE BOX

 
- 1 HydraWave EVERYTHINGPROOF® Wireless Speaker
- 1 USB-C Charging Cable
- 1 Bungee Cord
- 1 Carabiner Clip
- 1 Mount
- 1 Quick Start Guide




HydraWave EVERYTHINGPROOF Wireless Speaker




USB-C Charging Cable



Bungee Cord

 

Mount

 


Carabiner Clip





Quick Start Guide

• There is also a 1/4" threaded mounting insert on the bottom for standard mounts. See website for details.

 
Assembly Diagram




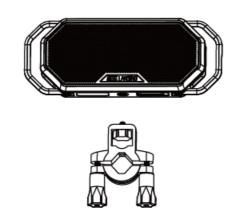

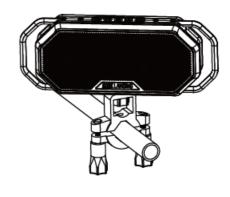


A CLOSER LOOK

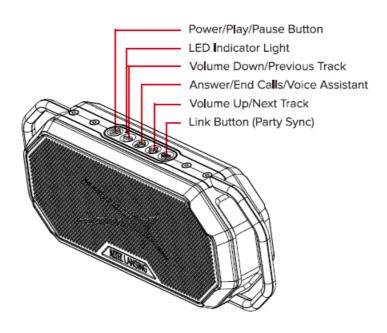

 


CHARGING

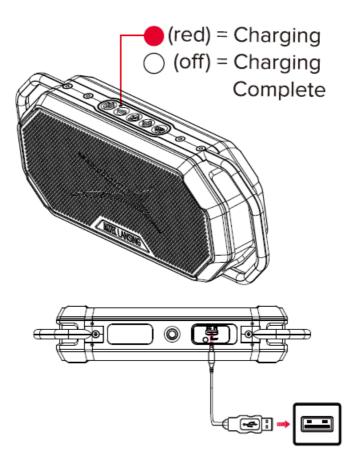

- 1. To charge the speaker, insert the USB-C end of the supplied USB-A C cable into the charging port on the right side.
- 2. Insert the USB-A end of the supplied cable into a suitable USB-A charging port.
- 3. When charging the indicator LED will be red. When fully charged the LED will turn off.

BLUETOOTH PAIRING

Bluetooth Connection:

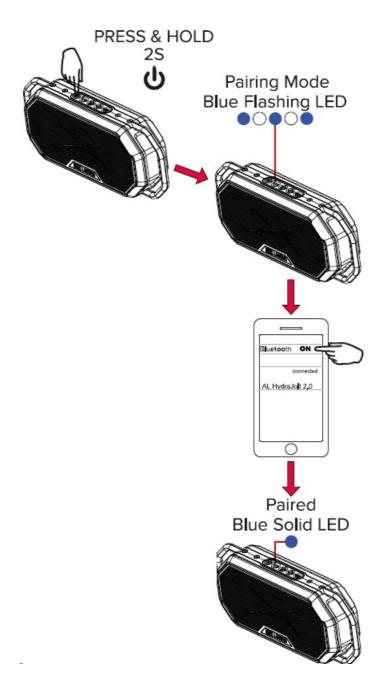

- Go to the Bluetooth page in the settings app on your phone. Make sure Bluetooth is ON before connecting to the available device 'AL HydraWave'.
- Once paired the speaker will automatically reconnect to any nearby paired devices the next time it is turned on.
- To disconnect a currently paired device and connect another simply either forget the speaker in your Bluetooth Settings, turn off Bluetooth on the connected phone/tablet, or press and hold the button on the speaker for 5S.
- This will cause the speaker to drop the connection and go to pairing mode.

SPEAKER CONTROLS


Controlling Music

SHORT PRESS

- ♣ Volume Up
- Volume Down
- **也** Play/Pause
- Answer & End Call

PRESS & HOLD 2S

- ◆ ON/OFF
- ◆ Next Track
- Previous Track
- 🗣 Reject Incoming Call

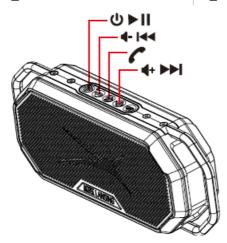


MORE CONTROLS

Party Sync


 Turn on the peimary speaker and connect it to your Bluetooth-compatible device as normal. Start playing some music with this speaker.

PRESS & HOLD **U** FOR 2S AND PAIR AS USUAL

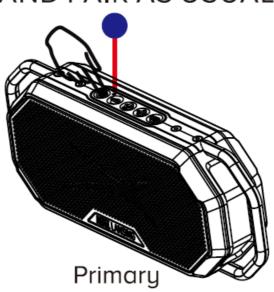


Now short press Its Link button. Its LED will go green with very short flashes off indicating is broadcasting
as the Party Primary.

PRESS (TO) TO TO ACTIVATE PRIMARY

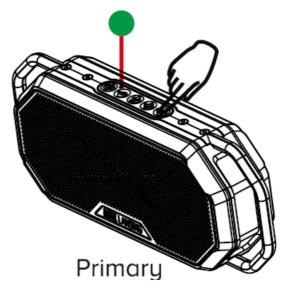

- Turn on the secondary speaker but don't connect anything to it just short press the Link button on that speaker. It will be a Party Secondary and will start looking for the Primary.
- The Secondary will connect to the Primary and its LED go solid green. They will now play in sync. You
 can connect more secondaries by turning them on and short-pressing their Link buttons.
- Note the Secondary LEDs return to Flashing Green if playback is paused on the Primary (Party Sync is Idle).
- To exit Party Sync short press the Link button on each speaker you wish to disconnect.



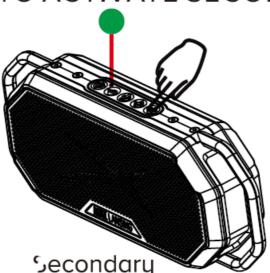

Voice Assistant

Short press the button to activate Voice Assistant on the connected phone/tablet.

Reset

 A Reset will erase all settings. To perform a Reset, press & hold the speaker will reset and power off.



When using your speaker, basic safety precautions should always be followed including.

- 1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.
- 2. Only clean using a clean cloth.
- 3. Do not expose this product to excessive heat or fire.
- 4. Do not expose this product to temperatures above 100°F. Keep out of direct sunlight.
- 5. Do not attempt to repair this product yourself. Contact a qualified service center if the product requires service.
- 6. Do not drop, crush, or expose this product to excessive physical force.
- 7. This product is not intended for commercial use.
- 8. When charging keep all charging cables well-ventilated. Do not keep your charging cable in contact with flammable materials such as bedding, linens, or synthetic fabrics.

Maintenance and Care

- Use a soft cloth or paper towel to clean your speaker. Never use any harsh chemicals or detergents for cleaning. Make sure your speakers are dry before charging.
- When your speakers are not in use, they should be stored in a cool, dry place.
- Never tug or yank on a cable while it is connected to your charging speaker. Connect and disconnect cables as carefully as possible.
- Never expose your speaker to high temperatures or extreme cold.
- Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.

SPECIFICATIONS

• Power input: 5V =- 1A

• Battery Type: Lithium-ion Battery

• Play Time: Approximately 12 Hours (At 50% Volume position)

• WARNING! The sealing flap must be fully closed to maintain a waterproof rating.

FCC STATEMENT

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference

2. This device must accept any interference received, Including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirements.

Warning

To assure continued compliance, any changes or modifications not expressly approved by the party. Responsible for compliance could void the user's authority to operate this equipment.

WARRANTY

- This warranty covers the original consumer purchaser only and is not transferable.
- This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship.
- Your product will be repaired or replaced at no charge for parts or labor for one year.

What Is Not Covered by Warranty:

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions
from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification, or
accident.

To Obtain Warranty Service and Troubleshooting Information: Call 18552924087, email

alsupport@sakar.com, or visit our website at www.alteclansing.com.

- To receive a Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period(s), MUST be presented to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense.
 Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.
- NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM, OR ENTITY TO THE PRODUCT SHALL BE BINDING ON THE DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE AT THE DISTRIBUTOR'S SOLE DISCRETION -ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL THE DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT.
- BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL
 DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS,
 DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS
 STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING,
 CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF
 THE PRODUCT SOLD BY THE DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE
 OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT
 TRANSFERABLE.
- Some countries, states, or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies. This product is manufactured, distributed, and sold by SAKAR International, Inc. All other trademarks are the property of the respective owner, who has not sponsored, endorsed, or approved this product.
- · Having trouble?
- · We're here to help!
- Call us 24/7 at 18552924087
- Email us at alsupport@sakar.com or visit us at alteclansing.com
- Keep the manual and all relevant information for future reference.

REGISTER YOUR PRODUCT

 To receive news, exclusive deals, OTA or firmware updates, warranty information, and more please register your product at <u>alteclansingsupport.com</u>.



- Call us 24/7 at 18552924087
- E-mail us at alsupport@sakar.com or visit us at alteclansing.com

12-Month Limited Warranty

- All Altec Lansing products come with 12 month month-limited warranty from the date of their original purchase
 24 24-hour Customer Support
- We love our customers, and we care about your experience with Altec Lansing. If you need assistance, please call us at 18552924087 or e-mail alsupport@sakar.com www.alteclansing.com

Documents / Resources



ALTEC LANSING IMW1032 Hydra Wave Everything Proof Speaker [pdf] Installation Guide IMW1032 Hydra Wave Everything Proof Speaker, IMW1032, Hydra Wave Everything Proof Speaker, Wave Everything Proof Speaker, Everything Proof Speaker, Proof Speaker, Speaker

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.