

ALTITUDE ER1801 Tips and Tricks Remote Control Owner's Manual

Contents

- [1 ALTITUDE ER1801 Tips and Tricks Remote Control](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Remote Control](#)
- [5 Handheld Remote Pairing](#)
- [6 Troubleshooting & Tips](#)
- [7 Scan QR Code](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)



ALTITUDE ER1801 Tips and Tricks Remote Control

Specifications

- **Model:** XYZ-2000
- **Power:** 120V, 60Hz
- **Dimensions:** 10in x 8in x 12in
- **Weight:** 5 lbs
- **Material:** Stainless Steel

Product Usage Instructions

- **Setup:**

Place the product on a flat, stable surface near a power outlet. Ensure there is enough space around the product for proper ventilation.

- **Power On**

Plug the power cord into a 120V, 60Hz outlet. Press the power button to turn the product on. The indicator light will illuminate when the product is powered on.

- **Operating Modes**

The product has multiple operating modes for different functions. Refer to the user manual for details on selecting the desired mode for your specific use.

- **Usage**


Follow the specific instructions related to the function or mode you have selected. Ensure you adhere to the safety guidelines provided in the user manual.

• Cleaning and Maintenance

After each use, make sure to clean the product according to the instructions in the manual. Regular maintenance will ensure optimal performance and longevity of the product.

Remote Control

Tips & Tricks

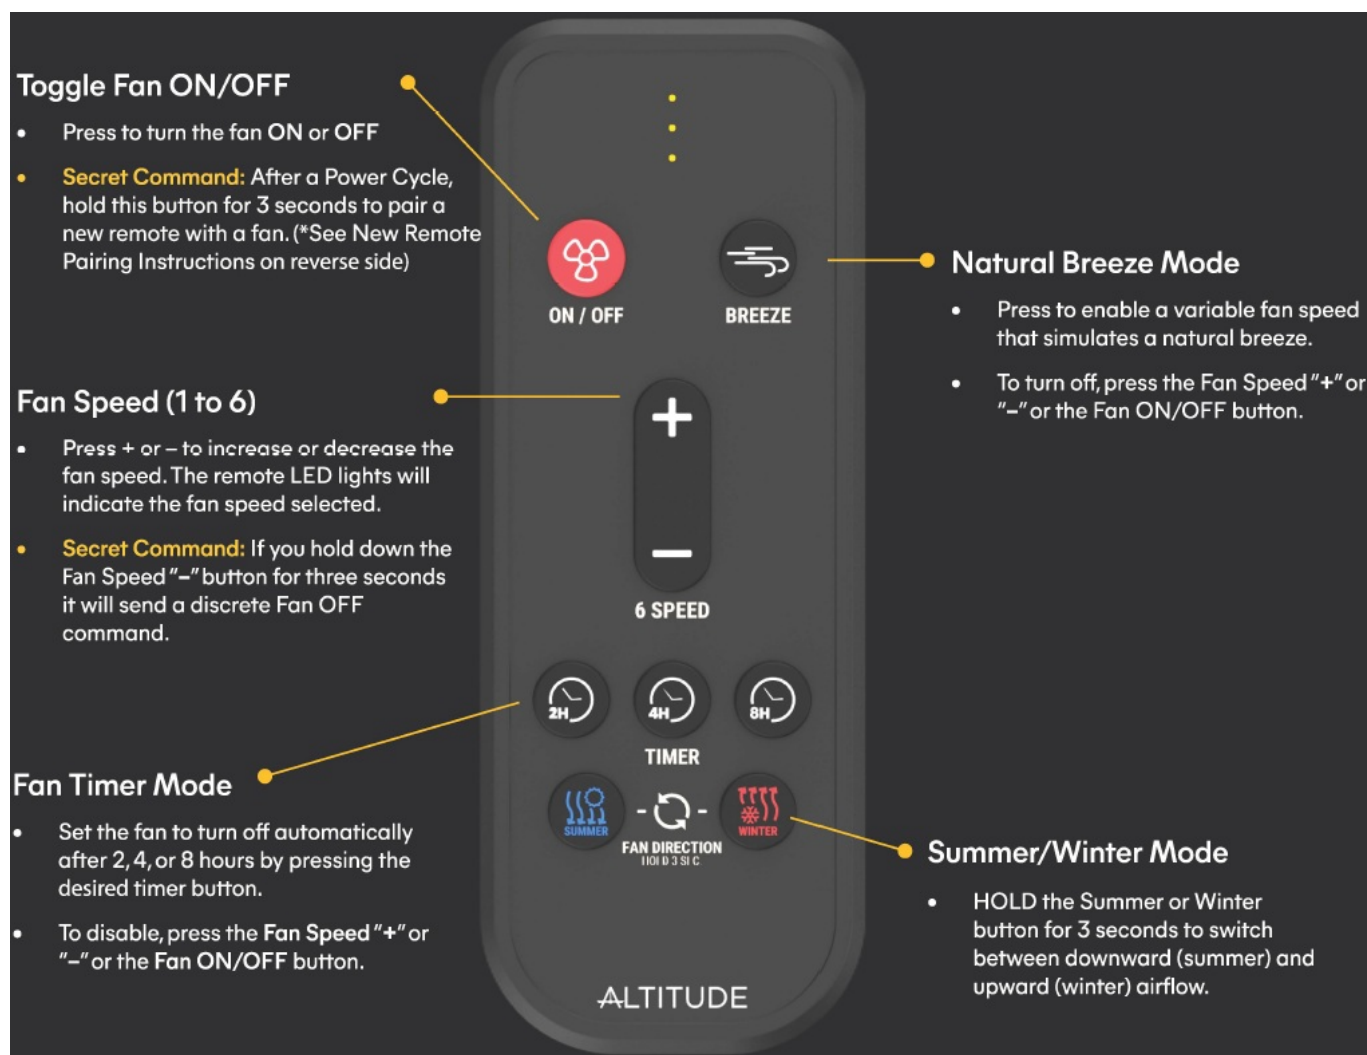

Note

The handheld remote comes pre-paired with your fan. If the remote does not operate the fan, please follow the New Remote Pairing Process.

Handheld Remote Pairing

Unpairing & Other Commands

Pairing a New Remote to Your Fan

1. Power Cycle the Fan: Switch the fan's main power OFF and then ON using the wall switch or breaker.

2. Pair the Remote: After the power cycle, hold the Fan ON/OFF (6) button on the remote for 3 seconds.

Confirmation: The remote's LEDs will flash, and the fan will beep and flash, indicating successful pairing.

Note

You can pair up to four (4) remotes to a single fan.

Unpairing the Remote

1. Step 1: Press and hold the 2H button for 3 seconds until the remote's LEDs flash 3 times.
2. Step 2: Press and hold the 8H button for 3 seconds until the remote's LEDs flash 3 times.
3. Step 3: Press and hold the 2H button again for 3 seconds until the remote's LEDs flash 10 times, confirming unpairing.

Reset the Fan's Smart Network/Wif Settings

1. To reconnect the fan to a new Wi-Fi or smart home ecosystem, press and hold the 2H button on the remote for 3 seconds until the LEDs flash 3 times, then repeat this process with the 4H button and the 8H button, ensuring the LEDs flash 3 times after each hold. Once all three buttons have been held in the sequence, the remote's LEDs will flash 10 times, and the fan will emit a beeping sound, indicating the reset is complete.
2. Power Cycle the Fan: Switch the fan's main power OFF and then ON using the wall switch or breaker.

Troubleshooting & Tips

1. If the fan does not spin or light up, please check that it is receiving power.
2. Power Cycle the Fan: Switch the fan's main power OFF and then ON using the wall switch or breaker.
3. Test the Fan: Press the Light or Fan ON/OFF buttons on the remote to see if the fan responds.
4. Repair the Remote (if needed): If the fan still does not respond, try re-pairing the remote to the fan.
If issues persist, contact the Altitude support team for assistance.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Scan QR Code



Frequently Asked Questions

Q: How do I clean the product?

A: To clean the product, unplug it first. Use a damp cloth with mild detergent to wipe the exterior surface. Do not immerse the product in water.

Q: Can I use the product for extended periods?

A: It is recommended to follow the usage guidelines provided in the manual to prevent overheating. Avoid continuous operation for extended periods to maintain product longevity.

Documents / Resources



[ALTITUDE ER1801 Tips and Tricks Remote Control](#) [pdf] Owner's Manual
2BAPV-ER1801, 2BAPVER1801, er1801, ER1801 Tips and Tricks Remote Control, ER1801, Tips and Tricks Remote Control, Tricks Remote Control, Remote Control, Control

References

- [User Manual](#)

Manuals+ Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.