



Altitude Precise Altimeter (Android) User Manual

[Home](#) » [Altitude](#) » Altitude Precise Altimeter (Android) User Manual 

Altitude Precise Altimeter (Android)



Contents

1 ABOUT YOUR PHONE

2 KEY FUNCTIONS

2.1 Power Button

2.2 Volume Buttons

3 INSTALLING SIM CARDS

4 INSTALLING MICRO SD CARD

5 INSTALLING THE BATTERY

6 INSTALLING THE BATTERY

COVER

7 CHARGING THE BATTERY

8 Charge as demonstrated above

9 GETTING STARTED

9.1 Switching the device on and off

10 GETTING STARTED

10.1 Unlocking the Phone

10.2 Camera Mode Function

 
11 GETTING STARTED

11.1 Command Keys

12 Documents / Resources

13 Related Posts

ABOUT YOUR PHONE

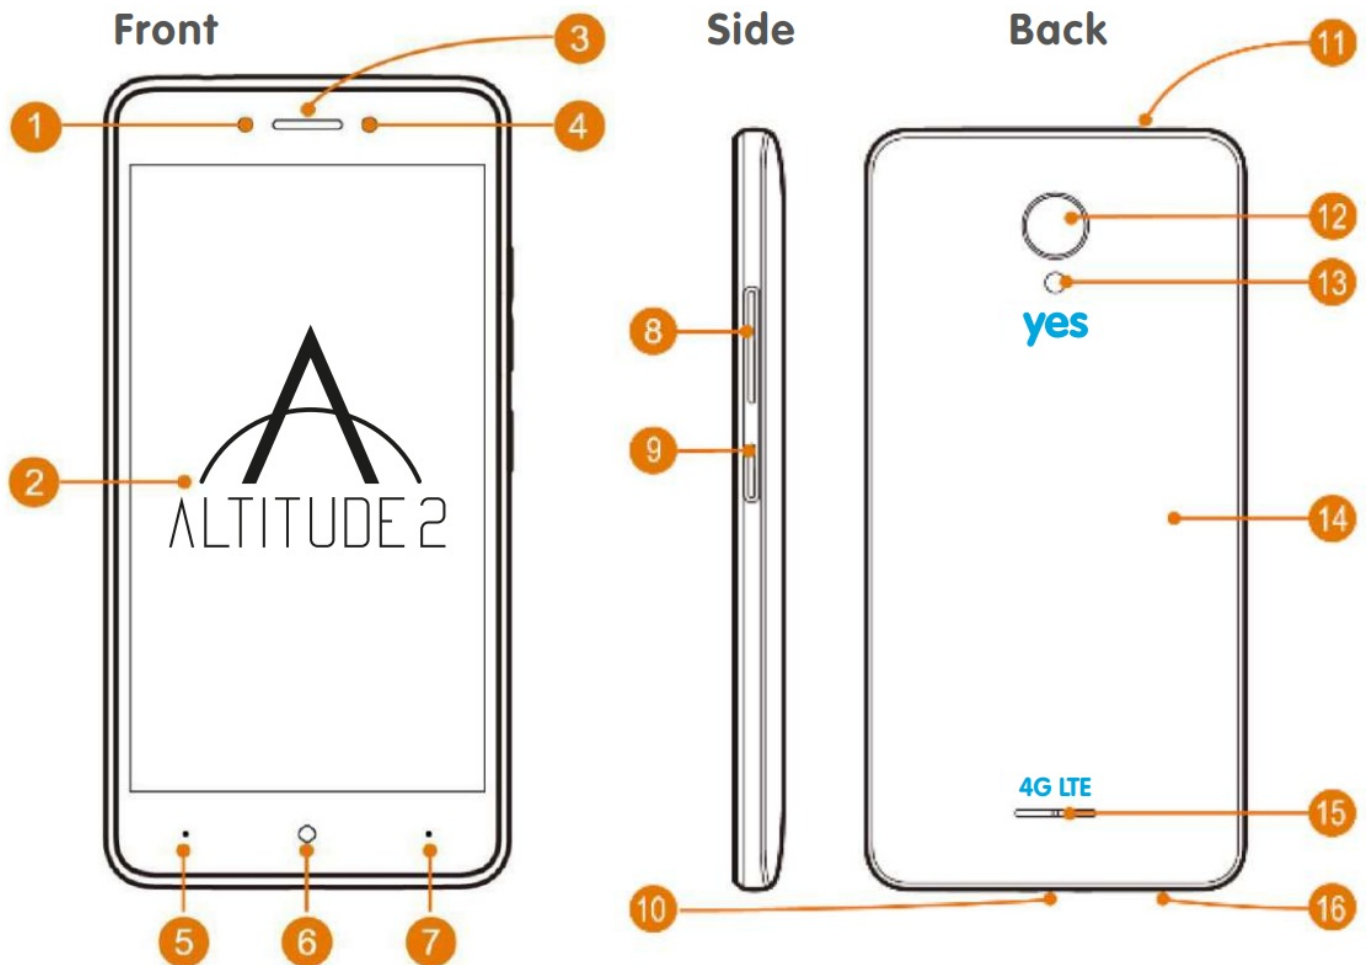

1. Proximity sensor

2. Touch Screen

3. Receiver
4. Front Camera
5. Recent Task Key
6. Home Key
7. Back Key
8. Volume Key
9. Power Key
10. Charging Port
11. Headset
12. Main Camera
13. Flashlight
14. Battery Cover
15. Speaker
16. Microphone

KEY FUNCTIONS

Power Button

Off State :

- Long press the button to turn on the phone.

On State :

- Short press the button to lock or light the screen.
- Long press it to show power off, reboot and airplane mode options.
- Long press the button for 13 seconds to reboot the phone.
- When there's an incoming call, short press it to silence the ringtone.

Volume Buttons


- When the screen is unlocked, short press the buttons to adjust volume.
- When there's an incoming call, short press it to silence the ringtone.
- Press the power button and the volume down button at the same time to take screenshots.

INSTALLING SIM CARDS

Please make sure your phone is turned off first. Open the battery cover from the slot at the bottom of the cover (as shown below)




Make sure SIM card chip is faced downwards and insert it into the slot (as shown below). Pay attention to the direction of the gap.

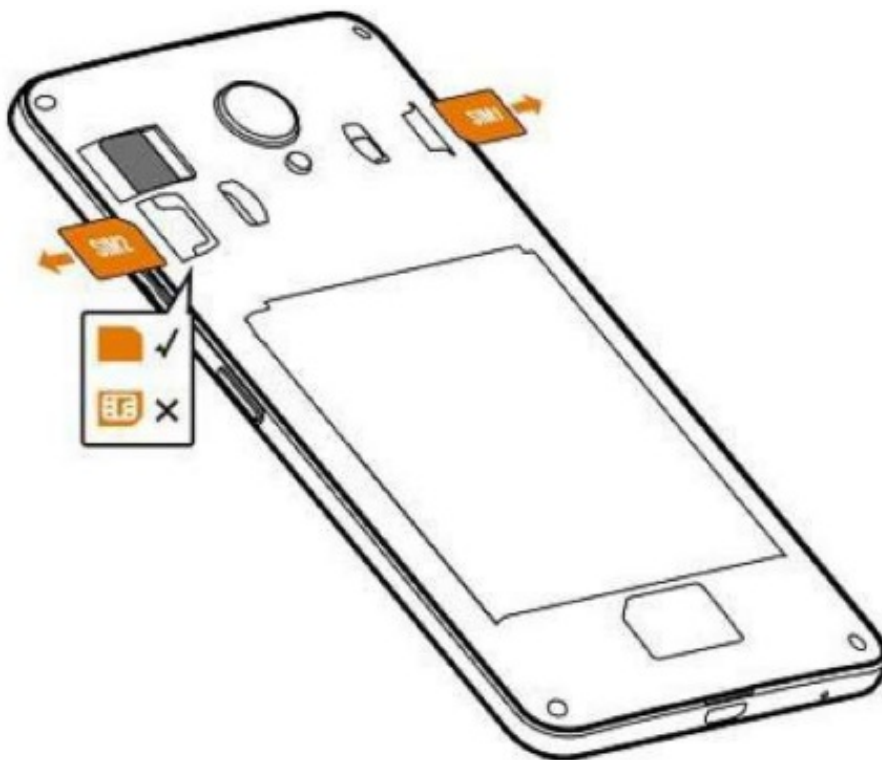


INSTALLING MICRO SD CARD

Keep the card's metal contacts facing downwards and insert it into the slot (as shown below). Please pay attention to the direction of the gap.

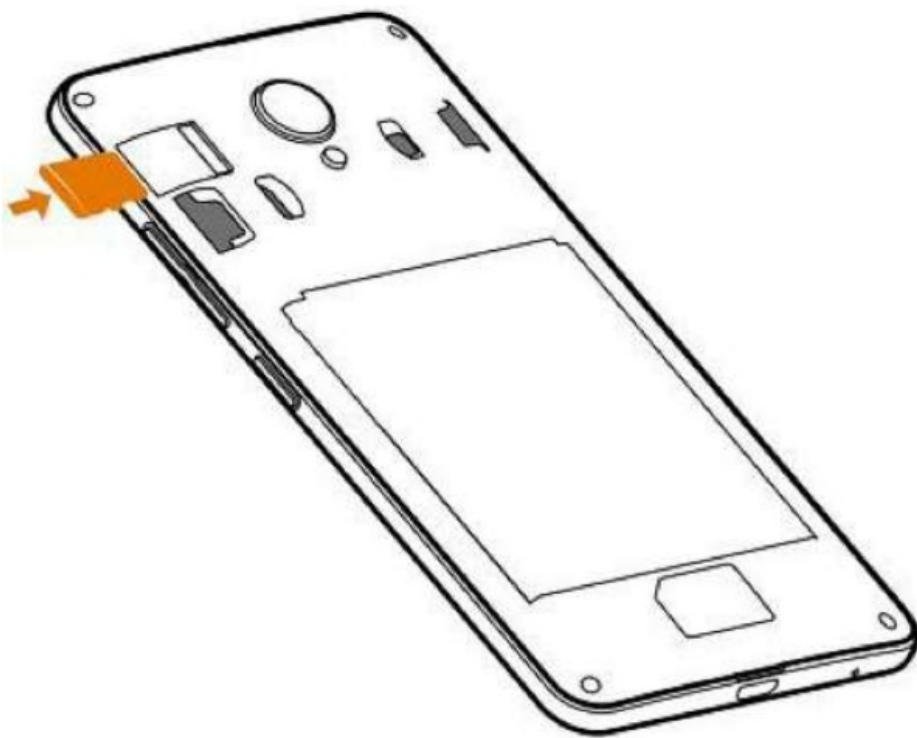

INSTALLING THE BATTERY

Combine the battery's metal contacts with the slot's metal contact and install the battery as shown below:

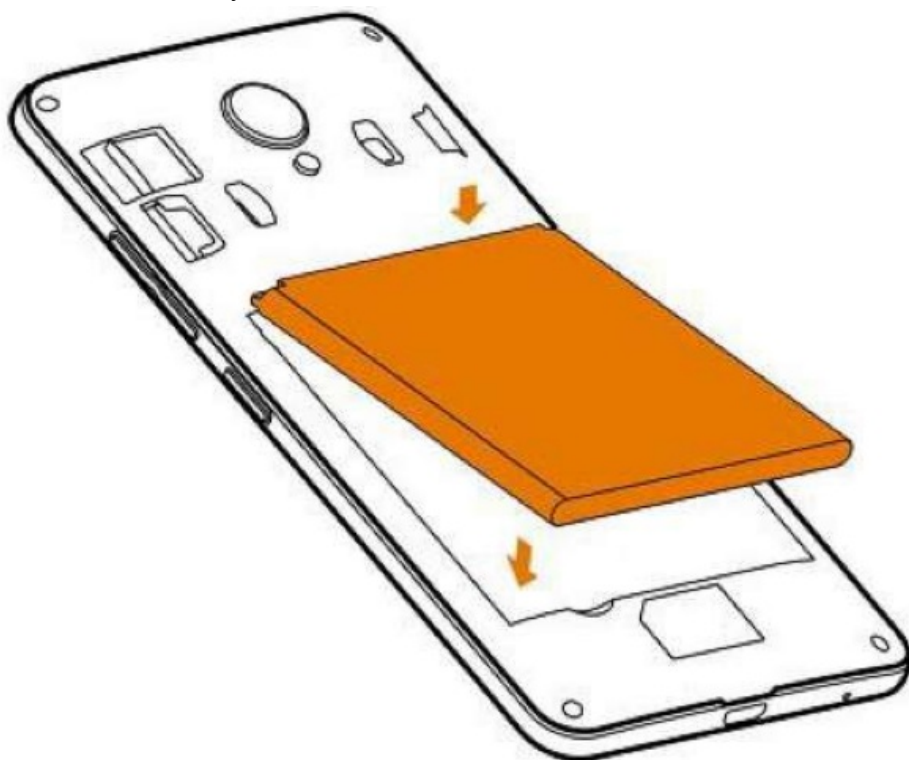

INSTALLING THE BATTERY COVER

Combine the battery cover with the phone, and press the cover until you hear a “click” sound. After installation, please check whether the cover is tightly installed on the phone.

CHARGING THE BATTERY



Charge as demonstrated above

1. Connect the larger plug of the USB cable to the charger adapter and the smaller one to the charging port on the phone. Pay attention to the direction of the plug when connecting it.
2. Insert the charger adapter into the power outlet and start charging.
3. After charging is completed, pull out the smaller plug from the phone.

GETTING STARTED

Switching the device on and off

Power on: Hold down the Power key until the phone turns on. It will take a few seconds before the screen lights up.

Power off: Hold down the Power key from the Home screen until the phone option appears. Select Power off, and press OK to confirm.



GETTING STARTED

Unlocking the Phone

Press the Power button to display the lock screen. Then, swipe your finger to the right to enter the home screen (or the last used screen).



Camera Mode Function


Click on the lower right corner and slide up to enter the camera mode.

GETTING STARTED


Command Keys

There are three keys on the device:

1. **Recent Task Key** : Press this button to display the current running application;
2. **Home Key** : Press this button to return to the main screen. Long press this button and slide upwards to enter the search mode;
3. **Back Key** : Press this button to return to the previous screen.

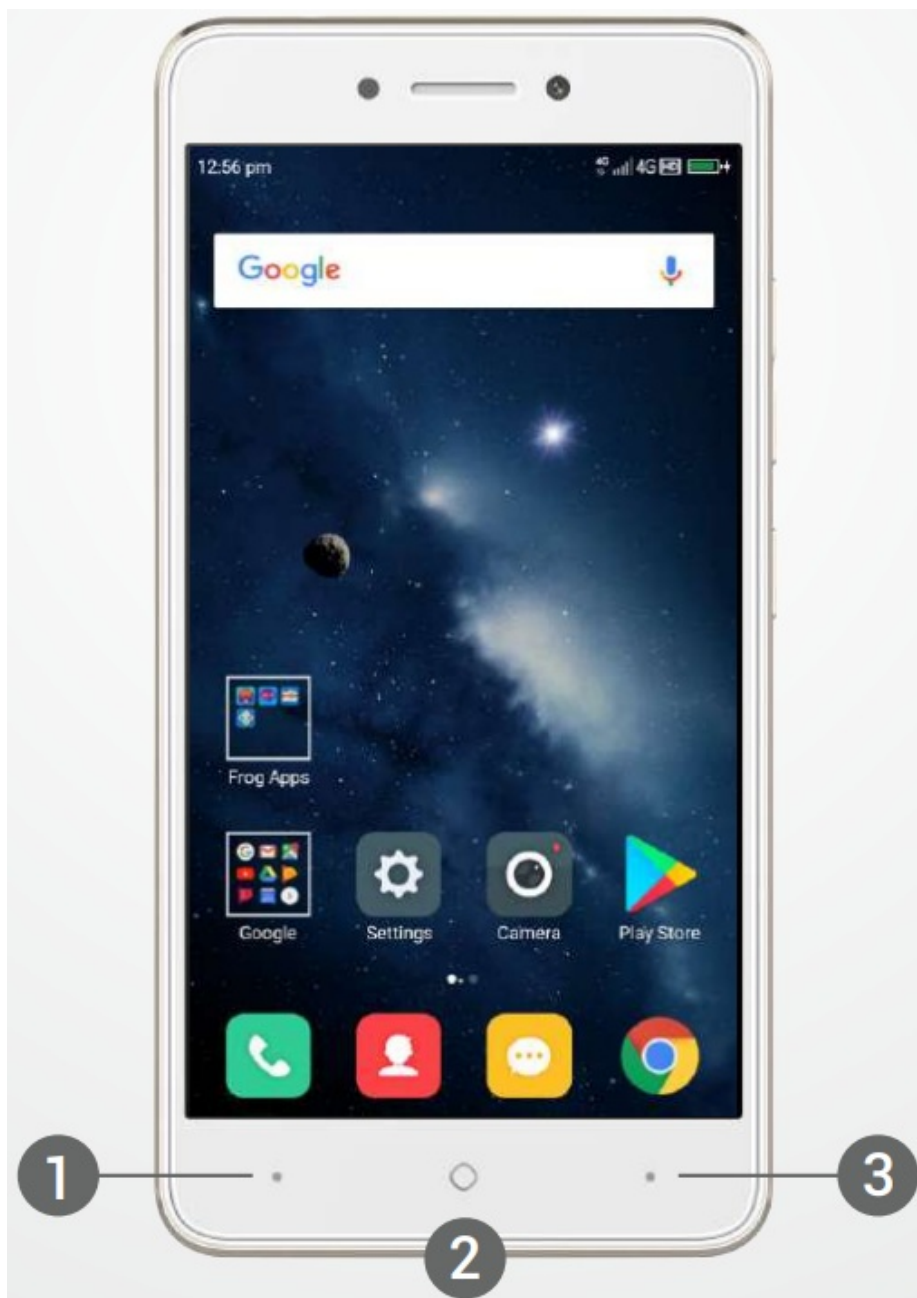

Documents / Resources

	<p>Altitude Precise Altimeter (Android) [pdf] User Manual Precise Altimeter Android, Altimeter Android</p>
---	--