

ALTO
PROFESSIONAL
TS112C 1200 Watt
12 Inch Portable



ALTO PROFESSIONAL TS112C 1200 Watt 12 Inch Portable Columnar Array Loudspeaker User Guide

[Home](#) » [ALTO PROFESSIONAL](#) » ALTO PROFESSIONAL TS112C 1200 Watt 12 Inch Portable Columnar Array Loudspeaker User Guide 

Contents

- [1 ALTO PROFESSIONAL TS112C 1200 Watt 12 Inch Portable Columnar Array Loudspeaker](#)
- [2 GETTING STARTED](#)
- [3 SETUP](#)
- [4 FEATURES](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)



ALTO PROFESSIONAL TS112C 1200 Watt 12 Inch Portable Columnar Array Loudspeaker



[SUPPORT.ALTOPROFESSIONAL.COM](https://support.altoprofessional.com)

- For articles, videos, and web support.

 


GETTING STARTED

Package Contents

- TS112C
- Base Subwoofer
- 2x Columnar Loudspeaker Array Carrying Bag Power Cable (4.9 ft.) Quickstart Guide Safety & Warranty Manual
- [ALTOPROFESSIONAL.COM](https://support.altoprofessional.com)
 - REGISTER YOUR PRODUCT
 - DOWNLOAD THE USER GUIDE TO LEARN MORE

SETUP

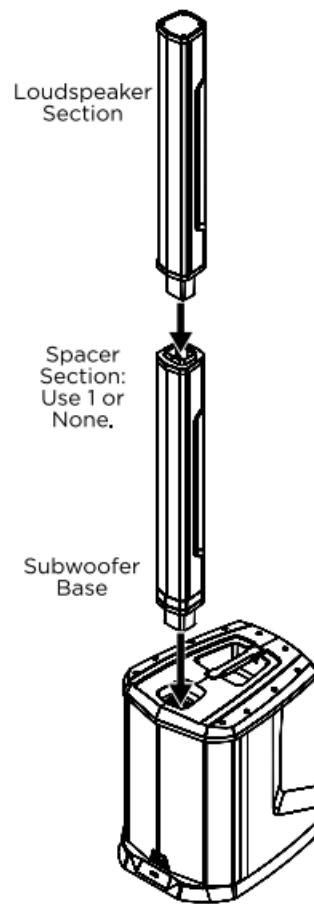

Important: Consult the full User Guide for complete installation instructions and additional guidelines.

1. Place the subwoofer base on a level surface.
2. Attach the additional columns according to your needs. There are 2 columnar sections, one of which (the top-most section) is loaded with the loudspeakers. The other section can be used to determine the height of the loudspeakers. The loudspeakers should be placed so that they are relative to your audience's ears for best results. For instance, if you are playing at the same level as the audience, you may wish to add the middle section so the loudspeakers are at ear-height. Or, if you are on a raised stage, you may wish to remove the middle spacer so the loudspeakers are closer to the audience on the floor. To attach a section, simply insert the protruding end into the cavity, aligning the internal connectors, and gently push until it snaps into place.
3. Connect your input and output devices, and then connect the subwoofer base to power.
4. Power on the unit using the Power Switch on the subwoofer base and start playing!

To disconnect, first power off the unit, then gently pull apart the sections.

 
FEATURES

DOWNLOAD THE FULL USER GUIDE TO LEARN MORE AT [ALTOPROFESSIONAL.COM](https://www.altoprofessional.com)

- A. POWER INPUT: Connect the included power cable to this input and connect the other end of the cable to a power source. Make sure the Power Switch is set to OFF when plugging and unplugging the cable.
- B. VOLTAGE SELECTOR: The voltage selector setting should only be changed when necessary (e.g., when traveling to a country or region with a different voltage). Selecting an improper voltage setting can damage the unit.

- **C. POWER SWITCH:** Use this switch to turn the speaker on and off. Make sure the volume is set to zero before turning it on.
- **D. CHANNEL INPUTS 1-3 (1/4" [6.35 mm] / XLR):** Use a standard XLR, TS, or TRS cable (not included) to connect your sound source to these inputs.
- **E. CHANNEL INPUT 4 (Stereo 1/4" [6.35 mm]):** Use standard TS or TRS cables (not included) to connect a stereo sound source to this input.
- **F. INPUT SELECTOR:** Adjust this switch depending on the type of device connected to each input— MIC or LINE for CHI-2 and INST or LINE for CH3.
- **G. GAIN:** Turn this knob to adjust the channel input level. If the CLIP LED is lit continuously, reduce the volume of your audio source, then reduce the GAIN level.
- **H. REVERB:** Turn this knob to adjust the amount of reverb effect applied to CH1-3.
- **I. EQ:** Press the EQ BAND button to select HIGH or LOW, then use the CH EQ knob to adjust the amount of boost or cut applied to the band on the selected channel, as shown on the EQ LEDs.
- **J. MIX OUTPUT:** Use a standard XLR cable (not included) to connect this output to the input of another loudspeaker.
- **K. SPEAKER USE:** Press this button to adjust the speaker voicing according to the intended use.
 - **Normal:** A flat response, good for basic use.
 - **Live:** Suited for live solo performance, with a slightly low frequency roll-off and accentuated vocal range.
 - **DJ:** Suited for music playback with enhanced bass and high-frequency sparkle.
 - **Custom:** Select this to use the ALTO PRO APP to load a customized tuning. To download the app:


1. Connect the phone to the speaker via Bluetooth® (see below).
2. Search for “Alto Pro App” on the Apple App Store or Google Play Store.
3. Open the App on your device.

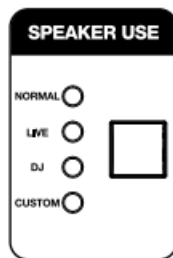


- **BT/AUX:** These controls are used to connect to an external Bluetooth device for audio streaming or use with the Alto Pro App, link to a second Alto TS112C speaker, and connect an auxiliary device.
- **GAIN:** Turn this knob to adjust the BT/AUX level, Set your BT/AUX device volume all the way up, then adjust this knob for best results.
- **PAIR:** Press this button to enter Bluetooth pairing mode. The LED above it will blink to indicate it is ready for pairing. Navigate to your device’s Bluetooth settings menu and select “Alto TS112C.” Once connected, the LED will be solidly lit. To disconnect, double-press the PAIR button, or disconnect from your Bluetooth device.
- **LINK:** Press and hold this button to enter Stereo Link mode to wirelessly connect to another Alto TS112C

speaker for stereo playback. The LED above it will blink to indicate it is ready to link. Repeat this process on the second speaker, and allow up to one minute for the speakers to link. Once linked, both speakers' LEDs will be solidly lit. To disconnect, double-press the LINK button on one speaker.

 - **AUX INPUT:** Connect an auxiliary device to this 1/8" (3.5 mm) input.

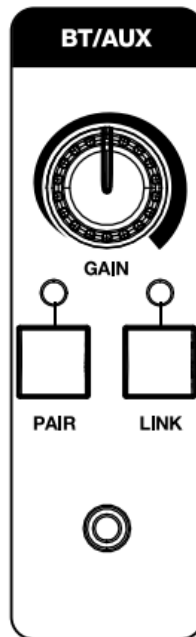

Documents / Resources

	ALTO PROFESSIONAL TS112C 1200 Watt 12 Inch Portable Columnar Array Loudspeaker [pdf] User Guide TS112C, TS112C 1200 Watt 12 Inch Portable Columnar Array Loudspeaker, 1200 Watt 12 Inch Portable Columnar Array Loudspeaker, 12 Inch Portable Columnar Array Loudspeaker, Portable Columnar Array Loudspeaker, Array Loudspeaker
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.