



ALTOS BMC Web Console Update User Guide

[Home](#) » [Altos](#) » ALTOS BMC Web Console Update User Guide 




Web Console Update
BIOS Firmware Update From
BMC Web Console

Contents

- [1 BMC Web Console Update](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

- Please ensure your product is “Non-GPU model” “Non-GPU model” Product Rear View

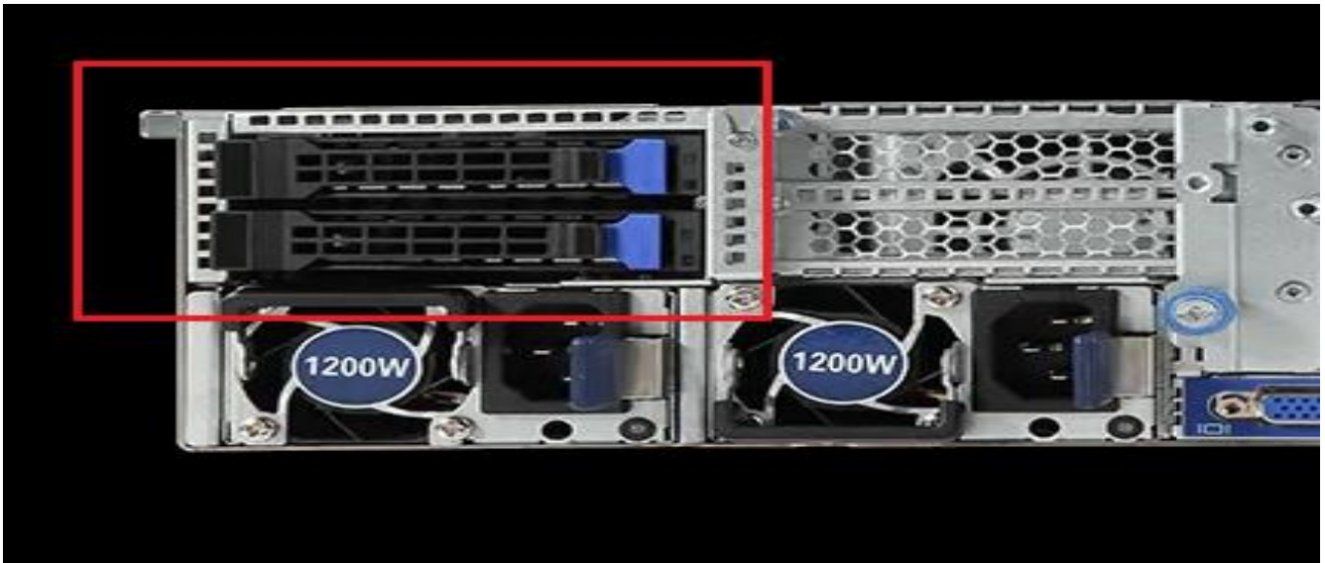



- Connect an Ethernet cable like below the image
1U Server the BMC connect an Ethernet port




2U Server the BMC connect an Ethernet port



- Power on the system, and press [Del] key to enter BIOS Setup Utility. Go to the [Server Mgmt.] tab and select [BMC network Configuration] item.

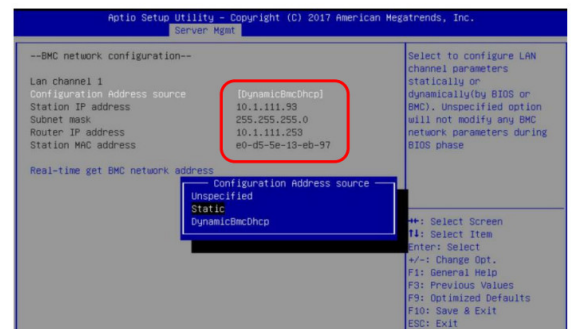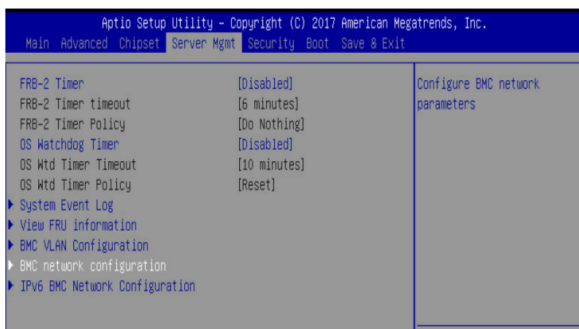


- Press the [Enter] key to “configuration address source” and change to [Static] option.
- Or you can use a DHCP server to assign an IP4 address automatically and see the IP4 address here
- Enter the IP address in browser’s web address field. You will see a “There is a problem with this website’s security certificate” webpage. Click on [Continue to this website (not recommended)]. Afterwards, you will see the IPMI logon webpage. This will allow you to link to the BMC web UI .


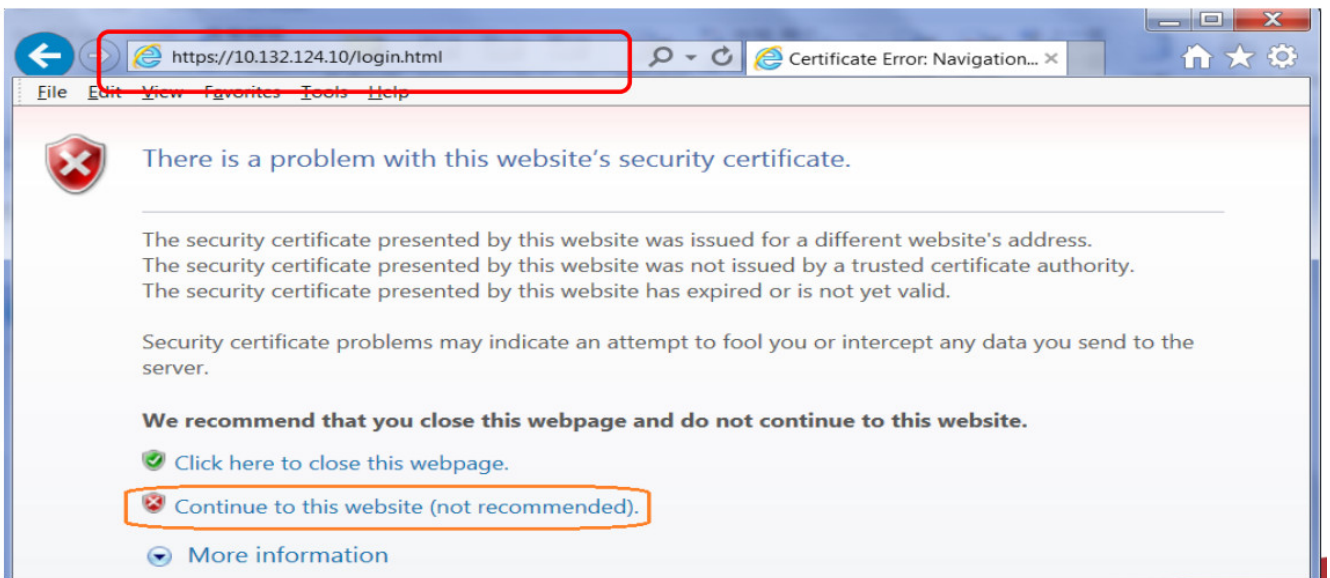


- Go to the BMC login web UI ,the default user name and password is user : admin password :password , after entering the username andpassword, click on the “Sign me in” button.




- Open Firmware Update Page , click Maintenance >firmware Update from the menu bar like below the image

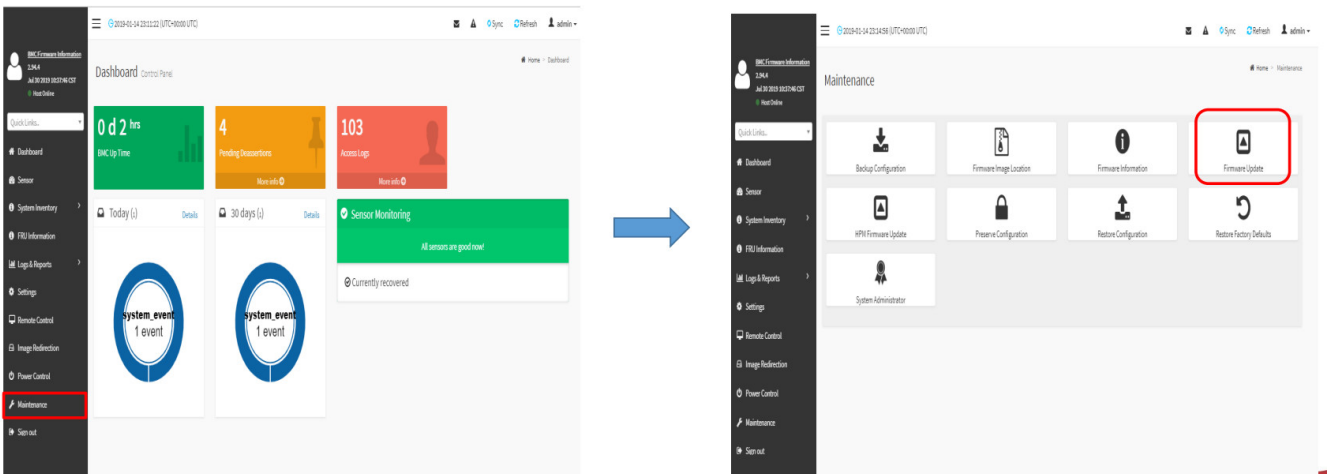

- Sample screenshot of firmware Update page shown as below
 - >Below the page is for BIOS update
 - >Below the page for BMC update

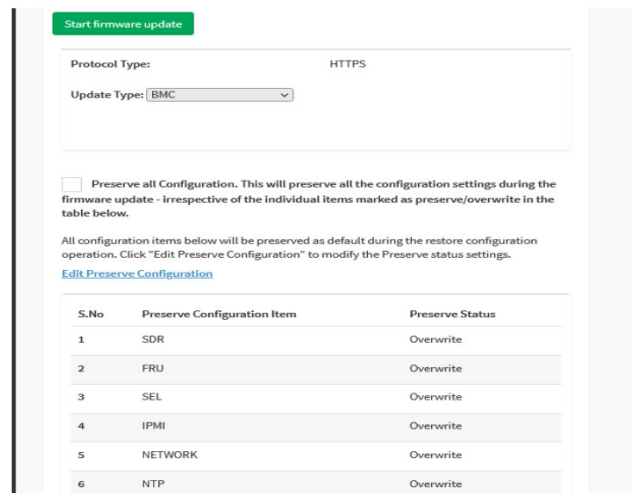
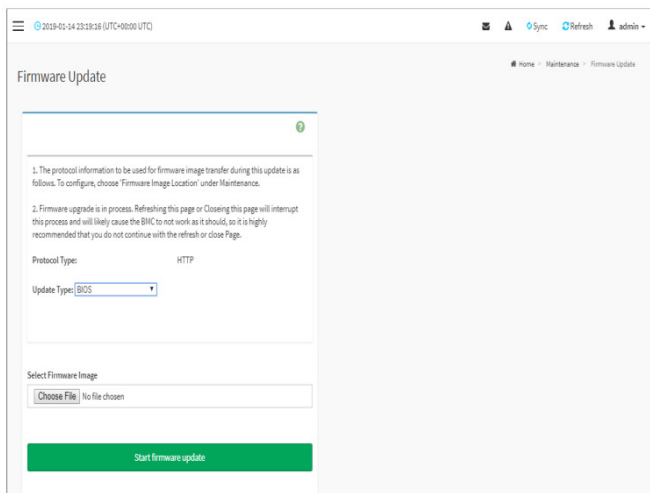


• BIOS update step (1)

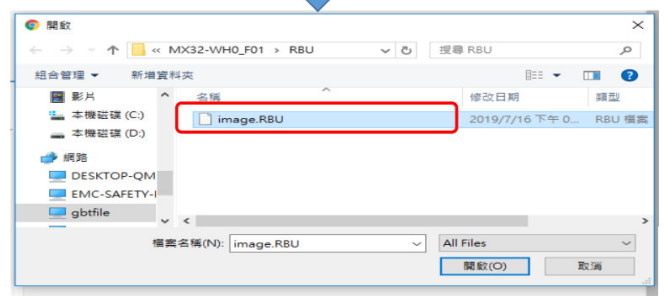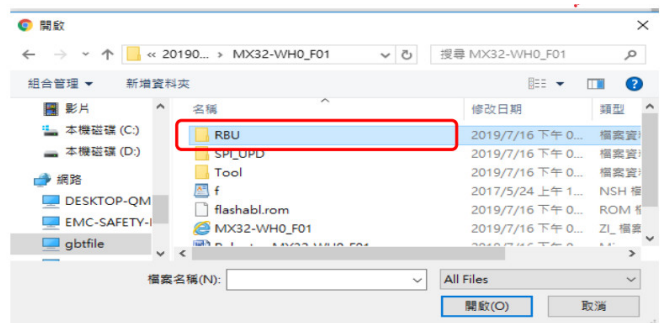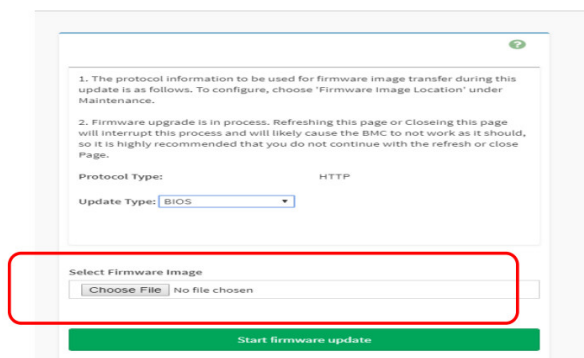



• BIOS update step (2)

Upload the image. RBU file click “start firmware update ”button ,after then please click another page the “OK”button

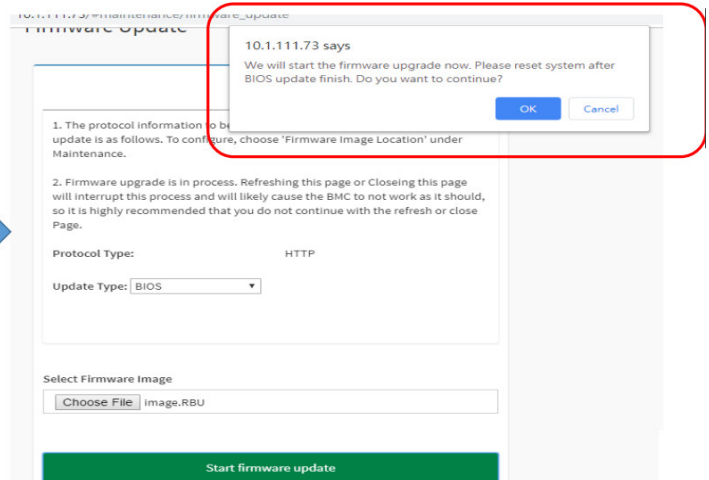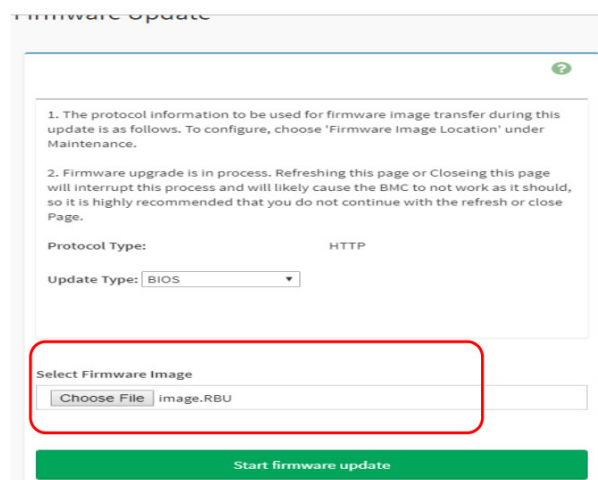



• BIOS update step (3)

Upload 100% please click “Flash BIOS ”Button

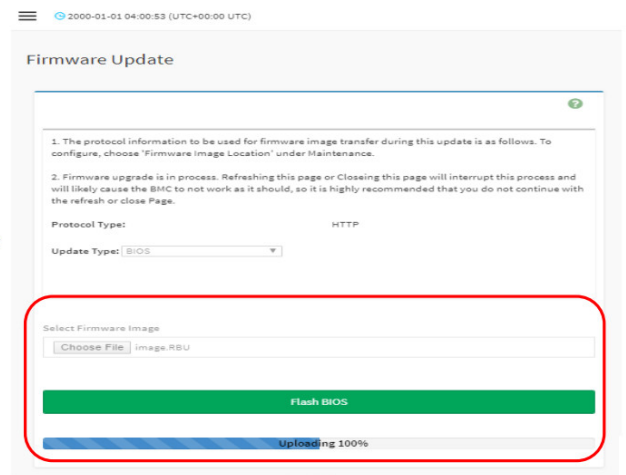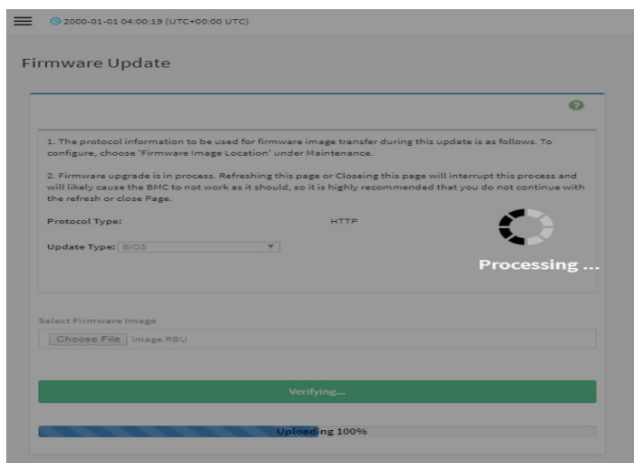

• BIOS update step (4)

Waiting for flashing to 100% please click updated successfully “OK”button after will jump another window also click “OK”button . After then please AC cycle

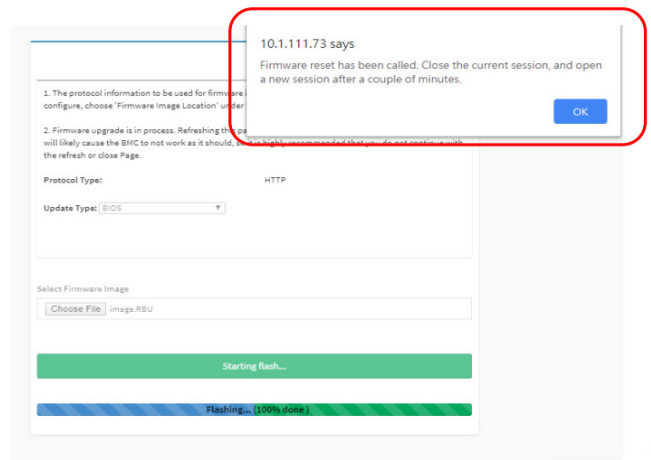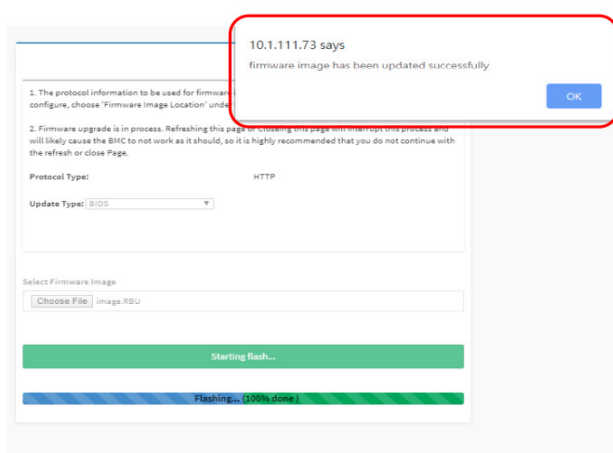

The Best is Yet To Come



<https://www.altoscomputing.com/en-US>

For more information about Altos product and solution Please visit Altos website (welcome scan QR code or use URL) <https://www.altoscomputing.com/en-US>



Documents / Resources



[ALTOS BMC Web Console Update](#) [pdf] User Guide
Non-GPU model, BMC Web Console Update, Web Console Update, Console Update, Update

References

-  [Altos](#)