

Altronix HubSat8Di Passive UTP Transceiver Hub with Integral Isolated Camera Power Installation Guide


[Home](#) » [Altronix](#) » Altronix HubSat8Di Passive UTP Transceiver Hub with Integral Isolated Camera Power Installation Guide 

Contents

- [1 Altronix HubSat8Di Passive UTP Transceiver Hub with Integral Isolated Camera Power](#)
- [2 Overview](#)
- [3 Specifications](#)
- [4 Installation Instructions](#)
- [5 Fig. 1 – HubSat Circuit Board](#)
- [6 Fig. 2e – HubWayAV2](#)
- [7 Fig. 3a – Illuminated master power disconnect circuit breaker](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



Altronix HubSat8Di Passive UTP Transceiver Hub with Integral Isolated Camera Power

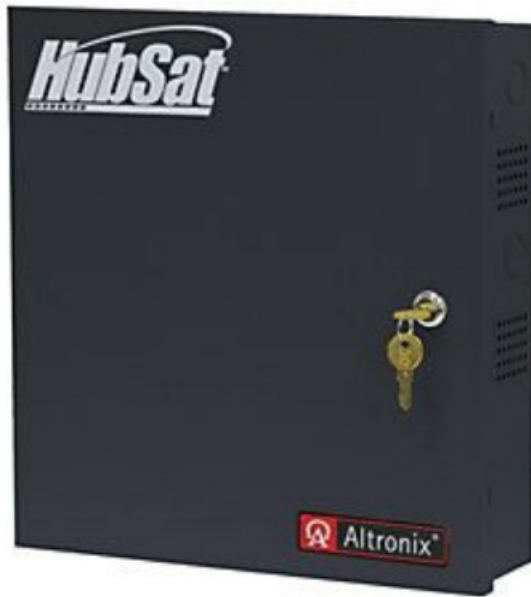

Overview

Altronix HubSat8Di Passive UTP Transceiver Hub with Integral Isolated Camera Power transmits UTP video, RS422/RS485 data and power over a single CAT-5 or higher structured cable. Unit provides 8 camera channels in a wall mount enclosure. Video transmission range is up to 750 ft. max. per channel. Units are compatible with AC and/or DC fixed or PTZ cameras when utilizing Altronix HubWayAv or HubWayDv Video Balun/Combiners. In addition, the unit features individually selectable 24VAC or 28VAC PTC-protected outputs with surge suppression. Optionally, the HubSat8Di can be used as an accessory module to transmit video from up to 8 cameras over two (2) separate CAT-5 or higher structured cables back to the HubWay, HubWayLD or HubWayLDH Passive and Active UTP Transceiver Hubs. In addition, the HubSat8Di provides power to these cameras locally to eliminate the possibility of voltage drop associated with long cable runs.

Specifications

Agency Listings

- UL Listed for Commercial CCTV Equipment (UL 2044).
cUL Listed – CSA Standard C22.2 No.1-04, Audio, Video and Similar Equipment.
- CE European Conformity

Input

- 115VAC 60Hz, 2.5A.
- Primary in-line fuses are rated @ 3.5A/250V.

Video

- Eight (8) channels of quality video over twisted pair up to a distance of 750 ft. per channel.

- Eight (8) 75 Ohm video outputs.

Data

- RS422/RS485 data input.

Power

- Individually selectable 24VAC or 28VAC power outputs with OFF position.
- Unit provides up to 1A max. per channel not to exceed a total of 8A maximum current.
- PTC protected outputs are rated @ 1A per channel.
- Surge suppression.

Visual Indicators

- Eight (8) power LED indicators.

Enclosure Dimensions (H x W x D approx.):

- 13.5" x 13" x 3.25"
- (342.9mm x 330.2mm x 82.6mm)

Optional Accessories

- Video Balun/Combiners:
 - HubWayAv:
for use with 24VAC cameras.
 - HubWayAv:
for use with 24VAC cameras.
 - HubWayDv:
for use with 12VDC cameras.

Additional Models: HubSat83Di

HubSat82Di

- HubSat8Di with eight (8) HubWayAv Video Balun/Combiners for 24VAC Cameras.

HubSat83Di

- HubSat8Di with eight (8) HubWayDv Video Balun/Combiners for 12VDC Cameras.

WARNING: To reduce the risk of fire or electric shock do not expose the unit to rain or moisture. This installation should be made by qualified service personnel and should conform to all local codes.

Installation Instructions

HubSat8Di Passive UTP Transceiver Hub with Integral Isolated Camera Power.

1. Mount unit in desired location. Mark and predrill holes in the wall to line up with the top two keyholes in the enclosure. Install two upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the two upper screws; level and secure. Mark the position of the lower two holes. Remove the enclosure. Drill the lower holes and install two fasteners. Place the enclosure's upper keyholes over the two upper screws. Install the two lower screws and make sure to tighten all screws (Enclosure Dimensions, pg. 12). Secure green wire lead to earth ground.
2. Set illuminated master power disconnect circuit breaker to the (OFF) position (Fig. 3a, pg. 8).
3. Connect 115VAC 60Hz to the black and white flying leads of open frame transformer. Secure ground wire (Green) to earth ground (Fig. 3, pg. 8).
4. Select 24VAC or 28VAC power output for each of the Channels 1-4 on HubSat Circuit Board A and HubSat Circuit Board B (Fig. 3, pg. 8) with the corresponding output voltage switches. Select OFF position when servicing or installing individual cameras (Fig. 1d, pg. 6).
5. Connect the BNC video outputs marked [Video 1-4] on Circuit Board A and [Video 1-4] on Circuit Board B to the corresponding video inputs on the head end equipment (DVR) (Fig. 1a, pg. 6).
6. Connect terminals marked [+ DATA -] on Circuit Board A and Circuit Board B (polarity must be observed) to the RS422/RS485 output of the head end equipment (DVR) (Fig. 1f, pg. 6).
Note: The Data input terminals of Circuit Board A and Circuit Board B must be wired in parallel for proper operation. When using fixed cameras disregard this step.
7. Plug the RJ45 connector at one end of the CAT-5 or higher structured cable into the RJ45 jack marked [PVD1] on Circuit Board A (Fig. 1i, pg. 6). Plug the RJ45 connector at the opposite end of the CAT-5 or higher structured cable into the RJ45 jack of the Video Balun/Combiner to be installed at camera 1.
 - For 24VAC cameras use Altronix model HubWayAv/HubWayAv2 Video Balun/Combiner (Figs. 2a, 2b, 2e, pg. 7).
 - For 12VDC cameras use Altronix model HubWayDv Video Balun/Combiner (Figs. 2c, 2d, pg. 7).The total cable distance must not exceed 750 ft. for video transmission between the HubSat8D and each camera. Repeat this step for all other camera channels [PVD2-4] on Circuit Board A and [PVD1-4] on Circuit Board B.
8. Set illuminated master power disconnect circuit breaker to the RESET (ON) position (Fig. 3a, pg. 8). Power LEDs (Green) of the HubSat8Di will illuminate when AC power is present (Fig. 1e, pg. 6) and HubWayAv or HubWayDv Video Balun/Combiner LEDs will illuminate, indicating power is present (Fig. 2b, 2d, pg. 7).
9. Measure the output voltage at each Video Balun/Combiner (Figs. 2b, 2d, pg. 7) before making connections to each camera to ensure proper operation and avoid possible damage.
10. Set illuminated master power disconnect circuit breaker to the (OFF) position (Fig. 3a, pg. 8).
11. Connect power outputs of HubWayAv, HubWayAv2 or HubWayDv Video Balun/Combiners to power inputs of cameras (Figs. 2a-2e, pg. 7). Polarity must be observed.
 - HubWayAv/HubWayAv2 – Terminals marked [AC POWER] (Figs. 2a, 2b, 2e, pg. 7).
 - HubWayDv – Terminals marked [- 12VDC +] (Figs. 2c, 2d, pg. 7).
12. Connect the terminals marked [+ DATA -] of HubWayAv, HubWayAv2 or HubWayDv Video Balun/Combiners to the data input terminals of cameras for PTZ control (Figs. 2b-2d, pg. 7).
Polarity must be observed. When using fixed cameras disregard this step.

13. Connect the BNC connector of HubWayAv, HubWayAv2 or HubWayDv Video Balun/Combiners to the BNC video outputs of the cameras (Figs. 2b-2d, pg. 7).
14. Set illuminated master power disconnect circuit breaker to the RESET [ON] position (Fig. 3a, pg. 8).
15. The power LEDs (Green) of the HubSat8Di will illuminate when AC power is present (Fig. 1e, pg. 6). Note: If any of the power LEDs are not illuminated the cause may be due to the following:
 1. AC mains fail.
 2. Illuminated master power disconnect circuit breaker is tripped.
 3. An individual power output voltage switch is set to the OFF position (Fig. 1d, pg. 6).
 4. A PTC is tripped due to a short circuit or overload condition for one or more channels/power outputs. To reset the PTC:
 1. Set the voltage output selector switch for that corresponding channel to the OFF position. Switch must remain in the OFF position for approximately 2 minutes in order for the PTC to reset (Fig. 1d, pg. 6).
 2. Eliminate the trouble condition (short circuit or overload).
 3. Set the voltage output selector switch for either 24VAC or 28VAC (Fig. 1d, pg. 6).

HubSat8Di for use as a Remote Accessory Module with HubWay/HubWayLD/HubWayLDH UTP Transceiver Hubs.

After completing steps 1-4 of Installation Instructions for HubSat8Di Passive UTP Transceiver Hub with Integral Isolated Camera Power proceed with the following.

1. For fixed cameras, run two (2) CAT-5 cables between HubSat8Di and HubWay, HubWayLD or HubWayLDH to allow video transmission of up to eight (8) cameras. For PTZs, run three (3) CAT-5 cables between HubSat8Di and HubWay, HubWayLD or HubWayLDH (Fig. 5, pg. 9).
 1. Connect one (1) of the CAT-5 cables to the RJ45 jack marked [Video 1-4] on Circuit Board A. Connect the opposite end of this CAT-5 cable into the RJ45 jack marked [CH 1-4] of HubWay, HubWayLD or HubWayLDH unit (Fig. 5, pg. 9).
 2. Connect the second CAT-5 cable to the RJ45 jack marked [Video 1-4] on Circuit Board B. Connect the opposite end of this CAT-5 cable into the RJ45 jack marked [CH 5-8] of HubWay, HubWayLD or HubWayLDH unit (Fig. 5, pg. 9).
 3. For data (PTZ) connect the third CAT-5 cable to the RJ45 jack marked [Data 1-4] on Circuit Board A. Connect the opposite end of this CAT-5 cable into any unused RJ45 jack marked [1-16] of HubWay, HubWayLD or HubWayLDH unit (Fig. 5, pg. 9).

Note: Data inputs of HubWay, HubWayLD or HubWayLDH units must be wired in parallel for proper operation. When using fixed cameras disregard this step.
2. Plug the RJ45 connector at one end of the CAT-5 or higher structured cable into the RJ45 jack marked [PVD1] on Circuit Board A (Fig. 1i, pg. 6). Plug the RJ45 connector at the opposite end of the CAT-5 or higher structured cable into the RJ45 jack of the Video Balun/Combiner to be installed at camera 1.
 - For 24VAC cameras use Altronix model HubWayAv/HubWayAv2 Video Balun/Combiner (Figs. 2a, 2b, 2e, pg. 7).
 - For 12VDC cameras use Altronix model HubWayDv Video Balun/Combiner (Figs. 2c, 2d, pg. 7).

The total cable distance must not exceed 750 ft. for video transmission between the HubSat8Di and each camera. Repeat this step for all other camera channels [PVD2-4] on Circuit Board A and [PVD1-4] on Circuit Board B.

3. Set illuminated master power disconnect circuit breaker to the RESET (ON) position (Fig. 3a, pg. 8). Power LEDs (Green) of the HubSat8Di will illuminate when AC power is present (Fig. 1e, pg. 6) and HubWayAv or HubWayDv Video Balun/Combiner LEDs will illuminate indicating power is present (Fig. 2b, 2d, pg. 7).
4. Measure the output voltage at each Video Balun/Combiner (Figs. 2b, 2d, pg. 7) before making connections to each camera to ensure proper operation and avoid possible damage.
5. Set illuminated master power disconnect circuit breaker to the (OFF) position (Fig. 3a, pg. 8).
6. Connect power outputs of HubWayAv, HubWayAv2 or HubWayDv Video Balun/Combiners to power inputs of the cameras (Figs. 2a-2e, pg. 7). Polarity must be observed.
 - HubWayAv/HubWayAv2 – Terminals marked [AC POWER] (Figs. 2a, 2b, 2e, pg. 7).
 - HubWayDv – Terminals marked [– 12VDC +] (Figs. 2c, 2d, pg. 7).
7. Connect the terminals marked [+ DATA –] of HubWayAv, HubWayAv2 or HubWayDv Video Balun/Combiners to the data input terminals of cameras for PTZ control (Figs. 2b-2e, pg. 7). Polarity must be observed. When using fixed cameras disregard this step.
8. Connect the BNC connector of HubWayAv, HubWayAv2 or HubWayDv Video Balun/Combiners to the BNC video outputs of the cameras (Figs. 2b-2d, pg. 7).
9. Set illuminated master power disconnect circuit breaker to the RESET [ON] position (Fig. 3a, pg. 8).
 1. The power LEDs (Green) of the HubSat8Di will illuminate when AC power is present (Fig. 1e, pg. 6).
 Note: If any of the power LEDs are not illuminated the cause may be due to the following:
 1. AC mains fail.
 2. Illuminated master power disconnect circuit breaker is tripped.
 3. An individual power output voltage switch is set to the OFF position (Fig. 1d, pg. 6).
 4. For data (PTZ) connect the third CAT-5 cable to the RJ45 jack marked [Data 1-4] on Circuit Board A. Connect the opposite end of this CAT-5 cable into any unused RJ45 jack marked [1-16] of HubWay, HubWayLD or HubWayLDH unit (Fig. 5, pg. 9).
 Note: Data inputs of HubWay, HubWayLD or HubWayLDH units must be wired in parallel for proper operation. When using fixed cameras disregard this step.
 2. Plug the RJ45 connector at one end of the CAT-5 or higher structured cable into the RJ45 jack marked [PVD1] on Circuit Board A (Fig. 1i, pg. 6). Plug the RJ45 connector at the opposite end of the CAT-5 or higher structured cable into the RJ45 jack of the Video Balun/Combiner to be installed at camera 1.
 - For 24VAC cameras use Altronix model HubWayAv/HubWayAv2 Video Balun/Combiner (Figs. 2a, 2b, 2e, pg. 7).
 - For 12VDC cameras use Altronix model HubWayDv Video Balun/Combiner (Figs. 2c, 2d, pg. 7).
 The total cable distance must not exceed 750 ft. for video transmission between the HubSat8Di and each camera. Repeat this step for all other camera channels [PVD2-4] on Circuit Board A and [PVD1-4] on Circuit Board B.
 3. Set illuminated master power disconnect circuit breaker to the RESET (ON) position (Fig. 3a, pg. 8). Power LEDs (Green) of the HubSat8Di will illuminate when AC power is present (Fig. 1e, pg. 6) and HubWayAv or HubWayDv Video Balun/Combiner LEDs will illuminate indicating power is present (Fig. 2b, 2d, pg. 7).
 4. Measure the output voltage at each Video Balun/Combiner (Figs. 2b, 2d, pg. 7) before making connections to each camera to ensure proper operation and avoid possible damage.
 5. Set illuminated master power disconnect circuit breaker to the (OFF) position (Fig. 3a, pg. 8).
 6. Connect power outputs of HubWayAv, HubWayAv2 or HubWayDv Video Balun/Combiners to power

inputs of the cameras (Figs. 2a-2e, pg. 7). Polarity must be observed.

- HubWayAv/HubWayAv2 – Terminals marked [AC POWER] (Figs. 2a, 2b, 2e, pg. 7).
 - HubWayDv – Terminals marked [– 12VDC +] (Figs. 2c, 2d, pg. 7).
7. Connect the terminals marked [+ DATA –] of HubWayAv, HubWayAv2 or HubWayDv Video Balun/Combiners to the data input terminals of cameras for PTZ control (Figs. 2b-2e, pg. 7). Polarity must be observed. When using fixed cameras disregard this step.
 8. Connect the BNC connector of HubWayAv, HubWayAv2 or HubWayDv Video Balun/Combiners to the BNC video outputs of the cameras (Figs. 2b-2d, pg. 7).
 9. Set illuminated master power disconnect circuit breaker to the RESET [ON] position (Fig. 3a, pg. 8).
 10. The power LEDs (Green) of the HubSat8Di will illuminate when AC power is present (Fig. 1e, pg. 6).

Note: If any of the power LEDs are not illuminated the cause may be due to the following:


1. AC mains fail.
2. The illuminated master power disconnect circuit breaker is tripped.
3. An individual power output voltage switch is set to the OFF position (Fig. 1d, pg. 6).
4. A PTC is tripped due to a short circuit or overload condition for one or more channels/power outputs. To reset the PTC:
 1. Set the voltage output selector switch for that corresponding channel to the OFF position. Switch must remain in the OFF position for approximately 2 minutes in order for the PTC to reset (Fig. 1d, pg. 6).
 2. Eliminate the trouble condition (short circuit or overload).
 3. Set the voltage output selector switch for either 24VAC or 28VAC (Fig. 1d, pg. 6).

Alternate 24VAC Fixed Camera Hookup (Fig. 6a, pg. 9).

After completing steps 1-5 of Installation Instructions Remote Accessory Module for use with HubWay, HubWayLD or HubWayLDH UTP Transceiver Hubs proceed with the following.

1. Set illuminated master power disconnect circuit breaker to the (OFF) position (Fig. 3a, pg. 8).
2. Connect one end of the coaxial cable to the BNC connector marked [Video1] on Circuit Board A (Fig. 1a, pg. 6). Connect the opposite end of the coaxial cable to the BNC video output of camera 1 (Fig. 5a, pg. 9).
3. Set illuminated master power disconnect circuit breaker to the RESET (ON) position (Fig. 3a, pg. 8). Measure the output voltage at the terminal pair marked [AUX1] on Circuit Board A to ensure proper operation and avoid possible damage (Fig. 1b, pg. 6).
4. Connect the power output terminal pair marked [AUX1] on Circuit Board A to the power inputs of camera 1 (Fig. 1c, pg. 6). Repeat steps 1-3 for each additional camera [AUX2-4].

Fig. 1 – HubSat Circuit Board

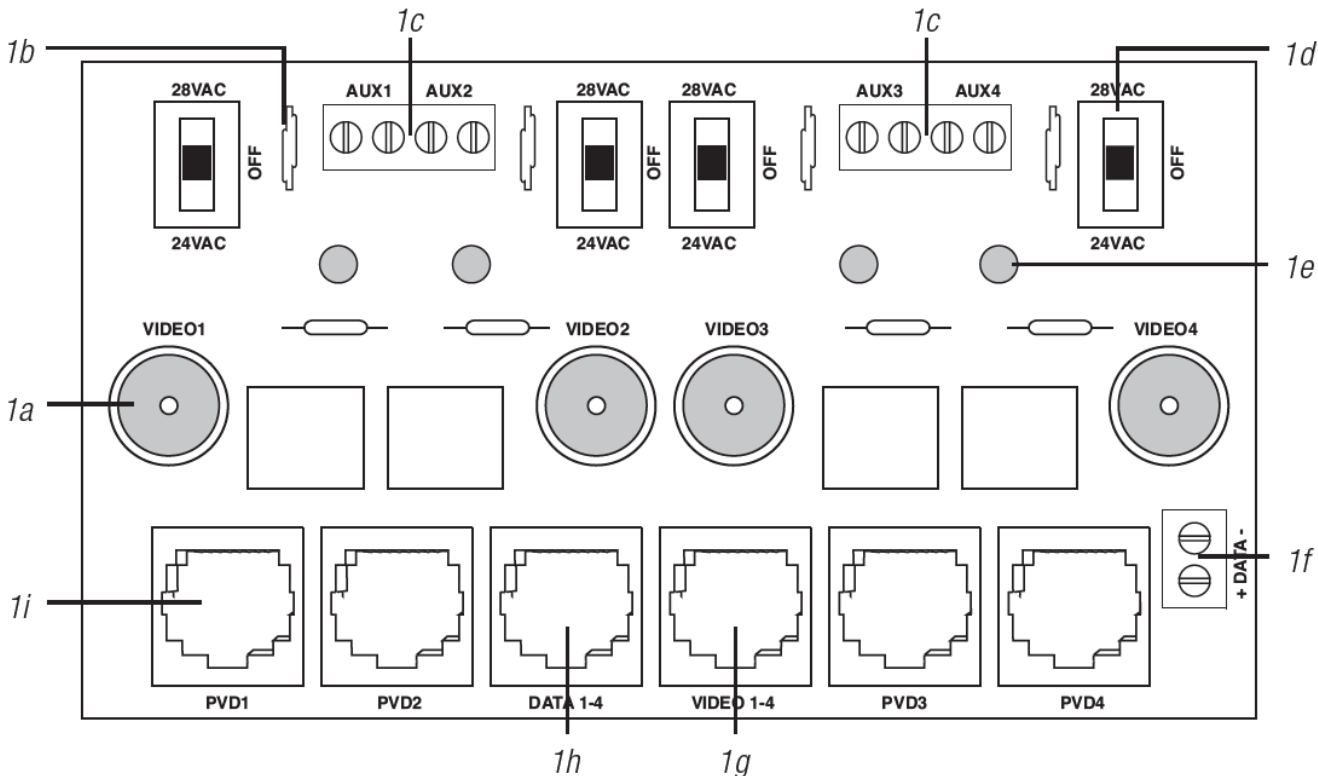





- 1a – BNC Connector: Video in from remote camera video out to DVR.
- 1b – Output PTCs: Protects each output.
- 1c – Power Terminals: 24VAC/28VAC power outputs.
- 1d – Output Voltage Switches: Selects 24VAC/28VAC/OFF for each output.
- 1e – LED(s) 1-4: Power output indicators.
- 1f – Data: RS422/RS485 input from head-end equipment (DVR) for PTZ control.
- 1g – Channels 1-4: Single CAT-5 or higher structured cable out to HubWay, HubWayLD or HubWayLDH enables transmission of up to four (4) video signals.
 - Pinout configuration (Fig. 4, pg. 7).
 - 1h – Data: CAT-5 or higher structured cable to the data port on HubWay, HubWayLD or HubWayLDH or head-end equipment (DVR).
 - 1i – Channels 1-4: CAT-5 or higher structured cable to cameras. Pinout configuration (Fig. 3, pg. 7).

HubWayAv, HubWayAv2, HubWayDv, and HubWayDvi Video Balun/Combiners

| Altronix Model Number | Input Voltage from HubWay Unit | Output Voltage to Camera | Camera Type | Power LED |
|-----------------------|--------------------------------|--------------------------|---------------|-----------|
| HubWayAv | *24VAC/28VAC | *24VAC/28VAC | *24VAC/28VAC | Green |
| HubWayAv2 | *24VAC/28VAC | *24VAC/28VAC | *24VAC/28VAC | N/A |
| HubWayDv | *24VAC/28VAC | 12VDC | 12VDC cameras | Red |


Fig. 2e – HubWayAV2

Fig. 2

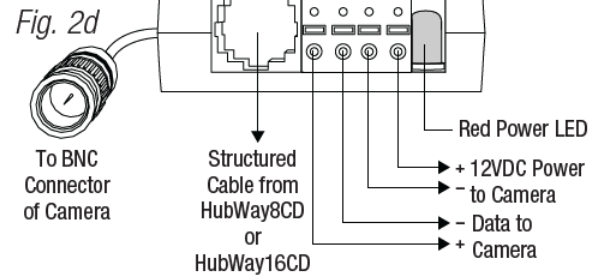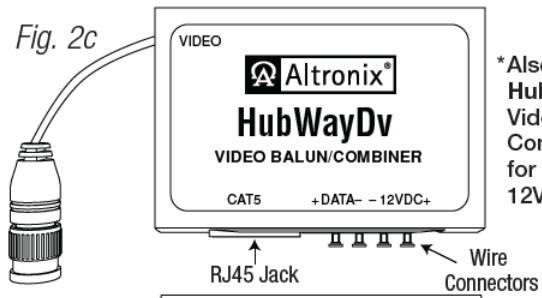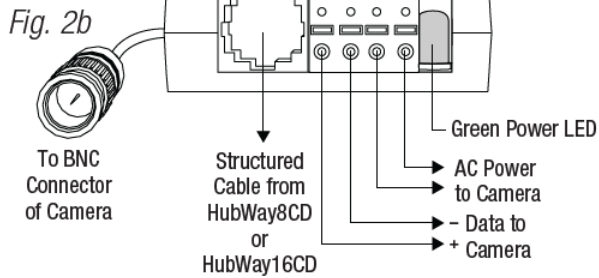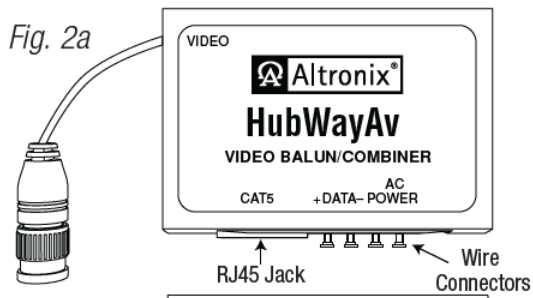

*Also Available as:
HubWayDvi
Video Balun/
Combiner
for non-isolated
12VDC cameras

Fig. 2e - HubWayAV2

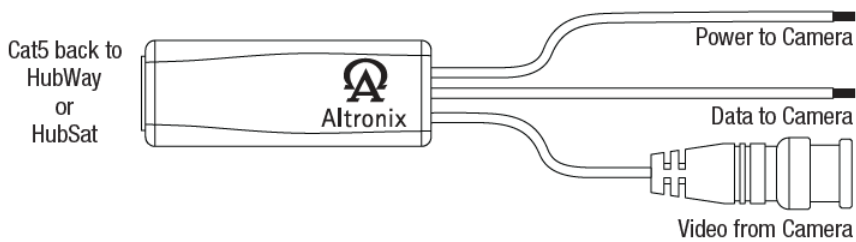

Wiring Color Codes


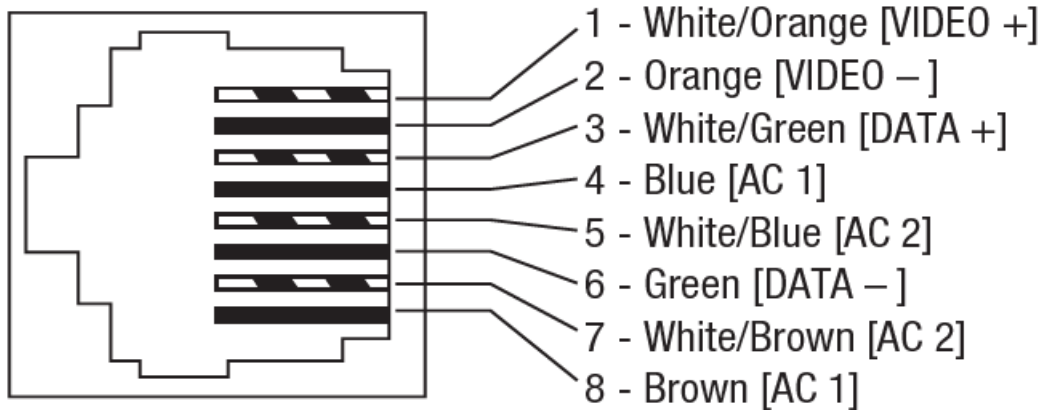


Fig. 3a – Illuminated master power disconnect circuit breaker

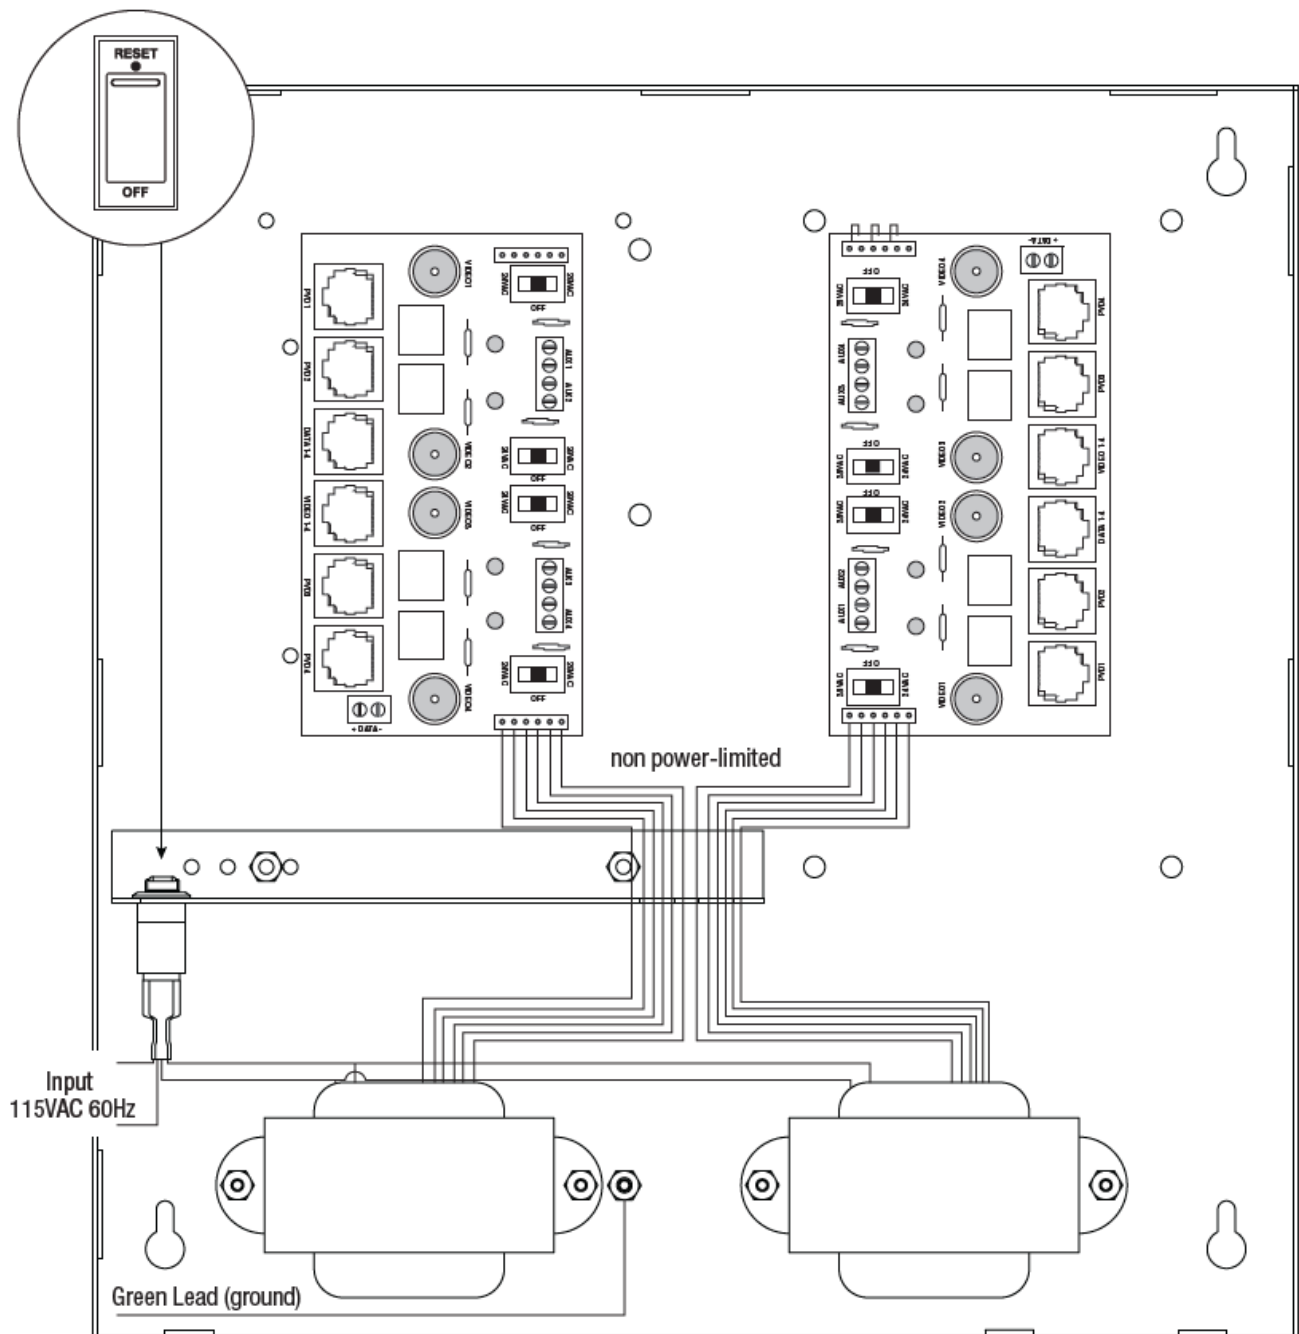


- OFF position: circuit breaker tripped – Switch not illuminated.
- RESET (ON) position – Switch illuminated.

Typical Application Drawing

HubSat8Di Passive UTP Transceiver Hub with Integral Isolated Camera Power:


Fig. 4

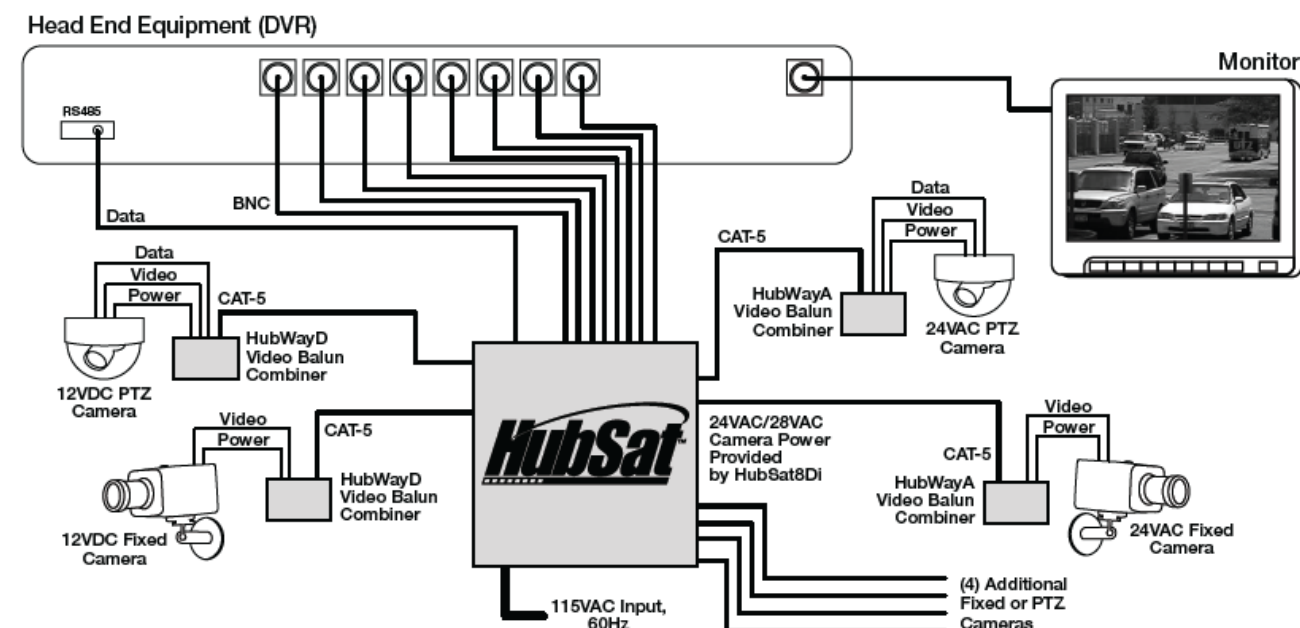

Typical Application Drawing

HubSat8Di Remote Accessory Module with HubWay UTP Transceiver Hubs:

Fig. 5

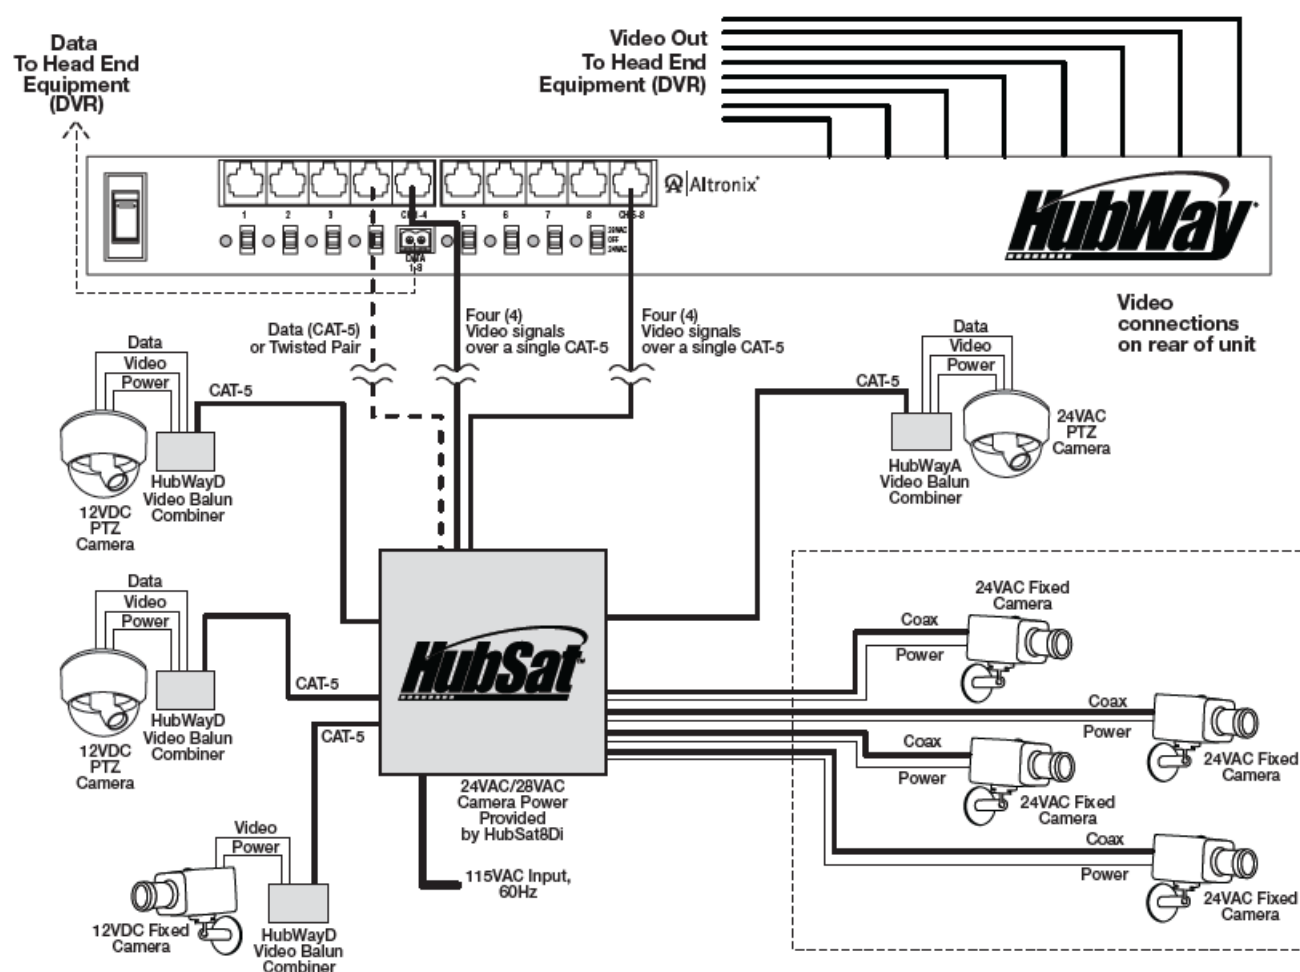




Notes

- The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of an insulated DANGEROUS VOLTAGE within the product’s enclosure that may be of sufficient magnitude to constitute an electric shock.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.
- CAUTION: To reduce the risk of electric shock do not open enclosure. There are no user serviceable parts inside.
Refer servicing to qualified service personnel.

Enclosure Dimensions (H x W x D approximate):
13.5” x 13” x 3.25” (342.9mm x 330.2mm x 82.6mm)

website: www.altronix.com | e-mail: www.altronix.com | Lifetime Warranty IIHubSat8Di K18U

Documents / Resources

| | |
|---|---|
|  HubSat8Di Series Passive UTP Transceiver Hub with Integral Isolated Camera Power Models Include: HubSat8Di 8-Port UTP Transceiver Hub with Integrated Camera Power HubSat82Di 2-Port UTP Transceiver Hub with Integrated Camera Power HubSat83Di 3-Port UTP Transceiver Hub with Integrated Camera Power Installation Guide   | Altronix HubSat8Di Passive UTP Transceiver Hub with Integral Isolated Camera Power [pdf] Installation Guide HubSat8Di, Isolated Camera Power, Camera Power, Camera |
|---|---|

References

-  [Altronix Home](#)