

Altronix®
NetWay4EBTX3
4 Port
Hardened 360W
802.3bt 4PPoE
Switches



Altronix NetWay4EBTX3 4 Port Hardened 360W 802.3bt 4PPoE Switches Installation Guide


[Home](#) » [Altronix](#) » Altronix NetWay4EBTX3 4 Port Hardened 360W 802.3bt 4PPoE Switches Installation Guide 

Contents

- [1 Altronix NetWay4EBTX3 4 Port Hardened 360W 802.3bt 4PPoE Switches](#)
- [2 Product Usage Instructions](#)
- [3 FAQ](#)
- [4 Models Include](#)
- [5 Overview](#)
- [6 Features](#)
- [7 Installation Instructions](#)
- [8 Technical Specifications](#)
- [9 Typical Applications](#)
- [10 Configuring Units for Network Connection](#)
- [11 Factory Reset Option](#)
- [12 Wall Mount Installation](#)
- [13 Mechanical Drawing and Dimensions](#)
- [14 Warranty](#)
- [15 Documents / Resources](#)
 - [15.1 References](#)



Altronix NetWay4EBTX3 4 Port Hardened 360W 802.3bt 4PPoE Switches

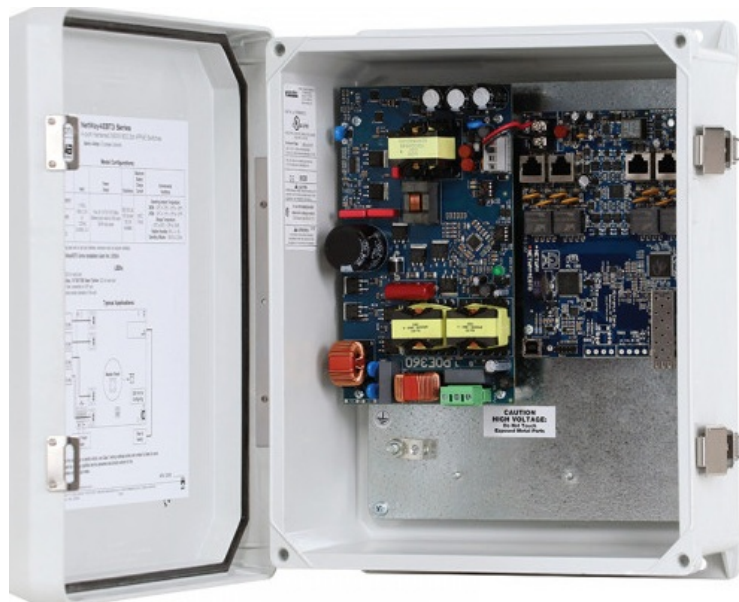

Specifications

- **Product Name:** Fiber Solution Embedded NetWay4EBT3 Series 4-port Hardened 360W 802.3bt 4PPoE Switches
- **Models:**
 - NetWay4EBTWP3
 - NetWay4EBTWPX3
 - NetWay4EBTX3
 - NetWay4EBTPL3
- **Features:** 1Gb SFP port, four POE IEEE802.3af/3at/3bt PoE ports (90W each), total power of 360W, LINQ Technology
- **Dimensions:**
 - **NetWay4EBTWX3:** 13.31 x 11.31 x 5.59 inches
 - **NetWay4EBTX3:** 13.5 x 13 x 3.25 inches

Product Usage Instructions

Installation Guide

- Altronix NetWay4EBT3 Series switches are designed for hardened environments and come in different models with various enclosures.
- Follow the installation guide provided to ensure proper setup.

Features Overview

- **Agency Listings:** Ensure compliance with relevant standards and regulations.
- **LINQ Technology:** Enables remote monitoring, control, and reporting over the network.
- **VLAN:** Virtual Local Area Network support for network segmentation.

Recommended Altronix SFP Modules

- **P1MM:** Multi-Mode Fiber, up to 550m distances.
- **P1SM10:** Single-Mode Fiber, up to 10km distances.
- **P1AB2K:** Single Strand Single-Mode Fiber, up to 2km distances.
- **P1GCE:** CAT5e or better, up to 100m distances.

Installation Instructions

Ensure wiring methods comply with electrical codes and local regulations. Installation should be carried out by trained service personnel.

For NetWay4EBTPL3:

1. Mount the backplane in the desired location/enclosure.

For NetWay4EBTWP3/NetWay4EBTWPX3:

1. Remove the backplane from the enclosure before drilling.
2. Mark and drill desired inlets on the enclosure for wiring.

For NetWay4EBTX3

1. Mount the unit in the desired location and connect the power.

Power Connection

1. Secure the cabinet to earth ground and connect AC power from the circuit breaker.

FAQ

- **Q: Can I use the NetWay4EBT3 Series switches outdoors?**
 - **A:** Yes, the models NetWay4EBTWP3, and NetWay4EBTWPX3 are designed for outdoor use with appropriate enclosures.
- **Q: What is LINQ Technology?**
 - **A:** LINQ Technology enables remote monitoring, control, and reporting over the network for enhanced management capabilities.

Models Include

- **NetWay4EBTWP3**
 - 4-port Hardened 802.3bt 4PPoE Switch and Power Supply/Charger
 - NEMA4/4X, IP66-rated Outdoor enclosure.
- **NetWay4EBTWPX3**
 - 4-port Hardened 802.3bt 4PPoE Switch and Power Supply/Charger
 - NEMA4/4X, IP66-rated Outdoor enclosure.
 - Accommodates up to four (4)

- 12VDC/4AH batteries.
- **NetWay4EBTX3**
 - 4-port Hardened 802.3bt 4PPoE Switch and
- **Power Supply/Charger**
 - NEMA1-rated Indoor enclosure.
- **NetWay4EBTPL3**
 - 4-port Hardened 802.3bt 4PPoE Switch and Power Supply/Charger
 - Backplane version.

Overview

- Altronix NetWay4EBT3 Series Hardened 802.3bt 4PPoE Switches are equipped with one (1) 1Gb SFP port and four (4) POE IEEE802.3af/3at/3bt PoE ports rated at 90W each, with 360W total power.
- Embedded LINQ Technology enables monitoring, control, and reporting from anywhere over the network.
- For unmanaged switches, refer to NetWay4E1BT3 Series.

Features

- **Agency Listings:**
 - CE European Conformity.
- **Input:**
 - 115VAC, 60Hz, 3.5A or 230VAC, 50/60Hz, 2A.
- **Power Output:**
 - Four (4) 10/100/1000 Mbps Ethernet ports rated at 90W each (360W total power).
 - IEEE 802.3af, 802.3at, 802.3bt compliant.
- **SFP Ports:**
 - One (1) Gigabit SFP port.
- **Ethernet Ports:**
 - Four (4) 10/100/1000 Mbps ports.
 - **Connectivity:** RJ45, auto-crossover.
 - **Wire type:** 4-pair CAT5e or higher structured cable.
 - **Speed:** 10/100/1000 Mbps, half/full duplex, auto negotiation.
- **Battery Backup**
 - 48VDC charging circuit charges sealed lead acid* or gel type* batteries.
 - Automatic switch over to stand-by battery when AC fails.
- **Indicators (LED):**
 - Individual PoE On LEDs for each port.
 - Individual IP Link status, 10/100 Base-T/active LEDs for each port.
 - ALOS LED indicates fiber connection for the SFP port.
 - Heartbeat LED indicates proper operation of the unit.
- **VLAN:**
 - Multiple management VLAN assignments.
 - 802.1Q Tagged VLAN.
 - Up to 10 VLAN groups. ID Range 2-4095.

- **LINQ Technology:**

- Remote network management allows for camera/ device reset and diagnostic monitoring.
- Provides local and/or remote access to critical information via LAN/WAN.
- Email and Windows Dashboard Alert notifications report real-time events.
- The event log tracks history.

- **Mechanical:**

- **NetWay4EBTPL3:**

- **Dimensions (H x W x D approx.):** 10.75" x 8.875" x 2.375" (273.1mm x 225.4mm x 60.3mm).

- **NetWay4EBTWPX3:**

- NEMA4/4X, IP66-rated enclosure for outdoor use.
- Accommodates sealed lead acid or gel-type 12VDC batteries.
- **Dimensions (H x W x D approx.):** 17.53" x 15.3" x 6.67" (445.3mm x 388.6mm x 169.4mm).

- **NetWay4EBTWP3:**

- NEMA4/4X, IP66-rated enclosure for outdoor use.
- **Dimensions (H x W x D approx.):** 13.31" x 11.31" x 5.59" (338.1mm x 287.3mm x 142mm).

- **NetWay4EBTX3:**

- NEMA1 Rated enclosure for indoor use
- **Dimensions (H x W x D approx.):** 13.5" x 13" x 3.25" (342.9mm x 330.2mm x 83mm).

- **CAUTION:** When using lead acid or gel-type batteries, the enclosure must be properly ventilated.
- Battery operational temperature should be rated 10-15°C lower than the manufacturer's rated high temperature.

Recommended Altronix SFP Modules

- Altronix P1MM, P1SM10, P1AB2K, and P1GCE are hot-pluggable SFP fiber transceiver modules and are readily usable with all Altronix Spectrum fiber optic equipment for 1Gb transmission rates.
- P1MM For use with Multi-Mode Fiber for distances up to 550m.
- P1SM10 For use with Single-Mode Fiber for distances up to 10km.
- P1AB2K For use with Single Strand Single-Mode Fiber for distances up to 2km.
- P1GCE For use with CAT5e or better for distances up to 100m.

Installation Instructions

Wiring methods shall be under the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having jurisdiction. All units should be installed by a trained service personnel.

NetWay4EBTPL3:

1. Mount the backplane in the desired location/enclosure with the hardware supplied.

NetWay4EBTWP3/NetWay4EBTWPX3:


1. Remove the backplane from the enclosure before drilling. Do not discard hardware.
 - **Note:** Make sure that hardware will not interfere with the components of the circuit board.
2. Mark and drill desired inlets on the enclosure to facilitate wiring. Maximum NEMA type 4X rated fittings to be used are 0.5". Follow the manufacturer's specifications for the appropriate size opening.

- **Note:** Inlets for conduit fittings should only be made on the bottom of the enclosure.
 - To facilitate wire entry utilize weather-tight NEMA-rated connectors (supplied), bushings, and cable.
3. Clean out the inside of the enclosure before remounting circuit boards/backplanes.
 4. Mounting NEMA4/4X rated enclosure (Enclosure Dimensions).
 - **Wall mount:** Mount the unit in the desired location. Mark and drill holes to line up with the top and bottom holes of the enclosure flange.
 - Secure the enclosure with appropriate fasteners (e. g. screws and anchors; bolts and locking nuts, etc.) that are compatible with the mounting surface and are of sufficient length/construction to ensure a secure mount (Fig. 4).
 - **Pole Mount:** Refer to Fig. 5 – 9.
 5. Mount the backplane in an enclosure with hardware.

NetWay4EBTX3:

1. Mount the unit in the desired location. Mark and predrill holes in the wall to line up with the top two keyholes in the enclosure.
 - Install two (2) upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the two (2) upper screws; level and secure.
 - Mark the position of the lower two (2) holes. Remove the enclosure. Drill the lower holes and install two fasteners. Place the enclosure's upper keyholes over the two (2) upper screws.
 - Install the two (2) lower screws and make sure to tighten all screws (Enclosure Dimensions). Secure enclosure to earth ground.

Power Connection:

1. Secure cabinet to earth ground. Connect AC power from the overcurrent protective device circuit breaker (20A @ 115VAC, 60Hz, 16A @ 230VAC, 50/60Hz) to the terminals marked [L, N] on the power supply board (Fig. 3).
 - Use 14AWG or larger for all power connections (Battery, DC output, AC input).
 - Connect ground lug  to earth or green branch wire (12AWG min.).
 - Keep power-limited wiring separate from non-power-limited wiring by utilizing separate knockouts/inlets. A minimum 0.25" spacing must be provided.
 - **CAUTION:** Do not touch exposed metal parts. Shut branch circuit power before installing or servicing equipment. There are no user-serviceable parts inside.
 - Refer installation and servicing to qualified service personnel.

Input/Data Connections:

1. Connect structured cables from port marked [Port 1] to [Port 4] on the NetWay unit to PoE-compliant cameras/edge devices (Fig. 1.).
2. Insert the SFP module into the port marked [SFP], then connect the cable to the SFP module on NetWay4EBTB to the corresponding input of an SFP switch (Fig. 1).

Battery Backup:

1. Connect four (4) 12V batteries or two (2) 24V batteries wired in series to terminals marked [BAT – BAT +] (Fig. 1), carefully observing polarity.
- When the use of stand-by batteries is desired, they must be lead acid or gel type. If batteries are housed in a weather-proof enclosure (NetWay4EBTWP3, NetWay4EBTWXP3), they must be properly ventilated. Use Altronix Vent2 kit.
 - **Note:** When batteries are not used, a loss of AC will result in the loss of output voltage.
 - For outdoor battery backup, the battery enclosure must have sufficient ventilation.
 - Battery operational temperature should be rated 10-15°C lower than the manufacturer's rated high temperature.

Security


- Please ensure that the cover is secured.
- Key lock and screws for NetWay4EBTX3, Security Bolt for NetWay4EBTWP3 and NetWay4EBTWXP3.

Technical Specifications

| Parameter | Description | | |
|--------------------------|---|---|--|
| Number of Ports | Four (4) 10/100/1000 Mbps Ethernet ports rated at 90W each. IEEE 802.3af, 802.3at, 802.3bt compliant. One (1) Gigabit SFP Port. | | |
| Input Power Requirements | 115VAC, 60Hz, 3.5A or 230VAC, 50/60Hz, 2A. | | |
| Environmental Conditions | Operating Ambient Temperature: 360W: – 30°C to 70°C (– 22°F to 158°F) 240W: – 30°C to 75°C (– 22°F to 167°F) Storage Temperature: – 30°C to 85°C (– 22°F to 185°F) Relative Humidity: 85%, +/- 5% Operating Altitude: – 304.8 to 2,000m | | |
| Weights (approx.) | Model | Product Weight | Shipping Weight |
| | NetWay4EBTWP3 NetWay4EBTWXP3 | 10.5 lb. (4.76 kg) 15 lb. (6.8 kg) | 11.9 lb. (5.4 kg) |
| | NetWay4EBTX3 NetWay4EBTPL3 | 6.65 lb. (3.02 kg) 2.6 lb. (1.18 kg) | 17.5 lb. (7.9kg) 7.55 lb. (3.42kg) 4.0 lb. (1.81kg) |
| | | | |

Typical Applications

Fig. 1

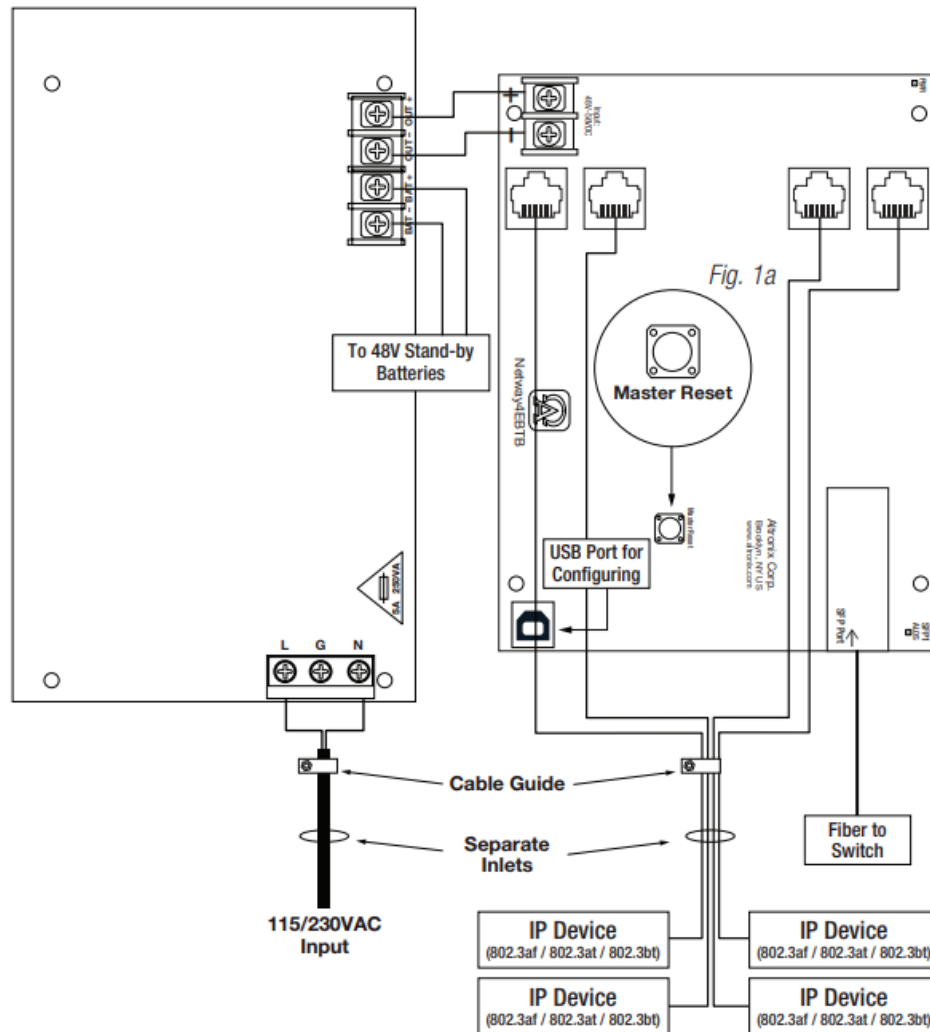

Configuring Units for Network Connection

Please be sure to visit altronix.com for the latest firmware and installation instructions

Factory Default Settings

- **IP Address:** 192.168.168.168
- **User Name:** admin
- **Password:** admin

1. Set the static IP address for the laptop to be used for programming to the same network IP address as the
 - Netway4EBTB. The default address of the Netway4EBTB is 192.168.168.168, I.E. 192.168.168.200.
2. Connect one end of the network cable to the network jack on the Netway4EBTB and the other to the network connection of the laptop.
3. Open a browser on the computer and enter "192.168.168.168" into the address bar.
 - A dialog box Authentication Required will appear requesting both user name and password.
 - Enter the default values here. Click on the button labeled Log In.
4. The status page of the Netway4EBTB will appear. Click on the tab labeled Network Settings.
 - This will open the Network Setting screen. In this screen, the MAC Address of the Netway4EBTB module will be found along with the Network Settings and Email Settings.

Network Settings:

- In the IP Address Method field select [STATIC] or [DHCP], then follow the appropriate steps.

Static:

- **A. IP Address:** Enter the IP address assigned to the Netway4EBTB by the network administrator.
- **B. Subnet Mask:** Enter the Subnet of the network.
- **C. Gateway:** Enter the TCP/IP gateway of the network access point (router) being used. Gateway configuration is required to properly receive emails from the device.
- **D. HTTP Port:** Enter the HTTP port number assigned to the Netway4EBTB module by the network administrator to allow remote access and monitoring.
- The default inbound port setting is 80. HTTP is not encrypted and unsecure. Even though HTTP can be used for remote access, it is recommended primarily for use with LAN connections.
- **E. HTTPS Port:** Enter the HTTPS port number assigned to the Netway4EBTB module by the network administrator to allow remote access and monitoring. The default inbound port setting is 443.
- Being encrypted and more secure, HTTPS is highly recommended for remote access.
- **F.** Click the button labeled Submit Network Settings.
- A dialog box will display "New network settings will take effect after the server is rebooted". Click OK.

DHCP:

- **A.** After selecting DHCP in the IP Address Method field click the button labeled Submit Network Settings.
- A dialog box will display "New network settings will take effect after the server is rebooted". Click OK.
- Next, click on the button labeled Reboot Server. After rebooting the Netway4EBTB will be set in the DHCP mode. The IP address will be assigned by the router when the Netway4EBTB is connected to the network.
- It is recommended to have the assigned IP Address reserved to ensure continued access (see the network administrator).
- **B. Subnet Mask:** When operating in DHCP, the router will assign the subnet mask values.
- **C. Gateway:** Enter the TCP/IP gateway of the network access point (router) being used.
- **D. HTTP Port:** Enter the HTTP port number assigned to the Netway4EBTB module by the network administrator to allow remote access and monitoring.
- The default inbound port setting is 80. HTTP is not encrypted and unsecure. Even though HTTP can be used for remote access, it is recommended primarily for use with LAN connections.

Secure Network Setup (HTTPS):

- In order to set up HTTPS for a Secure Network Connection, a Valid Certificate and Key must be used. Certificates and Keys should be in a ".PEM" format.
- Self Certifications should only be used for testing purposes as no actual authentication is being performed. In a Self-Certified mode, the connection will still state that it is unsecure.

How to upload the Certificate and Key to set HTTPS:

1. Open the Tab Labeled "Security"
2. Select the Tab Labeled "Email/SSL"
3. Scroll to the bottom under "SSL Settings"
4. Click "Select Certificate"
5. Browse and select a valid Certificate to upload from the server
6. Click "Select Key"
7. Browse and select a valid Key to upload from the server
8. Click "Submit Files"
 - Once the Certificate and Key is uploaded successfully you can proceed with setting up HTTPS in Network Settings.
 - **A.** HTTPS Port: Enter the HTTPS port number assigned to the NetWay Spectrum module by the network administrator to allow remote access and monitoring. The default inbound port setting is 443.
 - Being encrypted and more secure, HTTPS is highly recommended for remote access.
 - **B.** Click the button labeled Submit Network Settings.
 - A dialog box will display "New network settings will take effect after the server is rebooted". Click OK.

VLans

- VLANs (Virtual Local Area Networks) are subnetworks that allow for the grouping together of devices for improved network traffic as well as providing higher security by allowing greater control over which devices have access to each other.
 - It is important to plan how you will set up your devices for each VLAN.
 - Configuring VLAN on the Altronix Netway4EBT3 Series Switch:
1. Ensure the Laptop or PC being used to program the vLan settings is on a port that will be assigned to your first vLan configuration. By default, the management portion of the software is assigned to VLAN-1,
 - **CAUTION:** Changing VID=1, the industry-standard VLAN HOST address to any other VID address should be done with caution and performed only locally, since the change will drop the original HOST connection.
 - Local access then facilitates a physical reconnection to the respective port.
 - **Note:** Only this vLan network allows access to IP management.
 2. In the Network Section click on the VLan Tab.
 3. Click Add vLan.
 4. Enter a name for the VLAN.
 5. Enter a VLAN ID, i.e. 10, 20, etc. Ensure this VLAN ID is associated with a VLAN setup on the main switch and that your Laptop or PC being used for programming is on this same ID.
 - **Note:** vLan ID could be any value 2-4094.
 6. Assign vLan QOS (Quality of Service) priority. 0 = Lowest and 7 = Highest
 7. Pick a Trunk port (Tagged Ports). Trunk ports are typically the main connection for network traffic for each group. They are usually connected to a network switch, WAPs, etc.
 8. Pick the Access port(s) (Untagged Ports) associated with the vLan. Access Ports are typically used for Cameras, etc. If programming locally, ensure your laptop or PC is connected to one of these ports.
 9. Save Configuration.
 10. Repeat steps 2 – 9 to add another vLan.


- If the unit is accidentally programmed incorrectly and you cannot get into the Netway4EBT3 series programming, physically moving ports of yours.
- PC connected to the main switch to a correct port (when being programmed remotely), or, as a last resort, completed a factory reset locally and reprogrammed the unit.

11. Advanced Port Settings:

- **Unknown VID Packet Forwarding Configuration:**
 - On ingress unknown VID, forward to a fixed set of ports. By default, no forwarding is set.
- **Configuration on Ingress Untagged Traffic:**
 - Trunk Port action for ingress UNTAGGED packets. By default do not drop packets.
- **Keep Tag on Egress:**
 - Select if you want ACCESS Port to keep the VLAN tag when sending egress packets.
 - By default tags are stripped.
- **Preferred VLAN Forwarding:**
 - For ACCESS Ports that belong to more than one VLAN. Select preferred vLan to forward UNTAGGED ingress packets. By default preferred vLan is the last vLan created.

Typical Vlan Setup

Fig. 2

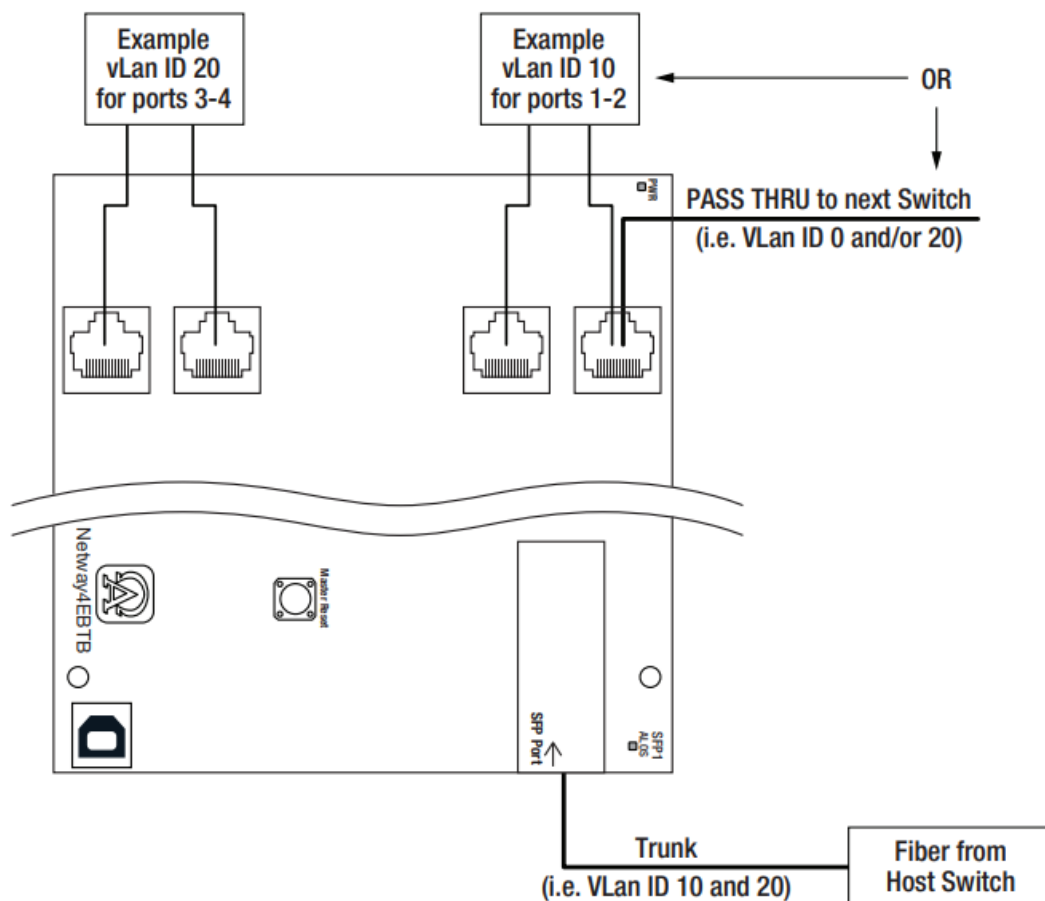


Any Ethernet port can be used for VLAN Pass-Thru

Factory Reset Option


1. Power the unit down. Allow approximately 30 seconds for the unit to power down completely.
2. Depress the Master Reset button on Netway4EBTB while reapplying power to the unit (Fig. 1a Fig. 3).

- Continue holding the button until the LEDs on board go through the start-up cycle, then release the button.
3. The unit returns to the original factory settings.

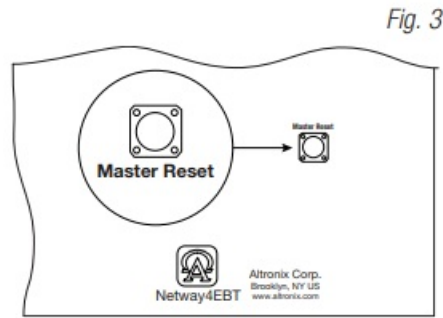




Wall Mount Installation

1. Place the unit at the desired location and secure it with mounting screws (not included) (Fig. 4).

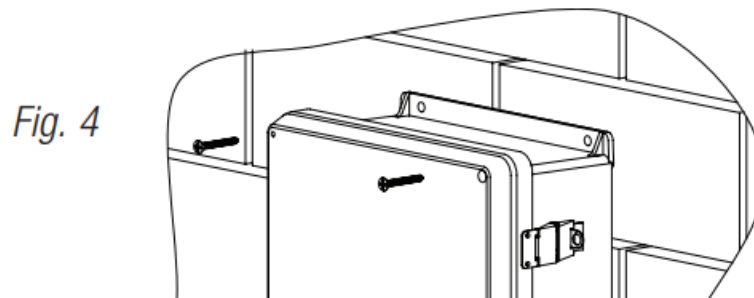

Pole Mounting Using Optional Pole Mount Kit PMK1 (NetWay4EBTWP3) or PMK2 (NetWay4EBTWPX3):


- This installation should be made by qualified service personnel. This product contains no serviceable parts.
 - PMK1 and PMK2 outdoor pole mount kits are designed to simplify the installation of Altronix outdoor-rated power supplies and accessories housed in models WP1, WP2, WP3, and WP4 NEMA-rated enclosures.
 - PMK1 and PMK2 can be mounted on 2" to 8" (50.8mm to 203.2mm) diameter round or 5" (127mm) square poles.
 - Brackets are designed for use with the Wormgear Quick Release Straps (two included).
1. Thread one (1) wormgear quick-release strap through the slots on the back of a mounting bracket (Fig. 5.).
 2. Once the desired height of the top Pole Mount bracket is achieved, tighten the straps down by sliding open the end of the strap through the locking mechanism on the strap, then tighten the screw with a flat head screwdriver or 5/16" hex socket driver (Fig. 6, and Fig. 8).

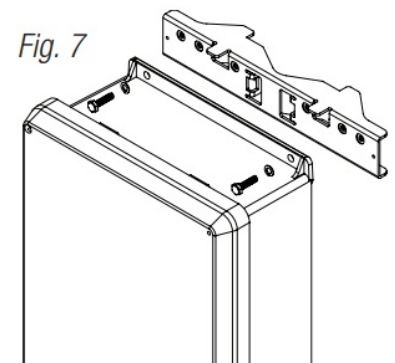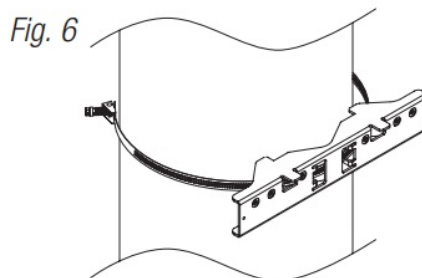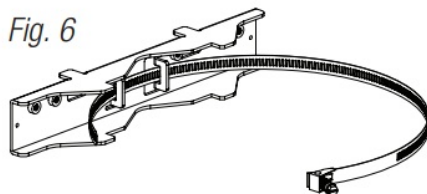

3. Attach the bottom bracket to the enclosure by inserting bolts through the flange of the enclosure and into the bracket, tightening bolts with a 7/16" hex socket (Fig. 7).
4. Thread the second wormgear quick-release strap through the slots on the back of the bottom mounting bracket

(Fig. 8).


5. Mount the enclosure onto the top bracket by inserting bolts through the flange of the enclosure and into the bracket, tightening bolts with a 7/16" hex socket (Fig. 6).
6. Tighten the straps of the bottom bracket down by sliding the open end of the strap through the locking mechanism on the strap, then tighten a screw with a flathead screwdriver or 5/16" hex socket driver (Fig. 6).
7. Clip excess straps.

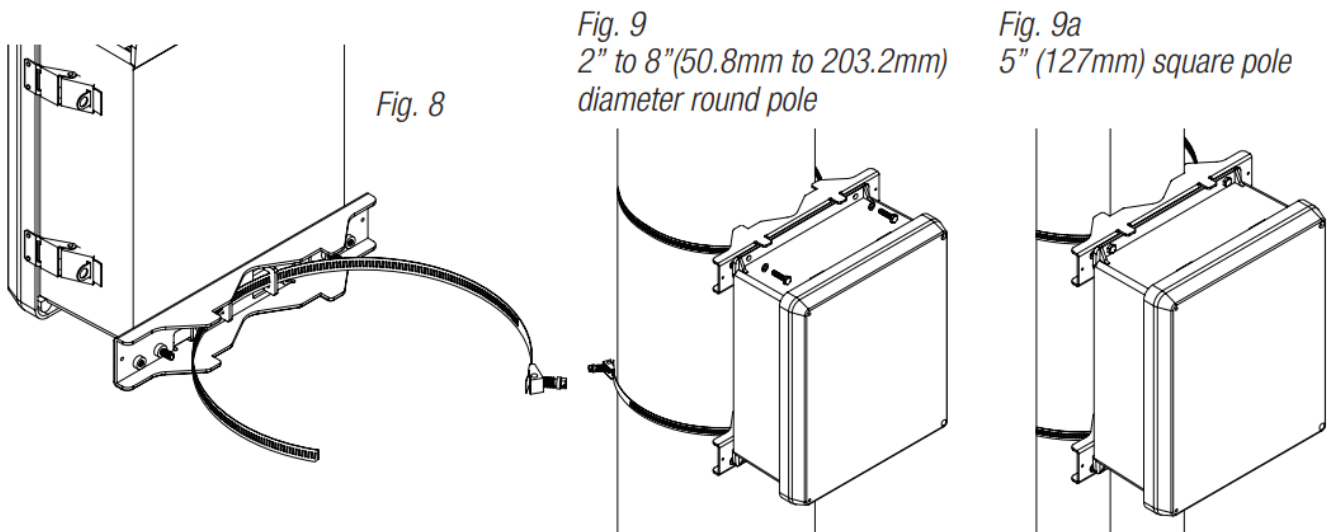


Mechanical Drawing and Dimensions

NetWay4EBTWP3


Mechanical Drawing and Dimensions (H x W x D approx.): 13.31" x 11.31" x 5.59" (338.1mm x 287.3mm x 142mm)

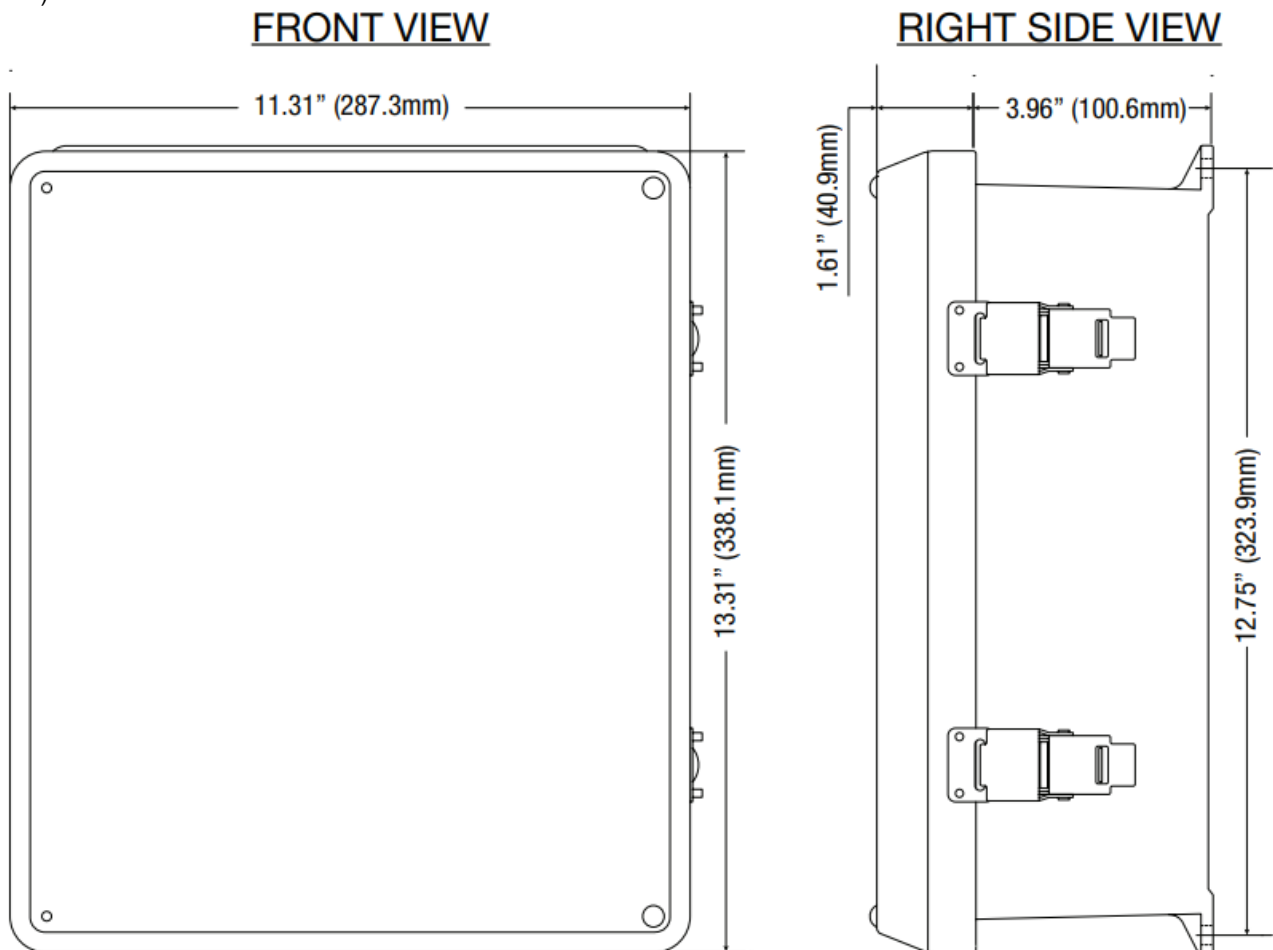


FRONT VIEW COVER REMOVED

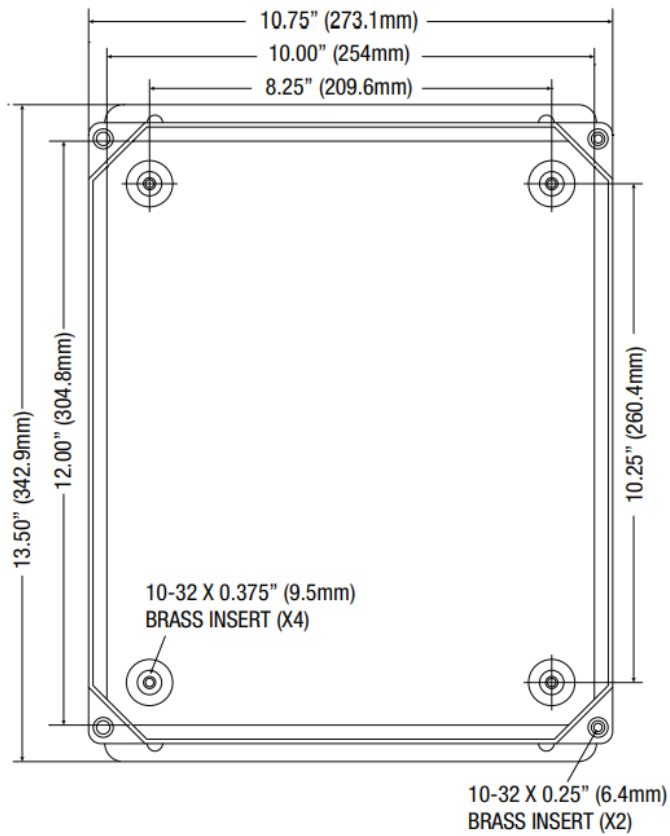

END VIEW

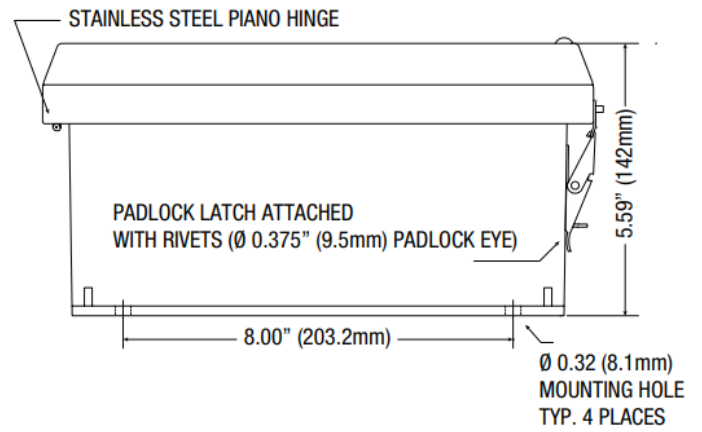


Mechanical Drawing and Dimensions (H x W x D approx.): 17.53" x 15.3" x 6.67" (445.3mm x 388.6mm x 169.4mm)

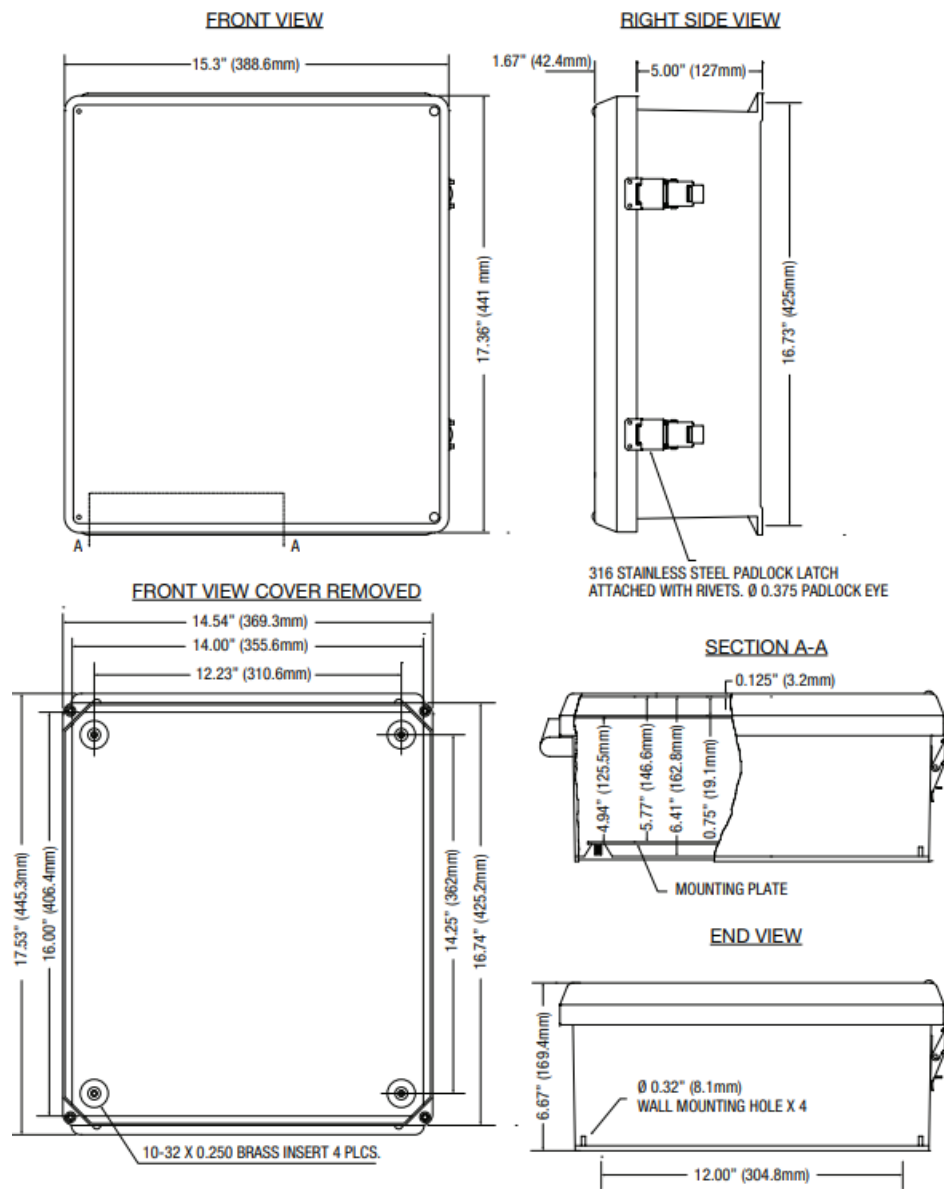

Mechanical Drawing and Dimensions (H x W x D approx.): 13.5" x 13" x 3.25" (342.9mm x 330.2mm x 82.6mm)




Mechanical Drawing and Dimensions (H x W x D approx.): 10.75" x 8.875" x 2.375" (273.1mm x 225.4mm x 60.3mm)

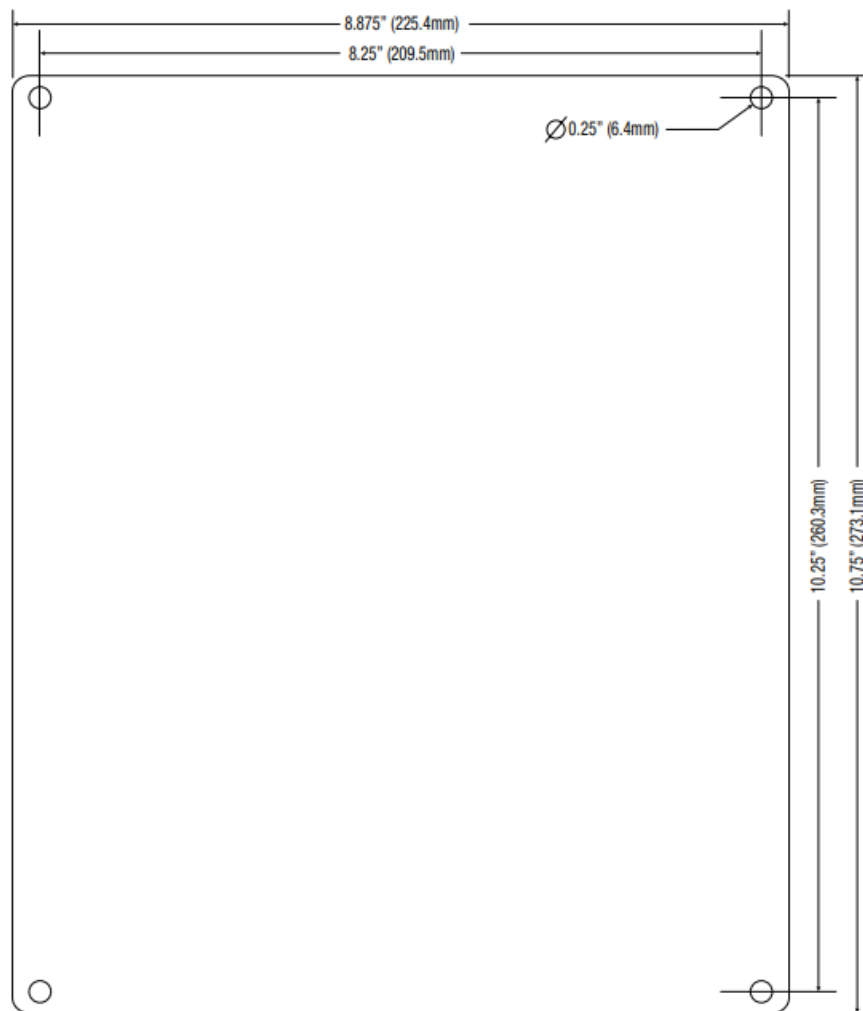

Warranty

- Altronix is not responsible for any typographical errors.
- 140 58th Street, Brooklyn, New York 11220 USA
- **phone: 7185678181**
- **fax: 7185679056**
- **website: www.altronix.com**
- **e-mail: info@altronix.com**
- **Lifetime Warranty**
- **Installing Company:** _____
- **Service Rep. Name:** _____
- **Address:** _____
- **Phone #:** _____

Documents / Resources

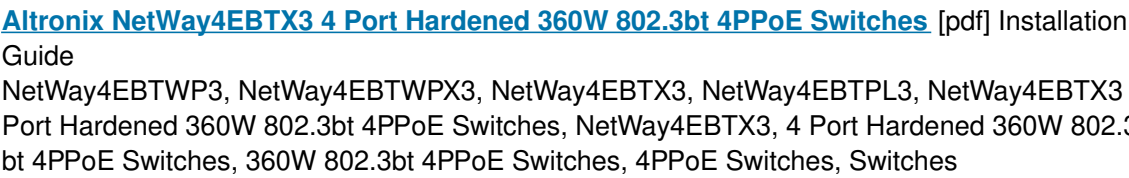

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.