



## Altronix NetWayXT Series Repeater Modules Installation Guide

[Home](#) » [Altronix](#) » Altronix NetWayXT Series Repeater Modules Installation Guide 



More than just power. TM

**Netway**  
Power over the Ethernet

### NetWayXT Series

Repeater Modules

#### Models Include:

##### NetWayXT

– IEEE 802.3af (15W) Compliant Repeater Module

##### NetWayXTX

– IEEE 802.3af (15W) and IEEE 802.3at (30W) Compliant Repeater Module NetWayXTG (UL evaluation pending)

– 1Gb IEEE 802.3af (15W) and IEEE 802.3at (30W) Compliant Repeater Module

#### Installation Guide



Rev. 042409

Installing Company: \_\_\_\_\_ Service Rep. Name: \_\_\_\_\_

Address: \_\_\_\_\_ Phone #: \_\_\_\_\_

## Contents

[1 Overview:](#)

[2 Features:](#)

[3 Installation](#)

[Instructions:](#)

[4 Documents / Resources](#)

[4.1 References](#)

[5 Related Posts](#)

## Overview:

Altronix NetWayXT, NetWayXTX and NetWayXTG repeater modules interface with NetWay midspans/endspans to extend data (video) for an additional 100m. A maximum range of 600m for NetWayXT and even longer for NetWayXTX and NetWayXTG is possible using multiple repeaters, based on camera/device port power requirement.

## Features:

### Agency Listings:

- UL 60950-1 Information Technology Equipment (except NetWayXTG).
- CE European Conformity.

### Additional Features:

- Repeater module extends range 100m each.
- Port status LEDs.

### Additional Features (cont'd):

- Compact insulated housing.
- Plug-and-play installation.
- Auto detection and protection of legacy non-PoE cameras.
- No external power is required.

## Installation Instructions:

NetWayXT/NetWayXTX/NetWayXTG is not intended to be connected to outside plant leads.

1. Mount NetWayXT/NetWayXTX/NetWayXTG in the desired location utilizing the mounting hole (Fig. 1a, pg. 2, Fig. 2a, pg. 3).

Use a proper fastener and/or wall anchor when securing NetWayXT/NetWayXTX/NetWayXTG to the wall.

2. Connect structured cable from port marked [OUT] on NetWay1, NetWay8, NetWay8M, NetWay16, or NetWay16M to port marked [IN] on the NetWayXT/NetWayXTX/NetWayXTG (Fig. 1b, pg. 2, Fig. 2b, pg. 3).
3. Connect structured cable from port marked [OUT] on NetWayXT/NetWayXTX/NetWayXTG to the PoE camera/device or next NetWayXT/NetWayXTX repeater (Fig. 1b, pg. 2, Fig. 2b, pg. 3, Figs. 3-4, pg. 3 ).

4. Port status LEDs will illuminate on NetWayXT indicating the port is operational (Fig. 1b, pg. 2, refer to Port LED definitions on pgs. 2-3).

**Port LED Definitions for NetWayXT Repeater:**

Status	Green LED	Yellow LED
OFF	Indicates it is connected as 10Base-T or no link.	Indicates no link
ON	Indicates it is connected as 100Base-TX.	Indicates a link
Blinking	Indicates activity	–

**NetWayXT**

Fig. 1


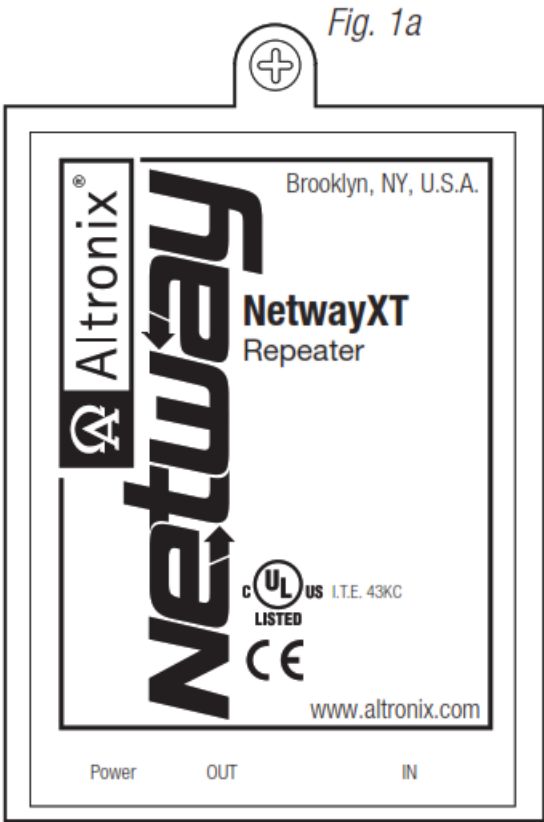 


Fig. 1a

–

 Fig. 1b

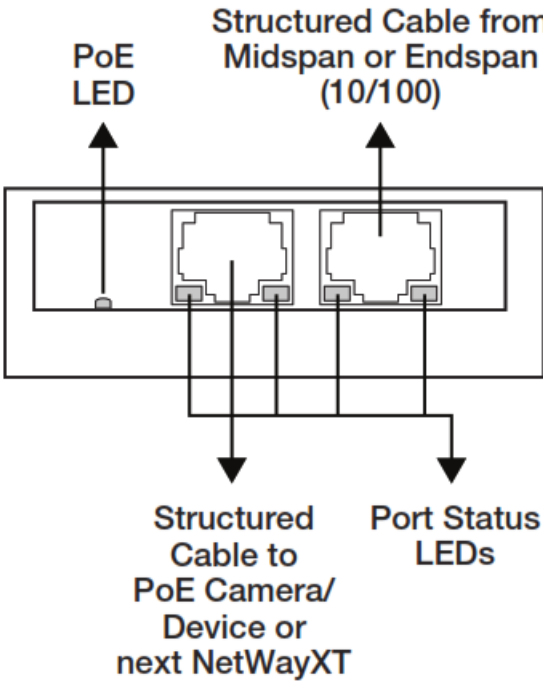

**Port LED Definitions for NetWayXTX Repeater:**

Status	PoE/PoE+ Output LED	PoE/PoE+ Input LED	Green Input Port LED	Yellow Input Port LED	Green Output Port LED	Yellow Output Port LED
OFF	No PoE/PoE+ Output	No PoE/PoE+ Input	No data input	Indicates no link	Indicates no link	No data output
ON	Normal PoE/PoE+ Output	PoE/PoE+ Input		Indicates 10/100 link	Indicates 10/100 link	
Blinking			Indicates 10/100 activity			Indicates 10/100 activity

**NetWayXTG**

Fig. 2


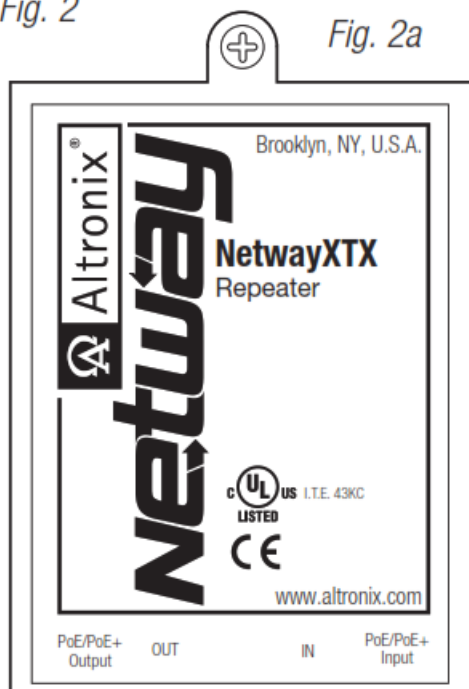 


Fig. 2b

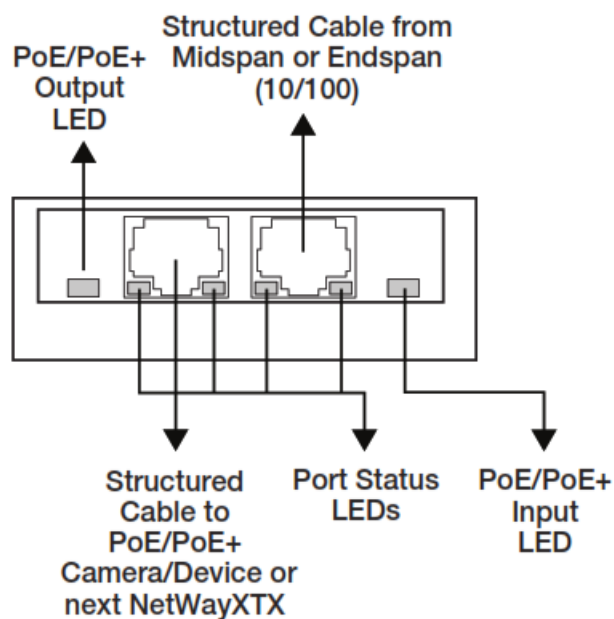 

### Port LED Definitions for NetWayXTG Repeater:

Status	PoE/PoE+ Output LED	Green LED	Yellow LED
OFF	No PoE/PoE+ Output	Indicates no link.	Indicates no link
ON	Normal PoE/PoE+ Output	Indicates 1G link	Indicates 10/100 link
Blinking	–	Indicates 1G activity	Indicates 10/100 activity

## NetWayXTG

Fig. 3



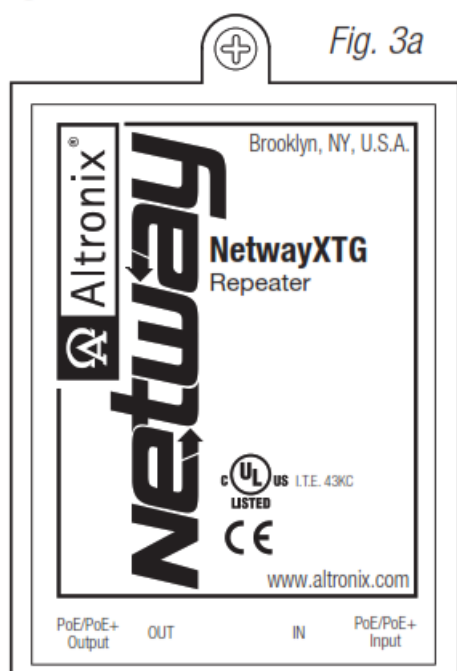 



Fig. 3b

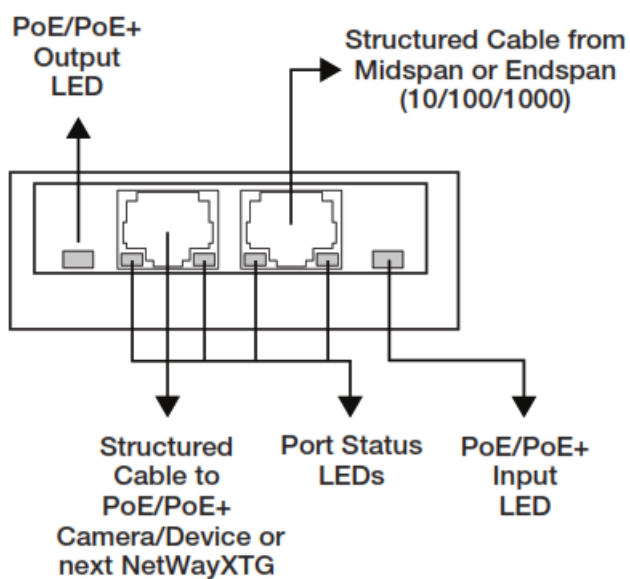 


**Typical Applications: Fig. 4 – NetWayXT connected to NetWay1 Single Port Midspan Injector.**

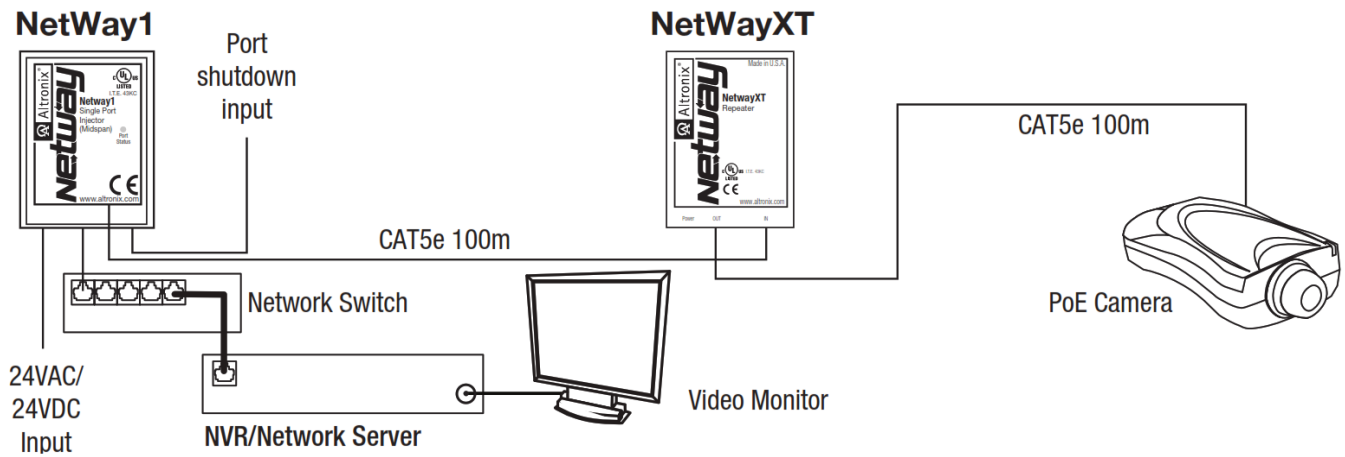 


**Fig. 5 – NetWayXTX/NetWayXTG connected to NetWay1X Single Port Midspan Injector.**

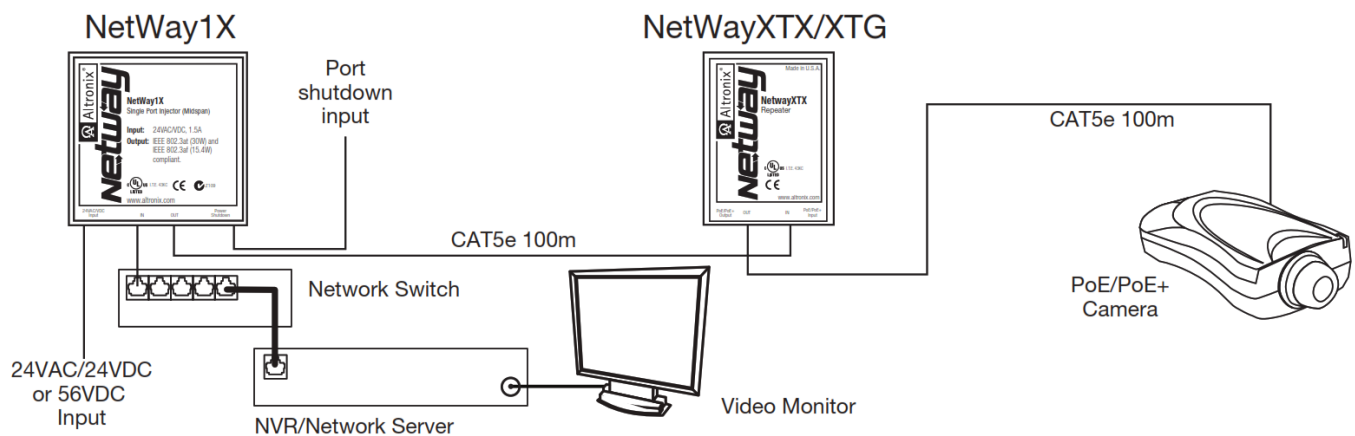 

**Fig. 6 – NetWayXT/NetWayXTX/NetWayXTG connected to NetWay Midspan.**

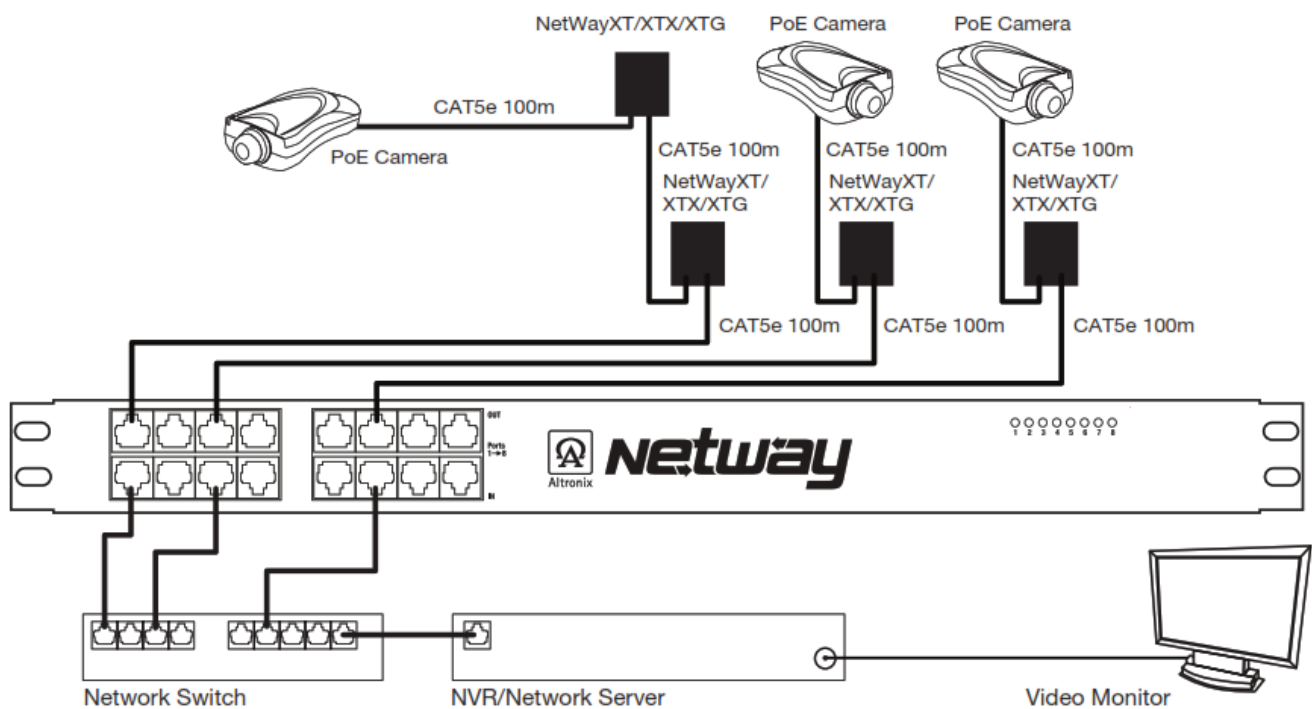 

**Fig. 7 – Connecting several NetWayXT/NetWayXTX/NetWayXTG on a single port.**

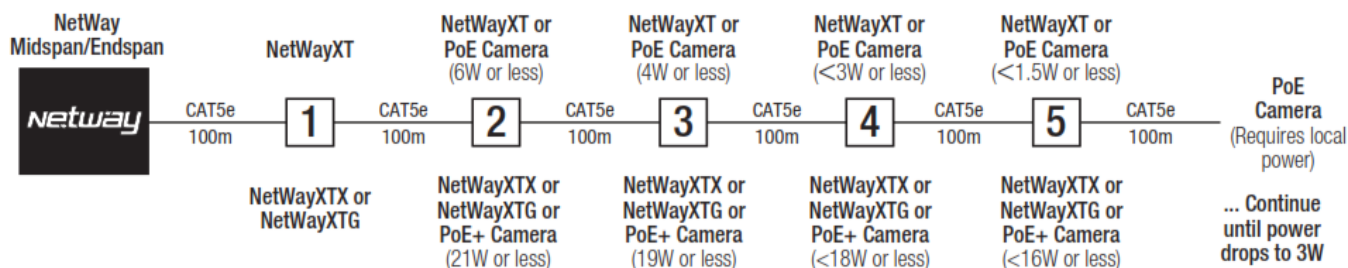 

**MEMBER**

Altronix is not responsible for any typographical errors.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056

website: [www.altronix.com](http://www.altronix.com) | e-mail: [info@altronix.com](mailto:info@altronix.com) | Lifetime Warranty

II NetWayXT/XTX/XTG I13UNetWayXT / NetWayXTX / NetWayXTG Installation Guide

## Documents / Resources

<p><b>NetWayXT Series</b> Repeater Modules</p> <p>Models Include:</p> <p><b>NetWayXT</b> 1000 Mbps 10/100/1000 Ethernet Repeater Module</p> <p><b>NetWayXTX</b> 1000 Mbps 10/100/1000 Ethernet Repeater Module</p> <p><b>NetWayXTG</b> (2x network ports) 1000 Mbps 10/100/1000 Ethernet Repeater Module</p> <p>Installation Guide</p> <p>CE</p> <p>Altronix</p>	<p><a href="#">Altronix NetWayXT Series Repeater Modules [pdf] Installation Guide</a></p> <p>NetWayXT Series Repeater Modules, NetWayXT Series, Repeater Modules</p>
--	--

## References

- [Altronix Home](#)

[Manuals+](#)