

# **Altronix PD4UL UL Listed Sub Assembly Power Distribution Module Instruction Manual**

Home » Altronix » Altronix PD4UL UL Listed Sub Assembly Power Distribution Module Instruction Manual




## **Contents**

- 1 Altronix PD4UL UL Listed Sub Assembly Power Distribution **Module**
- 2 Overview
- 3 Specifications
- **4 Installation Instructions**
- **5 Warranty**
- 6 Documents / Resources
  - **6.1 References**
- 7 Related Posts



Altronix PD4UL UL Listed Sub Assembly Power Distribution Module

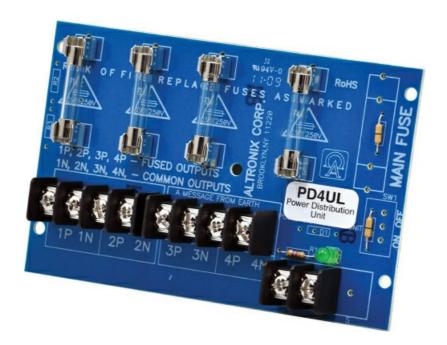

## **Overview**

PD4UL is a UL Listed Sub-Assembly power distribution module designed to convert a single AC or DC input into four (4) individually fuse-protected outputs.

# **Specifications**

# **Agency Listings:**

• UL Listed Sub-Assembly for UL 294\* Access Control System Units.

Access Control Performance Levels:

- Destructive Attack N/A (sub-assembly);
- Endurance IV; Line Security I;
- ∘ Stand-by Power I.
- UL 603 Power Supplies for Use with Burglar Alarm Systems.
- UL 1481 Power Supplies for Fire Protective Signaling Systems.
- cUL Listed:
  - General Signaling Equipment Evaluated to CSA Standard C22.2 No.205-M1983. Power Supplies for Burglar Alarm Systems ULC-S318-96.

## Input:

- 12VDC or 24VDC, up to 10A.
- 24VAC or 28VAC, up to 12A.

# **Outputs:**

• Four (4) individually fuse-protected outputs @ 2.5A per output max. current (total output current should not exceed max. current rating of power supply employed).

# **Fuse Ratings:**

• Fuses are rated @ 3.5A/250V.

#### **Visual Indicators:**

• Power On the green LED indicator.

## **Board Dimensions (W x L x H approximate):**

• 3.25" x 5.25" x 1" (82.6mm x 133.4mm x 25.4mm).

#### **Installation Instructions**


Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/NFPA 72/ANSI, and with all local codes and authorities having jurisdiction. The product is intended for indoor use only and should be installed by qualified personnel.

- 1. Refer to Sub-Assembly Installation Instruction for mounting Rev. MS020119.
- 2. Mount PD4UL in the desired location/enclosure (mounting hardware included).
- 3. Connect the desired power supply output to the terminals marked [INPUT] (Fig. 1).

Note: Left terminal is NEG. (-) and the right terminal is POS. (+) (Fig. 1).

- 4. Measure output voltage before connecting devices. This helps avoiding potential damage.
- 5. Connect devices to be powered to terminal pairs 1 to 4, marked [1P 1N] through [4P 4N]. All terminals with the common suffix P "1P, 2P..." are the same polarity.

**Note:** This product is a UL Listed Sub-Assembly for use with Altronix UL Listed power supplies as indicated in the installation manuals for the power supply.

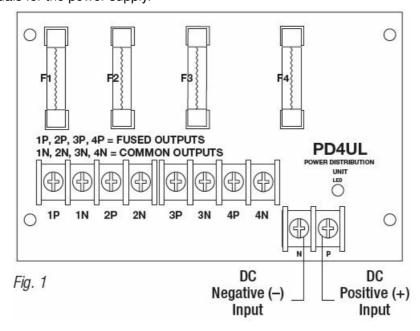

## NOTE:

DC outputs are power-limited only if a power-limited power supply is employed.

### **CAUTION:**

To avoid the risk of electric shock or fire hazard replace fuses with the same type and rating, 3.5A/250V. Do not expose to rain or moisture.

- (#P) Positive DC outputs
- (#N) Negative DC outputs

# Warranty

Lifetime Warranty

Altronix is not responsible for any typographical errors.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056

website: <a href="mailto:www.altronix.com">www.altronix.com</a>.
e-mail: <a href="mailto:info@altronix.com">info@altronix.com</a>.

IIPD4UL - Rev. 020119 D12U

# **Documents / Resources**



Altronix PD4UL UL Listed Sub Assembly Power Distribution Module [pdf] Instruction Manual

PD4UL, UL Listed Sub Assembly Power Distribution Module, PD4UL UL Listed Sub Assembly Power Distribution Module, Sub Assembly Power Distribution Module, Power Distribution Module, Module, Module

## References

• Altronix Home

Manuals+,