


Altronix RAC24 Relay and Base Module Installation Guide

[Home](#) » [Altronix](#) » Altronix RAC24 Relay and Base Module Installation Guide 

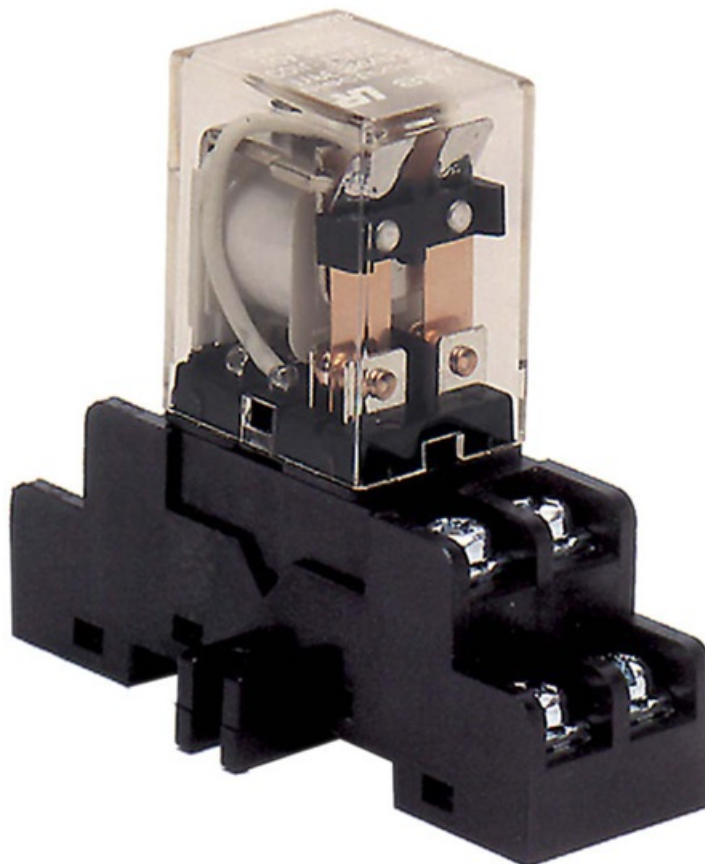

RAC24 Relay and Base Module
Installation Guide



RAC24 Relay and Base Module
Installation Guide

Contents

[1 Specifications:](#)

[2 Installation](#)

[Instructions:](#)

[3 Documents / Resources](#)

[3.1 References](#)

[4 Related Posts](#)


Specifications:

- UL and cUL Recognized.
- CE – European Conformity.
- 24VAC operation.
- Current draw: 45mA.
- 10A/220VAC or 28VAC DPDT contacts
- DIN Rail mountable.

Dimensions (W x D x H): 3.125" x 1.375" x 2.375" (79.4mm x 35mm x 86mm).

Installation Instructions:

1. Mount RAC24 in the desired location.
2. Plug-in relay into the base.
3. The relay will activate upon applying 24VAC to the terminals marked [7] and [8].
4. Use output contacts to make and break load circuits.

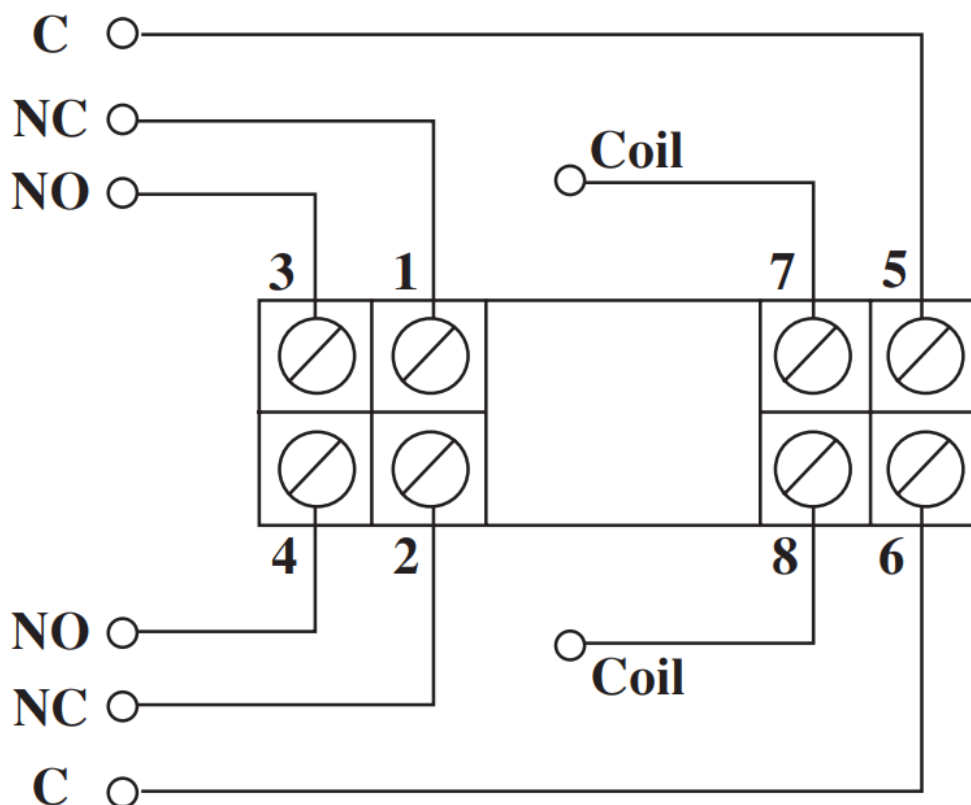

Altronix is not responsible for any typographical errors. Product specifications are subject to change without notice.



140 58th Street, Brooklyn, New York 11220 USA

phone: 718-567-8181

fax: 718-567-9056

website: www.altronix.com

e-mail: info@altronix.com

Lifetime Warranty



MEMBER

IIRAC24 – Rev. 011812

F21U

Documents / Resources

	Altronix RAC24 Relay and Base Module [pdf] Installation Guide RAC24 Relay and Base Module, RAC24, Relay and Base Module, Base Module, Relay Module
--	--

References

-  [Altronix Home](#)

Manuals+