



Altronix RB5 Relay Module Instruction Manual

[Home](#) » [Altronix](#) » Altronix RB5 Relay Module Instruction Manual 



RB5 Relay Module

SW1 DIP Switch



Contents

- [1 Specifications:](#)
- [2 Documents / Resources](#)
- [2.1 References](#)
- [3 Related Posts](#)



Specifications:

- 6VDC or 12VDC selectable operation.
- Turn SW1 OFF for 12VDC operation.
Turn SW1 ON for 6VDC operation.
- Current draw: 120mA.


- 5A/220VAC or 28VDC DPDT contacts.
- Snap track mountable (order part # ST1).

Board Dimensions (approximate): 2.75"L x 2"W x 1"H


Dry Contacts

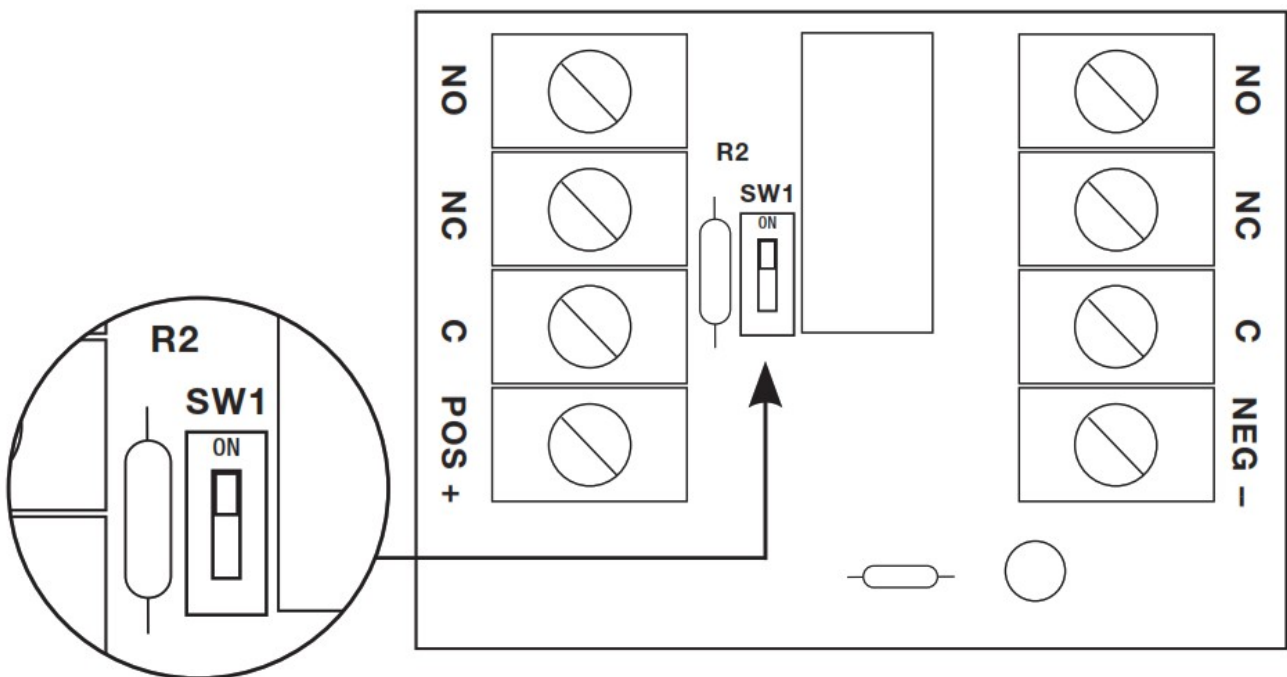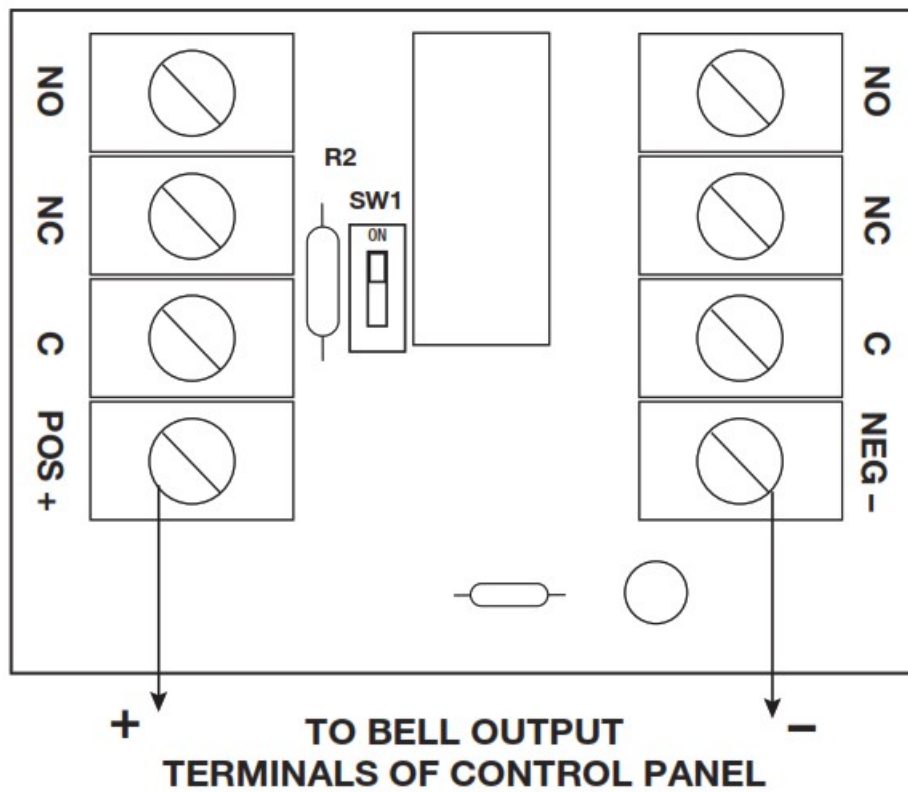


Polarity Reversal

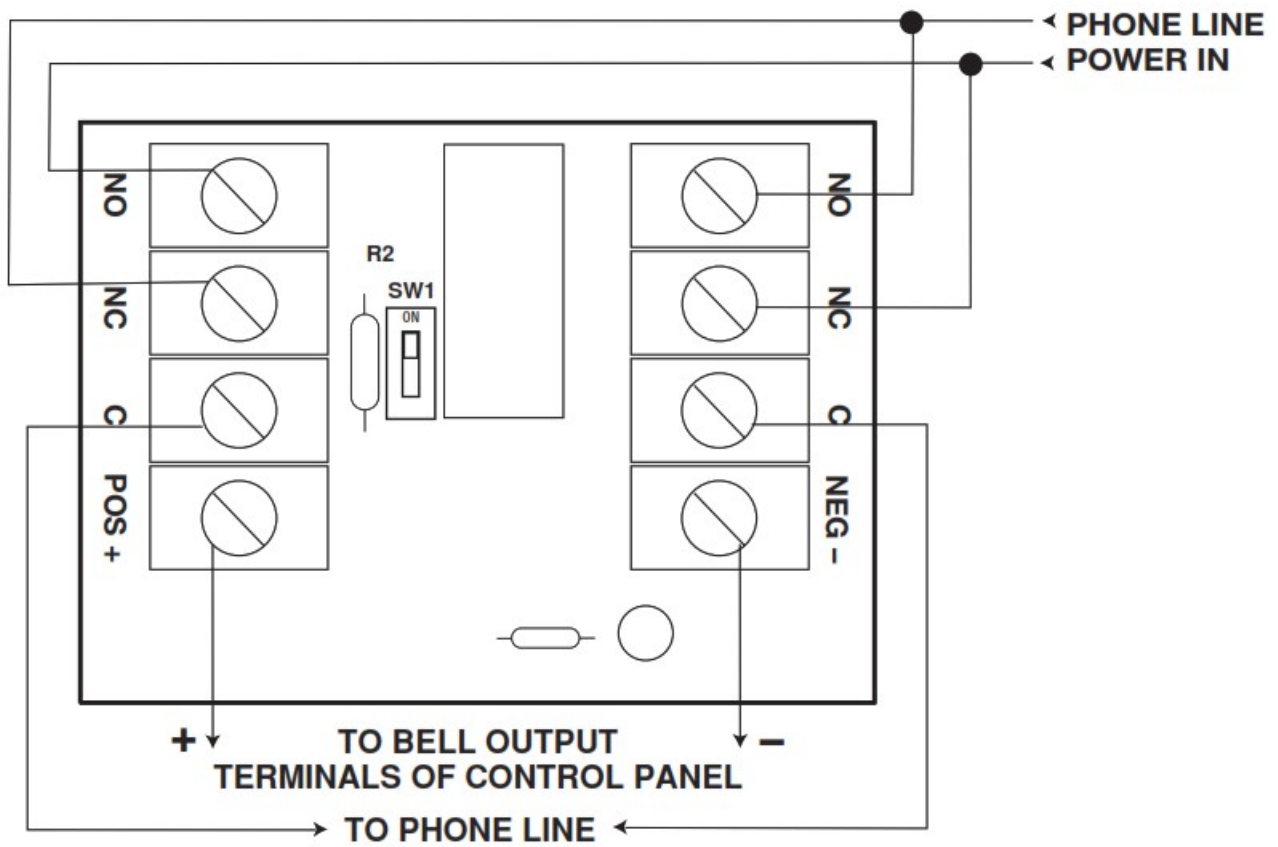

Latching Dry Contacts

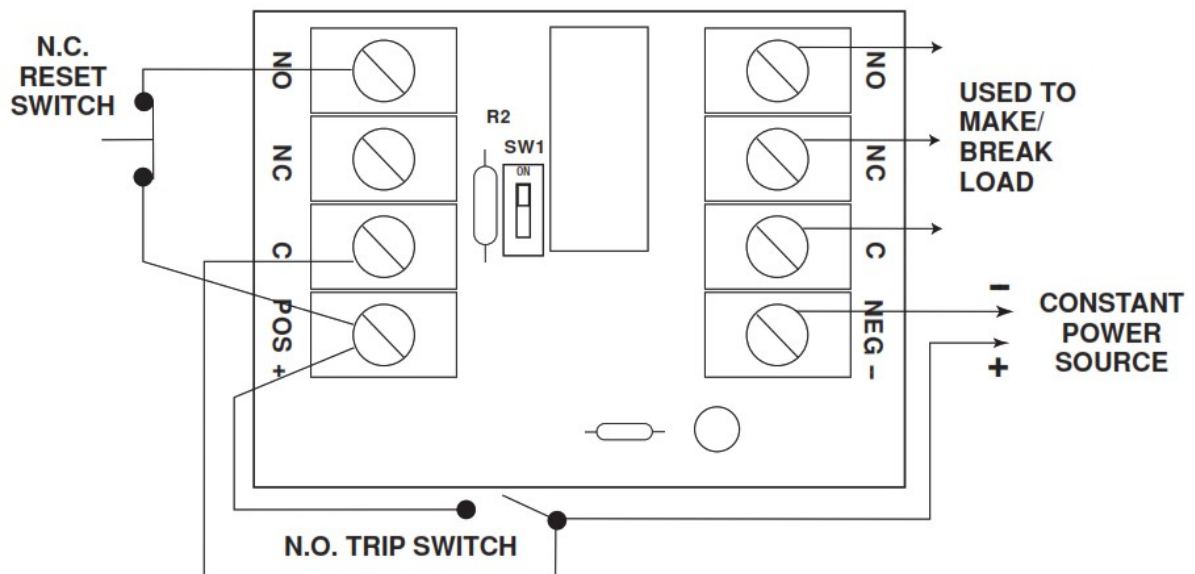

Line Seizure

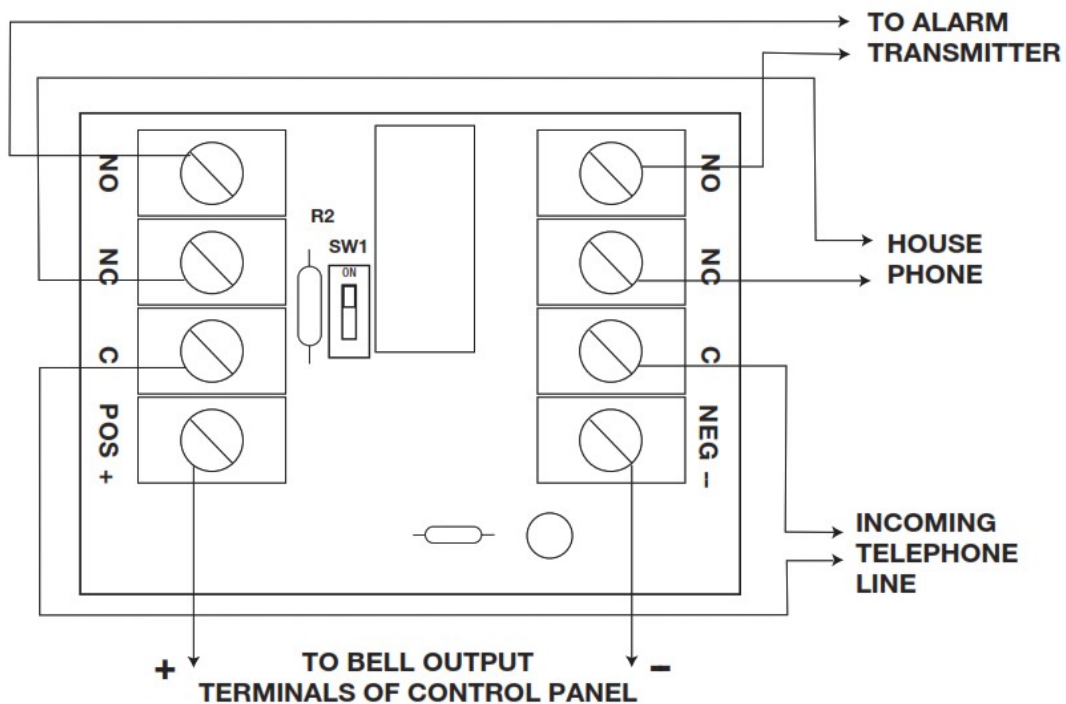

Altronix is not responsible for any typographical errors. Product specifications are subject to change without notice.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056
 website: www.altronix.com | e-mail: info@altronix.com | Lifetime Warranty
 IIRB5 – Rev. 122804 F21U



Documents / Resources

	Altronix RB5 Relay Module [pdf] Instruction Manual RB5 Relay Module, RB5, Relay Module, Module
--	--

References

-  [Altronix Home](http://www.altronix.com)