

Altronix RB7 Ultra Sensitive Multiple Relay Module Installation Guide

[Home](#) » [Altronix](#) » Altronix RB7 Ultra Sensitive Multiple Relay Module Installation Guide 



RB7
Ultra Sensitive Multiple Relay Module

Installation Guide

Contents

- [1 Overview:](#)
- [2 Specifications:](#)
- [3 Installation Instructions:](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

Overview:

RB7 Multiple Relay Module incorporates seven (7) isolated form “C” relay outputs that can be activated via positive (+) low current trigger inputs. Typical applications include the switching of alarm devices (eg. annunciator, signals, etc.) from PGM outputs of alarm panels or from another source.


Specifications:

- 12VDC to 24VDC selectable operation.
- Seven (7) independent (3VDC to 24VDC @ 2mA minimum) positive (+) triggers.
- Seven (7) isolated form “C” 1A/120VAC or 28VDC contacts.

Board dimensions (L x W x H): 6.5" x 3.25" x 1" (165.1mm x 82.6mm x 25.4mm).

Installation Instructions:

1. Mount RB7 in the desired location/enclosure.
2. Connect 12VDC to 24VDC power supply to the terminals marked [POS +] and either of the terminals marked [GND].
3. Connect 3VDC to 24VDC positive (+) trigger to each trigger inputs marked [INP1 to INP7].
4. Triggering input 1 (INP1) activates relay output 1 (OUT1). Input 2 (INP2) activates relay output 2 (OUT2), etc.
5. Connect output devices to terminals marked [NC, C, NO] dry contacts.

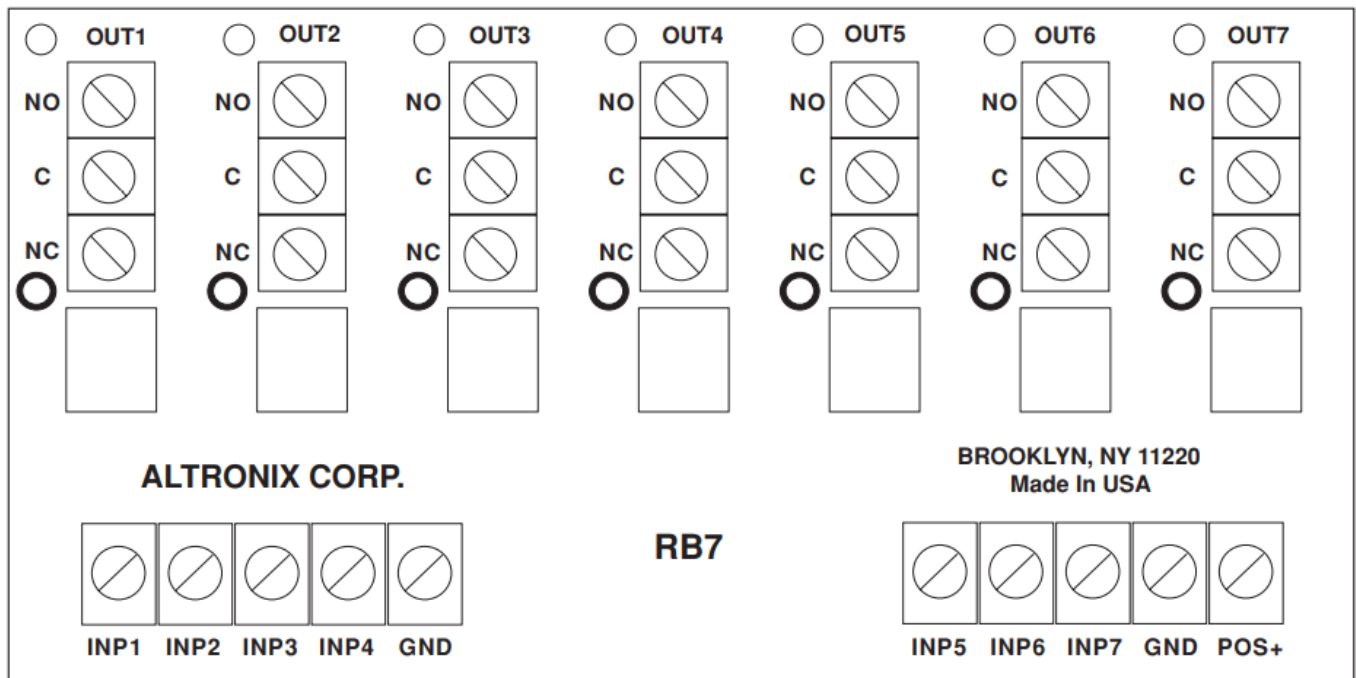

Altronix is not responsible for any typographical errors.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056 website:


www.altronix.com | e-mail: info@altronix.com | Lifetime Warranty

IIRB7 – Rev. 103001

F21U



 Documents / Resources



- Altronix Home

Manuals+