



# Altronix TM400 Trove Compact Enclosure For Power Distribution And Mercury LenelS2 Boards Installation Guide

[Home](#) » [Altronix](#) » Altronix TM400 Trove Compact Enclosure For Power Distribution And Mercury LenelS2 Boards Installation Guide 

## Contents

- [1 Altronix TM400 Trove Compact Enclosure For Power Distribution And Mercury LenelS2 Boards](#)
- [2 Overview](#)
- [3 Specifications](#)
- [4 Features](#)
- [5 Hardware and Accessories](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)



**Altronix TM400 Trove Compact Enclosure For Power Distribution And Mercury LenelS2 Boards**



## Overview

Altronix TM400 enclosure lets you easily integrate Altronix power distribution with Mercury/LenelS2 access controllers and accessories. TM400 simplifies board layout and wire management and reduces installation time and labor costs.

## Specifications

### Agency Listings

- CE European Conformity.

## Features

- 16 Gauge black enclosure with ample knockouts for convenient access.
- Twelve (12) double knockouts 1.125" (3/4" Conduit) / 1.375" (1" Conduit).
- Enclosure Dimensions (H x W x D): 15.5" x 12.0" x 4.5" (393.7mm x 304.8mm x 114.3mm).
- Includes tamper switch (Altronix Model TS112 or equivalent), cam lock, and mounting hardware.

### Enclosure Accommodates a Combination of the Following Altronix

- ne AL400ULXB2, AL400ULXB2V, AL600ULXB, AL600XB220, AL1012ULXB, AL1012XB220, eFlow4NB, eFlow4NBV, eFlow6NB, eFlow6NBV, eFlow102NB, eFlow102NBV.

### Mercury

- Up to three (3) MR50 (LNL-1300).
- One (1) LP1501 (LNL-2210) or MR62e (LNL-1300e).
- One (1) LP1502 (LNL-2220), LP4502 (LNL-4420), MR52 (LNL-1320), MR16IN (LNL-1100) or MR16OUT (LNL-1200).

## Hardware and Accessories



### Installation Instructions


Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having jurisdiction. The product is intended for indoor use only.

1. Mark and predrill holes on the wall to line up with the top two keyholes in the enclosure. Install two upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the two upper screws; level and secure. Mark the position of the lower two holes. Remove the enclosure. Drill the lower holes and install the two fasteners. Place the enclosure's upper keyholes over the two upper screws. Install the two lower screws and make sure to tighten all screws.
2. Mount included UL-listed tamper switch (Altronix Model TS112 or equivalent) in the desired location, opposite hinge. Slide the tamper switch bracket onto the edge of the enclosure approximately 2" from the right side (Fig. 1, pg. 1). Connect the tamper switch wiring to the Access Control Panel input or the appropriate UL-listed reporting device. To activate the alarm signal open the door of the enclosure.
3. Mount Altronix and Mercury (LenelS2) boards to an enclosure, refer to page 3.

### Installation Instructions for Power Supply and Sub-Assemblies

Altronix Power Supplies/Chargers and/or Sub-Assemblies:

1. Fasten 5/8" spacers (provided) to poems that match the hole pattern for Altronix Power Supply/Charger or Altronix Sub-Assembly boards (Fig. 2, pg. 3). Fasten metal spacers in the correct locations to provide proper grounding (Fig. 2, pg. 3).
2. Mount boards to spacers utilizing 5/16" pan head screws (provided) (Fig. 2, 2a, pg. 3). LenelS2 Sub-Assemblies:
3. Fasten spacers onto metal poems configuration (C), (D), or (E) of enclosure depending on the sub-assembly module (Fig. 2, pg. 2).


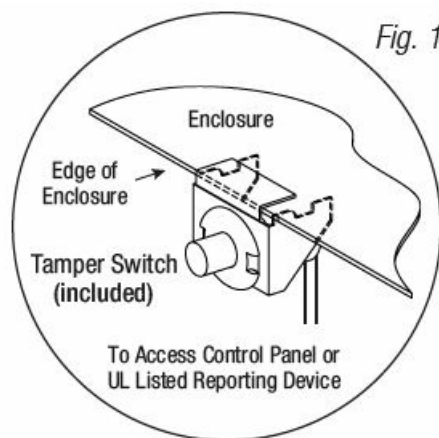


4. Position the access controller module over corresponding spacers and depress it onto snap-on spacers (Fig. 2a, pg. 2).
5. Fasten the backplane to the Trove1 enclosure utilizing lock nuts (provided).

### Access Controller Position Chart for the Following Models

AL400ULXB2, AL400ULXB2V, AL600ULXB, AL600XB220, AL1012ULXB, AL1012XB220,  eFlow4NB, eFlow4NBV, eFlow6NB, eFlow6NBV, eFlow102NB, eFlow102NBV	A
ACM4, ACM4CB, LINQ8PD, LINQ8PDCB, MOM5, PD4UL, PD4ULCB, PD8UL, PD8ULC B, PDS8, PDS8CB, VR6	B
MR50 (LNL-1300)	C
LP1501 (LNL-2210), MR62e (LNL-1300e)	D
LP1502 (LNL-2220), LP4502 (LNL-4420), MR52 (LNL-1320), MR16IN (LNL-1100), MR16 OUT (LNL-1200)	E


**Fig. 2 – Altronix and Mercury configurations**

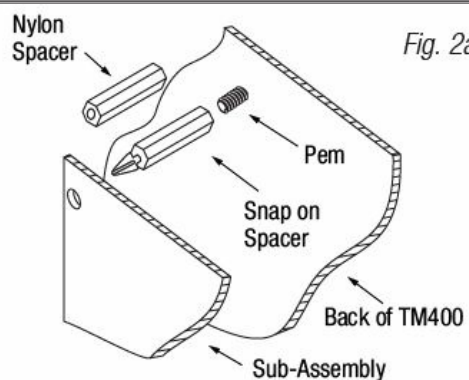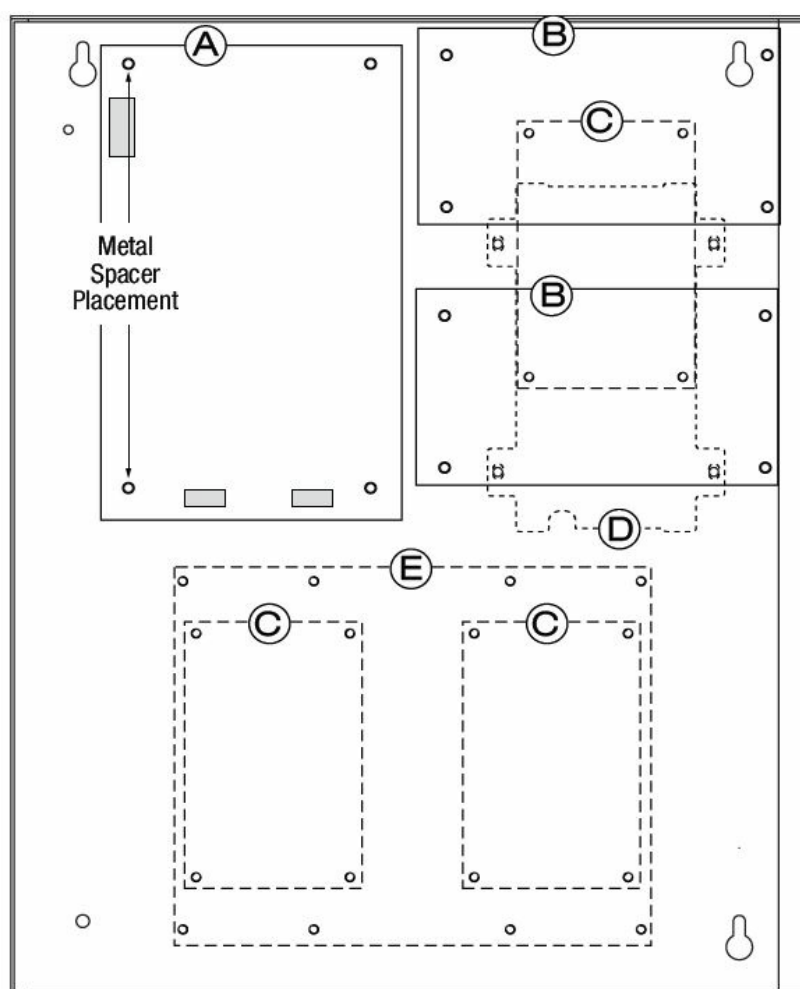

*Fig. 2a*

## TM400 Enclosure Dimensions


15.5" x 12.0" x 4.5" (393.7mm x 304.8mm x 114.3mm)

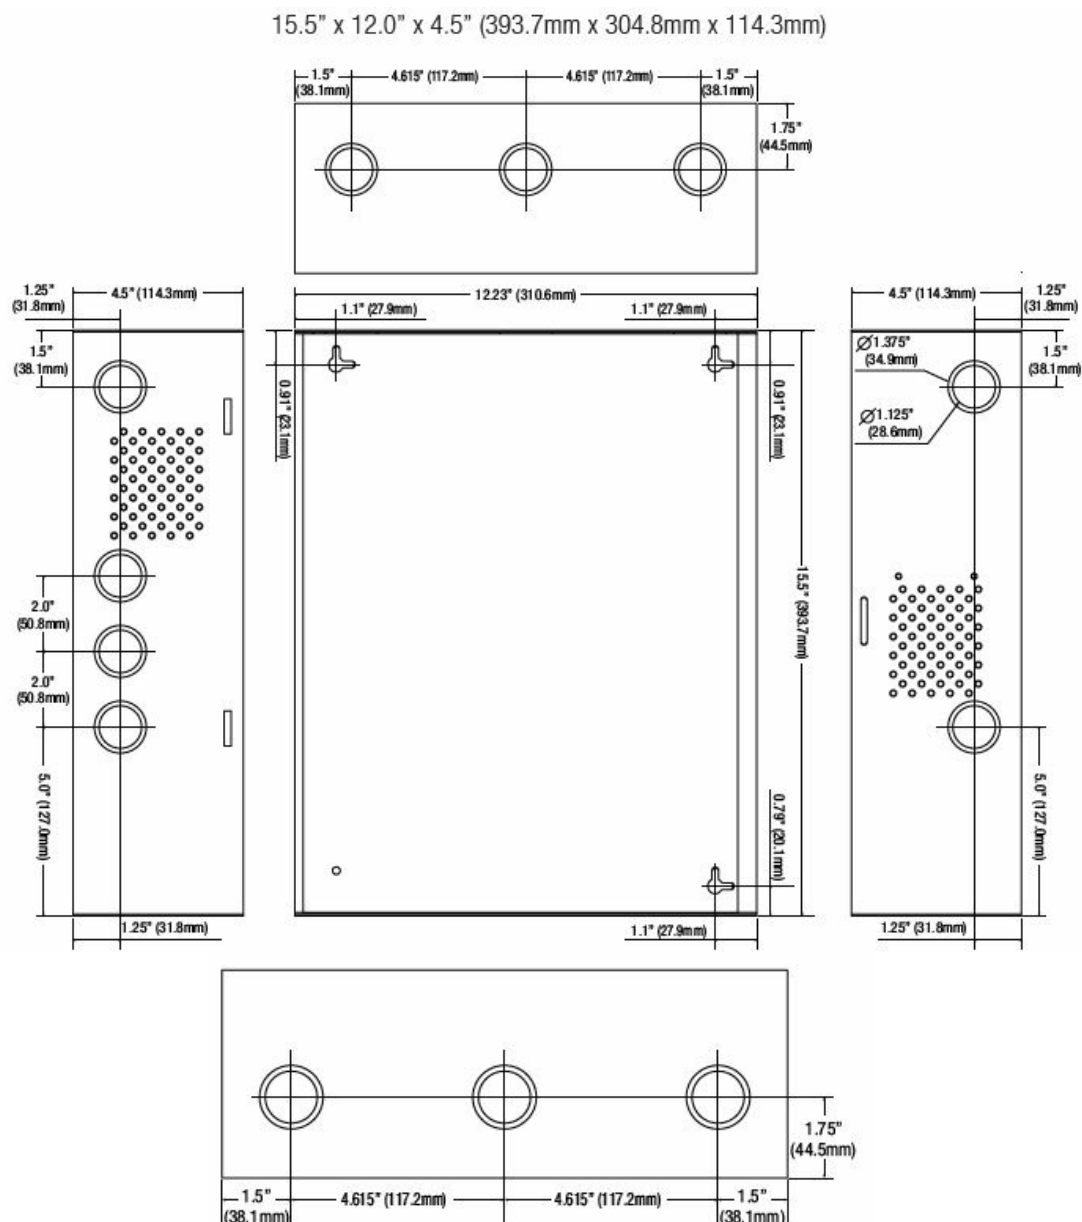

Altronix is not responsible for any typographical errors. 40 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056

website: [www.altronix.com](http://www.altronix.com) | e-mail: [info@altronix.com](mailto:info@altronix.com) | Lifetime Warranty IITM400 K29U

## Documents / Resources

 <p><b>TM400</b> Compact enclosure for Altronix power distribution and Mercury LenelS2 boards</p> <p>Installation Guide</p> <p>CE</p> <p>Altronix</p>	<p><a href="#">Altronix TM400 Trove Compact Enclosure For Power Distribution And Mercury LenelS2 Boards</a> [pdf] Installation Guide</p> <p>TM400 Trove Compact Enclosure For Power Distribution And Mercury LenelS2 Boards, TM400 , Trove Compact Enclosure For Power Distribution And Mercury LenelS2 Boards, Enclosure For Power Distribution And Mercury LenelS2 Boards, For Power Distribution And Mercury LenelS2 Boards, Power Distribution And Mercury LenelS2 Boards, Distribution And Mercury LenelS2 Boards, And Mercury LenelS2 Boards, Mercury LenelS2 Boards, LenelS2 Boards</p>
--	--

## References

-  [Altronix Home](#)

Manuals+.