



Altronix Trove2SS2 Access and Power Integration Enclosure with Backplane Installation Guide

[Home](#) » [Altronix](#) » Altronix Trove2SS2 Access and Power Integration Enclosure with Backplane Installation Guide 

Contents

- [1 Altronix Trove2SS2 Access and Power Integration Enclosure with Backplane](#)
- [2 Overview](#)
- [3 Specifications](#)
- [4 Agency Listings](#)
 - [4.1 Altronix Modules](#)
- [5 Installation Instructions](#)
- [6 TSS2 Dimensions \(H x W x D\)](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)



Altronix Trove2SS2 Access and Power Integration Enclosure with Backplane



Overview

Trove2SS2 and Trove3SS3 accommodate Lenel-S2 (S2 Security Platform) S2-INST bracket(s) supporting Lenel-S2 (S2 Security Platform) controllers with Altronix power and sub-assemblies for access systems.

Specifications

16 Gauge backplane and enclosure with ample knockouts for convenient access.

Trove2SS2

Trove2 enclosure with TSS2 Altronix/Lenel-S2 (S2 Security Platform) backplane.

TSS2

Altronix/Lenel-S2 (S2 Security Platform) backplane only

Includes mounting hardware.

Dimensions (H x W x D): 25.375" x 19.375" x 0.3125" (644.6mm x 492.1mm x 7.9mm).

TSS2 accommodates a combination of the following: Altronix Modules:

- Up to two (2) AL400ULXB2, AL400XB2V, AL600ULXB, AL600XB220, AL1012ULXB, AL1012XB220, AL1024ULXB2, AL1024XB2V, eFlow4NB, eFlow4NBV, eFlow6NB, eFlow6NBV, eFlow102NB, eFlow102NBV, eFlow104NB, eFlow104NBV.
- Up to two (2) ACM8(CB), ACMS8(CB), LINQ8ACM(CB).
- Up to six (6) ACM4(CB), MOM5, PD4UL(CB), PD8UL(CB), PDS8(CB), or VR6.

S2:

One (1) S2-INST mounting kit.

Agency Listings

- UL 294 – 6th edition: Line Security I, Destructive Attack I, Endurance IV, Stand-by Power II*.
- This Class B digital apparatus complies with Canadian ICES-003.
- CE European Conformity.

Trove3SS3

Trove3 enclosure with TSS3 Altronix/Lenel-S2 (S2 Security Platform) backplane Includes: two (2) tamper switches, cam lock and mounting hardware. Enclosure Dimensions (H x W x D): 36.12" x 30.125" x 7.06" (917.5mm x 768.1mm x 179.3mm).

TSS3

Altronix/Lenel-S2 (S2 Security Platform) backplane only Includes mounting hardware. Dimensions (H x W x D): 34" x 28" x 0.3125" (863.6mm x 711.2mm x 7.9mm).

 
TSS3 accommodates a combination of the following

Altronix Modules

- Up to two (2) AL400ULXB2, AL400XB2V, AL600ULXB, AL600XB220, AL1012ULXB, AL1012XB220, AL1024ULXB2, AL1024XB2V, eFlow4NB, eFlow4NBV, eFlow6NB, eFlow6NBV, eFlow102NB, eFlow102NBV, eFlow104NB, eFlow104NBV.
- Up to four (4) ACM8(CB), ACMS8(CB), LINQ8ACM(CB).
- Up to eight (8) ACM4(CB), MOM5, PD4UL(CB), PD8UL(CB), PDS8(CB), or VR6.

Installation Instructions

Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having juris-diction. Product is intended for indoor use only.

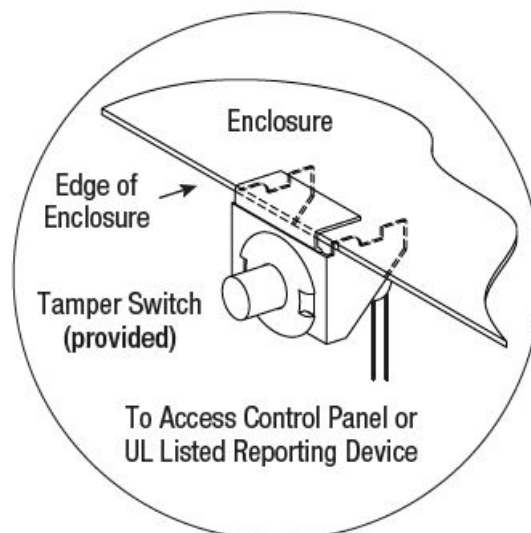

1. Remove backplane from enclosure. Do not discard hardware.
2. Mark and predrill holes in the wall to line up with the top three keyholes in the enclosure. Install three upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the three upper screws; level and secure. Mark the position of the lower three holes. Remove the enclosure. Drill the lower holes and install the three fasteners. Place the enclosure's upper keyholes over the three upper

screws. Install the three lower screws and make sure to tighten all screws.

3. Mount included UL Listed tamper switch(es) (Altronix Model TS112 or equivalent) in desired location, opposite hinge. Slide the tamper switch bracket onto the edge of the enclosure approximately 2" from the right side (Fig. 1, pg. 2). Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device. To activate alarm signal open the door of the enclosure.
4. Mount Altronix/Lenel-S2 (S2 Security Platform) S2-INST mounting kit boards to backplane,

Installation Instructions for Altronix Power Supplies and Sub-Assemblies to TSS2:


1. Fasten spacers (provided) into pem configuration (A), (B) or (C) of backplane (Fig. 2, pg. 3).
2. Mount boards to spacers utilizing 5/16" pan head screws (provided) (Fig. 2a, pg. 3).
3. Mount backplane to enclosure with hardware.

Access Controller Position Chart for the Following Models:

Altronix Board	Pem Mounting
AL400ULXB2, AL400XB2V, AL600ULXB, AL600XB220, AL1012ULXB, AL1012XB220, AL1024ULXB2, AL1024XB2V, eFlow4NB, eFlow4NBV, eFlow6NB, eFlow6NBV, eFlow102NB, eFlow102NBV, eFlow104NB, eFlow104NBV	A
ACM8, ACM8CB, ACMS8, ACMS8CB, LINQ8ACM, LINQ8ACMCB	B
ACM4, ACM4CB, LINQ8PD, LINQ8PDCB, MOM5, PD4UL, PD4ULCB, PD8UL, PD8ULCB, PDS8, PDS8CB, VR6	C

Installation Instructions for S2-INST Bracket to TSS2:

 1. Align S2-INST mounting holes with pems on TSS2
2. Attach S2-INST to backplane with lock nuts (provided)
3. Mount backplane to enclosure with hardware.

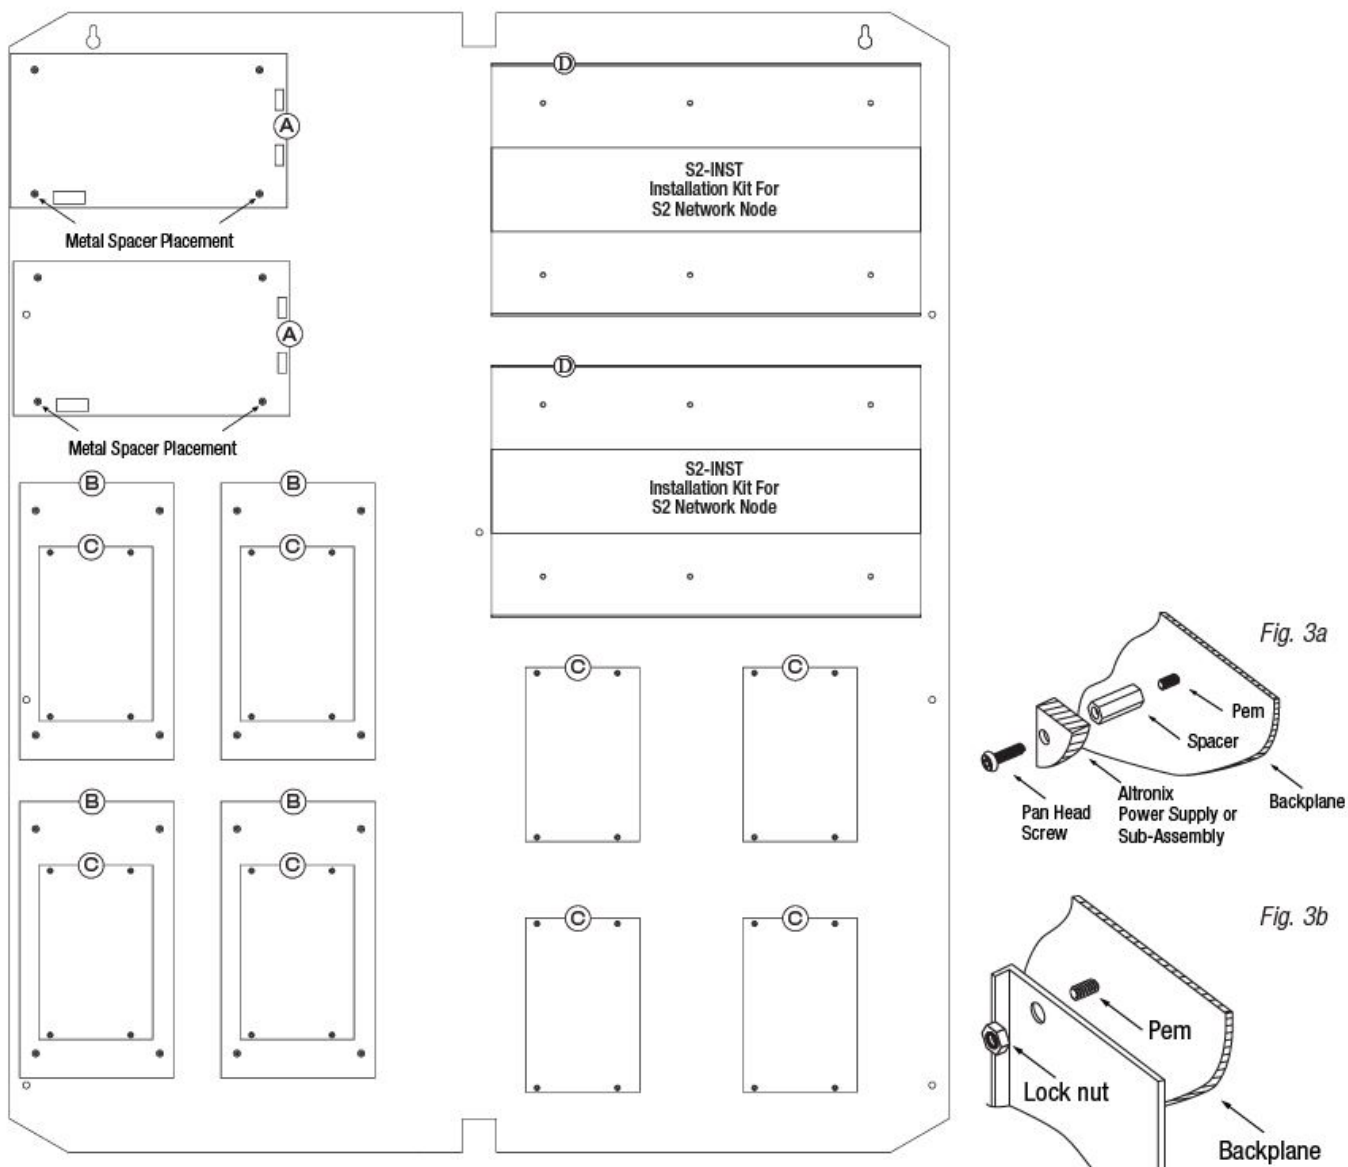

Installation Instructions for Altronix Power Supplies and Sub-Assemblies to TSS3:




1. Fasten spacers (provided) into pem configuration (A), (B) or (C) of backplane
2. Mount boards to spacers utilizing 5/16" pan head screws (provided)
3. Mount backplane to enclosure with hardware.

Access Controller Position Chart for the Following Models:

Altronix Board	Pem Mounting
AL400ULXB2, AL400XB2V, AL600ULXB, AL600XB220, AL1012ULXB, AL1012XB220, AL1024ULXB2, AL1024XB2V, eFlow4NB, eFlow4NBV, eFlow6NB, eFlow6NBV, eFlow102NB, eFlow102NBV, eFlow104NB, eFlow104NBV	A
ACM8, ACM8CB, ACMS8, ACMS8CB, LINQ8ACM, LINQ8ACMCB	B
ACM4, ACM4CB, LINQ8PD, LINQ8PDCB, MOM5, PD4UL, PD4ULCB, PD8UL, PD8ULCB, PDS8, PDS8CB, VR6	C


Installation Instructions for S2-INST Bracket to SS3:

   1. Align S2-INST mounting holes with pems on TSS3
2. Attach S2-INST to backplane with lock nuts (provided)
3. Mount backplane to enclosure with hardware.

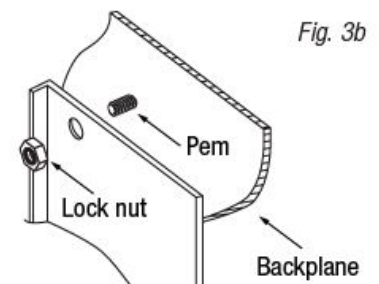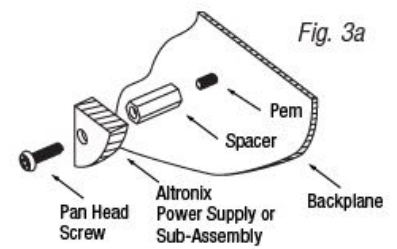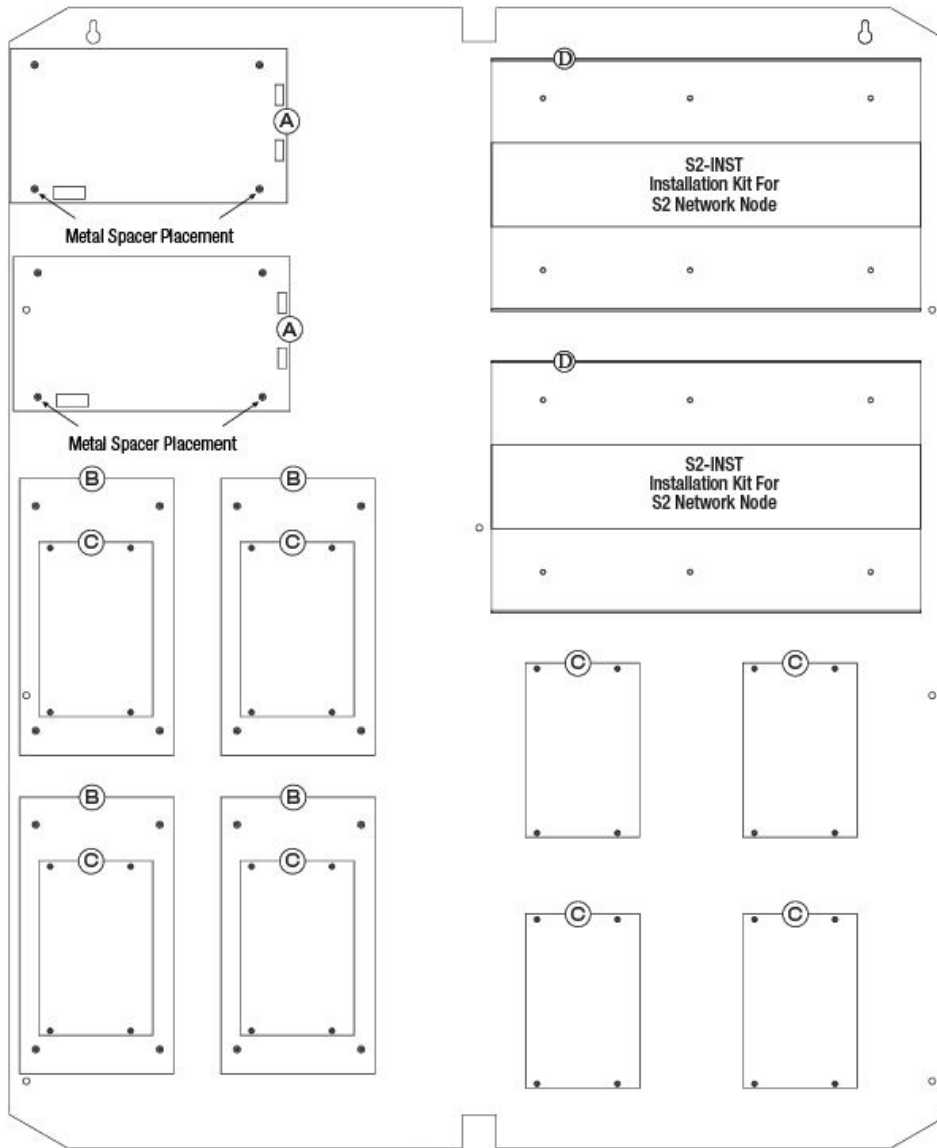


TSS2 Dimensions (H x W x D)

 25.375" x 19.375" x 0.3125" (644.6mm x 492.1mm x 7.9mm)



 36.12" x 30.125" x 7.06" (917.5mm x 768.1mm x 179.3mm)

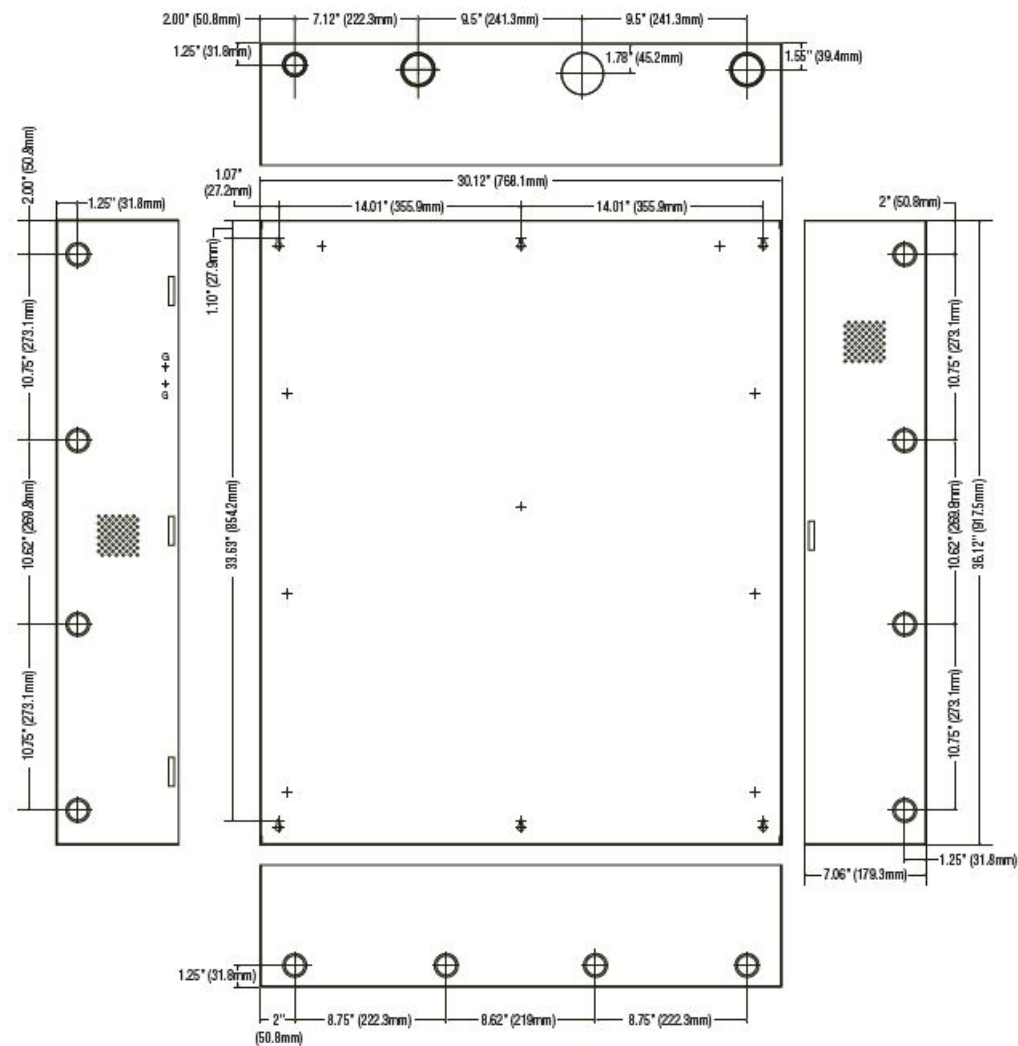

Altronix is not responsible for any typographical errors. 140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056 web site: www.altronix.com | e-mail: info@altronix.com IITrove SS

Documents / Resources

TRIVE Access & Power Integration Trove2SS2 Trove2SS2 Access and Power Integration Enclosure with Backplane [pdf] Installation Guide Trove2SS2 Trove2SS2 Access and Power Integration Enclosure with Backplane [pdf] Installation Guide Trove3SS3 Trove3SS3 Access and Power Integration Enclosure with Backplane [pdf] Installation Guide Trove3SS3 Trove3SS3 Access and Power Integration Enclosure with Backplane [pdf] Installation Guide Installation Guide Altronix Power and Data Solutions	Altronix Trove2SS2 Access and Power Integration Enclosure with Backplane [pdf] Installation Guide Trove2SS2, Access and Power Integration Enclosure with Backplane
TRIVE Access & Power Integration Trove2SS2 Trove2SS2 Access and Power Integration Enclosure, Trove2SS2, Access and Power Integration Enclosure, Power Integration Enclosure, Integration Enclosure, Enclosure Trove2SS2 Trove2SS2 Access and Power Integration Enclosure, Trove2SS2, Access and Power Integration Enclosure, Power Integration Enclosure, Integration Enclosure, Enclosure Trove3SS3 Trove3SS3 Access and Power Integration Enclosure with Backplane [pdf] Installation Guide Trove3SS3 Trove3SS3 Access and Power Integration Enclosure with Backplane [pdf] Installation Guide Installation Guide Altronix Power and Data Solutions	Altronix Trove2SS2 Access and Power Integration Enclosure [pdf] Installation Guide Trove2SS2 Access and Power Integration Enclosure, Trove2SS2, Access and Power Integration Enclosure, Power Integration Enclosure, Integration Enclosure, Enclosure

References

- [Altronix Home](#)