

AMAG Access and Power Integration User Guide

Home » AMAG » AMAG Access and Power Integration User Guide



Contents

- 1 AMAG Access and Power Integration
- 2 Overview
- 3 Specifications
- 4 Installation Instructions for Trove2 / Trove3
- 5 TAG2: Configuration of Altronix Power Supply and/or Sub-Assembly Boards and AMAG M4000 Boards
- 6 Power Supply, Sub-Assembly and Access Controller Position Chart for the Following Models
- 7 TAM2: Configuration of Altronix Power Supply and/or Sub-Assembly Boards and AMAG M2150 Boards
- 8 TAM3: Configuration of Altronix Power Supply and/or Sub-Assembly Boards and AMAG M2150 / M4000 **Boards**
- 9 Power Supply, Sub-Assembly and Access Controller Position Chart for the Following Models
- 10 Features
- 11 TAG2 / TAM2 Dimensions
- 12 Trove2 Enclosure Dimensions (H x W x D approximate)
- **13 TAM3 Dimensions**
- 14 Trove3 Enclosure Dimensions (H x W x D approximate)
- 15 Documents / Resources
 - 15.1 References
- **16 Related Posts**



AMAG Access and Power Integration



Overview

Trove2AG2/Trove2AM2 and Trove3AM3 accommodates AMAG boards with or without Altronix power supplies and sub-assemblies for access systems.

Specifications

Trove2AG2 – Trove2 enclosure with TAG2 Altronix/AMAG M4000 backplane **Trove2AG2 accommodates a combination of the following:**

Altronix Modules:

- Up to two (2) eFlow4NB, eFlow6NB, eFlow102NB, eFlow104NB or PoE201.
- One (1) NetWaySP4B.
- Up to three (3) LINQ8PD/ LINQ8PDCB, ACM8/ACM8CB, ACMS8/ACMS8CB, ACM4/ACM4CB, MOM5, PD4UL/PD4ULCB, PD8UL/PD8ULCB, PDS8/PDS8CB, or VR6.

AMAG Modules:

- Up to three (3) M4000 modules.
- Includes: tamper switch, cam lock, lock nuts, and mounting hardware.
- 16 Gauge enclosure with ample knockouts for convenient access.
- Enclosure Dimensions (H x W x D): 27.25" x 21.75" x 6.5" (692.15mm x 552.5mm x 165.1mm).

TAG2 - Altronix/AMAG M4000 backplane only

Includes mounting hardware.

• Dimensions (H x W x D): 25.375" x 19.375" x 0.3125" (644.5mm x 482.6mm x 7.9mm).

Trove2AM2 – Trove2 enclosure with TAM2 Altronix/AMAG M2150 backplane Trove2AM2 accommodates a combination of the following:

Altronix Modules:

- Up to two (2) eFlow4NB, eFlow6NB, eFlow102NB, eFlow104NB or PoE201.
- Up to two (2) LINQ8PD/ LINQ8PDCB, ACM8/ACM8CB, ACMS8/ACMS8CB, ACM4/ACM4CB, MOM5, PD4UL/PD4ULCB, PD8UL/PD8ULCB, PDS8/PDS8CB, or VR6.

AMAG Modules:

- One (1) M2150-2DBC, M2150-4DBC or M2150-8DBC modules.
- One (1) M2150-2DC, M2150-4DC or M2150-AC244 modules.
- Includes: tamper switch, cam lock, lock nuts and mounting hardware.
- 16 Gauge enclosure with ample knockouts for convenient access.
- Enclosure Dimensions (H x W x D): 27.25" x 21.75" x 6.5" (692.2mm x 552.5mm x 165.1mm).

TAM2 - Altronix/AMAG M2150 backplane

- 16 Gauge backplane.
- · Includes mounting hardware.
- Dimensions (H x W x D): 25.375" x 19.375" x 0.3125" (644.6mm x 492.1mm x 7.9mm).

Trove3AM3 – Trove3 enclosure with TAM3 Altronix/AMAG M2150 / M4000 backplane Trove3AM3 accommodates a combination of the following:

Altronix Modules:

- Up to two (2) eFlow4NB, eFlow6NB, eFlow102NB, eFlow104NB or PoE201.
- Up to two (2) ACM8/ACM8CB, ACMS8/ACMS8CB.
- Up to four (4) LINQ8PD/ LINQ8PDCB, ACM4/ACM4CB, MOM5, PD4UL/PD4ULCB, PD8UL/PD8ULCB, PDS8/PDS8CB, VR6.

AMAG Modules:

- Up to two (2) M2150-4DC or M2150-AC244, M2150-DBU M2150-4DBC or M2150-8DBC modules.
- Up to four (4) M4000 modules.
- Includes: tamper switch, cam lock, lock nuts and mounting hardware.
- 16 Gauge enclosure with ample knockouts for convenient access.

• Enclosure Dimensions (H x W x D): 36.12" x 30.12" x 7.06" (917.5mm x 768.1mm x 179.3mm).

TAM3 - Altronix/AMAG M2150 / M4000 backplane


- 16 Gauge backplane.
- Includes mounting hardware. Dimensions (H x W x D): 34.0" x 28.0" x 0.3125" (863.6mm x 711.2mm x 7.9mm).

Agency Listings:

- UL 294 6th edition: Line Security I, Destructive Attack I, Endurance IV, Stand-by Power II*. * Stand-by Power Level I if no battery is supplied.
- This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme á la norme NMB-003 du Canada.
- · CE European Conformity.

Installation Instructions for Trove2 / Trove3

- 1. Remove backplane from enclosure prior to mounting (do not discard hardware).
- 2. Mark and predrill holes in the wall to line up with the top keyholes in the enclosure. Install the upper fasteners and screws in the wall. with the screw heads protruding. Place the enclosure's upper keyholes over the screws; level and secure. Mark the position of the lower holes. Remove the enclosure. Drill the lower holes and install the fasteners. Place the enclosure's upper keyholes over the upper screws. Install the lower screws and make sure to tighten all screws (Enclosure Dimensions, pg. 10, 12).
- 3. Mount included UL Listed tamper switch(es) (Altronix Model TS112 or equivalent) in desired location, opposite hinge. Slide the tamper switch bracket onto the edge of the enclosure approximately 2" from the right side (Fig. 1, pg. 3). Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device. To activate alarm signal open the door of the enclosure.
- 4. Mount Altronix/AMAG boards to backplane, refer to pages 4-6.

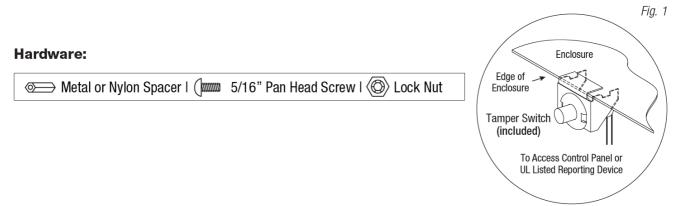

TAG2: Configuration of Altronix Power Supply and/or Sub-Assembly Boards and AMAG M4000 Boards


1. Fasten spacers (provided) to pems that match the hole pattern for Altronix power supply/chargers and sub-assemblies (Fig. 2, pg. 4). Fasten metal spacers in the correct locations to provide proper grounding, see below (Fig. 2, pg. 4). Fasten spacers (provided) to pems that match the hole pattern for AMAG M4000

modules.

- 2. Mount boards to spacers utilizing 5/16" pan head screws (provided) (Fig. 2, 2a, pg. 4).
- 3. Fasten TAG2 backplane to Trove2 enclosure utilizing lock nuts (provided).

Power Supply, Sub-Assembly and Access Controller Position Chart for the Following Models


Boards	Pem Mounti ng
eFlow4NB, eFlow6NB, eFlow102NB, eFlow104NB, ACM8/ACM8CB, ACMS8/ACMS8CB or PoE 201	А
NetWaySP4B	В
LINQ8PD/ LINQ8PDCB, ACM4/ACM4CB, MOM5, PD4UL/PD4ULCB, PD8UL/PD8ULCB, PDS8/PDS8CB, or VR6	С
AMAG M4000 Boards	D

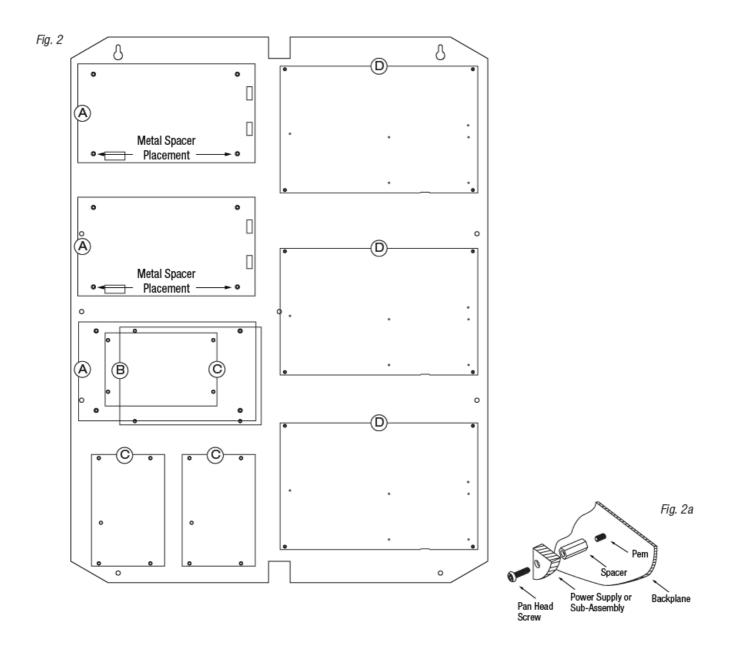

TAM2: Configuration of Altronix Power Supply and/or Sub-Assembly Boards and AMAG M2150 Boards

- 1. Fasten spacers (provided) to pems that match the hole pattern for Altronix Power Supply/Chargers or Altronix Sub-Assembly boards (Fig. 3, 3a, pg. 5). Fasten metal spacers in the correct locations to provide proper grounding, see below (Fig. 3, pg. 5).
- 2. Mount boards to spacers utilizing 5/16" pan head screws (provided) (Fig. 3, pg. 5).
- 3. Align the AMAG boards on the backplane to match the boards' mounting holes with pems provided.
- 4. Fasten spacers (provided) to pems that match the hole pattern for AMAG M2150 boards.
- Mount AMAG boards to spacers utilizing 5/16" pan head screws (provided) (Fig. 3, pg. 5).
 Note: AMAG M2150 boards have specific markings. Please orient boards in the appropriate position according to the Fig. 3 below.
- 6. Fasten backplane to Trove2 enclosure utilizing lock nuts (provided).

Boards	Pem Mount ing
eFlow4NB, eFlow6NB, eFlow102NB, eFlow104NB, ACM8/ACM8CB, ACMS8/ACMS8CB or PoE2 01	А
LINQ8PD/ LINQ8PDCB, ACM4/ACM4CB, MOM5, PD4UL/PD4ULCB, PD8UL/PD8ULCB, PDS8/PDS8CB, or VR6	В
AMAG M2150-AC24/4, M2150-4DC Boards	С
AMAG M2150-2DC Board	D
AMAG M2150-2DBC Board	Е
AMAG M2150-4DBC, M2150-8DBC Boards	F

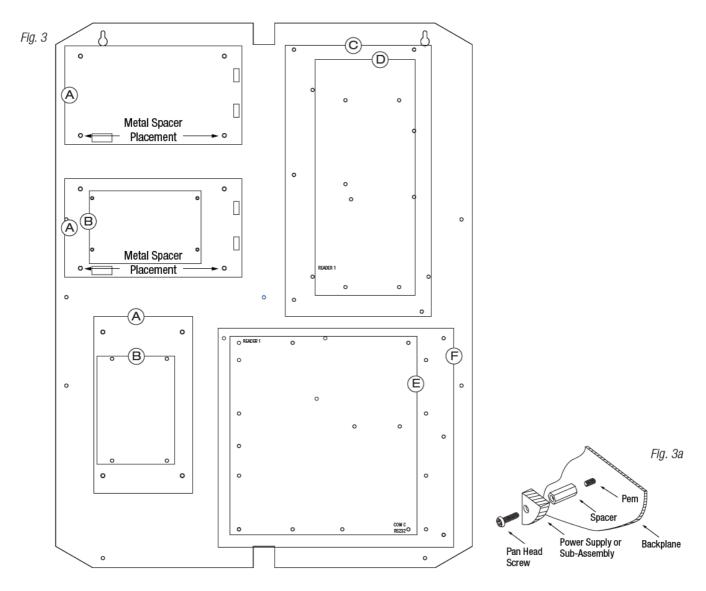


TAM3: Configuration of Altronix Power Supply and/or Sub-Assembly Boards and AMAG M2150 / M4000 Boards

- 1. Fasten spacers (provided) to pems that match the hole pattern for Altronix power supply/chargers and sub-assemblies (Fig. 4, pg. 6). Fasten metal spacers in the correct locations to provide proper grounding, see below (Fig. 4, pg. 6). Fasten spacers (provided) to pems that match the hole pattern for AMAG boards.
- 2. Mount boards to spacers utilizing 5/16" pan head screws (provided) (Fig. 4, 4a, pg. 6).
- 3. Fasten TAM3 backplane to Trove3 enclosure utilizing lock nuts (provided).


Power Supply, Sub-Assembly and Access Controller Position Chart for the Following Models

Boards	Pem Mount ing
eFlow4NB, eFlow6NB, eFlow102NB, eFlow104NB, ACM8/ACM8CB, ACMS8/ACMS8CB or PoE2 01	А
LINQ8PD/ LINQ8PDCB, ACM4/ACM4CB, MOM5, PD4UL/PD4ULCB, PD8UL/PD8ULCB, PDS8/PDS8CB, or VR6	В
AMAG M2150-DBU	С
AMAG M2150-AC24/4, M2150-4DC	D
AMAG M4000	Е
AMAG M2150-4DBC, M2150-8DBC	F

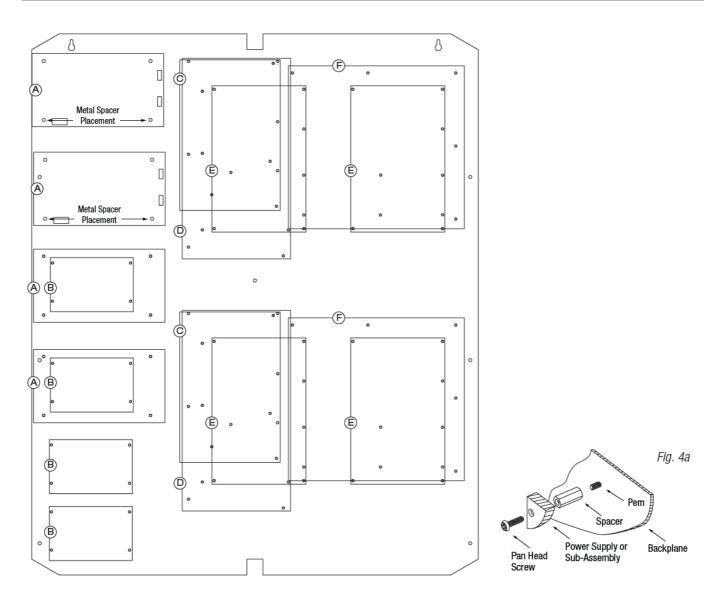

LINQ2 - Network Communication Module


LINQ2 provides remote IP access to real-time data from eFlow power supply/chargers to help keep systems up and running at optimal levels. It facilitates fast and easy installation and set-up, minimizes system downtime, and eliminates unnecessary service calls, which helps reduce Total Cost of Ownership (TCO) – as well as creat-ing a new source of Recurring Monthly Revenue (RMR).

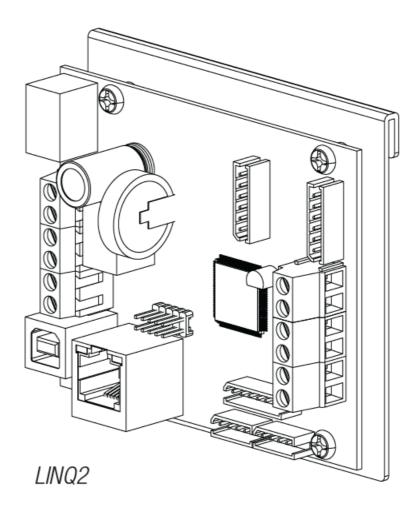

Features


- UL Listed in the U.S. and Canada.
- Local or remote control of up to (2) two Altronix eFlow power output(s) via LAN and/or WAN.
- Monitor real time diagnostics: DC output voltage, output current, AC & battery status/service, input trigger state change, output state change and unit temperature.
- Access control and user managment: Restrict read/write, Restrict users to specific resources
- Two (2) integral network controlled Form "C" Relays.
- Three (3) programmable input triggers: Control relays and power supplies via external hardware sources.
- Email and Windows Dashboard notifications
- Event log tracks history.
- Secure Socket Layer (SSL).
- Programmable via USB or web browser includes operating software and 6 ft. USB cable.

LINQ2 Mounts Inside any Trove Enclosure

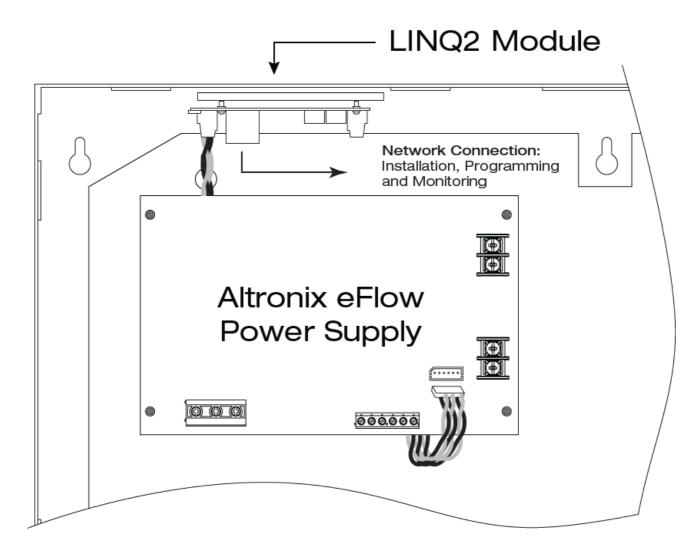


TAG2 / TAM2 Dimensions

25.375" x 19.375" x 0.3125" (644.5mm x 482.6mm x 7.9mm).

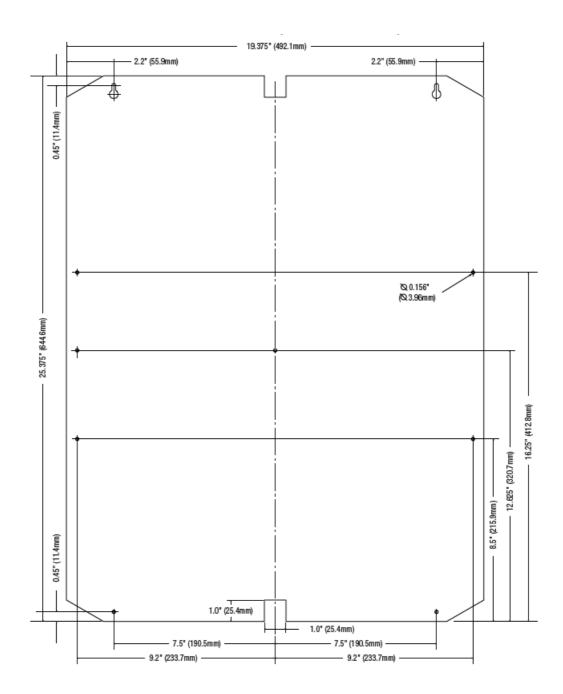


Trove2 Enclosure Dimensions (H x W x D approximate)

27.25"x 21.75"x 6.5"(692.15mm x 552.5mm x 165.1mm)

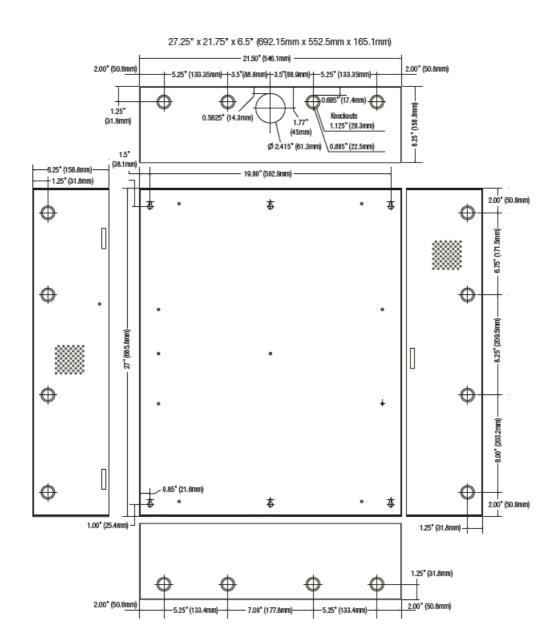


TAM3 Dimensions

34" x 28" x 0.3125" (863.6mm x 711.2mm x 7.9mm)

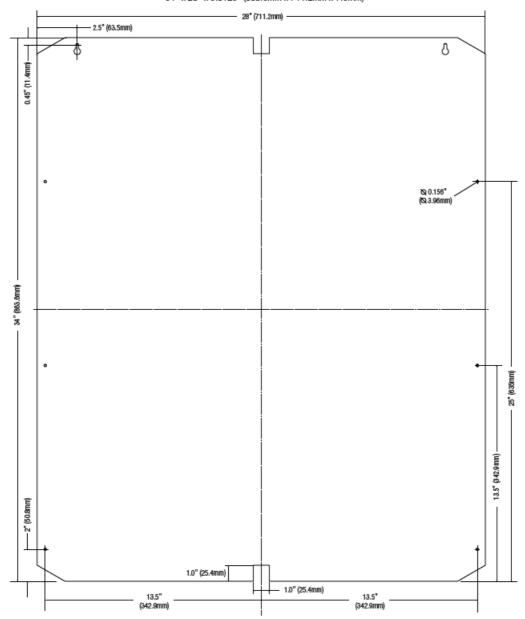

Trove3 Enclosure Dimensions (H x W x D approximate)

36.12" x 30.125" x 7.06" (917.5mm x 768.1mm x 179.3mm)

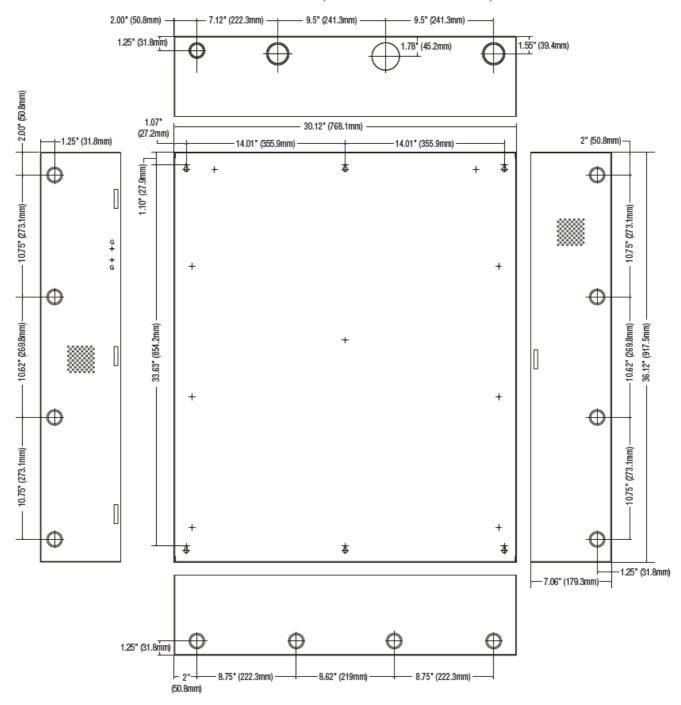

AMAG Technology, Inc. is not responsible for any typographical errors. AMAG Technology, Inc. 2205 W. 126th Street Unit B, Hawthorne, CA 90250 | phone: 1-800-874-1091 web site: www.amag.com | e-mail: orders@amag.com IITrove2AG2/Trove2AM2/Trove3AM3

Documents / Resources



AMAG Access and Power Integration [pdf] User Guide

Trove2AG2, TAG2, Trove2AM2, TAM2, Trove3AM3, TAM3, Access and Power Integration, Access Integration, Integration, Power Integration

References

• 7 Unified Security Solutions | AMAG Technology

Manuals+,