



## Amazon basic BOOUG9HB1Q Security Lock Box User Manual

[Home](#) » [amazon basic](#) » Amazon basic BOOUG9HB1Q Security Lock Box User Manual 

### Contents

- [1 Amazon basic BOOUG9HB1Q Security Lock Box](#)
- [2 Security Safe](#)
- [3 Product Overview](#)
- [4 Setup](#)
- [5 Operation](#)
- [6 Cleaning and Maintenance](#)
- [7 Troubleshooting](#)
- [8 Safety and Compliance](#)
  - [8.1 Battery Safety Advice](#)
- [9 Specifications](#)
- [10 FCC Warning](#)
- [11 Warranty Information](#)
- [12 Related Posts](#)





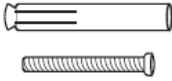
**Amazon basic BOOUG9HB1Q Security Lock Box**



## Security Safe

 
### Contents:

Before getting started, ensure the package contains the following components:

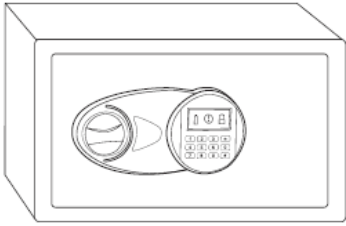Part		Qty
Security safe		1
Emergency key		2
Expansion bolts		4

**Note:** The default preset password is “159”, change It immediately.


## Product Overview

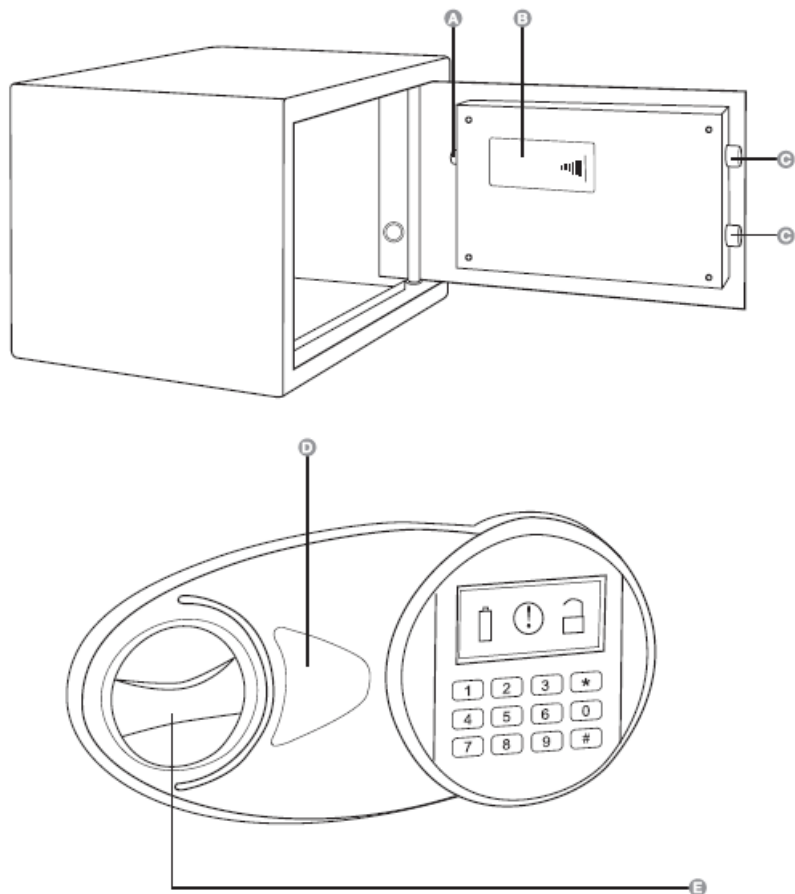

## Setup

### Step 1:

 Setting Up the Product

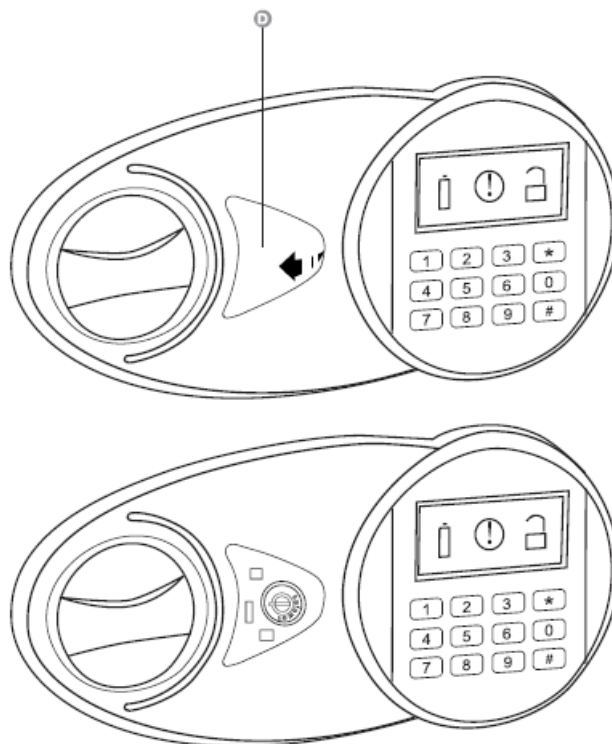


### Opening the Safe – First time

To open the safe the first time you will need to use the emergency key  
Remove the cover of the emergency lock D.


### Step 2:
 
## Setting Up the Product

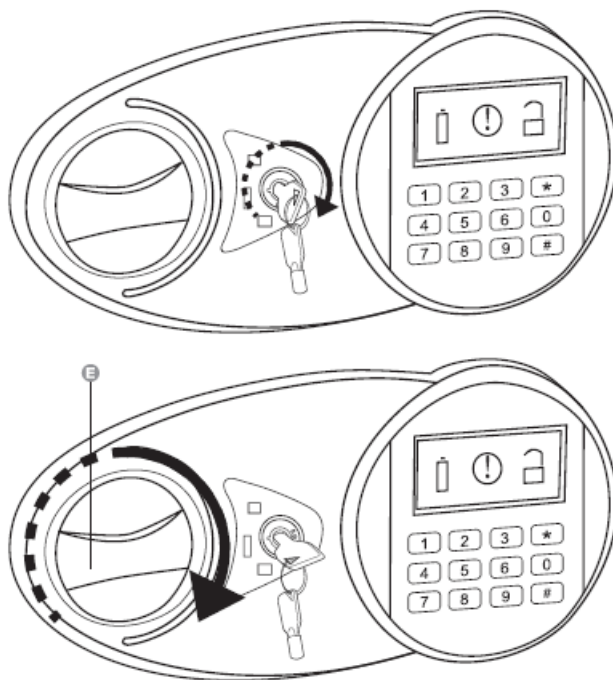

Insert the emergency key and turn it clockwise.  
Turn the Knob E clockwise to open the door

### Step 3: Setting Up the Product

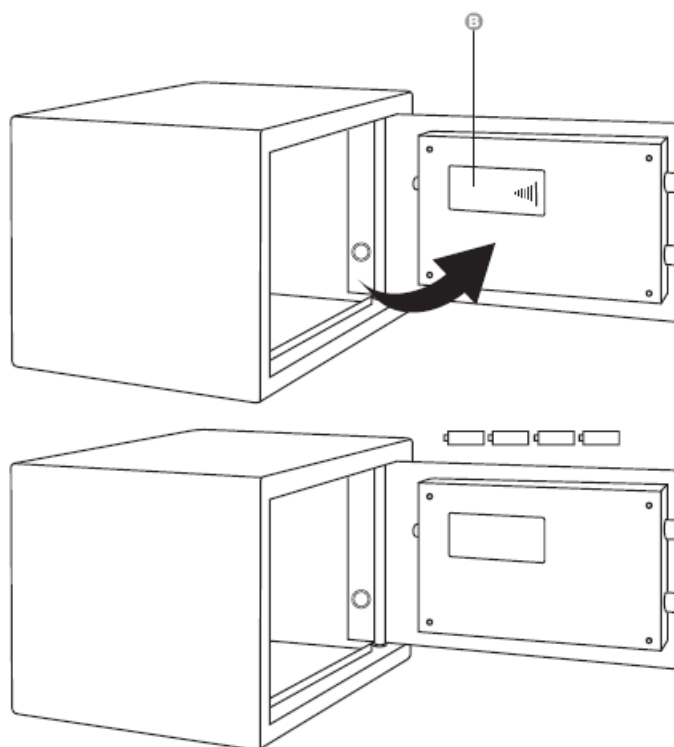 


Open the door. Open the battery compartment B and insert 4 x AA batteries (not included).

**NOTE:** When the batteries run out, the  icon will turn on. Replace the batteries then.


#### Step 4:

 
##### Setting the Password

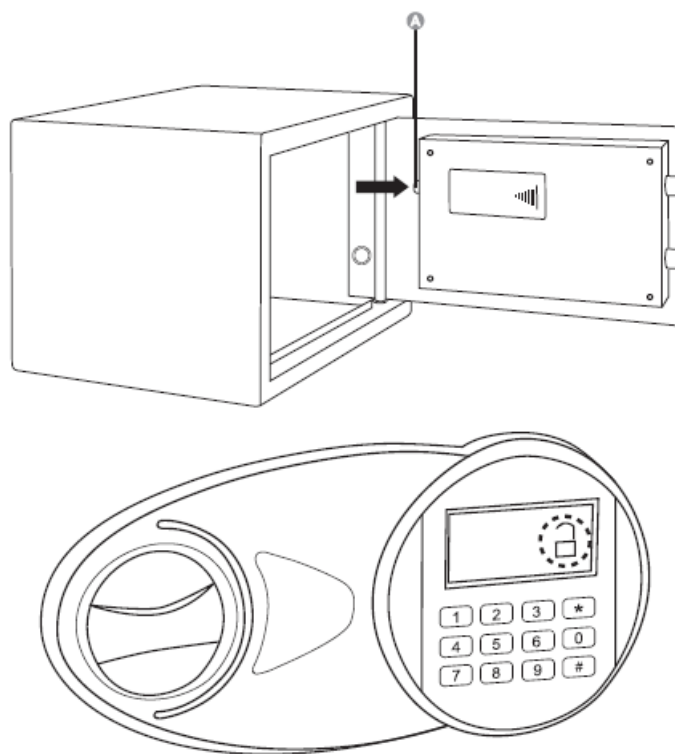

With the door open, press the Reset button 0. The safe will emit two beeps.


Choose a new passcode (3-8 digits), punch it on the keypad and press the # key to confirm.

If the  icon turns on, the new passcode is successfully set.

If the  icon flashes, the safe failed to set the new passcode. Repeat the steps above until successful. NOTE: Test the new passcode with the door open before locking the door.

#### Step 5:
 
##### Securing to a Floor or Wall

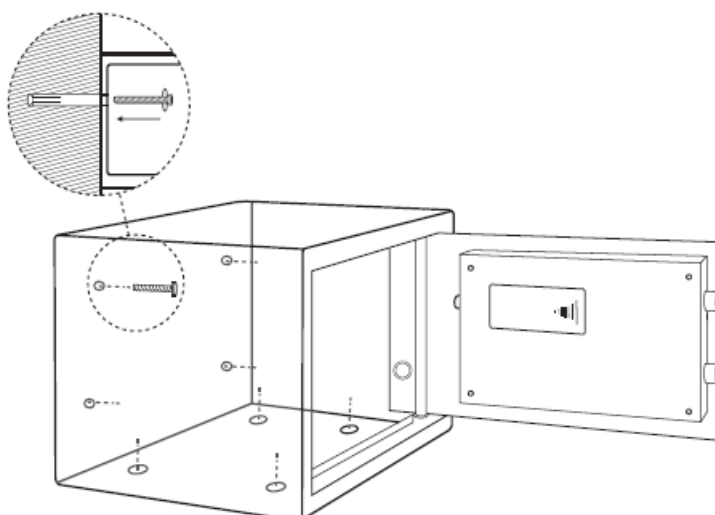


Select a stable, dry and secure location for your safe.

If bolting to a wall, make sure that your safe is resting on a supporting surface (such as the floor or a shelf). Do not bolt your safe to both the floor and wall.


Place the safe on the selected location. Use a pencil to mark the mounting holes on the floor or wall. Move the safe and drill 2-inch-deep mounting holes (-50 mm) using a 12 mm drill bit. Move the safe back in place, and align the mounting holes to the openings in the safe. Insert the expansion bolts (included) through the holes and into the mounting holes and tighten them securely.

## Operation
 
### Opening the Safe – Using Your Password

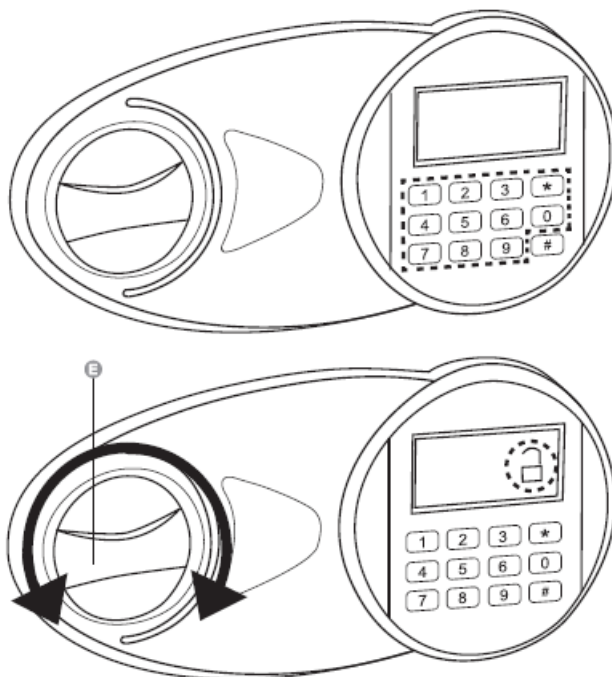

Input your passcode (3 to 8 digits) on the keypad. Press # key to confirm.

The  icon turns on.


Rotate the knob O clockwise and open the door.

**NOTE:** The default preset passcode is “159”, change it immediately.

### Locking the Safe

 Close the door, then turn the knob O counterclockwise to lock it.


### Setting the Master Code

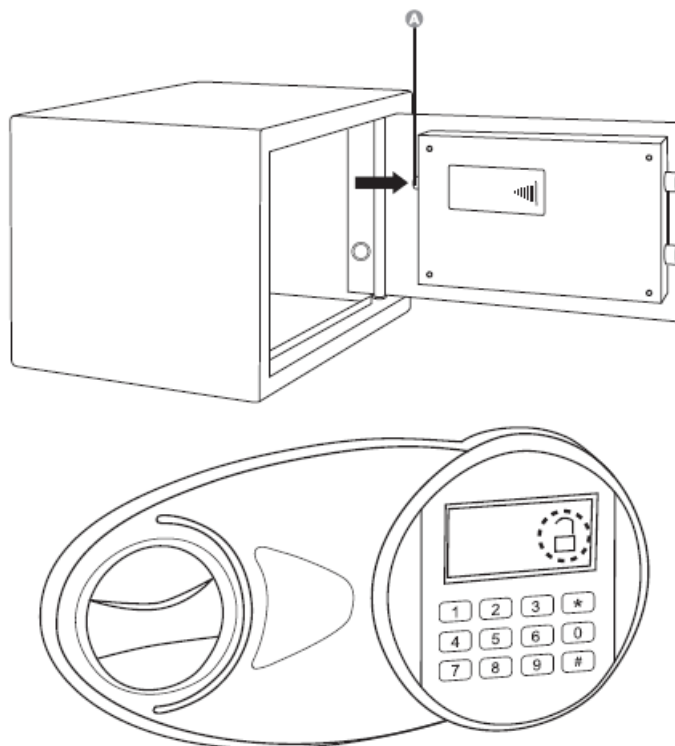

Should you forget your passcode, the safe can still be accessed with the master code.

1. With the door open, press key twice and then press the Reset button().
2. Input the new code (3-8 digits), then press # key to confirm.

The  icon turns on. The master code is set.

**NOTE:** If the  icon doesn't turn on, the safe failed to set the new master code. Repeat the steps above until successful.



## Automatic Lockout

- The safe will enter a 30-second lockout if the wrong passcode is entered 3 consecutive times.
- After the 30-second lockout, it will automatically unlock.
- **ATTENTION:** Entering the wrong passcode 3 more times will lock the safe for 5 minutes.

## Cleaning and Maintenance

- If necessary wipe the outside and inside of the product with a slightly damp cloth.
- Avoid contact with corrosive substances like acids, alkaline or similar substances.

## Troubleshooting

Problem		Solution	
The safe won't open when entering the passcode.		<ul style="list-style-type: none"> <li>•</li> <li>•</li> <li>•</li> </ul>	<p>Make sure you entered the correct passcode. Press the# key after entering the passcode.</p> <p>The safe might be in lockout. Wait 5 minutes and try again.</p> <p>Replace the batteries. (See <b>Step 3</b>)</p>
The	door won't shut.	<ul style="list-style-type: none"> <li>•</li> </ul>	<p>Make sure there are no obstructions.</p> <p>If the door bolts 0 are extended, re-enter the passcode and turn the knob O clockwise to retract them.</p>
The 	icon turns on.	<ul style="list-style-type: none"> <li>•</li> </ul>	<p>Replace the batteries. (See <b>Step 3</b>)</p>
The  icon is flashing.		Make sure you entered the correct passcode.	

## Safety and Compliance

- Read this instruction manual carefully before using the appliance. Familiarize yourself with the operation, adjustments and functions of switches. Understand and follow the safety and operation instructions in order to

avoid possible risks and hazards. Keep for future reference. If you give this device to someone else, this instruction manual must be included too.

- To reduce the risk of theft, the safe must be fixed to a wall or floor.
- Store the emergency keys in a secret and safe place.
- Do not store the emergency keys inside the safe. If the battery runs out you will not be able to open the safe.
- The preset passcode should be changed before using the safe.
- Place the product on a stable, secure place, possibly not elevated, lest it may fall over and suffer damage or cause injury to people.
- Keep liquids away from the control panel and battery compartment. Liquids spilling over the electronic parts may cause damage and lead to malfunctioning.
- Never attempt to dismantle the product by yourself.
- If maintenance is required, please contact the local service center or local distributor.

### **Battery Safety Advice**

- The danger of explosion if the battery is replaced with one of the wrong type.
- Replace the battery only with the same or equivalent type.
- Warning! The batteries (battery block or built-in batteries) must not be exposed to excessive heat, i. e. direct sunlight, fire or the likes.
- Warning! Do not swallow the battery, there's risk of chemical burns.
- The product contains batteries. If a battery gets swallowed, can cause internal burns and cause death within 2 hours.
- Keep new and used batteries out of the reach of children.
- If the battery compartment doesn't close properly, stop using the product and keep it out of the reach of children.
- If you think that the batteries were swallowed or introduced in any part of the body, seek medical attention immediately.
- Leaking battery acid may cause harm.
- If batteries should leak, remove them with a cloth from the battery compartment. Dispose of batteries according to the regulations.
- If battery acid has leaked avoid contact with skin, eyes and mucous membranes. Rinse affected areas immediately after contact with the acid and wash with plenty of clean water. Visit a physician.
- Do not allow children to replace batteries without adult supervision.
- The danger of explosion! Batteries may not be charged, re-activated by other means, disassembled, thrown into fire or short-circuited.
- always insert batteries correctly with regard to the polarities (+ and -) marked on the battery and the battery compartment.
- Batteries shall be stored in well-ventilated, dry and cool conditions.
- Exhausted batteries should be immediately removed from the equipment and properly disposed of.
- Use the correct type (AA battery).
- Remove the battery if you will not be using the appliance for an extended period of time.

### **Environmental Protection**

This marking indicates that this product should not be disposed of with other household wastes throughout the



EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

Used batteries must not be disposed of through household garbage, since they might contain toxic elements and heavy metals that can be harmful to the environment and human health.

Consumers are therefore obligated to return batteries to retail or local collection facilities free of charge. Used batteries will be recycled.

They contain important raw materials such as iron, zinc, manganese or nickel.

The crossed-out wheelee bin symbol indicates: Batteries and rechargeable batteries must not be disposed of through household garbage.

The symbols below the wheelee bin indicate:

Pb: Battery contains lead

Cd: Battery contains cadmium

Hg: Battery contains mercury

The packaging consists of cardboard and correspondingly marked plastics that can be recycled. Make these materials available for recycling.

## Specifications

Model No.	B00UG9HB1Q	B01BGY010C	B01BGY043Q	B01BGY6GPG
Power supply		4x 1.5V	, (AA) (not included)	
Dimensions	250 X 350 X 250mm	180 X 428 X 370mm	226 X 430 X 370mm	270 X 430 X 370mm
Weight	8.3 kg	9 kg	10.9 kg	12.2 kg
Capacity	14 L	19.BL	28.3 L	33.9 L

## FCC Warning

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Warranty Information

To obtain a copy of the warranty for this product:

For US – Visit [amazon.com/AmazonBasics/Warranty](https://amazon.com/AmazonBasics/Warranty)

For UK – Visit [amazon.co.uk/basics-warranty](https://amazon.co.uk/basics-warranty)

Contact Customer Service at 1-866-216-1072

## Feedback

Love it? Hate it?

Let us know with a customer review.

AmazonBasics is committed to delivering customer-driven products that live up to your high standards. We encourage you to write a review sharing your experiences with the product. Please visit:

[amazon.com/review/review-your-purchases#](https://amazon.com/review/review-your-purchases#)



## For further services:

Visit [amazon.com/gp/help/customer/contact-us](https://amazon.com/gp/help/customer/contact-us)

Contact Customer Service at 1-866-216-1072

**Download PDF:** [Amazon basic BOUG9HB1Q Security Lock Box User Manual](#)