



## amazon basic B07YF2VWMP Oscillating Table Fan with 3 Speed Settings User Manual

[Home](#) » [amazon basic](#) » amazon basic B07YF2VWMP Oscillating Table Fan with 3 Speed Settings User Manual



### Contents

- 1 amazon basic B07YF2VWMP Oscillating Table Fan with 3 Speed Settings
- 2 IMPORTANT SAFETY INSTRUCTIONS
  - 2.1 Polarized Plug
- 3 SAVE THESE INSTRUCTIONS
- 4 Product Description
- 5 Before First Use
- 6 Operation
  - 6.1 Switching on/off
  - 6.2 Oscillation
  - 6.3 Tilt adjustment
- 7 User Servicing Instructions
  - 7.1 Fuse replacement
- 8 Cleaning and Maintenance
  - 8.1 Cleaning
  - 8.2 Storage
  - 8.3 Maintenance
- 9 Troubleshooting
- 10 Specifications
- 11 Feedback and Help
- 12 ASSEMBLY
- 13 Documents / Resources
- 14 Related Posts



## amazon basic B07YF2VWMP Oscillating Table Fan with 3 Speed Settings



### IMPORTANT SAFETY INSTRUCTIONS

Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

**WARNING:** Risk of injury! Avoid contacting moving parts. Wait until all components have completely stopped before touching them.

**CAUTION:** Reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.

- Before connecting the product to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the product's rating label.
- Do not insert fingers or foreign objects in any opening of the product and do not obstruct the air vents.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord

under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.

- Never use the product without the safety guard or with a damaged safety guard.
- Do not place any clothes or curtains on the product as they could be sucked into the fan during operation and damage the product.
- During use, keep hands, hair, clothing and utensils away from the safety guard to avoid injuries and damage of the product.
- Unplug or disconnect the appliance from the power supply before servicing.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse according to the instructions in this manual (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

### **Polarized Plug**

 
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

## **SAVE THESE INSTRUCTIONS**

### **Intended Use**

- This product is intended for household use only. It is not intended for commercial use.
- This product is intended to be used in dry indoor areas only.
- No liability will be accepted for damages resulting from improper use or non-compliance with these instructions.

### **Product Description**

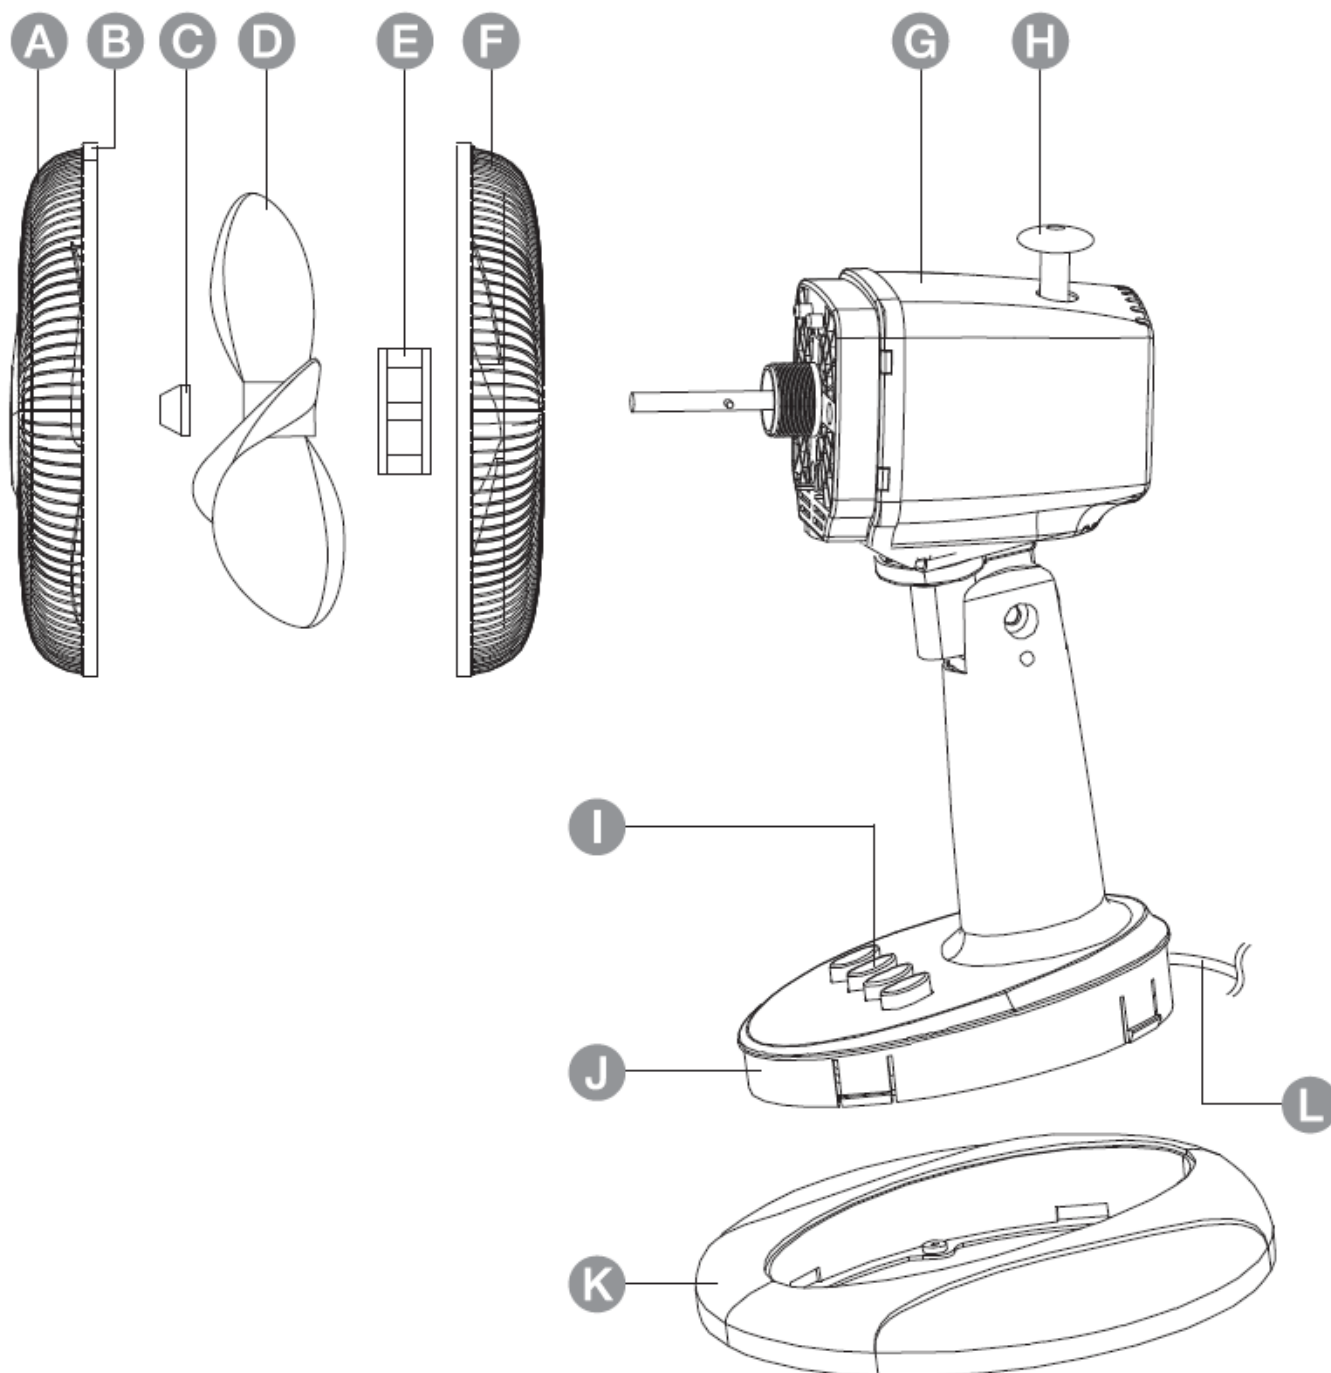

- A Front grille
- B Grille clips
- C Blade knob
- D Blade
- E Rear grille lock nut
- F Rear grille
- G Main unit
- H Oscillation knob
- I Control buttons
- J Foot
- K Base
- L Power plug with fuse

## Before First Use

- Check the product for transport damages.
- Remove all the packing materials.

**DANGER:** Risk of suffocation! Keep any packaging materials away from children – these materials are a potential source of danger, e.g. suffocation.

## Operation

### Switching on/off

 
- Connect the power plug (L) to a suitable outlet.
- To switch the product on, press the 1 (low), 2 (medium) or 3 (high) speed control button (I).
- To switch the product off, press the O control button (I).

### Oscillation

- To turn the automatic oscillation on, press the oscillation knob (H) in. To turn the oscillation off, pull the oscillation knob (H) out.

### Tilt adjustment

- To adjust the tilt angle of the product, turn the head of the main unit (G) up or down.

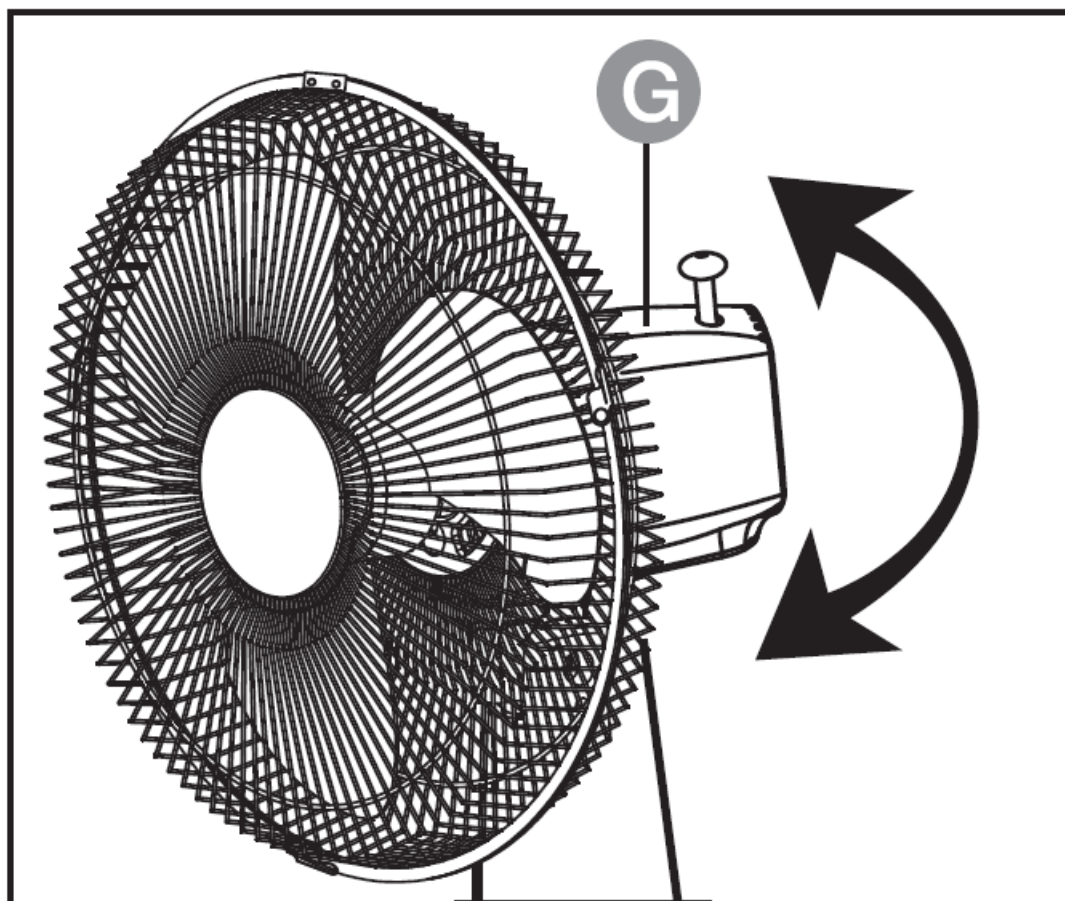


## User Servicing Instructions

## Fuse replacement

**NOTICE:** The product requires a 2.5 A, 125 V fuse

 - Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- Slide open fuse access cover on top of attachment plug towards blades.

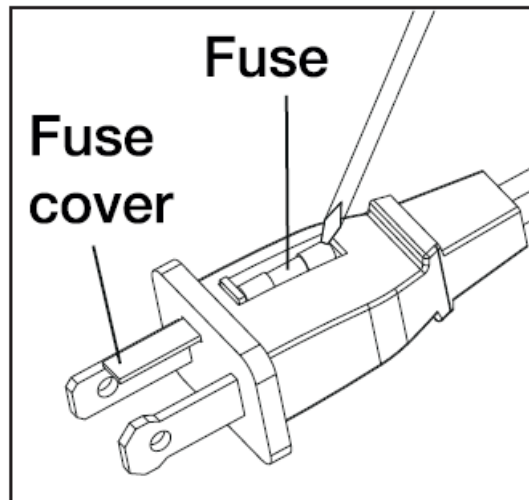

- Remove fuse carefully by using a small screwdriver to pry the fuse out of the compartment by the metal ends of the fuse.
- Risk of fire. Replace only with 2.5 A, 125 Volt fuse.
- Slide closed the fuse access cover on top of the attachment plug..

## Cleaning and Maintenance

### WARNING :

- Risk of electric shock! To prevent electric shock, unplug the product before cleaning.
- Risk of electric shock! During cleaning do not immerse the product in water or other liquids. Never hold the product under running water.

### Cleaning

- To clean, wipe with a soft, slightly moist cloth.
- Regularly remove dust and dirt from the guards using a vacuum cleaner.
- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.

### Storage

- Store the product in its original packaging in a dry area. Keep away from children and pets.

### Maintenance

- Any other servicing than mentioned in this manual should be performed by a professional repair centre.

## Troubleshooting

| Problem                            | Solution  |
|------------------------------------|---|
| The product cannot be switched on. | <ul style="list-style-type: none"> <li>• Check if the power plug (L) is connected to the proper outlet.</li> <li>• Check if the power outlet works.</li> <li>• Wait for the product to cool down.</li> <li>• Replace the fuse in the power plug.</li> </ul> |
| The product makes noise.           | <ul style="list-style-type: none"> <li>• Tighten the blade.</li> </ul>  |
| The product vibrates.              | <ul style="list-style-type: none"> <li>• Place the product on a level surface.</li> <li>• Clean the blade.</li> </ul>   |

## Specifications

|                         |  |                       |
|-------------------------|--|-----------------------|
| Model number:           | B07YF2VWMP<br>TP30-1A  | B07YF2DM16<br>TP40-1R |
| Rated voltage:          | 120 V~, 60 Hz  |                       |
| Rated current:          | 350 mA   | 400 mA                |
| Oscillating angle:      | 80° to 90°   |                       |
| Tilt angle:             | 25° to 35°   |                       |
| Fuse type:              | 2.5 A, 125 V   |                       |
| Net weight:             | B07YF2DM16<br>approx. 4.9 lbs (2.23 kg)                            |                       |
|                         | B07YF2VWMP<br>approx. 3.85 lbs (1.75 kg)                           |                       |
| Dimensions (W x H x D): | B07YF2DM16<br>approx. 16.93 x 11.02 x 22.84"<br>(43 x 58 x 28 cm)  |                       |
|                         | B07YF2VWMP<br>approx. 13.39 x 9.65 x 17.72"<br>(34 x 45 x 24.5 cm) |                       |

## Feedback and Help

Love it? Hate it? Let us know with a customer review.

Amazon Basics is committed to delivering customer-driven products that live up to your high standards. We encourage you to write a review sharing your experiences with the product.

 
[amazon.com/review/review-your-purchases#](https://www.amazon.com/review/review-your-purchases#)

[amazon.com/gp/help/customer/contact-us](https://www.amazon.com/gp/help/customer/contact-us)


## ASSEMBLY

•



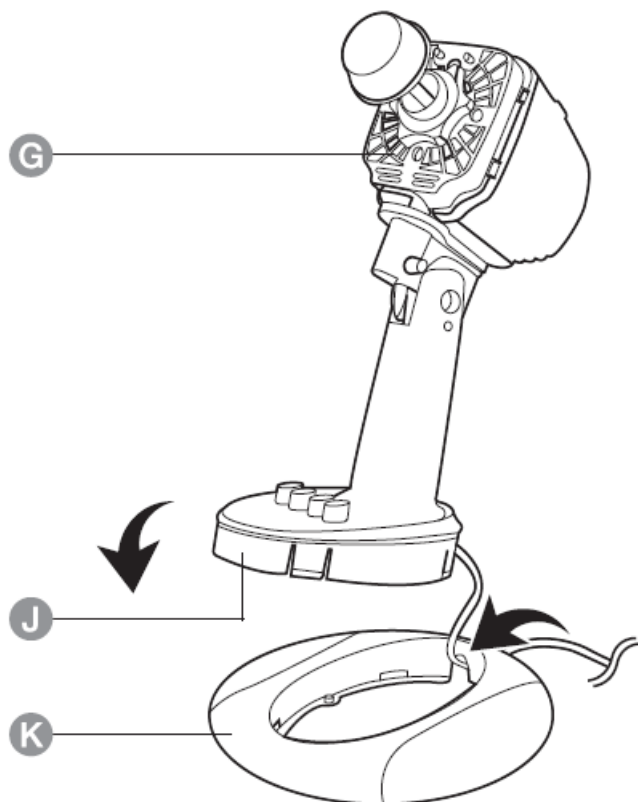


1

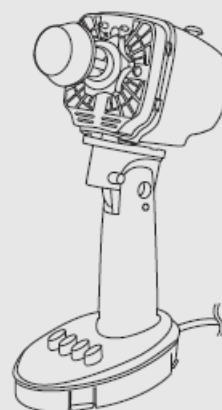 

G (1 x)



 K (1 x)

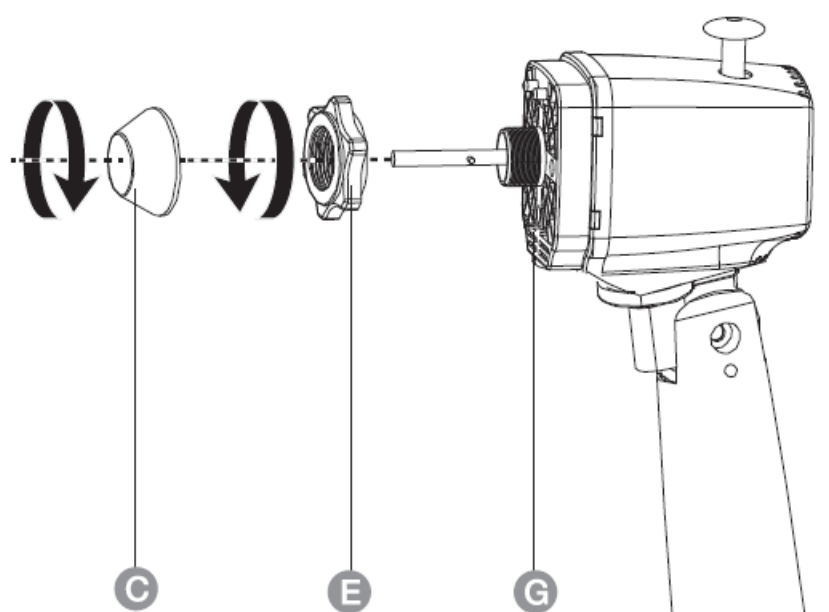

2



C (1 x)

 


E (1 x)


3




F (1 x)

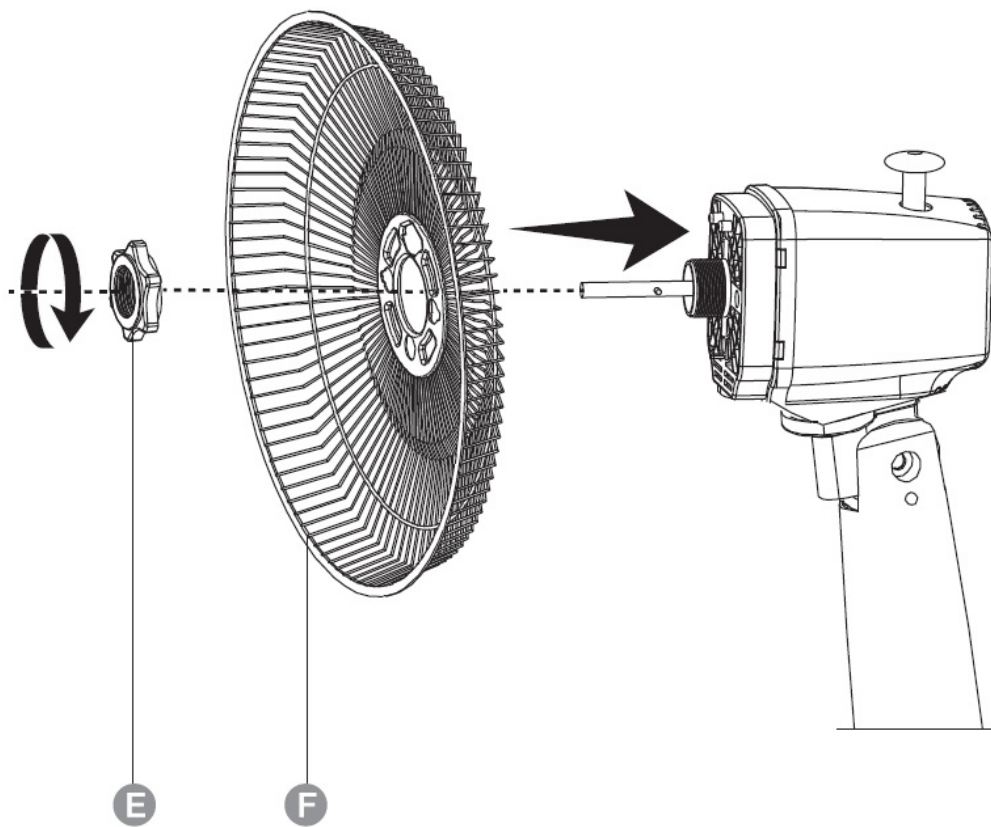


4

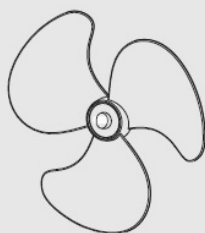 

D (1 x)

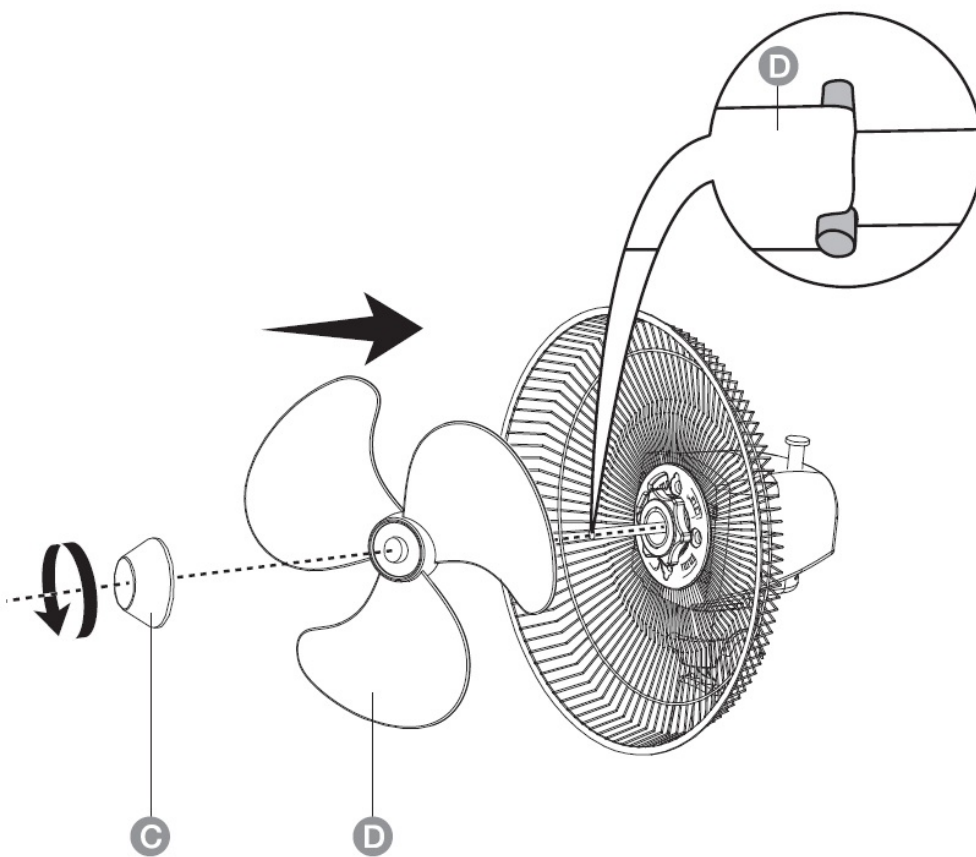 

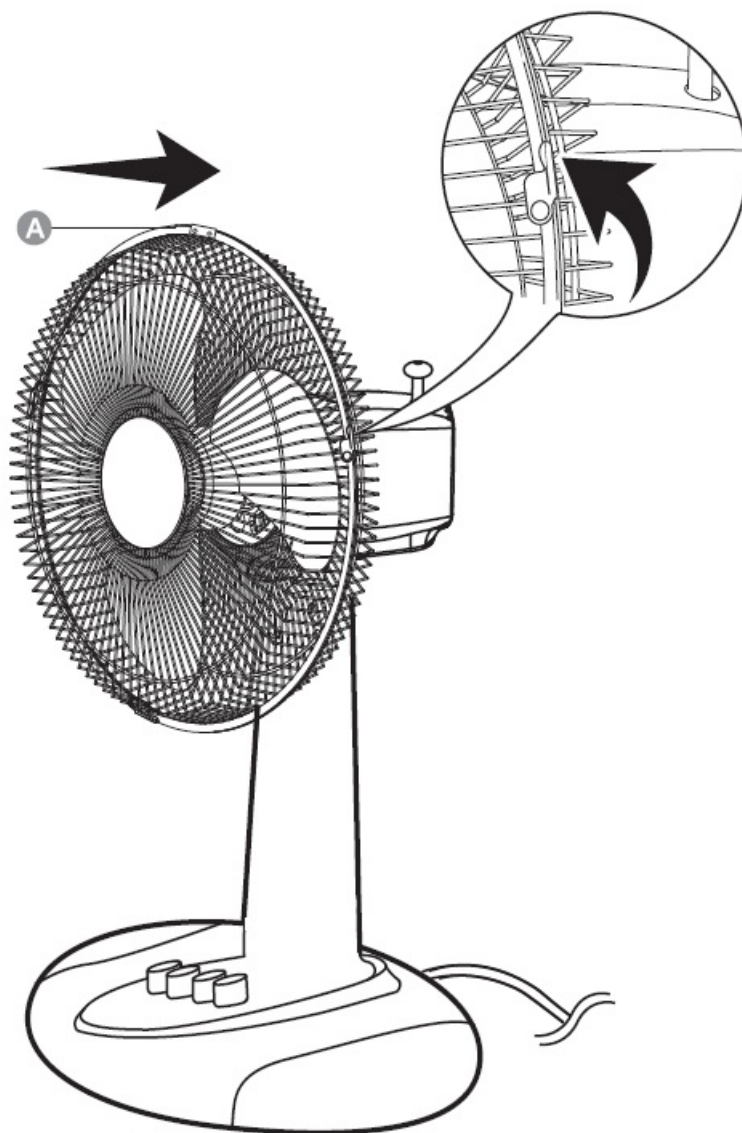 


5



A (1 x)

## Documents / Resources

|  |   |
|--|---|
|  <p><small>Oscillating Table Fan with 3 Speed Settings<br/>Oscillierende Tischventilator mit 3 Stufen der Geschwindigkeit<br/>Ventilador de Mesa Oscilante con 3 Velocidades de Rotación<br/>oscilante (B07YF2VWMP)</small></p> | <p><a href="#">amazon basic B07YF2VWMP Oscillating Table Fan with 3 Speed Settings</a> [pdf] User Manual</p> <p>B07YF2VWMP, Oscillating Table Fan with 3 Speed Settings, Oscillating Table Fan, Table Fan, B07YF2VWMP, Table Fan with 3 Speed Settings, Fan</p> |
|--|---|