amazon basics AB-MIC-06 Condenser USB Microphone Kit



amazon basics AB-MIC-06 Condenser USB Microphone Kit **Instruction Manual**

Home » amazon basics » amazon basics AB-MIC-06 Condenser USB Microphone Kit Instruction Manual



Contents

- 1 AB-MIC-06 Condenser USB Microphone
- 2 Product Diagram
- 3 Installation
- **4 Specifications**
- 5 Warranty & Service:
- 6 Documents / Resources
 - **6.1 References**
- **7 Related Posts**



AB-MIC-06 Condenser USB Microphone Kit



Product Diagram



- 1. Microphone Stand
- 2. Table Clamp
- 3. Microphone
- 4. Mic Windshield
- 5. POP
- 6. Filter Microphone
- 7. Clip GUSB Audio Cable

Installation

1. Step 1, check the accessory list.



- 2. Step 2, fix the clamp on the edge of the table. (table thickness up to 45mm)
- 3. Step 3, insert the foot base (black) of the adjustable microphone stand into the table clamp.





- 4. Step 4, tighten the screw.
- 5. Step 5, screw the shock mount onto the threaded end of the adjustable microphone stand.






- 6. Step 6, insert the microphone into the microphone clip. (7)
- 7. Step 7, fix the pop filter on the adjustable microphone stand to complete the assembly.





8. Step 8, connect the microphone with your computer, prepare wired headphones to hear the voices from the microphone.

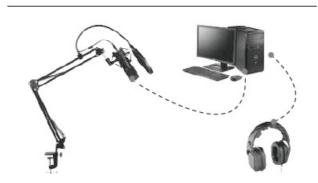

Specifications


Polar Pattern	Cardioid
Sensitivity	-42±3dB(1.5V, 680KΩ; 0db=1V/Pa, 1KHz)
Frequency Response	100Hz-18000Hz
Impedance	< 680 ΚΩ
S/N Ratio	>70dB
Max SPL	125dB
Sampling Rate	192KHz/24Bit

General Operation Content

To manually adjust your input level via your computer's system preferences, use the following instructions relevant to your device platform/operating system.


Adjusting the input level on a Mac OS computer:

1. Click on the Apple symbol at the top left of your screen, and select System Preferences.

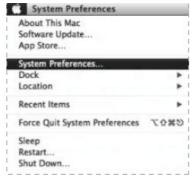

Accessing Mac OS System Preferences

- 2. Click on 'Sound' to open the sound options.
- 3. pen the 'Input tab'.
- 4. From here, select the 'AB-MIC-06' from the list of devices, and adjust the input level using the slider

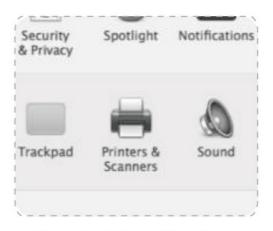

Opening 'Sound' options

Adjusting the input level on a Windows computer:

1. Open the Start menu and click on 'Control Panel'.




Accessing Windows Control Panel

2. Open the 'Sound' preferences from the Control Panel folder.



Opening 'Sound' options

- 3. Open the 'Recording' tab and double-click on 'AB-MIC-06' from the list of devices.
- 4. Adjust the input level using the slider.

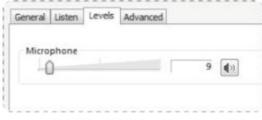

Adjusting input level

5. Microphone can work after finishing Step 4. If you want to test it and let the speaker play the sound of your Microphone, switch to the 'Listen' tab and enable option 'Listen to this device' to test the microphone. Sound delay or disturbance may occur on the microphone so that it can not be applied to party or speech in which occasions AMP or professional sound card are needed.



E-Waste Disposal



Be a Responsible User. Recycle or refurbish your old Amazon brand products to help protect the environment. The crossed-out bin symbol on this product or its packaging signifies that this product should be discarded separately from ordinary household waste at its end of life. Be aware that it is your responsibility to dispose of e-waste in such a manner that no damage to human health and the environment occurs. E-waste is generated from electronic and electrical appliances/components which have reached their end-of-life period or are no longer fit for their original intended use and are destined for recovery, recycling or disposal. E-waste when disposed or recycled improperly, can cause severe environmental pollution and adversely affect the human body as they contain toxic chemicals. Please ensure that the electronic products that are unwanted, not working, and nearing or at the end-of-life are disposed of only through authorized recycling or refurbishing points. Please contact your municipal waste management authority or your house-hold waste disposal service for additional details. This product and the components there of confirm to the provisions of hazardous substances. Specified under Rule 16 (1) and Rule 16 (4) of E-waste (Management) Rules, 2022 [Chapter VI] titled the Reduction in the Use of Hazardous Substances in the Manufacture of Electrical and Electronic Equipment and their Components or Consumables or parts or spares.

Warranty & Service:

- 1. We grant 1 year warranty on the product commencing from the date of purchase against defects in manufacturing, materials, and assembly.
- Within the warranty period, we will correct any defects in materials or workmanship, either by repairing or replacing the complete appliance, as we may choose, free of charge. The warranty is valid to the original Purchase only.
- For customer service-related queries, please contact us: at 1800-419-2373 (available Monday to Saturday from 9.30 am to 6:00 pm expect national Holidays). For warranty detail, please visit the product page or call Customer service number.
- 4. Any accessories provided with the product are not covered under warranty. Any physical and/or water damage to the product shall void any warranty.

void if:

1. Damage is caused by improper use, abuse or excessive use outside the intended purpose.

- 2. Normal wear or use as well as defects that have a negligible effect on the value or operation of the appliance.
- 3. Repairs or product modifications have been carried out by an unauthorized organization or person and if original Amazon basics part are not used.
- 4. Consequential damages (including but not limited to loss of data loss of income), nor compensation for activities done by yourself.
- 5. The proof-of-purchase has been altered in any way or is made illegible.
- 6. The model number, serial number or production date code on the product has been altered, removed or made illegible.
- 7. The defects a re caused by connecting peripherals, additional equipment or accessories other than those recommended in the user manual.

Instructions of handling the product during and after its use and Do's and don'ts with respect to handling ling the product:

Do's:

- Always look for information in the prod it's user's guide for end-of-life equipment handling.
- Ensure that only authorized recyclers handle your electironic products.
- Always call local authorized e-waste collection centers to dispose of products that have reached the end-of-life phase.
- When your used electronic products, batteries or accessories reach the end of their life, always dispose them at your nearest authorized e-waste collection center.
- Wherever possible or as instructed, separate the packaging material according to responsible waste disposal options and sorting for recycling.
- · Always ensure any glass surface is protected against breakage
- Kindly ensure that the product is properly packaged as per instructions before handing it over to the authorized recycler.

Don'ts:

- Do not dismantle your electronic products on your own.
- Do not throw elect tonics having "Do not Dispose of" symbol on the product package in your regular garbage bins along with municipal waste since it will ultimately reach a landfill.
- Do not give e-waste to informal and unorganized sectors like local scrap dealers. Be a Responsible User.
 Recycle your e-waste for a Greener Planet.

Documents / Resources



amazon basics AB-MIC-06 Condenser USB Microphone Kit [pdf] Instruction Manual AB-MIC-06 Condenser USB Microphone Kit, Condenser USB Microphone Kit, USB Microphone Kit, Kit

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.