



amazon basics AB_BT_8001 Portable BT Speaker User Guide

[Home](#) » [amazon basics](#) » amazon basics AB_BT_8001 Portable BT Speaker User Guide 

amazon basics

Portable BT Speaker
AB-BT-8001



Contents

- 1 Safety Tips to Remember
- 2 Battery Warning
- 3 How to get the best out of you Portable BT Speaker
- 4 Some Pre-Use Checks before you get going!
- 5 Product Description
- 6 How to use
- 7 Clean and Store like a Pro
- 8 Answers to Your FAQs
- 9 Specifications
- 10 Battery Disposal
- 11 Trademarks
- 12 E-waste disposal
- 13 Warranty & Service
- 14 Documents / Resources
 - 14.1 References

Safety Tips to Remember



To have an enjoyable experience using your portable BT speaker, keep the following safety tips in mind.

- Only use the product in environments where wireless transmission is permitted.
- Do not use this product if it is damaged.
- Protect the product from extreme temperatures, hot surfaces, open flames, direct sunlight, water, high humidity, moisture, strong jolts, flammable gases, vapours and solvents.
- Disconnect the product from the power source when it is not in use.
- Keep the product out of reach of children and pets.
- Do not attempt to repair the product yourself.
In case of malfunction, contact the retailer's service centre.
- Do not open the product housing. Do not insert any foreign objects into the inside of the product.

Battery Warning

This product contains batteries that are non-replaceable.

- Before disposal, the battery must be removed from the product.
- Contact a qualified professional while doing so.
- Do not leave the battery charging for a prolonged period of time when the product is not in use.
- Do not charge the battery overnight.
- If the product appears to be bulging or shows other undesirable phenomena (e.g. excess noise), stop using the product immediately.
- Do not cover the product while charging the battery. Charge the product in a well-ventilated environment. When in long term storage, charge the battery to its 70% capacity once every 3 months to avoid shortening its life.
- Batteries produce heat when charging and discharging. If the product becomes too hot to touch, switch the product off and unplug immediately.

- Charge the product only with a compatible power source from reputable manufacturer e.g. power adapter or power bank. The maximum rating should not exceed 0.5 A.
- If the battery leaks, avoid contact with skin and eyes. Rinse affected areas immediately with plenty of clean water, then consult a doctor.

How to get the best out of you Portable BT Speaker

- You can use the product for playback of audio files either via wireless, wired, from a TF card or USB stick as well as hands-free calling (via Bluetooth® device).
- This product is for private use only.
- This product is to be used in dry indoor/outdoor areas only.

Some Pre-Use Checks before you get going!

DANGER

RISK OF SUFFOCATION! Keep any packaging materials away from children and pets – these materials are a potential source of danger, e.g. suffocation.

- Remove all the packing materials.
- Remove and review all components before use.
- Check the product for transport damages.




DIDYOUKNOW?

TF cards and microSD cards are the same.
They are freely interchangeable.

TWS mode is the abbreviation used for True wireless Stereo.

Product Description

A M button	B — button	C + button
D M button	E Micro-USB IP charging port	F AUX socket
G USB port	H ON/OFF button	I Speaker oanned
J Indicator	K TF card slot	L Micro-USB IBT cable
M Hand strap	N AUX cable	

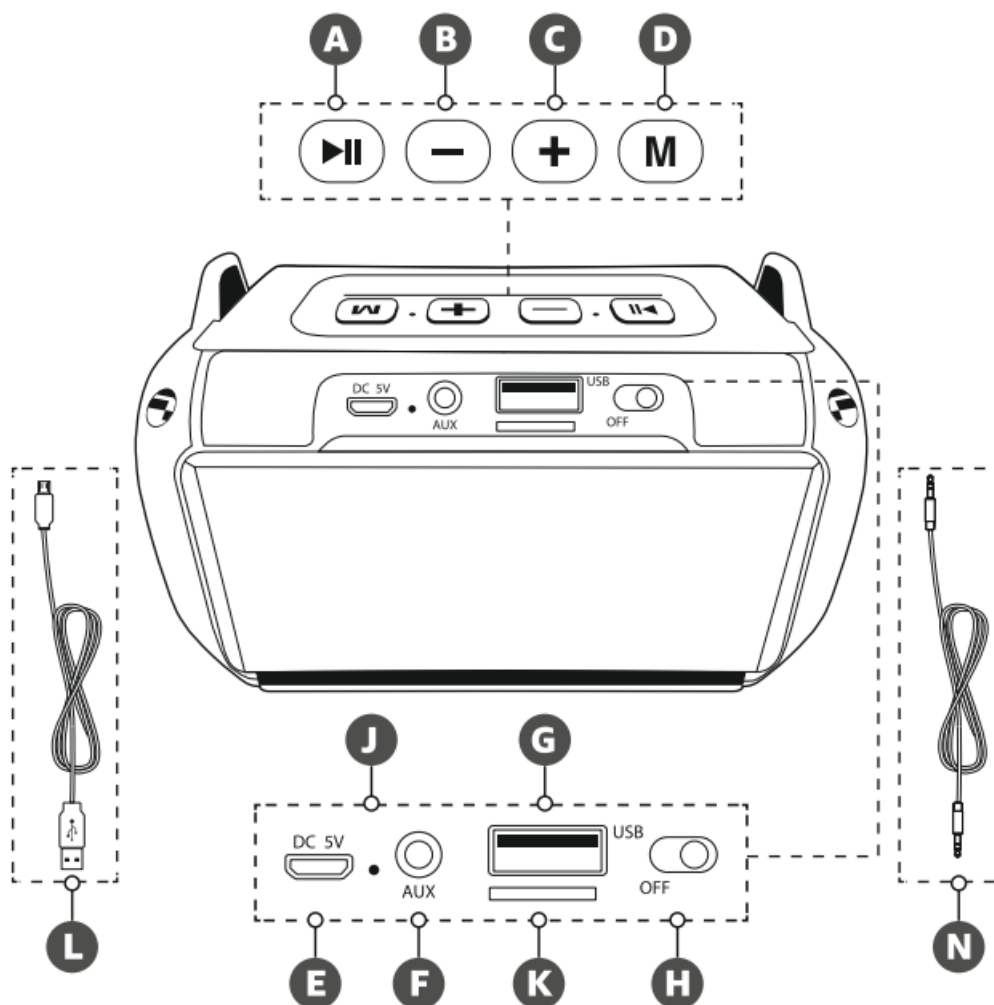


How to use

- Before using this product for the first time, fully charge it.
- The product can be used while charging
- When connecting or disconnecting external devices, an audio prompt is played.

6.1 Easy Charging

1. Connect the micro-USB cable (L) to the micro-USB charging port (E) on the product.
 2. Connect the other end of the USB cable to a suitable USB power supply. The indicator (J) lights up and the product is charging.
 3. Once the product is fully charged, the indicator (J) switches off.
- After charging, disconnect the micro-USB cable from the micro-USB charging port (E).

6.2 Controls and indicators,

Button	Action	Function
ON/OFF	Set to ON	To switch the product on
	Set to OFF	To switch the product off
	Press once	To start/stop playback
	Press and hold	TWS mode
	Press twice	Redial last phone number ‘
	Press once	Answer/end a call*
	Press twice	Reject a call*
—	Press once	To decrease volume, once the min. volume is reached a beep is audible
	Press and hold	To return to start of current song/previous song

+	Press once	To increase volume, once the max. volume is reached a beep is audible
	Press and hold	To skip to the next song
M	Press once*	Change mode
	Press twice”	RGB Led On/Off
	Press Long	Unpair Existing device
	Press Thrice	Active voice

ssame for all types of connection.

*product needs to be connected to a suitable Bluetooth device.

Indicator (J)	Function
Steady red	Charging
off	Charging complete
	Product off
Flashes blue	Waiting for Bluetooth connection
Steady blue	Successful Bluetooth connection

Switching On/Off

- Set the ON/OFF button (H) to ON to switch the product on. The indicator (J) flashes and an audio prompt is played.
- Set the ON/OFF button (H) to OFF to switch the product OFF. The indicator (J) switches off.

Button	Action	Function
ON/OFF	Set to ON	To switch the product on
	Set to OFF	To switch the product off

6.4 Activating a Bluetooth Connection



ATTENTION

- If no Bluetooth device has been paired with the product previously or none of the previously paired Bluetooth devices are within range, the product automatically enters pairing mode.
 - If a Bluetooth device has been previously paired with the product, the product will automatically connect the Bluetooth device if within range.
 - Only one Bluetooth device can be connected/paired with the product at any one time. Disconnect any connected/paired Bluetooth device to connect/pair a new Bluetooth device.
1. Switch the product on.
 2. Keep the product and the Bluetooth device close to each other.
 3. Enable the Bluetooth function on the Bluetooth device and search for new device to pair.
 4. Select ABBTB001 from the list of available Bluetooth connections.
 5. The product plays an audio prompt and the indicator (J) changes to steady blue. The product was paired successfully.



ATTENTION

- The product switches off automatically if it is not paired within 10 minutes.
- To use any voice assistant or answer/reject calls, the connected Bluetooth device needs to be capable of those functions.
- Ensure the voice assistant in the device is enabled before use.
- The voice assistant feature may not work when two devices are connected.
- The range between the product and the Bluetooth device largely depends on environmental conditions such as wall thickness, wall composition etc. With a free line of sight, the transmission range of most Bluetooth devices is up to 10 m.
- If the connection breaks down, restart the product and re-establish the connection.

6.5 USB Stick



ATTENTION

- If a USB stick is connected into the USB port (G) on the product while a Bluetooth device is connected, the Bluetooth device is automatically disconnected.
- If the product cannot access or read the files on the USB stick, the product automatically reconnects to a previously connected Bluetooth devices, if within range.

- If the USB stick is removed, the product automatically reconnects to previously connected Bluetooth de

Connect a USB stick to the USB port (G) of the product. The indicator (J) flashes. Once the USB stick has been read, the indicator (J) changes to steady on.

6.6 TF Card



ATTENTION

- If a TF card is inserted into the TF card slot (K) of the product while a Bluetooth device is connected, the Bluetooth device is automatically disconnected.
- If the product cannot access or read the files on the TF card, the product automatically reconnects to previously connected Bluetooth devices, if within range.
- If the TF card is removed, the product automatically reconnects to previously connected Bluetooth devices, if within range.
- The product supports TF cards of up to 64 GB.

Insert a TF card into the TF card slot (K) of the product. The indicator (J) flashes. Once the TF card has been read, the power (1) changes to steady on.

6.6TWS mode

To use the TWS mode, two products are required and USB stick / TF card removed.

6.7.1 pairing

- Turn both products on. Make sure that the products are not connected to a Bluetooth device.
- Press and hold the button (A) on one of the products for 2 seconds. The indicator (J) on the second product lights up and the indicator (J) on the first product flashes.
- Connect the product (any one) to your Bluetooth device.
- Once both power indicator are steady blue, they have paired successfully.
- The products can now operate in stereo mode.

6.7.2 Unpairing

Press and hold the button (4) on one of the products until an audio prompt is played. The indicator (J) on both products flashes. The products are now successfully unpaired.

Cleand and Store like a Pro

- Switch off and unplug the product before cleaning. During cleaning do not immerse the electrical parts of the product in
- water or other liquids. Never hold the product under running water.

7.1 Cleaning

- To clean the product, wipe with a soft, slightly damp cloth.
- Wipe the product dry after every cleaning.

- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.

7.2 Storage

Store the product in its original packaging in a dry area. Keep away from children and pets.

Answers to Your FAQs

Problem	Solution
Product does not switch on.	Product is out of battery. Charge the product.
Cannot find the product on a Bluetooth device.	Product has too many pairing records. Switch on and off, then pair again. The product might be out of range. Bring the product and the Bluetooth device within close proximity.
Product switches off automatically.	Low battery. Charge the product.

There is an echo in the playback.	Volume is too loud or the environment is too noisy. Adjust the volume of the product or move to a quieter location.
There is an unwanted noise or echo during a call.	Move to a clearer location.

Specifications

Model number	AB-BT-8001
Rated input	SV==1A
Rechargeable battery	37 2000 mAh, Li-ion battery
Charging time	Up to 6 hours 40 minutes
Playback time	Up to 13 hours @ 70% volume
Ambient temperatures	
> Charging > Use > Storage	+15°C to +40 °C +15°C to +40 °C +20°C to +40 °C
Operation frequency	2402 – 2480 MHz
RF power	+6 dBm
Bluetooth® version	5.1
Supported Bluetooth profiles	A2DP, AVRCP, HFP
Audio decoding protocol	SBC
Operating range	up to 10 m (unobstructed)
Max. output power	9w
Frequency response	20 Hz to 20 kHz
Sensitivity	110.5dB ±5 dB
Impedance	380Ω±7%
Supported TF cards	up to 64 GB, Format: exFAT
Audio files (TF card)	mp3
Net weight	approx. 330 gm
Dimensions (L x W x H)	approx. 122 X 75.3 X 80.5MM

Battery Disposal



■ The crossed-out bin symbol on this product or its packaging signifies that this product should be discarded separately from ordinary household waste at its end of life. To ensure that the Waste Batteries are disposed-off in an environment friendly manner, please discard the waste batteries separately from other domestic waste or handover the used batteries to an entity engaged in collection or refurbishment or recycling, so that no damage to human health and environment occurs.

Trademarks

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Amazon Basics or its affiliates is under license. Other trademarks and trade names are those of their respective owners.



E-waste disposal



■ Be a Responsible User. Recycle or refurbish your old Amazon brand products to help protect the environment.

BN The crossed-out bin symbol on this product or its packaging signifies that this product should be discarded separately from ordinary household waste at its end of life. Be aware that it is your responsibility to dispose-off e-waste in such a manner that no damage to human health and environment occurs.

E-waste is generated from electronic and electrical appliances/ components which have reached their end-of-life period or are no longer fit for their original intended use and are destined for recovery, recycling or disposal. E-waste when disposed or recycled improperly, can cause severe environmental pollution and adversely affect the human body as it contains toxic chemicals.

Please ensure that the electronic products that are unwanted, not working, and nearing or at the end-of-life, are disposed-off only through authorized recycling or refurbishing points. Please contact your municipal waste management authority or your household waste disposal service for additional details.

This product and the components thereof conform to the provisions of hazardous substances specified under Rule 16 (1) and Rule 16 (4) of E-waste (Management) Rules, 2022 [Chapter VII titled the Reduction in the Use of Hazardous Substances in the manufacture of electrical and electronic equipment and their components or consumables or parts or spares].

Warranty & Service

- Wegranta 1 year warranty on the product commencing from the date of purchase against defects in manufacturing, materials, and assembly.
- Within the warranty period, we will correct any defects in materials or workmanship, either by repairing or replacing the complete product, as we may choose, free of charge. This warranty is valid to the original purchaser only.
- For customer service related queries, please contact us: 1800-419-2573 (available Monday to Saturday from 9:30 AM to 6:00 PM except national holidays). For warranty details, please visit the product page or call customer service number.
- Any accessories provided with the product are not covered under warranty. Any physical and/or water damage to the product shall void any warranty.

This Warranty excludes, or does not apply or becomes void if:

- Damage is caused by improper use, abuse or excessive use outside the intended purpose.
- Normal wear or use as well as defects that have a negligible effect on the value or operation of the product.
- Repairs or product modifications have been carried out by unauthorized organization or persons and if original Amazon Basics parts are not used.
- Consequential damages (including but not limited to loss of data or loss of income), nor compensation for activities done by yourself.
- The proof-of-purchase has been altered in any way or is made illegible.


- The model number, serial number or production date code on the product has been altered, removed or made illegible.
- The defect is caused by connecting peripherals, additional equipment or accessories other than those recommended in the user manual.



amazon.in/basics

V04-01/23

Documents / Resources

	<p>amazon basics AB_BT_8001 Portable BT Speaker [pdf] User Guide</p> <p>AB_BT_8001 Portable BT Speaker, AB_BT_8001, Portable BT Speaker, BT Speaker, Speaker</p>
---	--

References

- [User Manual](#)