



amazon basics ABIKM06 Wireless Mouse Dual Connectivity Keyboard Instruction Manual

[Home](#) » [amazon basics](#) » amazon basics ABIKM06 Wireless Mouse Dual Connectivity Keyboard Instruction Manual 

Contents

- 1 [amazon basics ABIKM06 Wireless Mouse Dual Connectivity Keyboard](#)
- 2 [Important Safeguards](#)
- 3 [Exnlanation of Sumbols](#)
- 4 [Product Description](#)
- 5 [Mouse Usage](#)
- 6 [Keyboard Setup](#)
- 7 [Frequently Asked Questions](#)
- 8 [Specifications](#)
- 9 [Warranty & Service](#)
- 10 [Documents / Resources](#)
 - 10.1 [References](#)



amazon basics ABIKM06 Wireless Mouse Dual Connectivity Keyboard



Important Safeguards

DANGER Risk of suffocation! Keep any packaging materials away from children & pets – these materials are a potential source of danger, e.g. suffocation.

CAUTION

Avoid looking directly into the beam.

NOTICE


The Product does not work on glass surfaces. Use a mouse pad.

- Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.
- Protect the product from extreme temperatures, hot surfaces, open flames, direct sunlight, water, high humidity, moisture, strong jolts, flammable gases, vapours and solvents.
- This product is intended to be used in dry areas only.

Exnlanation of Sumbols



Product Description

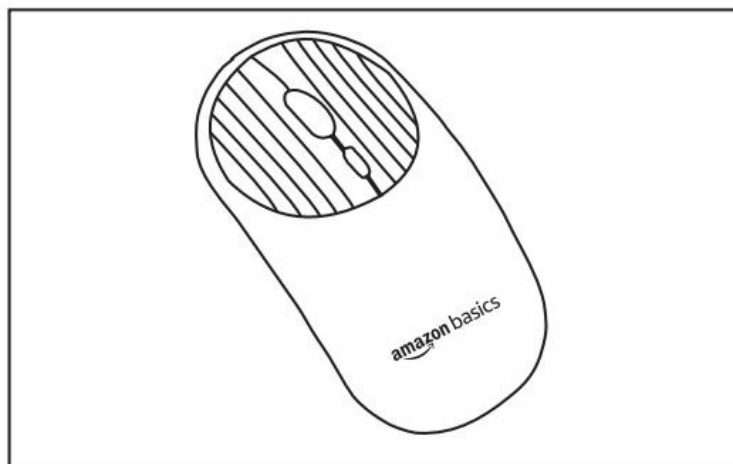


Mouse

1. Take the USB receiver out.
2. Set the " BT / OFF / 2.4 G " to "2.4 G".
3. Plug the USB receiver into a suitable USB port on the computer and then begin the 2.4 G mode.
4. Set the "BT / OFF / 2.4 G " to "BT".
5. Turn on bluetooth on the device to be paired.
6. To pair with the device, select the "ABIKM06 3.0 Mouse" or "ABIKM06 5.0 Mouse" from the list.

Mouse Usage





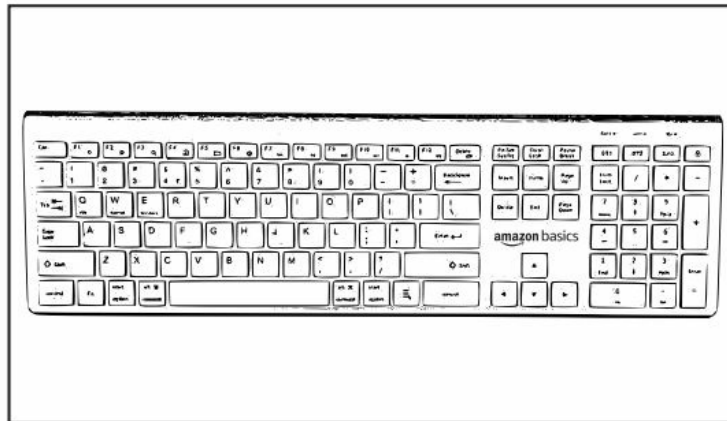





Left Button	Default Button used to Click, drag to highlight a word and/or object
Scroll wheel	Used to scroll up and down on any page without using the vertical scroll bar on the right hand side of a document or web page.
Right button	Typically used to provide additional information and/or properties of selected item.

Keyboard Setup



1. set the On/Off switch to the keyboard's back side. (2.4 G mode default.)
2. Press Fn + BT 1, the Work indicator starts blinking and the product is ready for pairing.
3. Turn on Bluetooth on the device to be paired.
4. To pair with the device, select the "ABIKM06 3.0 KB" or "ABIKM06 5.0 KB" from the list.
5. The Work indicator turns green when the pairing is completed.

Function keys (F)

Keys	Function
	Brightness Increase
	Brightness Decrease
	Increase volume
	Decrease volume
	Mute
	To play/pause
	Previous song
	Next song
	Internet
	Home Page

Indicators (H)

- The work Indicator lights up when the device enters pairing.
- Caps Lock indicator lights up when
- Caps Lock is turned on.

Frequently Asked Questions

Problem	Solution (mouse)
The Product does not switch on.	Recharge the mouse for 45 min. to 1 hrs.
Connection failed.	Set the "2.4G/OFF/BT" to OFF and then to "2.4G" or "BT".

Problem	Solution (keyboard)
The Product does not switch on.	Recharge the keyboard For 1-2 Hours
Connection failed.	Set the "ON/OFF" to OFF and then to ON.

Cleaning and Storage NOTICE

- During cleaning do not immerse the product in water or other liquids.
- Never hold the product under running water.
- Unplug before cleaning.
- To clean the product, wipe with a soft, slightly damp cloth.

- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product."Store the product in its original packaging in a dry area.
- Keep away from children and pets.

Specifications

Model number	Keyboard: ABIKM06; Mouse: ABIM16
Battery Type	Keyboard: 210mAh, Li-ion; Mouse: 250mAh, Li-ion.
OS Compatibility	Windows® 7/8/10 or Later, Chrome OS™
Frequency band	2.4 GHz
Wireless Range	Keyboard: 10 meters; Mouse: 15 meters
Mouse Sensitivity	800-1200-1600 DPI
Net Weight	Mouse: approx. 66.2g; Keyboard: approx. 465g
Dimensions	Keyboard: approx. 43.3 x 13.1 x 2.1 cm; Mouse: approx. 11.2 x 6 x 2.8 cm

Trademark

Windows® is a registered trademark of Microsoft Corporation. Chrome OS is a trademark of Google LLC. intended use and are destined for recovery, recycling or disposal. E-waste when disposed of or recycled improperly, can cause severe environmental pollution E-Waste Disposal & adversely affect the human body as it contains toxic chemicals. Please ensure that the electronic products that are unwanted, not working, and nearing or at the end of life are disposed of only Be a Responsible User.

Recycle or refurbish through authorized recycling or your old Amazon brand products to help refurbish points. Please contact you protect the environment. The crossed-out municipal waste management authority bin symbol on this product or your household waste disposal service packaging signifies that this product should be discarded separately from ordinary household waste at its end of details. This product and its components thereof conform to the provisions of life. Be aware that it is your responsibility to hazardous substances. to dispose of e-waste in such a manner that no damage to human health and the environment occurs.

E-waste is generated from electronic and electrical appliances/components that have reached their end-of-life period or are no longer fit for their original Specified under Rule 16 (1) and Rule 16 (4) of E-waste (Management) Rules, 2022

[Chapter VII titled The Reduction in the Use of Hazardous Substances in the Manufacture of Electrical and Electronic Equipment and their Components or Consumables or Parts or Spares].

Battery Waste Disposal

The crossed-out bin symbol on this product or its packaging signifies that this product should be discarded separately from ordinary household waste at its end of life. To ensure that the Waste Batteries are disposed of in an environment-friendly manner please discard the waste batteries separately from other domestic waste or hand the used batteries to an entity engaged in the collection refurbishment or recycling so that no damage to human

health and environment occurs.

Warranty & Service

1. We grant a 1-year warranty on the product commencing from the date Of purchase against defects in manufacturing, materials & assembly.
2. Within the warranty period, we will correct any defects in materials or workmanship, either by repairing or replacing the complete appliance, As we may choose, free of charge. The warranty is valid to the original Purchase only.
3. For customer service-related queries, please contact us: at 1800-419-2373 (available Monday to Saturday from 9.30 am to 6:00 pm except national Holidays).
4. For warranty details, please visit the product page or call Customer service number.
5. Any accessories provided with the product are not covered under warranty. Any physical and/or water damage to the product shall void any warranty.

This warranty excludes or does not apply or become void.

1. Damage is caused by improper use, abuse or excessive use outside the intended purpose.
2. Normal wear or use as well as defects that have a negligible effect on the value or operation of the appliance.
3. Repairs or product modifications have been carried out by unauthorized organizations or persons and if original Amazon basic parts are not used.
4. Consequential damages (including but not limited to loss of data or Loss of income), nor compensation for activities done by yourself.
5. The proof-of-purchase has been altered in any way or is made illegible.
6. The model number, serial number or production date code on the Product has been altered, removed or made illegible.
7. The defects are caused by connecting peripherals, additional equipment or accessories other than those recommended in the user manual. Instructions for handling the product during and after its use and Do's and Don'ts concerning handling the product

Do's


- Always look for information in the product's user's guide for end-of-life equipment handling.
- Ensure that only authorized recyclers handle your electronic products.
- Always call local authorized e-waste collection centres to dispose of products that have reached the end-of-life phase.
- When you use electronic products, batteries or accessories to reach the end of their life, always dispose of them at your nearest authorized e-waste collection centre.
- Wherever possible or as instructed, separate the packaging material according to responsible waste disposal options and sorting for recycling. f) Always ensure any glass surface is protected against breakage.
- Kindly ensure that the product is properly packaged as per instructions before handing it over to the authorized Recycler.

Don'ts

- Do not dismantle your electronic products on your own.
- Do not throw electronics having “Do not
- Dispose of the” symbol on the product package in your regular garbage bins along with municipal waste since it will ultimately reach a landfill.
- Do not give e-waste to informal and unorganized sectors like local scrap dealers.
- Be a Responsible User. Recycle your E-Waste for a Greener Planet.



Documents / Resources

	amazon basics ABIKM06 Wireless Mouse Dual Connectivity Keyboard [pdf] Instruction Manual ABIKM06, ABIKM06 Wireless Mouse Dual Connectivity Keyboard, Wireless Mouse Dual Connectivity Keyboard, Mouse Dual Connectivity Keyboard, Dual Connectivity Keyboard, Connectivity Keyboard, Keyboard
---	--

References

- [User Manual](#)