 




Amazon Basics Adjustable Oscillating Standing Pedestal Fan User Manual

[Home](#) » [amazon basics](#) » Amazon Basics Adjustable Oscillating Standing Pedestal Fan User Manual 

amazon basics

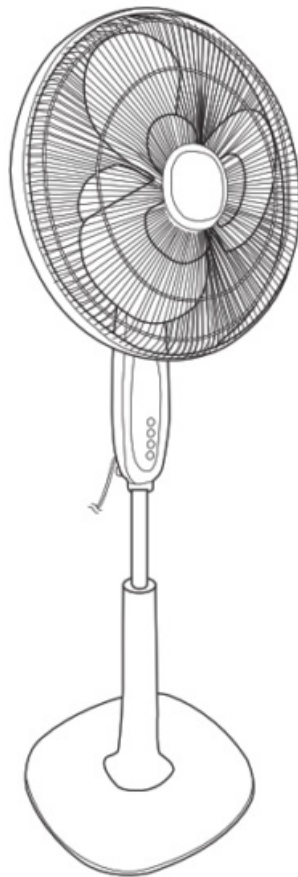







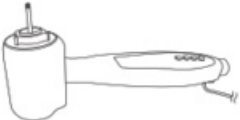


Adjustable Oscillating Standing Pedestal Fan – 16-Inch

Welcome Guide

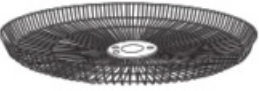Contents:

Before getting started, ensure the package contains the following components

A		x1	F		x1
B		x1	G		x1
C		x1	H		x1
D		x1	I		x1
E		x1			

Contents

- 1 **IMPORTANT SAFEGUARDS**
- 2 **SAVE THESE INSTRUCTIONS**
- 3 **Assembly**
- 4 **Operation**
- 5 **Cleaning and Maintenance**
- 6 **Troubleshooting**
- 7 **Specifications**
- 8 **Documents / Resources**
- 9 **Related Posts**

IMPORTANT SAFEGUARDS

Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

WARNING – TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

- **WARNING!** Risk of injury! Avoid contacting moving parts. Wait until all components have completely stopped before touching them.
- Before connecting the product to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the product's rating label.
- Do not insert fingers or foreign objects in any opening of the product and do not obstruct the air vents.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified

persons in order to avoid a hazard.

- Do not use outdoors.
- Do not expose the product to water.
- Do not use in a bathroom.
- Never use the product without the safety guard or with a damaged safety guard.
- Do not place any clothes or curtains on the product as they could be sucked into the fan during operation and damage the product.
- During use, keep hands, hair, clothing and utensils away from the safety guard to avoid injuries and damage of the product.
- Unplug or disconnect the appliance from the power supply before servicing.

This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace

the fuse according to the instructions in this manual (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

Battery Warnings


- Always insert batteries correctly with regard to polarity (+ and -) marked on the battery and the product.
- Exhausted batteries should be immediately removed from product and properly disposed.

Polarized Plug

- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

SAVE THESE INSTRUCTIONS

DESCRIPTION OF SIGNAL WORDS

 **DANGER** The signal word that indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

 **WARNING** The signal word that indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

 **CAUTION** The signal word that indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

 **NOTICE** Indicates a practical tip, advice or practice not related to personal injury.

Intended Use

- This product is intended to produce a cooling airflow.
- This product is intended for household use only. It is not intended for commercial use.
- This product is intended to be used in dry indoor areas only.

- No liability will be accepted for damages resulting from improper use or non-compliance with these instructions.

Before First Use

- Check for transport damages.
- Clean the product before first use.

⚠ DANGER Risk of suffocation! Keep any packaging materials away from children these materials are a potential source of danger, e.g. suffocation.

Inserting batteries (remote control)

- Open the battery compartment.
- Insert two 1.5 V AAA batteries in accordance with the polarity markings inside the battery compartment.
- Close the battery compartment.

 
Assembly

Step 1:

[I] NOTICE


Remove the protection bracket from the rear guard (B), and the protective sleeve from the main body's (E) pin.

- Connect the leg (F) with the base (G).
- Secure the connection with the knob screw (H).

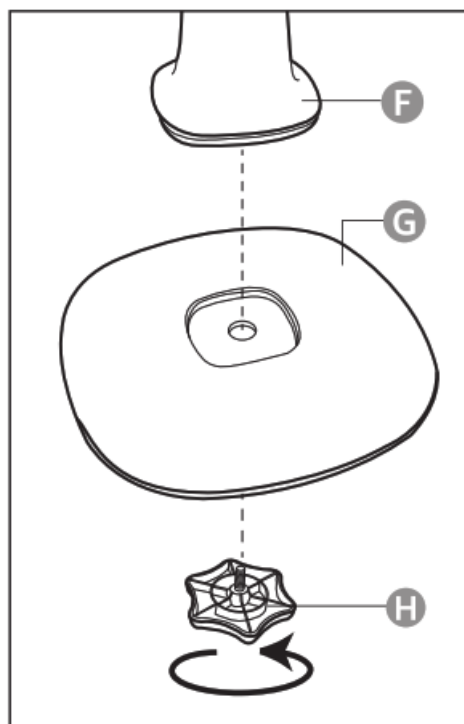

Assembly

 
Step 2:

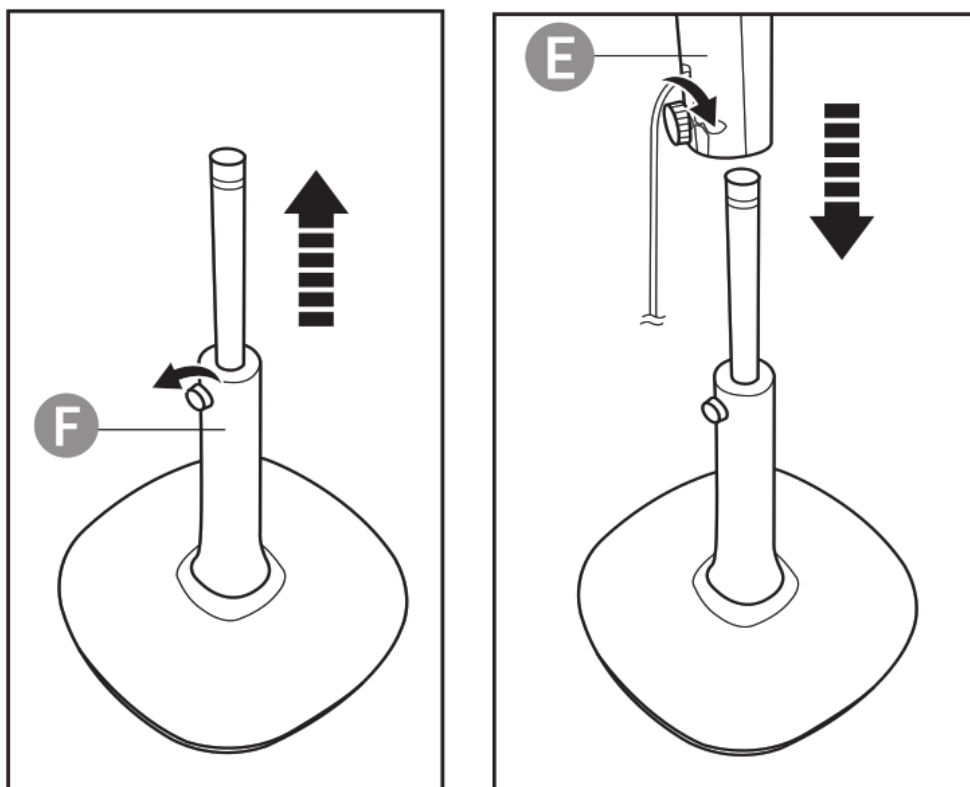

- Loosen the knurled screw on the leg (F) by turning it counter-clockwise.
- Extend the inner rod to its maximum length, then secure it with the knurled screw.
- Connect the main unit (E) with the rod. Fasten both parts with the knurled screw on the main unit.

Step 3:

 Unscrew the fixing ring in the counterclockwise direction.

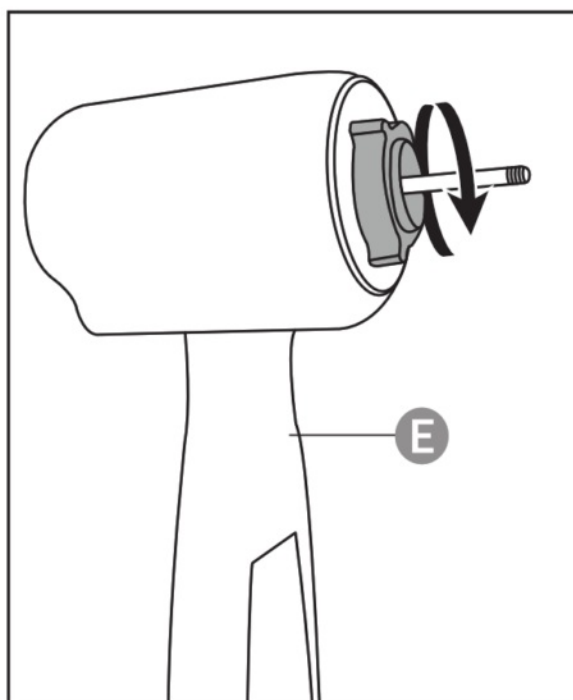


Assembly

Step 4:

[I] NOTICE


The product features a timer, which lets the user to set an automatic switch off time. You can choose from 0.5 to 7.5 hours.

 - Connect the rear guard (B) with the main unit (E). Align the rear guard's small round holes with the 3 pins on the main unit's front.
- Secure the rear guard (B) with the fixing ring.

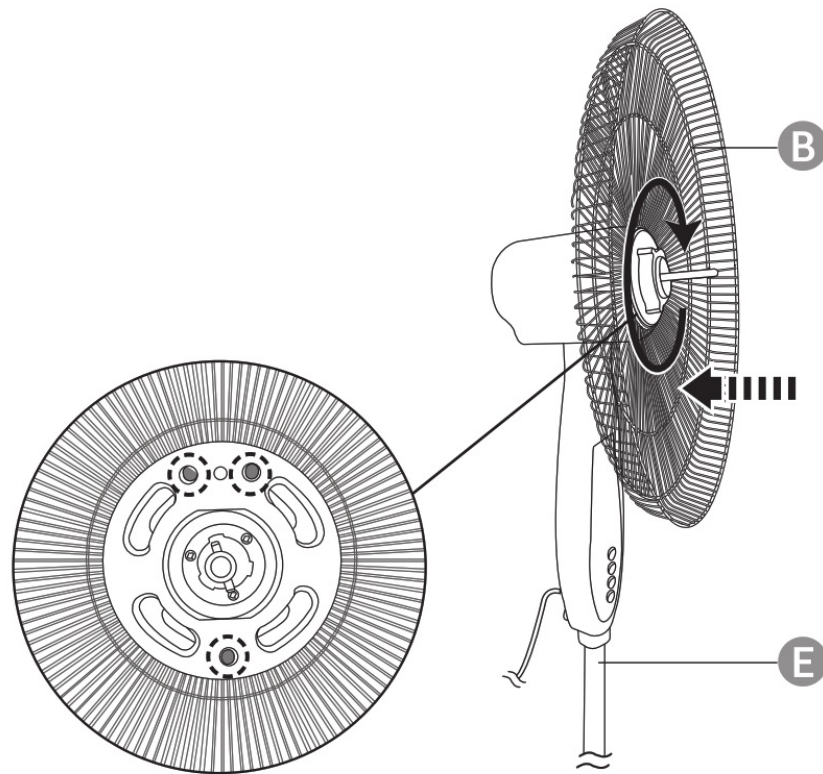


Step 5:

 - Place the large blade (C) on the shaft. Align the cross pin on the shaft with the groove on the rear side of the large blade (C).
- Place the small blade (D) on the shaft. Align the pin on the rear side of the small blade with one of the three holes on the large blade (C).
- Hold the large blade (C) with one hand and screw on the small blade (D) in the counter-clockwise direction to secure the blades.

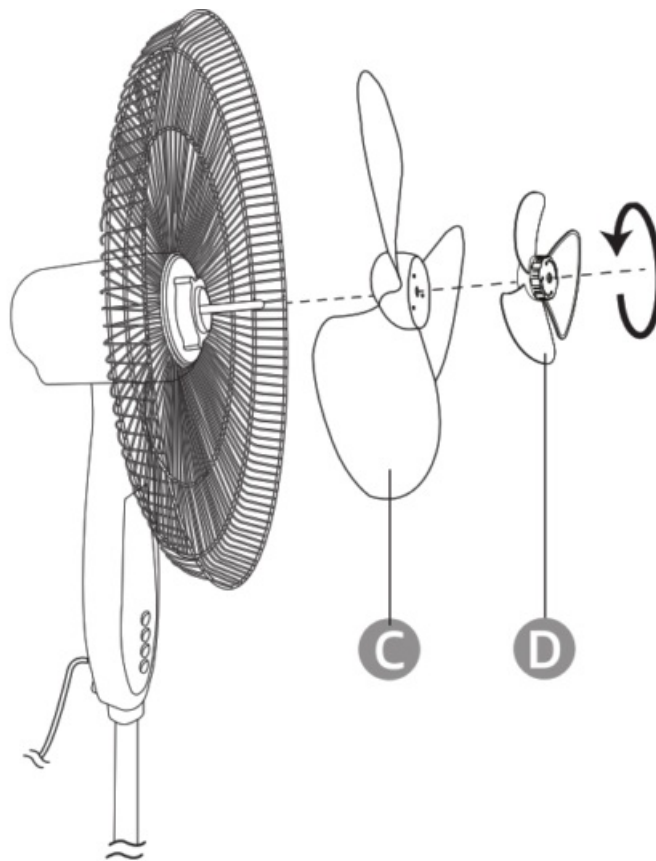

Assembly
Step 6:

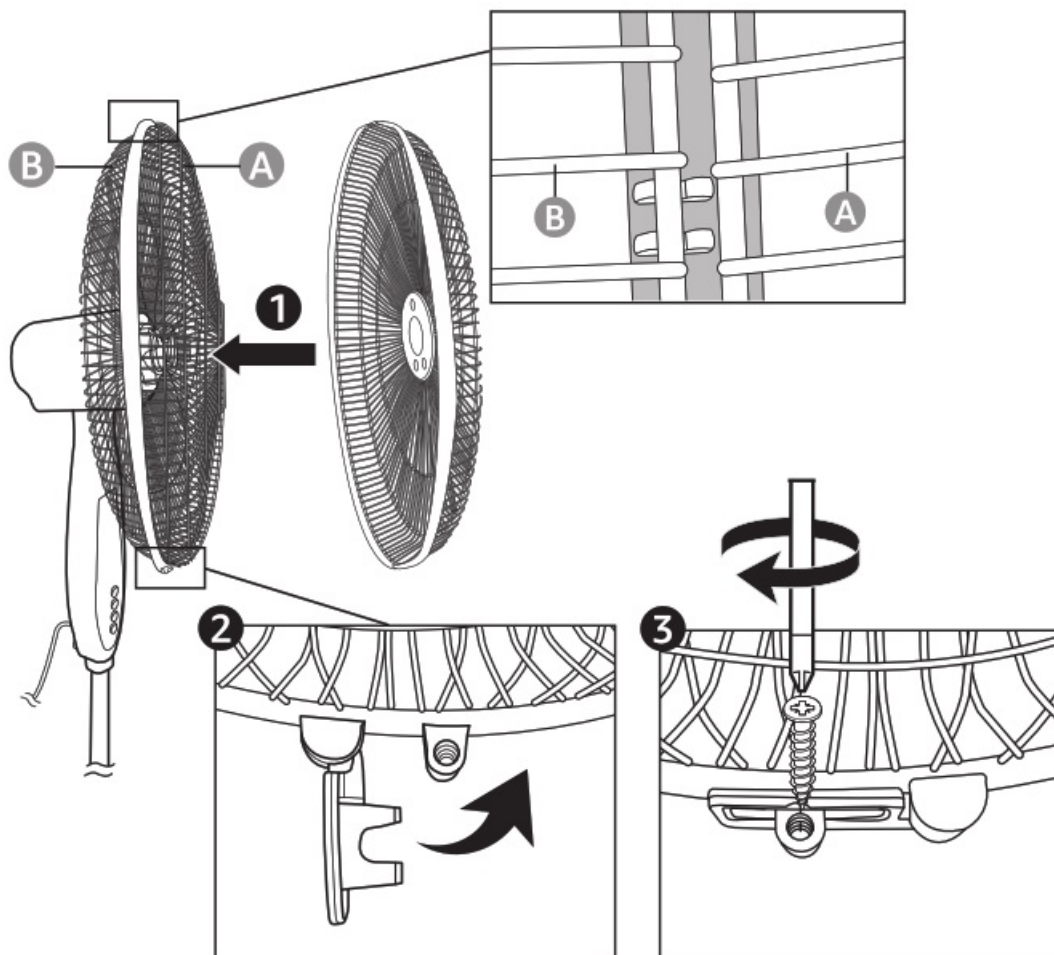 


NOTICE

Loosen the screw of the locking ring and open the locking bracket before connecting the front guard (A) with the rear guard (B).

- Clip the rear guard (B) into the front indent of the locking ring on the front guard (A).
- Close the locking bracket.
- Secure the guards with the locking screw.

Operation

 Control Panel/Remote Control

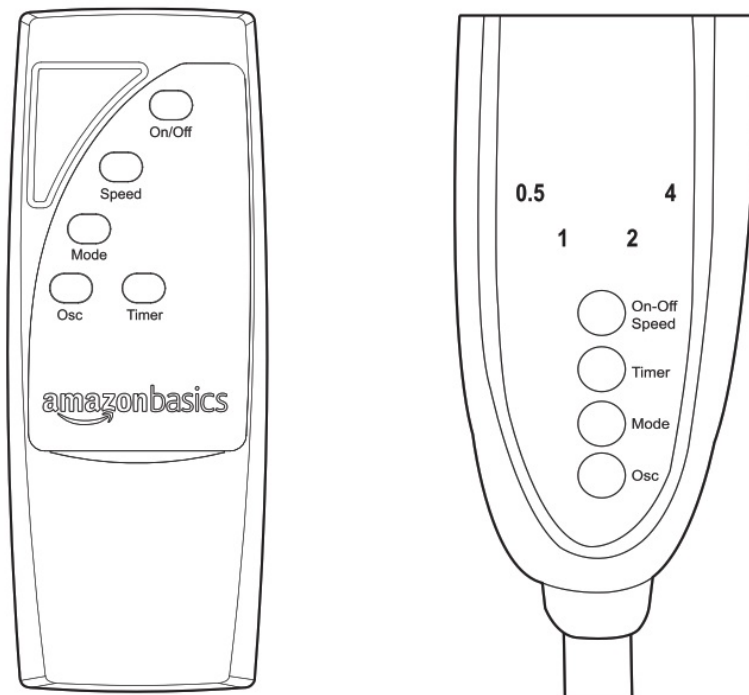

On-Off	Turning on/off (remote control only)	On-Off Speed	Turning on/off; Speed adjustment (main unit only)
Speed	Speed adjustment (remote control only)	Osc	Oscillation setting
Mode	Mode selection	Timer	Timer setting

Turning on/off

- To turn on the product, press On-Off Speed button on the main unit (E), or press On/Off on the remote control (I). The product starts operation at speed set to 1.
- To turn off the product, press On/Off on the remote control again, or press On-Off Speed button repeatedly on the main unit (the product toggles between the 3 speed modes and then turns off).

Timer

NOTICE

The product features a timer, which lets the user to set an automatic switch off time. You can choose from 0.5 to

7.5 hours.

- To turn on the timer, press the Timer button. An indicator next to the number 0.5 lights up on the main unit (E).
- To set a longer time, press the Timer button repeatedly. The timer toggles between 0.5 and 7.5 hours (e.g. if the timer is set for 2.5 hours, indicators next to the number 2 and 0.5 light up).




Airflow modes



NOTICE

The product features 3 airflow modes: normal, nature and sleep.

Press Mode button to toggle between the airflow modes. You can choose from following modes:

Mode	Description
 Normal	Constant airflow at the currently selected speed.
 Nature	The product cycles through different speed modes to provide a natural breeze airflow.
 Sleep	The product gradually cycles through medium and low speeds.

Speed



NOTICE The product features 3 speed settings.



NOTICE When using On-Off Speed button on the main unit (E), the product toggles between 3 speed settings and then turns off (1-2-3-OFF).

To toggle between the speed modes, press On-Off Speed button on the main unit (E), or press the Speed button on the remote control (I).

Oscillation

 
To turn on the automatic oscillation, press Osc button.

To turn the oscillation off, press Osc button again.

Height/angle adjustment


Height adjustment

- Turn the knurled screw on the leg counter-clockwise.
- Move the main unit (E) up or down.
- Secure the main unit by turning the knurled screw clockwise

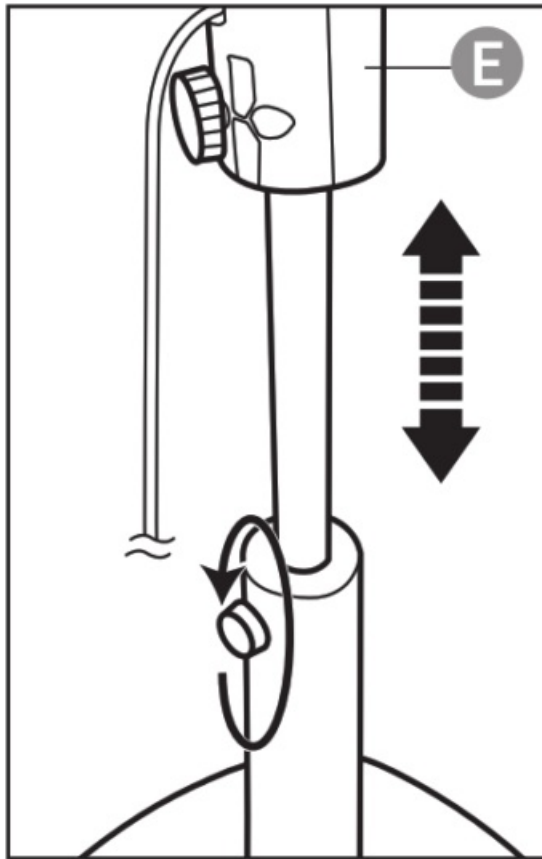

Angle adjustment

 The angle of the fan can be adjusted manually.
Simply tilt the guard up or down.

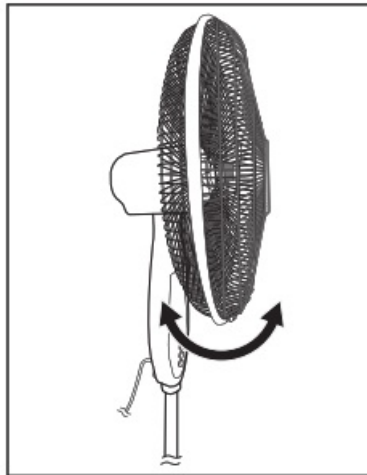


Fuse replacement



NOTICE

The product requires a SA 125 V fuse.

 - If the product loses power and you suspect that the fuse has blown, unplug the power plug.
- Slide the cover towards the prongs of the plug.
- Remove the blown fuse and replace it with an identical fuse.
- Slide the cover back to close the fuse compartment.

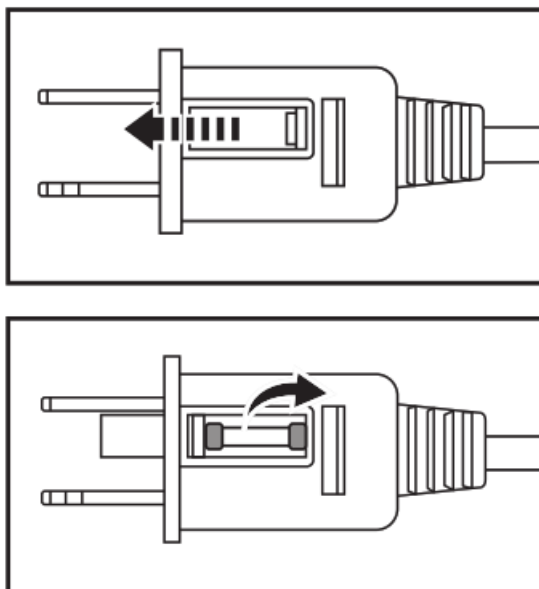

Cleaning and Maintenance



WARNING Risk of electric shock. To prevent electric shock, unplug before cleaning.



WARNING Risk of detected shock during cleaning. Do not immerse the electrical parts of the product in water or other liquids. Never hold the product under running water.

Cleaning

- To clean, wipe with a soft, slightly moist cloth.
- Regularly remove dust and dirt from the guards using a vacuum cleaner.
- Dry the product after cleaning.
- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.

Maintenance

- Store in a cool and dry place away from children and pets, ideally in original packaging.
- Avoid any vibrations and shocks.

Troubleshooting

Problem	Solution
The product cannot be switched on.	<ul style="list-style-type: none"> • Check if the power plug is connected to the proper power outlet. • Check if the power outlet works. • Wait for the product to cool down. • Replace the fuse in the power plug.
The product makes noise.	<ul style="list-style-type: none"> • Tighten the blade.
The product vibrates.	<ul style="list-style-type: none"> • Place the product on a level surface. • Clean the blades.

Specifications

Voltage/frequency:	120 V-, 60 Hz
Power consumption:	60W
Product dimensions (Wx H x D):	approx. 18 x 53 x 16 inch (46 x 135 x 41 cm)
Product net weight:	approx. 12.1 lbs (5.5 kg)

Feedback and Help

We would love to hear your feedback. To ensure we are providing the best customer experience possible, please consider writing a customer review.
Scan QR Code below with your phone camera or QR reader:



https://www.amazon.com/review/review-your-purchases/listing/?ref=87857_UM_CR

If you need help with your Amazon Basics product, please use the website or number below.




amazon.com/gp/help/customer/contact-us



+1877-485-0385

Documents / Resources

 <small>Adjustable Oscillating Standing Pedestal Fan - 16 inch Ventilator für Privatsitz- und Büroumgebungen - 40,1 cm (15,8 Zoll) Ventilator für Privatsitz- und Büroumgebungen, 40,1 cm (15,8 Zoll) B07BNGPWT4</small>	Amazon Basics Adjustable Oscillating Standing Pedestal Fan [pdf] User Manual B07BNGPWT4, Fan
--	---